



NAPCO

NAPCO Security Systems, Inc.
2000 North 17th Street
Methuen, MA 01844, U.S.A.

SALES REPRESENTATIVE INFORMATION
TOLL FREE 1-800-333-3333

© NAPCO 1990

OPERATING AND INSTALLATION INSTRUCTIONS

RP1054D KEYPAD

DESIGN PATS. PENDING

WI512B 5/92

DESCRIPTION

The RP1054D is a user-friendly backlit keypad designed for Napco's UL-listed MA854, MA1008 and MA1010 control panels. A large 7-segment alphanumeric display functions as a readout for control-panel information and zone identification. Installation is quick and easy on only four wires.

This manual provides installation information only. Refer to the accompanying User's Guide (OI142) for keypad functions and operation, and to the installation manual furnished with the control panel for panel mounting, wiring, and programming information.

SPECIFICATIONS

Operating Voltage: 9.0–13.0Vdc (supplied by control panel)

Current: 40mA* typical

Wiring Length: 1 keypad, 1000' max.; 5 keypads, 300' max. using #22AWG wire)

Dimensions: 43/8" x 57/8" x 11/16" (HxWxD)

*Subtract from available combined standby current of control panel.

MOUNTING

Opening the Keypad. There are two slots along the bottom edge of the keypad about 1 inch from each side. To open, insert a medium screwdriver into either slot and push up with a slight twisting motion to release the retainer tab. Repeat for the other slot. Pull out at the bottom and lift off the two hooks at the top.

This keypad features a handy pull-up reference label. (This label must be used in UL installations.) *Before mounting the keypad onto the wall*, push the Sliding Label Plate (with label and felt backing affixed and handle facing forward) down the guides at the rear of the keypad until it snaps into place. Once installed, the Sliding Label Plate cannot be removed without first removing the keypad from the wall.

When installing the rear case, be sure that the words "UP" and "TOP" (molded into the case) are properly oriented. The rear case is provided with a variety of holes to accommodate virtually any mounting situation. The four *angled* elongated holes are for mounting directly into a wall using appropriate screws; these holes will allow levelling adjustment. The four corner holes may be used when replacing an RP854 Keypad with RPB-1 Backplate for surface mounting directly onto a wall. The RP1054D replaces both the keypad and the backplate. If installing into a double-gang box, insert mounting screws through the two *vertical* elongated holes on the left side of the case and into the box. If the box is visible when viewed from the front, adjust the

keypad vertically, then tighten the screws. Then, using hardware suitable for the mounting surface, add one or two screws at the right side of the keypad case directly into the wall to ensure a secure installation.

WIRING

Wire the keypad to the control panel terminals shown in Table 1. **Note:** If using a soldering iron, be careful not to splash solder onto the keypad circuit board or components, as damage could result.

Keypad Wire Color	MA854	MA1008	MA1010
Yellow	1	5	6
Green	2	6	7
Red	3	3	3
Black	4	4	4
White	to normally-open remote panic switch(es)		
White			

Table 1. Keypad wiring to control-panel terminals.

Remote Panic. To connect a remote panic button, splice the two white ribbon-cable wires to a normally-open momentary-contact pushbutton switch. Similarly, additional panic buttons may be wired in parallel with the first, as needed. If remote panic will not be used, insulate both white leads, as a short across them will cause a panic alarm. Note that in UL installations, remote panic buttons must be located in the same room as the keypad.

Backlighting. Backlighting requires no additional wiring. In normal use, the keypad is always dimly backlit. To disable backlighting, see **JUMPER OPTIONS**.

JUMPER OPTIONS

Several jumpers provide a variety of options. They are conveniently located around the perimeter of the board for easy access. To identify the location of the jumpers, refer to the label affixed to the fishpaper on the back of the board.

Disable Keypad Panic. Cut Jumper A (bottom-center) to disable the keypad panic buttons, Keys [*] and [#].

Disable Keypad Sounder. Cut Jumper B (lower-right) to completely disable the sounder. Do not disable the sounder in UL installations.

Disable Touchpad Backlight. Cut Jumper C (upper-right) to disable touchpad backlighting.

COMPLETING THE INSTALLATION

To reassemble the keypad after installation, hang the top of the front panel onto the hooks in the rear case and push

in firmly at the bottom until the retainer tabs snap into place. (If difficulty is encountered, push the retainer tabs up slightly using a screwdriver, as when removing.)

HOLD-DOWN FUNCTIONS

The keypad functions listed in Table 2 are selected by holding down the indicated key for about 2 seconds (until a beep sounds).

Key	Function
[1]	Bell Test
[2]	Display Bypass (Shunts)*
[3]	Display Status*
[4]	Instant Protection
[5]	Chime
[6]	Telco Test; Manual Download**
[7]	Fault Find
[8]	Program
[9]	Reset
[S]	Alarm History*

*Keep button depressed until all zones have been displayed.

**Secondary hold-down function accessible only within 5 seconds after arming and disarming.

Table 2. Hold-Down Functions

To review the available functions at the keypad, pull up the Sliding Label Plate at the top of the keypad to expose the "ready-reference" list of both hold-down functions and zone descriptions.

KEYPAD PROGRAMMING (MA1008 & MA1010 only)

The following keypad functions are enabled only in the Dealer Program Mode. For programming instructions, refer to the installation manual furnished with the control panel.

Key [1] - PRIOR. Sequences backward to the previous location.

Key [2] - NEXT. Advances to the next location.

Key [3] - NEXT. Same as Key [2].

Key [4] - DATA UP. Selects the data for the chosen location: numbers 1-9, 0 and letters b, C, d, E, and F, in ascending order.

Key [5] - CLEAR. Clears the data from the selected location.

Key [6] - PRIOR. Same as Key [1].

Key [7] - DATA DOWN. Selects the data for the chosen location: numbers 1-9, 0, and letters b, C, d, E, and F, in descending order.

Key [8] - EXIT. All LEDs will light. Enter Dealer Program Code with 10 seconds to verify and exit.

Key [S] - SET LOCATION. Enter a 3-digit location number.

NAPCO LIMITED WARRANTY

NAPCO SECURITY SYSTEMS, INC. (NAPCO) warrants its products to be free from manufacturing defects in materials and workmanship for fifteen months following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges.

In case of defect, contact the security professional who installed and maintains your security system. NAPCO shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly or reinstallation charges.

In order to exercise the warranty, the product must be returned by the user or purchaser, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty.

There are no warranties, express or implied, which extend beyond the description on the face hereof. There is no express or implied warranty of merchantability or a warranty of fitness for a particular purpose. Additionally, this warranty is in lieu of all other obligations or liabilities on the part of NAPCO.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period. In no case shall NAPCO be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, express or implied, even if the loss or damage is caused by the seller's own negligence or fault.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. NAPCO neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall NAPCO be liable for an amount in excess of NAPCO's original selling price of the product, for any loss or damage, whether direct,

indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

NAPCO RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following: criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. **CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING.** Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to NAPCO's original selling price of the product regardless of the cause of such loss or damage. If the user wishes to protect itself to a greater extent, NAPCO will, at user's sole cost and expense, obtain an insurance policy to protect the user, supplemental to user's own policy, at a premium to be determined by NAPCO's insurer upon written notice from user by Certified Mail, Return Receipt Requested, to NAPCO's home office address, and upon payment of the annual premium cost by user.

Some states do not allow limitations on how long an implied Warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.