

NAPCO

MAGNUM

ALERT  
900

## SELECTING ARM/DISARM CODES, ACCESS CONTROL CODE

- (1) Enter Program Mode: Hold down Key 8 until the Mini-Sounder beeps, within 8 seconds, enter keypad programming authorization code. (Exception: If high-security programming is selected, push the START switch on the control-center circuit board before holding down Key 8. Caution: Opening door may cause a tamper alarm.)  
The top three keypad LEDs and the Mini-Sounder will pulse rapidly.
- (2) Select Arm/Disarm Codes: Press [S], then [1], then two to four digits for the first valid arm/disarm code. Optionally select the second through the eighth arm/disarm codes: press [S], then an order number ([2] to [8]), then two to four digits for each arm/disarm code.
- (3) Optionally Select Access Control Code: (Generally for commercial installations.) To authorize access door to be released press [S], then [9], then two to four digits for the code. (Electric door switch must be connected to Terminals 39-40 to release the door.)
- (4) End Programming Session: Press [S] two times. The LEDs and Mini-Sounder will go off.

## ARMING WHEN LEAVING

- (1) Check Power: If top three keypad LEDs blink together slowly, system has no ac power. Check for disconnected transformer. Test standby battery: Hold down Key 1, wait for bell or siren to sound.

Check for Burglary-Zone Trouble: If green STATUS LED blinks on briefly every second, hold-down Key 3 to display number(s) of zone(s) in trouble. Hold down Key 7 until Mini-Sounder beeps. Correct trouble, if possible by closing open doors or windows. Mini-Sounder will beep again if a problem is fixed.

- (2) Arm: Close all doors and windows connected to Zone 9. If necessary, hold down Key 9 to arm without ac power. Enter arming code on numerical keys. NOTE: If the wrong code is pressed to arm/disarm, wait 2 seconds before entering code again.

Listen for Problem Alert (and hold down Key 3 to display problem zone numbers): If Mini-Sounder signals steadily for 2 seconds, and the red ARMED/ALARM LED is on, the system is armed without protection from auto-shunted and/or problem 24-Hour Zone(s), or with a low-battery condition. If Mini-Sounder sounds continuously while a zero is displayed, a Priority Zone is in trouble, and the system cannot be armed. Enter disarm code. If an alarm signals on arming, a non-Auto-Shunt Zone is in trouble. Disarm, repair zone, arm and disarm again to reset control center. Then arm with protection restored.

- (3) Wait for Ringback: If exit delay is programmed to start after closing ringback, wait for the Mini-Sounder signal. If there is none, (a) check communicator and telephone line (if communicator confidence test is programmed); disarm; hold down Key 6 and (b) manually start exit period -- enter arming code (if disarmed), hold down Key 5 until the Mini-Sounder beeps.
- (4) Leave Quickly: If the Mini-Sounder goes on steadily, the exit period has ended and the entry period has begun: disarm quickly, arm again and leave during the next exit delay.