

INSTALLATION INSTRUCTIONS

BFC 208 REMOTE STATION

DESCRIPTION

The BFC 208 Remote Station is designed to be used with either the BFC 200 Residential Burglar Fire Alarm Control or the CPD 4000 Control Panel Dialer.

It's function is to indicate the status of the protective circuit and to show arm/disarm condition of the panel.

A 3/4" hole in the remote plate will accommodate either a normally open push-button switch or a key actuated momentary switch which will, when actuated, arm or disarm (i.e. Turn ON or Turn OFF) the BFC 200.

For the CPD 4000 an on/off key switch or toggle switch must be used.

Two figures are shown below. Fig. 1 shows how to connect the BFC 208 to the BFC 200 and Fig. 2 shows how to connect to the CPD 4000.

- NOTES:**
1. The metal surface on each unit is protected by a thin transparent plastic coating which should be removed upon installation.
 2. A large metal washer is included to facilitate mounting of a key switch or push-button.
 3. A Jumper wire must be added as shown on the BFC-208 terminal strip when used with the BFC-200. (See fig. 1.)

CAUTION: Lamps used are light emitting diodes. *Never* connect these lamps directly to a voltage source without series current limiting resistors.

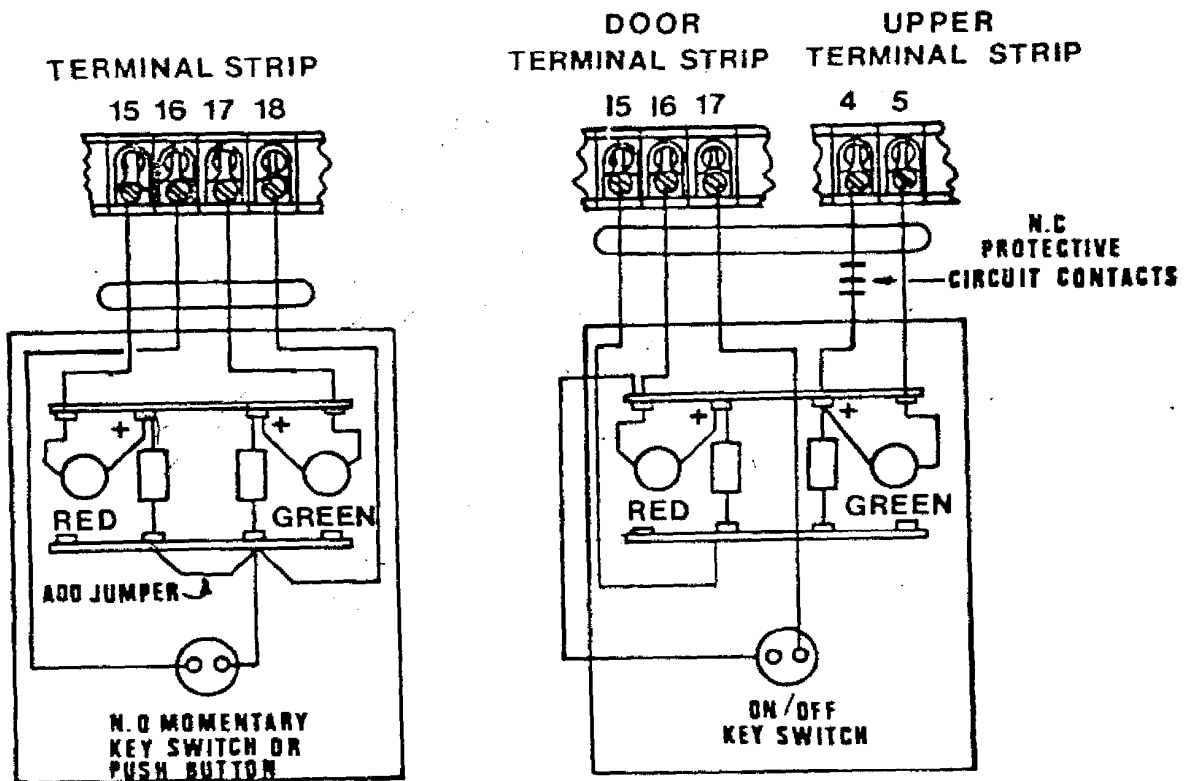


FIGURE 1
CONNECTION TO BFC-200

FIGURE 2
CONNECTION TO CPD-4000