


Omega 4000 / 8000

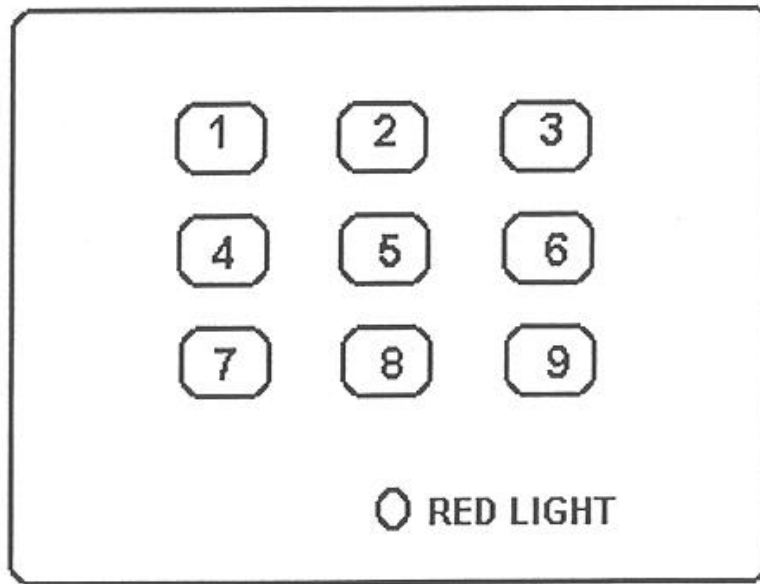

This system has a nine digit keypad with one red light.

Disarm	code
Arm	code, red light will flash, delay begins. If red light doesn't flash and the keypad buzzes, system has not set.
Reset System	if all doors and windows are closed, the system should reset.
Reset Fire Alarm	push and hold for 3 seconds the reset button on transmitter (MCU), then enter code into keypad.