


Omega 3012

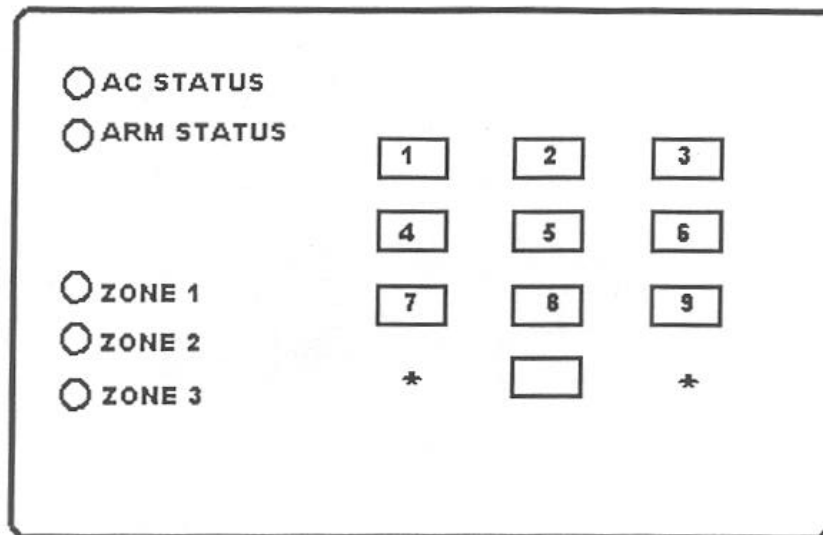

This system has a twelve digit keypad with one green A/C light, one red arming light, and three red zone lights.

- | | |
|--|---|
| Disarm | enter code, red light goes out |
| Arm | enter code, red light will flash, delay begins. |
| No Set | if a zone light is off, the zone is faulted |
| <u>NOTE</u> : this system cannot be force armed! | |
| Reset System | disarm system as normal |
| Code Change | press blank key, enter old code, enter new code twice |