



Quick Start

Included in this package:

- D6600 Communications Receiver/Gateway Quick Start sheet
- D6600 Communications Receiver/Gateway
- AC Power Cord
- Battery Cables
- I/O Cable
- Rack Mount Ears
- Four (4) 832 PPH Screws
- CD-ROM for PC Compatible computers, including:
 - D6200 Remote Programming Software
 - D6600 Communications Receiver/Gateway Program Entry Guide
 - D6600 Communications Receiver/Gateway Operation and Installation Manual
 - D6600 Communications Receiver/Gateway Computer Interface Manual
 - D6600 Communications Receiver/Gateway Release Notes

D6600 Installation Overview

1. Place the D6600 Communications Receiver/Gateway in a secure location (Rack mount, Desktop, etc.)
2. Plug AC Power Cord into rear of D6600. Plug other end into an **unswitched** 120V AC 60Hz line. Keep power off to receiver.
3. Plug telephone lines into the first Line Terminator card. Line 1 will be the top RJ-11 connector of the right most card, looking at the rear of the unit. Line 2 is the next lower, etc.
4. Connect Automation Computer to COM3, the Center 9 pin connector on the CPU Terminator card, using a Null Modem cable.
5. Connect an External Parallel Printer (power off) to the Lower 25 pin connector on the CPU Terminator card.
6. Turn power on to D6600.
7. After System is ready, use the  and  keys to adjust the contrast if needed. Press [M/E] to enter the menu.
8. Key in default programming password, 6600. Press the [M/E] key.
9. Use arrow keys to move through menus, press [M/E] to enter a menu level, [CAN] to exit a level.
10. Set the internal calendar and clock:
 - Use the arrow keys to Menu 2, CPU CONFIGURATION, Press the [M/E] key
 - Use the arrow keys to Menu 2.2, GLOBAL, Press the [M/E] key.
 - Use the arrow keys to Menu 2.2.1, Time Setup, Press the [M/E] key.
 - Key in the current time. Press the [M/E] key.
 - Use the arrow keys to Menu 2.2.2, Date Setup, Press the [M/E] key.
 - Key in the current date. Press the [M/E] key.
 - Press [CAN] to exit through menus.
11. The D6600 unit is now ready to accept calls.



D6200 Installation Overview

1. Insert the D6600 Communications Receiver/Gateway CD-ROM into the PC's CD-ROM drive and view the CD-ROM files.
2. Open the D6200 Programmer folder on the CD-ROM.
3. Double click the SETUP.V.X.XX.exe icon (X represents the version number of the CD) to begin the installation process.
4. Follow the installation instruction prompts given by the computer to complete installation of the D6200 Remote Programming software.



If file overwrite windows appear, select YES for these prompts.