

# R A D I O N I C S

## Model D269 Independent Zone Control

### User's Guide

---

---

#### General Information

Your Model 269 Independent Zone Control is an arming station that provides you with control over a specified area of your security system. The 269 gives you independent control of this area, regardless of whether the rest of your security system is armed or disarmed.

Features of the Model 269 include protection status display indicators, entry and exit delay time, prewarning sounder and user programmable passcode.

#### The Zone Control Display

The Zone Control has two protection status display indicators: a STATUS indicator and an ARMED indicator.

**STATUS** When the green indicator is lit, the specified area is ready to be armed. When the green indicator is *not* lit, there is a faulted sensor in the specified area. Correcting the fault usually means closing a door or a window.

**ARMED** When the red indicator is lit, the area is armed. When the red indicator is *not* lighted, the area is not armed.

#### The Keypad

The Zone Control has a digital keypad used to enter your personal passcode into the security system. It is your personal passcode which arms and disarms the specified area.

When entering your passcode, if the Zone Control emits a short warning tone each time you touch a key, check the STATUS light, as this indicates a problem with a device in the protected area.

## Arming the Specified Area

1. Ensure that the specified area is secure. The green STATUS indicator light must be on.
2. Enter your personal passcode. The red ARMED indicator light flashes on and off to indicate exit delay time (approximately 60 seconds). When the ARMED indicator lights steadily, the specified delay area is armed.

## Disarming the Specified Area

Your specified area is disarmed by entering your personal passcode. When the area is armed, you must enter the premises through a designated *entry door* to prevent an *instant* alarm condition. Opening the delay door starts a 30 second delay during which the Zone Control sounds a warning to remind you to disarm the system. To disarm the system, enter your personal passcode *before* the entry time expires. If you enter through a wrong door or fail to disarm the system before the entry delay expires, you will generate an alarm.

## Silencing the Alarm

Your alarm audible device sounds for a specific period of time before it shuts off automatically. If an alarm occurs and you want to silence the alarm, simply enter your personal passcode and the audible device shuts off.

**IMPORTANT:** Some security systems do not permit the D269 Independent Zone Control to silence the alarm. The alarm must be silenced from a different control station in your system.

- My system can be silenced from the D269 Independent Zone Control Station.
  - My system must be silenced from the control station located:
- 

## User Programmable Passcode (Optional)

Your Model D269 Independent Zone Control provides you with the convenient feature of changing your personal passcode whenever you feel it necessary. It is recommended that you write down your old passcode and the new one before you begin.


- My system has this feature.
- My system does not have this feature.

## Notes About Programming Your Personal Passcode:

- Programming must be completed in 60 seconds.
- You may only program while the Independent Zone Control is disarmed.
- Do not program the same digit twice in a row. (Example: 2445 is an improper passcode)
- Do not program the first and the last digit the same. (Example: 4564)
- The new combination must be four digits in length.

## Programming Steps:

1. Press the center key in the bottom row of keys on the keypad.
2. Enter the old passcode once.
3. Enter the new four digit passcode *twice*.
4. Test the new passcode by arming and disarming.
5. If you encounter difficulties repeat steps 1 through 4.

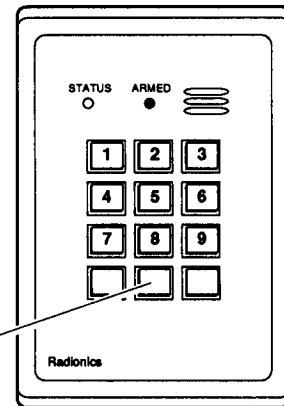

**PRESS CENTER KEY  
TO INITIATE PROGRAMMING**