

R A D I O N I C S

READYKEY® K6100 Readykey for Windows™

ASCII Transaction File Datasheet

Notice

The material and instructions in this manual have been carefully checked for accuracy and are presumed to be reliable. However, Radionics, assumes no responsibility for inaccuracies and reserves the right to modify and revise this manual without notice.

It is our goal at Radionics to always supply accurate and reliable documentation. If a discrepancy is found in this documentation, please mail a photocopy of the corrected material to:

Radionics,
Technical Writing Department
1800 Abbott Street
Salinas, California 93901

Radionics is a division of Detection Systems, Inc.

UL Listings

UL 294 - Access Control System Units
UL 1076 - Proprietary Burglar Alarm Systems

Trademarks

Windows™ and Windows NT™ are trademarks of Microsoft Corporation
Microsoft®, Windows® 95, and MS-DOS® are registered trademarks of Microsoft Corporation

Novell™ and Netware™ are registered trademarks of Novell, Inc.

Pentium® is a registered trademark of Intel Corporation.

The Radionics logo is a registered trademark of Radionics, a division of Detection Systems, Inc.

Contents

Using the ASCII Transaction File.....	4
Division	5
Personnel ID.....	5
Type of Person	5
ID Range	5
ATRANS Format	5
Date and Time.....	5
Door Number.....	5
Site Number	5
Transaction Type.....	5
Example	6
Maintenance of ATRANS.DAT	6

Introduction

This document describes a method by which other, non-Readykey, systems may interrogate the transactions produced by a Readykey for Windows administration system.

Typical applications may include Time and Attendance, Flexi-Time etc.

The method involves the reading of a special file known as ATRANS.DAT which is stored in the DATA directory (usually C:\RKEYWIN\DATA). All **authorized personnel transactions (Positive Transactions)** occurring within the system are recorded in this file. **No other types of transaction are recorded in ATRANS.DAT.**

Note: Readykey for Windows DDE Output provides a more comprehensive interface to third-party applications, including the facility to output all or selected transactions, and more detailed information on each transaction. Refer to *Readykey for Windows DDE Output Datasheet*.

Using the ASCII Transaction File

The ASCII Transaction file is enabled within the **Installer: Global** application. In order to activate the beginning of the storage of the positive events to the file, the box marked "ASCII Transaction File Enabled", must be selected.

From the **Installer** window, start the **Global** sub-application:

The screenshot shows a window titled "Global" with a "Report" tab. The window contains the following fields and controls:

- Last Edited on :** (Label)
- System Name :** Text box containing "DEFAULT SYSTEM TITLE"
- Key Code :** Text box
- Password :** Text box
- Timeout :** Text box
- ASCII Transaction File Enabled :** Check box (unchecked)
- Default Language :** Dropdown menu showing "US ENGLISH"
- Alarm Response Fields:** A group box containing six text boxes labeled "Alarm Response 1" through "Alarm Response 6", all of which are empty.
- Buttons:** "OK", "Cancel", and "Help" buttons.
- Status Bar:** "This Record Can Be Modified"

Make sure the **ASCII Transaction File Enabled** box has a cross in it. Choose **OK**.

Format of ATRANS.DAT

This file has a maximum size of 360 Kbytes and consists of 23-byte fixed length records of ASCII data. The last two bytes are CR (13₁₀) and LF (10₁₀) giving 21 bytes of data.

The format of the record is as follows:

4 N N N N	4 N N N N	10 D D M M Y Y	13 D D D	17 H H M M	20 S S S	21 T
Division	Personnel ID	Date day/month/year	Door No.	Time Hour: Min	Site No.	Trans. Type

Division

The division ID, from 0001 to 0128 is the first part of each record.

Personnel ID

In Readykey for Windows systems the personnel number is displayed at the top right of the personnel dialog box. You may also find it convenient to use one of the four extra information fields to store the personnel record number. This will enable you to easily locate personnel records with a particular ID number.

For decoding Visitors and for personnel ID numbers greater than 6000 you should use the following table:

Type of Person	ID Range	ATRANS Format
Personnel	0001-6000	0001-6000
Visitor	001- 750	6001-6750
Personnel	6001-6999	G001-G999
Personnel	7000-7999	H001-H999
Personnel	8000-8999	I001-I999
Personnel	9000-9999	J001-J999
Personnel	10000-10999	K001-K999
Personnel	11000-11999	L001-L999
Personnel	12000-12999	M001-M999
Personnel	13000-13999	N001-N999
Personnel	14000-14999	O001-O999
Personnel	15000-15999	P001-P999
Personnel	16000-16999	Q001-Q999
Personnel	17000-17999	R001-R999
Personnel	18000	S001

E.g. a personnel ID of H234 refers to personnel number 7234, an ID of 6451 refers to visitor ID number 451.

Date and Time

The date and time are as recorded at the door controller at the time of the event. The date will always be in the format day/month/year, e.g. 170693. The time will be in the format hours minutes using the 24 hour clock, e.g., 1257, 2117.

Door Number

Doors on Door Controller 1 are numbered 01-04, on Door Controller 2, 05-08 and so on up to the maximum allowed by the particular system.

Site Number

This will be 001-128. Remember that for multi-division systems, there will be duplicates of site numbers

Transaction Type

The value of this field will be:

- 0 Exit Authorized
- 1 Entry Authorized
- 2 Access Authorized

Transaction types 0 and 1 are only produced if anti-passback and/or door interlock is set on a particular door controller.

Example

```
000608231209600714520051<CR><LF>
```

In division 6 (**0006**), person 823 (**0823**) has an Entry Authorized transaction (1) through door 7 (007) on site 5 (005) at 14:52 (1452) on 12th October 1996 (121096).

Maintenance of ATRANS.DAT

Positive transactions are added to this file as they are received at the PC. They will not necessarily be in chronological order. This will certainly be the case with remote, dial-up sites, where groups of transactions from a single site are received in blocks.

The normal maximum size of the file is 360,000 bytes (see below) and, when this size is reached, the file is deleted. For this reason it is important that the file is not allowed to reach its maximum size. The maximum size represents approximately 15,600 transactions, (360,000/23). If the file is deleted or missing then a new file will be started automatically.

You should not attempt to read or process the file in any way while the Readykey for Windows system is still operating. You must shut the Readykey for Windows software down completely before doing anything with ATRANS.DAT.

It is recommended that the file is copied elsewhere and then deleted from the C:\RKEYWIN\DATA directory. This will ensure that there is no overlap in recorded transactions as a new file will be started when the Readykey for Windows system restarts.

It is possible to change the maximum file size by editing the ALARM.INI file, located in the C:\RKEYWIN\BIN directory. Under the [Alarm] heading, make the following entry:

```
[Alarm]  
MaxASCIIFileLength=360
```

- the number to the right of the equals sign is the maximum size of the file in kilobytes.