

PAGE



DELUXE Security System

MODEL 3220



OWNER'S MANUAL

SILENT KNIGHT

SECURITY SYSTEMS



Part No. 150251

USING YOUR PAGE SECURITY SYSTEM

The Page Deluxe system is active 24 hours per day monitoring for Fire, Intrusion, and other Emergency conditions. The Intrusion portion of your system must be turned on and off (armed and disarmed) as required.

It's important that your Intrusion system be on at all times your residence is not occupied and during the time the occupants are sleeping.

If any sensor is in an alarm mode (door left open, for example), the green light will be off and the system will not arm when the arm code is entered. When this happens, check all sensors to be sure they are in "stand-by" mode.

The door to your residence is "sensored" in such a manner that will allow entry without immediately activating the alarm. ("Entrance-Exit Delay"). However, an audible "warning" will immediately be heard indicating you have 15 seconds (adjustable) to disarm your system before it goes into alarm.

When your premises is occupied and/or while the occupants are sleeping, the "Instant" switch on the PAGE should be activated to defeat the entrance-delay feature. A light on the PAGE will indicate when the intrusion circuit is set to "Instant".

In the event that your system is activated accidentally, it's important to abort (disarm) the alarm as soon as possible by entering the disarm code on the touchpad.

Accidental alarm activations, or "false alarms" are a nuisance to your neighbors and will reduce the effectiveness of your system.

WHAT HAPPENS

If your system should go into alarm condition:

1.

A loud audible warning (siren) will be heard. There is a distinct siren sound for each emergency.

2.

The visual display lights up indicating the nature of the emergency. (Intrusion, Fire, Emergency.)

3. (Optional)

The system electronically dials into the Emergency Data Center, using your regular telephone line, and immediately reports your location and nature of the emergency. The proper authorities are then dispatched to your home.

The monitoring and reporting systems for Fire and Emergency are active 24 hours a day. The Intrusion system can be turned on and off ("armed" and "disarmed".)

IN CASE OF TROUBLE

The fire circuit in your Page system is "supervised"; in the event of a fault (break or short), an audible "trouble" tone will be heard. If this should occur, call your alarm service company immediately.

TESTING YOUR SYSTEM

Your system, including the fire circuit, should be tested on a regular basis, but not less frequently than once a month.

Ask your alarm service company about the proper method for testing your system.

PROGRAMMING YOUR SYSTEM

The digital combination to turn your system on and off may be changed or reprogrammed as desired. the "ON" combination will be a 2-digit code (same digit pushed twice), the "OFF" combination is a 4-digit code (entered in sequence).

Programming Instructions.

1. Depress "7" & "Reset" simultaneously on the Touch Pad. (green "Ready" light will begin flashing indicating you have one minute to program your combination.)
2. Sequentially touch 5 digits. The first digit touched will be "ON" combination, the last four digits are the "OFF" combination. The green "Ready" light will stop flashing after the combination has been programmed.
3. The system will automatically be disarmed when programming is completed. To arm, enter the "ON" combination (the first digit programmed, touched twice).
4. To disarm the system, enter the last four digits programmed.

NOTE:

The "ON" combination digit (the first digit programmed) may not be used consecutively in the "OFF" combination. For example, if the combination programmed is 4-6-3-4-5, the "ON" code is 44, the "OFF" code 6345. However, if the combination programmed was 4-6-4-4-5, the system will not work because the "ON" digit (4) was also used consecutively in the "OFF" combination.

There is a "default" code, 5-1-2-3-4, programmed permanently in your system's memory. If for some reason your system should lose power (including stand-by battery power) or "7" & "Reset" were simultaneously depressed without subsequent programming, the "ON" code automatically becomes 55, the "OFF" code 1234. The indication that your system has switched to the "default" code is that the green "Ready" light is flashing and the "Armed" light is on.

MANUAL CONTROLS

In addition to the ON/OFF and combination programming functions, the Page Deluxe control panel features Touch Pads for manually activating the Intrusion, Fire, and Emergency alarms. Remember these "panic buttons" are armed 24 hours a day. Special care should be taken to prevent unintentional activation by someone unfamiliar with the system.

OPTIONAL ACCESSORIES

Your Page Deluxe security system may include one or more optional accessories:

Digital Key Module (#7333)-allows you to arm and disarm your system from remote locations; for example, bedrooms, hallways, kitchen, etc. It also allows manual activation of the Intrusion and Emergency alarm.

Siren Speakers (#7710 or 7380) provides additional siren outputs for remote areas.



SILENT KNIGHT

SECURITY SYSTEMS

A DIVISION OF WAYCROSSE, INC.

1700 Freeway Boulevard North, Minneapolis, MN 55430