

# FAQs

Q: How do I get into programming mode?

A: To enter and exit program mode follow these steps

1. To enter annunciator programming, press **2** **7** **ENTER** [\*Installer's Code]. From here you can select a menu for programming.

\*Installer's Code is factory-programmed as 6000.

**Note:** If the Installers code is change write the new code down and keep it on file. If it is lost it is not retrievable.

To exit programming, press **STEP** **STEP** **CLEAR** **CLEAR**.

To Move through the Menus:

To scroll through the menus:	Press <b>ENTER</b> .
To select a menu:	Enter the menu number followed by <b>ENTER</b> .
To move to a new step in the menu:	Press Step # <b>ENTER</b> .
To move to a new substep in the menu:	Press <b>STEP</b> Substep # <b>ENTER</b> .
To move to a different menu:	Press <b>STEP</b> <b>STEP</b> Menu# <b>ENTER</b> .
To move to a specific step in a different menu:	Press <b>STEP</b> <b>STEP</b> Menu# Step# <b>ENTER</b> .
To move to a specific substep in a different menu:	Press <b>STEP</b> <b>STEP</b> Menu# Step# Substep# <b>ENTER</b> .

## Making Selections

You make programming selections by entering numeric data from the annunciator. For many options, you will either enable or disable an option. In other cases, you will enter a number to represent a choice or to indicate a numeric value.

For enable/disable (yes/no) options, press any numeric key to toggle the option on or off.