

Model C-6000 Fire Control/Communicator Panel Operating Instructions

These instructions must be framed and displayed next to the C-6000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Function	Keystrokes
Silence alarms or troubles	SILENCE (+ Code @ 5230)
Reset alarms (or smoke det.)	1 ENTER (+ Code @ 5230)
Reset dialer	3 ENTER + Installer's Code (always required)
Display event memory	5 ENTER (+ Code @ 5230)
Clear event memory	2 ENTER + Installer's Code (always required)
Display troubles	6 ENTER (+ Code @ 5230)
Begin fire drill	20 ENTER + Code (either Operator's or Installer's, always required)
End fire drill	SILENCE (+ Code @ 5230)
Disable/Enable a Zone	Zone # + DISABLE + Code (Either Operator's or Installer's, always required.)
Communication test	0 ENTER (+ Code @ 5230)
Walk test	2 2 ENTER + Installer's Code (always required)

Function	Keystrokes
Start download	4 ENTER [Installer's Code]
Set date	8 ENTER [Code] + 6 digits for date (Either Operator's or Installer's Code always required.)
Set time	9 ENTER [Code] + 4 digits for 24-hr military time (Either Operator's or Installer's Code always required.)
Enter programming mode	2 7 ENTER + Installer's Code (always required)
Exit test or program modes and return to normal operation.	Using 5230: STEP STEP CLEAR CLEAR Using built-in annunciator: SILENCE SILENCE CLEAR CLEAR

For service call:

Note: Press CLEAR to start over if you make a mistake.