

**SILENT KNIGHT  
MODEL 7381 FRONT DOOR INTERCOM STATION  
INSTALLATION INSTRUCTIONS  
P/N 150034  
DECEMBER 1989**

The Model 7381 is an outdoor intercom station intended for use with the Models 4720/4140 and 2750/7368 control communicators with intercom.


The Model 7381 contains a microphone with amplifier, a 20-Ω speaker, a light used by visitors to locate the unit and a normally open push-button switch.

The switch can be used to ring an existing doorbell/chime or wired to the control/intercom to produce a door chime tone (see the 4720 and 7368 instruction manuals—P/Ns 150476 and 150339).

*NOTE: While the 7381 is intended for use outdoors, it is NOT weatherproof and should not be exposed directly to rain and/or snow. The 7381 operates in a temperature range of 0° C - 70° C (32° F - 125°).*

The figure below shows how to wire the Model 7381. Use 24-gauge grounded 3-wire shielded cable (3 insulated wires, 1 bare wire and a foil wrap). Wire run must not exceed 200 feet.

The contacts at the normally open switch are rated at 1 A, 24 VAC.

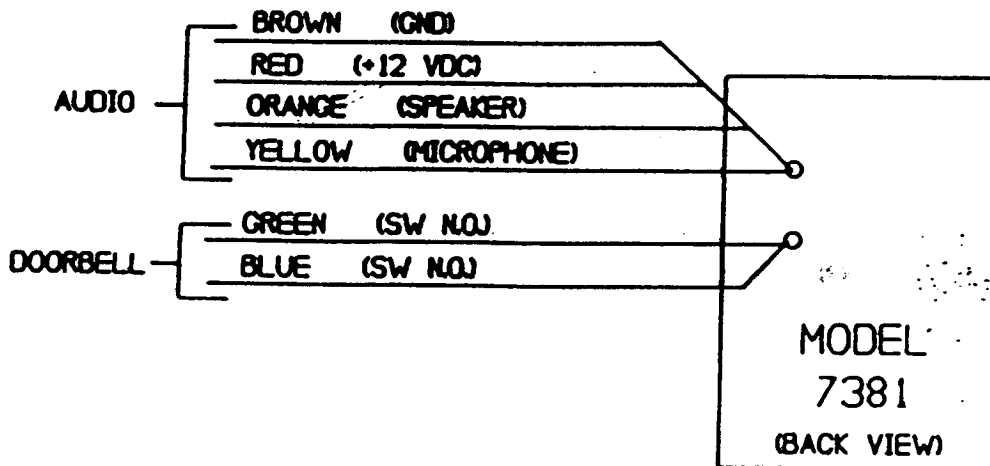

**WIRING TABLE**

WIRE COLOR	MODEL 7368	MODEL 4720	MODEL 4140
BROWN	TERM 2	NC	TERM (GND)
RED	TERM 1	TERM 5	NC
ORANGE	TERM 3	NC	TERM S1
YELLOW	TERM 4	NC	TERM M1
GREEN	*	*	
BLUE	TERM 5	4720 ZONE INPUT	

*NOTE: If you are using the doorbell option on either the Model 7368 or the 4720, connect the green wire to the ~~green~~ wire.  
Red*