

Residential Security Alarm Monitoring Fire Systems Access Control Structured Wiring
 Commercial Security Anet Radio Backup CCTV Systems Phone Systems Central Vacuum System



Welcome To amherstalarm.com



Silent Knight 4650 Keypad

Why Use Amherst Alarm?

Company Overview

Products & Services

Company News

User's Manuals

Contact Information

Frequently Asked Questions

<p> READY</p>	<ul style="list-style-type: none"> ⌘ On = Enter code to arm the system. ⌘ Off = Close open doors and/or windows. ⌘ Flashing = System is communicating to Amherst Alarm.
<p> ARMED</p>	<ul style="list-style-type: none"> ⌘ On = The system is on. To disarm, enter code. ⌘ Off = The system is off. Enter code to arm the system.
<p> NO DELAY</p>	<ul style="list-style-type: none"> ⌘ On = The system is armed and the entry & exit delay turned off. ⌘ To activate this feature enter code to arm system then press the button.
<p> INTERIOR</p>	<ul style="list-style-type: none"> ⌘ On = Motion detectors and/or glassbreak detectors active when the system is armed. ⌘ Off = Motion detectors and/or glassbreak detectors inactive when the system is armed. ⌘ To activate or deactivate the interior detectors press the button after arming the system.
<p> CHIME</p>	<ul style="list-style-type: none"> ⌘ On = Doors that are a part of the alarm system will chirp momentarily when opened and closed. ⌘ To activate or deactivate the door chime feature press the button.
<p>INT</p>	<p>To activate or deactivate the interior detectors press the INT button after arming the system.</p>
<p>DLY</p>	<p>To deactivate the entry and exit delay time enter code to arm system then press the DLY button.</p>
<p>CLR</p>	<p>Press clear if you make a mistake entering your code.</p>
<p>STAT</p>	<p>Press to display zones that are not ready or in trouble, and to deactivate trouble conditions.</p>
<p>MEM</p>	<p>Press to view alarm memory.</p>



info@amherstalarm.com

[Programming Codes](#)
[Bypassing Zones](#)
[Silencing Trouble Beeps](#)

MEM	
BYPS	Use: Bypassing zones Press the number of the zone then the BYPS button.
CODE 2	Press CODE 2 button then enter your access code to allow sec disarm the system.
CHM	To activate or deactivate the door chime feature press the CHM
TEST	Press TEST button then enter your code to briefly activate the s send a test signal to Amherst Alarm.
MUTE	Press twice to silence trouble beeps.
POL	Pressing the POL button for 2 seconds will activate the siren ar alarm to Amherst Alarm. The police will immediately be dispatc
FIRE	Pressing the FIRE button for 2 seconds will activate the siren a alarm to Amherst Alarm. The fire department will immediately b
AUX	Pressing the AUX button for 2 seconds will not activate the sire panic alarm to Amherst Alarm. The paramedics will immediatel