



Programming Sheet NetworX V2 Panel Communicator Lockup Issue

Recent close and exit error reporting need to be disabled for all active partitions. They are both enabled in partition 1 by default, but are not enabled by default in partitions 2 through 8.

From a keypad

1. Press * 8, then the installer code (default: 9713)
2. When the keypad's service light is flashing, or the keypad displays "Enter the device address then #" press 0 #.
3. For a single partition panel, press 23 # to go to location 23.
4. Press * twice to get to segment 3.
5. Press 7,8,*, then #.
6. Press exit twice to leave programming.

If the panel is partitioned, this process has to be repeated for each partition.

From step 3:

3. For partition 2, press 90 #
4. Press * twice to get to segment 3.
5. Press 7,8,*, then #.
6. Press exit twice to leave programming.

For the remaining partitions, the locations are:

Partition 3 = 93	Partition 4 = 96	Partition 5 = 99
Partition 6 = 102	Partition 7 = 105	Partition 8 = 108

Using DL900

1. Connect to the panel using a modem and an NX-586E or an NX-590E.
 2. Press **F9** to get to the Control Panel window.
 3. Click the Partition tab.
 4. Select partition 1.
 5. Uncheck Recent Close and Exit Error reporting in the lower left corner.
 6. Click the Send tab, and select Send Page.
 7. Click Read, and then select Read Page to confirm that the changes were made.
 8. Disconnect from the panel.
- If the panel is partitioned, select the partitions that are active, and uncheck Recent Close and Exit error reporting in the lower left corner.
 - If changing more than one partition, when finished with all active partitions, Click Send, then select Send Section.
 - Then click Read, and select Read Section. Confirm that the changes were made. Disconnect from the panel.