

# Removing a Sensor from Your System

Sensors, Detectors and Key FOBs may need to be **removed** from the Control Panel when not needed anymore or when changing their location. Removal means that your Control Panel will **not** work with this particular Sensor, Detector or Key FOB.

It is very easy to do and the “voice prompt” system will “talk” back to you each step of the way! If you make a mistake before step #9, simply press the **Cancel** button and start over!

## Procedure for Removing a Sensor, Detector or Key FOB

- 1** Open front cover of the Control Panel  
and place the provided template over the buttons.
- 2** Enter your ID \_\_\_\_\_ (default ID is **4321**).
- 3** Push the **Delete** button.
- 4** Push **1** button repeatedly until you hear the location (sensor) you want to remove.
- 5** Push the **Done** button.

The sensor is now deleted and *can* be installed in a new location. You may **add** the sensor back into the Control Panel with a new location name. Refer to [Adding a Sensor to Your System](#) document.

