

*Note The Concord Express Panels are PreProgrammed with Defaults. Only a few things need to be Programmed. Phone Number (0100), Account Number (0010). Duress Code (0016). Duress Option (0514).

Part I.

1. Wire panel before power up, Do NOT plug in programming keypad until system is powered up
2. Power up. Express will automatically enroll keypads that are hooked up. If you need to enroll new keypads. Power down and wire new keypad, now power back up.
3. Plug programming keypad on program header. **BE GENTLE.**
4. Initialize program keypad. 8 + 4321 + 02
5. Enter Program mode 8 + 4321 + 00
6. A B * # These are the buttons you need to get comfortable with for programming: We can also go to different programming areas by using SHORT CUT NUMBERS
7. EXAMPLE SHORTCUTS Phone number
Enter 0100+ _____ # * (Now enter nest short cut number for next field)

II

- A. Phone Number (0100) Enter 0100. Enter Phone Number, Enter #, Enter *
- B. Account Number (0010) Enter 0010, Enter Account, Enter #, Enter *
- C. Duress Code (0016) Enter 0016, Enter Duress Code, Enter #, Enter *
- D. Duress Option (0514) Enter 0514, Enter 2, Enter #, Enter *
- E. Program any extra Zones (070) Enter 070
 1. Press #,
 2. Enter Group Number (xx)
 3. Press #,
 4. Trip Sensor
 5. Press *
 6. Go back to Step 2
- F. Delete Unused Zones (072) Enter 072
 1. Press #
 2. Enter Sensor to be deleted (xx)
 3. Press #
 4. Repeat steps 2 - 3 until done.
- G. Edit Zones (073) (Change the Preprogrammed Zones) Enter 073
 1. Press #
 2. Enter Sensor # to be Edited (xx)
 3. Press #
 4. Press #
 5. Enter New Group Number (xx)
 6. Press #
 7. Press *
 8. Repeat Steps 2- 7, until done.
- H. Exit Program mode
 1. Press * 4 times
 2. Press A
 3. Press #
- I. Change Master
 1. 9 + Master Code + 110 + New Master Cods + # + ***+ A + A + #
- J. Program Time and Date
 1. 9 + Master Code + # + Time(xxx) + # + B + Date (mmddy) + # + * + A + #
- K. Send Signals
- G. Confirm Signals,

MENU ITEM	SHORTCUT NUMBER
Account Number	0010
CS Phone	0100
Learn Sensors	070
Delete Sensors	072
Edit Sensors	073
Duress Code	0016
Duress Option	0514
Quick Arm	0011

Part III.

The Zones are Pre programmed as follows

Zone 1	Group 10	Entry Delay
Zone 2	Group 17	Motion
Zone 3 - 6	Group 13	Instant Doors/Windows

Typical Groups	01 Key Fobs, and Wireless Keypads
	10 Entry Doors
	13 Instant Doors and Windows
	17 Motion Sensors