





# CONCORD

## User's Guide

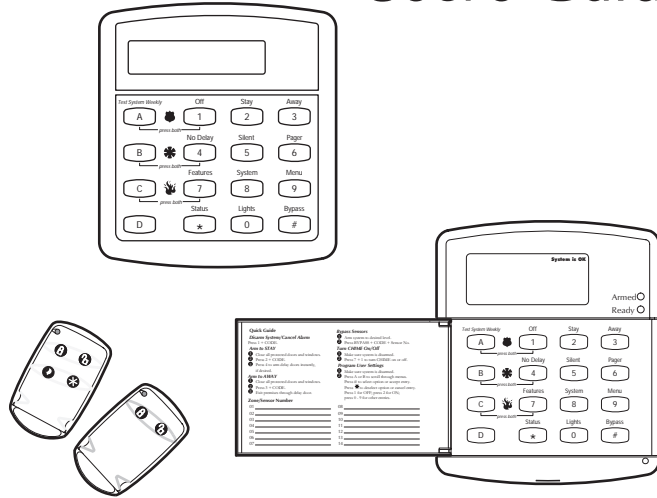

## Commands at a Glance

Disarm the system. Cancel an accidental alarm.	<b>1</b> + <b>C O D E</b>
Arm to Level 2—STAY.*	<b>2</b> + <b>C O D E</b>
Arm to Level 3—AWAY.*	<b>3</b> + <b>C O D E</b>
Send a police alarm.	 Press and hold both POLICE buttons for 2 seconds.
Send an auxiliary alarm.	 Press and hold both AUXILIARY buttons for 2 seconds.
Send a fire alarm.	 Press and hold both FIRE buttons for 2 seconds.
Arm system with No Delay.*	<b>2</b> + <b>C O D E</b> + <b>4</b> or <b>3</b> + <b>C O D E</b> + <b>4</b>
Arm system for Latchkey.*	<b>2</b> + <b>C O D E</b> + <b>6</b> or <b>3</b> + <b>C O D E</b> + <b>6</b>
Bypass a sensor.*	<i>Indirectly:</i> <b>2</b> + <b>C O D E</b> + <b>#</b> or <b>3</b> + <b>C O D E</b> + <b>#</b>  <i>Directly:</i> <b>#</b> + <b>C O D E</b> + <i>Sensor Number</i>
Arm system silently.*	<b>5</b> + <b>2</b> + <b>C O D E</b> or <b>5</b> + <b>3</b> + <b>C O D E</b>
Arm system with exit lights off.*	<b>2</b> + <b>C O D E</b> + <b>0</b> or <b>3</b> + <b>C O D E</b> + <b>0</b>
Turn all lights on/off.	<b>0</b> + <b>0</b>
Turn specific lights on/off.	<b>0</b> + <i>Light number</i>
Check the system status.	<b>*</b> for Short status or <b>*</b> + <b>*</b> for Full status
Turn Chime on/off.	<b>7</b> + <b>1</b>
Turn Energy Saver on/off.	<b>7</b> + <b>2</b>
Disable local phone access.** (This is a phone command only.)	<b>#</b> + <b>7</b> + <b>3</b> or wait 5 seconds after picking up the phone
Check alarm memory.	<b>7</b> + <b>6</b>
Activate Output.***	<b>7</b> + <b>7</b> + <i>Output number (1-6)</i>

\*If Quick Arm feature is on, access code is not required. See page 6 for more information.

\*\*Installer can disable local phone control if desired.

\*\*\*Must be set up by installer.

Contents		
<b>Getting to Know Your Security System</b>	<b>1</b>	
Overview	1	
<b>Communicating with the Panel</b>	<b>2</b>	
Instructing the Panel	2	
Touchpads—Your System Interface	2	
Beeps and LEDs—How Your System Talks to You	3	
Notification by Pager	3	
What Happens in an Alarm Condition	3	
<b>Preventing Accidental Alarms</b>	<b>4</b>	
Cancelling Accidental Alarms	4	
<b>Basic System Operations</b>	<b>5</b>	
Arming Your System	5	
Keychain Touchpad Arming	6	
Using the Chime Feature	7	
Using the Voice Chime Feature	7	
Exit and Entry Delay Times	7	
Extended Delay	7	
Exit Extension	8	
No Delay—For Instant Alarm	8	
Auto STAY Arming Feature	8	
Arming While a Door or Window is Open	8	
Basic Light Control	9	
Basic Output Control	9	
Checking the Status of Your System	10	
<b>Panic Alarms</b>	<b>10</b>	
Fire Panic Alarm	10	
Police Panic Alarm	10	
Auxiliary Panic Alarm	11	
Siren Time-out	11	
<b>Access codes</b>	<b>11</b>	
Programming Access Codes	11	
Changing or Erasing User Codes	12	
Assigning Code Attributes	12	
<b>Setting the Time and Date</b>	<b>13</b>	
<b>Adjusting System Sounds and Touchpad Brightness</b>	<b>13</b>	
Arming Your System Silently	13	
Adjusting the Touchpad Beeps	14	
Adjusting the System Status Voice Volume	14	
Adjusting the Touchpad Display Brightness	14	
Adjusting the Volume of the Wireless Siren	14	
<b>Using the Energy Saver Feature</b>	<b>15</b>	
Energy Saver Example	15	
<b>Notification by Pager</b>	<b>15</b>	
<b>Creating Time Schedules</b>	<b>17</b>	
Attaching Time Schedules	18	
Time Schedules and Partitions	18	
<b>Advanced Light Control</b>	<b>18</b>	
Controlling Lights By Time Schedule	18	
Controlling Lights with Sensors	19	
Installer Programmable Lighting	19	
<b>Controlling Outputs by Time Schedule</b>	<b>19</b>	
<b>Scheduled Arming</b>	<b>20</b>	
<b>Opening and Closing Reports</b>	<b>20</b>	
When Will this Feature Be Active?	20	
Who Will Be Paged?	20	
What Will the Pager Report?	20	
<b>Latchkey PAGING</b>	<b>21</b>	
Page In the Event of . . .	21	
Who Will Be Paged?	21	
Who Can Send a Page?	21	
What Will the Pager Report?	21	
Latchkey Opening	21	
Latchkey Closing	22	
Assigning a Time Schedule to Latchkey Paging	22	
Applying the Latchkey	22	
<b>Notify by Exception</b>	<b>23</b>	
Page In the Event of . . .	23	
Who Will Be Paged?	23	
Who Can Send a Page?	23	
What Will the Pager Report?	24	
When Will this Feature Be Active?	24	
Assigning a Time Schedule to Exception Opening and Closing	24	
<b>The No Activity Feature</b>	<b>24</b>	
<b>Using the Panel Download Feature</b>	<b>25</b>	
<b>System Information</b>	<b>25</b>	
<b>Using a Partitioned System</b>	<b>26</b>	
Global Settings	26	
Partition-Specific Settings	26	
Jumping Partitions	26	
<b>Using a Touchtone Phone to Operate Your System</b>	<b>27</b>	
Phone Command Prefix	27	
Accessing the System from Off-site	27	
Touchtone Phone System Operation	27	
Sending a Police Panic Alarm	28	
<b>Testing the System</b>	<b>29</b>	
Automatic Test Features	29	
Manual Tests	29	
Resetting Smoke Detectors	29	
<b>Troubleshooting</b>	<b>31</b>	
Trouble Beeps and Trouble Messages	31	
<b>Appendix A: User Sheets</b>	<b>33</b>	
<b>Appendix B: Planning for Emergencies</b>	<b>39</b>	
<b>Appendix C: Programming Your System</b>	<b>41</b>	
<b>Notes:</b>	<b>48</b>	
<b>Index:</b>	<b>49</b>	



# SECTION 1: GETTING TO KNOW YOUR SECURITY SYSTEM


This security system is designed to protect your family and property, whether you are on the premises or away.

This manual describes how to operate your system. It describes basic arming and disarming commands as well programming instructions for system features.

The dealer or installer may have already discussed with you many details concerning your system. Specific setup information is included in the "Appendix A: User Sheets" on page 33.

## Overview


Your security system is comprised of different components. Each component plays a special role in system operation:

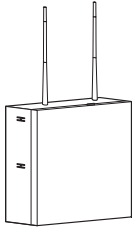

The **panel** is at the heart of your system. It stores the intelligence to monitor all the sensors and devices in the system. The panel is the piece of equipment that initiates a call to the central station in an alarm situation. The panel circuitry is enclosed in a steel cabinet and is installed out of the way of household or workplace traffic.



 
**Touchpads** allow you to communicate with your panel. You'll use a touchpad to arm, disarm, and program your system.



**Door and window sensors** protect the perimeter of your home by alerting the panel when a door or window is opened.



 
**Motion detectors** in hallways or individual rooms detect a person moving across the field of detection.



**Environmental sensors** such as smoke and heat detectors remain alert for the presence of fire or carbon monoxide 24 hours a day.



Your system may contain a **Phone Interface and Voice Module** that allows you to use a Touchtone phone located on- or off-site as a touchpad. The module also makes it possible to get voice feedback from speakers, guiding and informing with spoken prompts and system status reports.

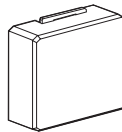


Your system may contain an optional **Energy Saving Module** which helps you save money by allowing your system to monitor and control the temperature of your home or business. The module can also be programmed to alert the central station in the event of furnace or AC failure.


### How your security system works



A sensor is activated.

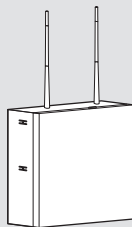

The sensor alerts the panel immediately.

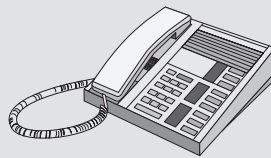

The panel activates sirens. If the system is monitored, the panel calls the central monitoring station.

This decision is based on system programming and the current arming level.



The central monitoring station operator reports the alarm to the police or fire department.



## SECTION 2: COMMUNICATING WITH THE PANEL

Touchpads allow you to communicate with the panel. In turn, the system can be set up to communicate with you through:

- status beeps from touchpads and speakers,
- alarm sirens,
- scrolling text on touchpads,
- display text on fixed display touchpads,
- voice feedback over Touchtone phones or interior speakers, and
- system information over pagers.

 
### Instructing the Panel

Most of your instructions to the panel consist of this basic pattern:

Command  $+$  Access Code  
 ◀▶▶▶▶▶▶▶ ▶▶▶▶▶▶▶▶

Not just anyone can walk up to a touchpad and operate your security system. Before the system will process most commands, users are required to enter a pre-programmed 4-digit access code.

Keychain touchpads that are enrolled as part of the system do not require an access code, but are usually kept in an individual's pocket or purse.




If you would rather use an actual key to arm and disarm the system, your security dealer can install a special key and keyswitch in your home.

### Touchpads—Your System Interface


There is a broad range of touchpads that can be used with your panel—from a single-button panic sensor which sends only panic alarms, to an alphanumeric touchpad that displays text and allows extensive user programming.

#### Alphanumeric Touchpads

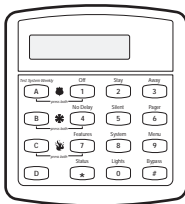


Alphanumeric touchpads are mounted on a wall and communicate by displaying text on a two-line display.

#### Fixed Display Touchpads

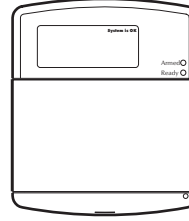

Fixed English (display) touchpads communicate using lighted text, LEDs, and an 11 character display.

#### Wireless Handheld Touchpad

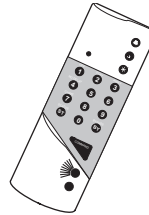

This touchpad is wireless and can be carried from room to room. Users can even turn on and off system controlled lights from anywhere in the home.

#### Keychain Touchpads



Keychain touchpads are handy for simple arming and disarming functions. They are wireless and can be carried off-site in a purse or pocket.

The installer can program specific buttons or button combinations to operate a gate or garage door, or to send a Police or Auxiliary panic alarm.



#### Touchtone Phones



Your system can be set up to allow system operation from a Touchtone phone on- or off-site. This includes arming and disarming, plus system features such as checking the system status and turning on and off lights.

#### Panic Buttons



Panic button touchpads are dedicated to sending only one signal— usually a Police or Auxiliary panic alarm. These touchpads are wireless and usually kept near or on the user.

## Beeps and LEDs— How Your System Talks to You

Touchpads and interior sirens produce a variety of operating beeps to inform you of different system states and operations.

### Key Beeps

A Key beep is the tone you hear when you press a button on an alphanumeric, fixed display, or handheld wireless touchpad. The sound confirms that the button was pressed adequately. Key Beeps can be turned on or off by the installer.

### Status Beeps

Status beeps come from touchpads or speakers and are sounded when there is a change in the current status of the system. Status beeps are not alarms, but they do warrant your attention.

There is more than one type of Status beep:

- Exit Delay beeps indicate that an arming command has been entered and the countdown to arming has begun.
- Entry Delay beeps indicate that you've entered the building and the countdown to an alarm has begun. (So disarm the system as soon as you get in!)
- Chime feature beeps tell you that a door was opened or closed.
- Protest beeps inform you that you're trying to arm the system while there is an open door or window.
- Trouble beeps tell you that there is a problem with the system or one of its components.
- Sensor test beeps are the sounds the system makes during a sensor test to indicate that a sensor was tested properly.

Status beeps are described in more detail throughout the manual and in the "Appendix A: User Sheets" on page 38.

### LEDs

Fixed display touchpads have 2 LEDs which allow you to determine the current system status at a glance. The red LED is labeled Armed and the green LED is labeled Ready. The table below explains LED behavior.

System Status	Red Armed LED	Green Ready LED
Exit Delay	Flashing	
Armed to Level 1-Off	Off	On
Armed to Level 2-Stay or 3-Away	On	
Entry Delay	Flashing	Off
System Trouble (check system status)/Protest		Off
System OK		On

## Notification by Pager

Your system can dial the phone numbers of five different pagers to notify pagerholders of events they may want to be aware of. Some of the events include:

- System disarming
- System arming
- Trouble conditions
- Alarm conditions

For more information, see "Notification by Pager" on page 15.

## What Happens in an Alarm Condition

When there is an alarm condition, four things happen all at once:

- Speakers and touchpads emit emergency tones.
- System lights flash.
- Panel notifies the central station for help.\*
- Pagers are notified of the event.

\* *Your system may or may not be monitored. If it is not monitored, no call will be made.*

### Fire and Smoke Alarms

 
If your system contains smoke and fire detectors, it monitors the premises for smoke and fire alarms 24 hours a day and in all arming levels.

These alarms cannot be canceled or aborted and are *always* reported to the central station. Since many communities charge for dispatching the fire department in error, your dealer may give you specific instructions to follow in the event of an accidental smoke or fire alarm. Record these instructions in the Appendix A User Sheets under "Accidental Smoke and Fire Alarms."

### Clearing Smoke Detectors

Once a smoke detector has been in alarm, it is considered "Open" or in "Trouble" until it is reset.

- Press  $\square$ + Code, once to silence the alarm.
- Press  $\square$ + Code, again to reset the smoke detector.



## SECTION 3: PREVENTING ACCIDENTAL ALARMS

Your security system is engineered with advanced technology that reduces the chance of an accidental alarm caused by a technical problem. In wireless systems, this technology prevents other devices, such as garage door openers, ham radios, television remote controls, and cellular phones, from interfering with your security system.

Most accidental alarms occur when leaving the residence after arming the system, or upon returning, before disarming the system.

If, for example, you arm the system, then run upstairs for something you forgot, the Exit Delay time may expire. Once the Exit Delay expires, opening an armed door or moving in front of a motion detector will cause an alarm.

### Cancelling Accidental Alarms

Your system can be set up with the opportunity to cancel an accidental intrusion, Police, or Auxiliary alarm. (Fire alarms cannot be cancelled.)

If the Dialer Abort feature is turned on, cancelling the alarm within a specified period will silence the siren and prevent the alarm from being reported to the central monitoring station. Talk to your installer or see Appendix A User sheets under "Dialer Abort" on page 36 to see if this feature is enabled.

Cancelling a fire alarm will silence the siren, but fire alarms are *always* reported. If an accidental fire alarm has sounded, follow the procedures of your central monitoring station to prevent a false dispatch.

#### **To cancel an alarm:**

1. Press . Touchpads display "ENTER CODE."
2. Enter your access .  
Touchpads display date and time or programmed idle text. The system sounds one long beep.

If you're using a Touchtone phone, see "Using a Touchtone Phone to Operate Your System" on page 27.

#### **PROGRAMMED TEXT:**

Text programmed by your installer to identify sensors, outputs, etc. For example, a sensor could be identified as "Front Door."



### *Guidelines for Preventing Accidental Alarms*

Following these guidelines will go a long way toward preventing accidental alarms.

- Close doors and windows before you leave your house.
- When getting ready to leave the house, gather the things you want to take with you so you can exit immediately after arming the system.
- Always enter and exit within the programmed delay times.
- Make sure you leave through a door that has a delay time set for it. If you arm your system, then leave through a door without a delay time, an alarm will immediately sound.
- When you return, immediately disarm your system.
- Be aware of the devices in your security system and learn how each one operates.
- Listen to system beeps and voice announcements. Take note of indicator lights and touchpad messages which indicate the current system status.
- If you have pets, ask your installer if you need pet lenses in your motion detectors. Pets climb higher than you may guess, causing alarms when you are away.
- Check the location of your smoke detectors. Smoke detectors near bathrooms can be tripped by steam from a shower. Smoke detectors near the kitchen can be tripped by cooking smoke. Refer to the User Sheets in Appendix A to determine what the specific settings are for your system.





## SECTION 4: BASIC SYSTEM OPERATIONS

This section describes:


- Arming your system.
- Using the chime feature.
- Delay times.
- Bypassing sensors.
- Basic light control.
- Basic output control.
- Checking the system status.

For instructions on using a phone to perform any of these functions, see “Using a Touchtone Phone to Operate Your System” on page 27.

### Arming Your System

Since your security needs may vary throughout the day, this system was designed with three arming levels to meet these different needs. By arming your system to a particular level, only those sensors programmed to detect in that arming level will report alarm conditions to the panel.

No matter which level your system is in, all sensors programmed to be active 24 hours a day will continue to report alarm conditions. This includes smoke detectors, fire sensors, panic buttons, and environmental sensors.

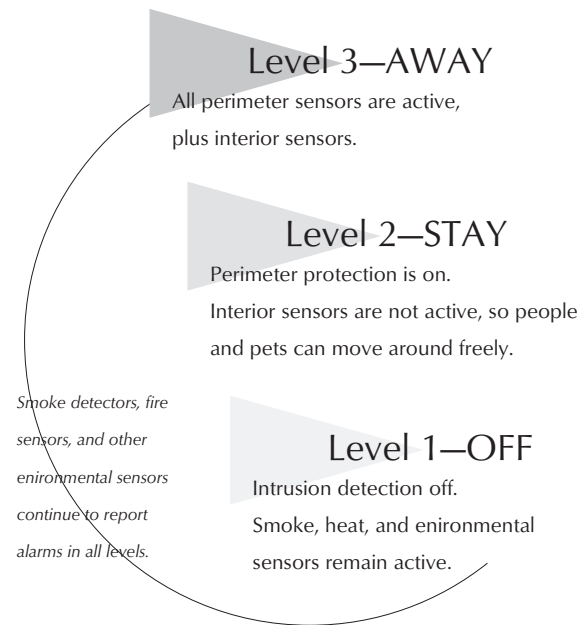

#### Arming Level 1—OFF

Use arming Level 1 when the system is not being used for intrusion detection. For example, on an active Saturday morning—kids playing inside and out, someone working in the garage, various house projects going on.

Even though Arming Level 1 disarms the system, your system continues to monitor fire, smoke, and panic alarms.

Here are some other situations in which you'd set the system to Level 1—OFF:

- Upon entering your armed home or business. When entering the armed premises through a designated delay door, the Entry Delay time begins. Sirens and touchpads beep to remind you to disarm the system.
- Before opening a door or window while inside or outside the home or business. When you wake up in the morning and want to get your newspaper, you must disarm the system before opening the door to prevent an accidental alarm.
- To stop sirens and cancel an alarm. When an alarm condition occurs disarming the system turns off any sirens.

#### To disarm to Level 1—OFF using a touchpad:

1. Press **[1]**. Touchpads display “ENTER CODE.”
2. Enter your access **[C][0][D][E]**. Touchpads display date and time or programmed text.
3. The system sounds one long beep.

#### To disarm to Level 1—OFF using a keychain touchpad:

1. Press the **Ⓛ** Unlock button.

#### Arming Level 2—STAY

There are times when you want intrusion protection, but still want the freedom to move around within your house without setting off an alarm. For example, in the evening when your family is inside for the night. In this and similar situations, set your system to 2—STAY.

#### To arm to Level 2—STAY using a touchpad:

1. Close all protected perimeter doors and windows.
2. Press **[2]** at any touchpad. Touchpads display, “ENTER CODE.”
3. Enter your access **[C][0][D][E]**. Touchpads display, “Armed to STAY” and the system sounds two short beeps.
4. If leaving the premises, exit through a designated delay door immediately.


**Note:** If Quick Arm feature is on, an access code is not required to arm the system to Level 2—STAY.

#### To arm to Level 2—STAY using a keychain touchpad:

1. Press the **Ⓛ** Lock button.

#### If your system will not arm:

- Reread and follow the arming instructions carefully.
- Make sure that the access code you entered was valid.
- If you hear protest beeps (a repeating pattern of one long beep, followed by one short beep, followed by one long beep), check to see if a protected door or window was left open. For more information on beeps see “Beeps and LEDs— How Your System Talks to You” on page 3.



### Keychain Touchpad Arming

To disarm your system with a keychain touchpad, press the unlock button.

Your installer can set up your keychain touchpad to arm the system in one of two ways:

1. Press the Lock button to arm the system directly to Level 3—AWAY with no Exit Delay. Using this method, you would not be able to arm to Level 2—STAY.
2. Press the Lock button to increase the arming level each time it is pressed (Level 1 to Level 2, or Level 2 to Level 3). The Exit Delay time would be applied.

 
 
 

 
 


Press the Lock button after arming to AWAY (Level 3) to activate the Latchkey feature (must be set up by installer). For more information, see “Latchkey Paging” on page 21.

### Arming Level 3—AWAY

At other times, you want every sensor to be alert: when the family goes on vacation, or at closing time.


In this and similar situations, set your system to 3—AWAY for maximum protection. All sensors are active—perimeter door and window sensors, and interior motion detectors.

#### To arm to Level 3—AWAY using a touchpad:

1. Close all perimeter doors and windows.
2. Press  at any touchpad. Touchpads display, “ENTER CODE.”
3. Enter your access       . Touchpads display, “ARMED TO AWAY” and the system sounds three short beeps.
4. Exit through a designated delay door immediately.


**Note:** If Quick Arm feature is on, an access code is not required to arm the system to Level 3—AWAY.

#### To arm to Level 3—AWAY using a keychain touchpad:

1. Press the  Lock button twice to go from Level 1 to Level 3, or once to go from Level 2 to Level 3.

### Quick Arm

The Quick Arm feature lets you arm your system without using an access code. You will still need to enter an access code to disarm the system.




Stay  
2  
From Level 1—OFF, simply press 2 for Level 2—STAY.

Away  
3  
From Level 1 or 2, press 3 for Level 3—AWAY.

Contact your installer if you'd like to use this feature.

### Quick Exit

**Note:** In UL Listed systems, this feature is disabled.

 

Your system may be set up so that when your system is armed to Level 2—STAY, you're able to press  on any touchpad and simply walk out the door without having to disarm and rearm the system.

This is useful when your system is armed and you want to quickly pop outside to pick up the newspaper without disarming your system.

#### IMPORTANT:

If you step outside and are planning to come back in, do *not* close the door behind you!

#### To use Quick Exit:

1. When the system is armed to 2—STAY, press  at any touchpad (opening the door without pressing  will cause an alarm).
2. Open the door and go outside.  
*Leave the door open if you are planning to come back in!*
3. Come back in within two minutes and close the door. The system will rearm to 2—STAY.

## Using the Chime Feature

Turning on the Chime feature is like having bells on every protected door and window. When this feature is on, sirens and speakers sound 2 beeps whenever anyone opens a protected door or window.

The Chime feature works only in Level 1–OFF.

### To turn Chime on/off:

1. While in Level 1–OFF, from any touchpad, press **[7] + [1]**.

While the Chime feature is on, touchpads display, “CHIME IS ON” or “CHIME ON.”

### Chime-On-Close

The Chime-On-Close feature works like the regular Chime feature, but in addition to the double beeps heard upon opening a protected door or window, the system sounds one long beep when the door or window is closed again.

You can turn the Chime-On-Close feature on or off from the programming menus. Refer to “Using Programming Menus” on page 43 for information on programming your system.

 
## Using the Voice Chime Feature

If the installer wired speakers to the Phone Interface and Voice module outputs, you can program your system to speak the programmed sensor text whenever someone opens a protected door or window. When this feature is on, speakers announce, “Sensor *name* open/closed.” You can turn the Voice Chime feature on or off from the programming menus. Refer to “Using Programming Menus” on page 41 for information on programming your system.

## Exit and Entry Delay Times

After arming your system, you need time to exit the building so you won't set off an alarm. Likewise, upon returning to your home or business, you'll need enough time to open the door and get to a touchpad to disarm the system.

- The *Exit Delay* is a period of time long enough to let you leave through a designated delay door after arming the system.
- The *Entry Delay* is a period of time long enough to let you unlock a designated delay door and get to a touchpad to disarm the system.




### Exit Delay Example

You're about to go on an errand. You are inside your house and have just armed the system to Level 3–AWAY.

The interior sirens and touchpads sound three quick status beeps, telling you that the system accepted the command and has started the Exit Delay time.

During the Exit Delay time, the system sounds one short beep every 4 seconds. Exit the premises immediately.


During the last 10 seconds of the Exit Delay you'll hear one short beep every second, warning you that the Exit Delay is about to expire. When the delay expires, you'll hear three more quick status beeps. These beeps indicate that the Exit Delay has ended. Opening an armed door or window after the Exit Delay has expired will cause an alarm.

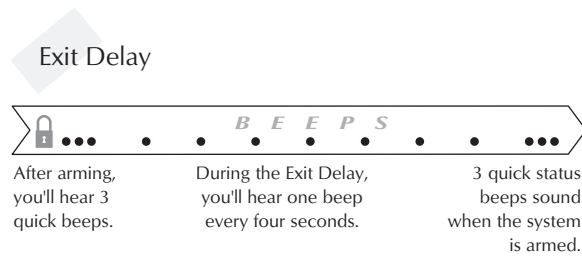

### Entry Delay Example


You are returning to your house that is armed to Level 3–AWAY. When you unlock and enter the designated delay door, the interior sirens and touchpads sound two short beeps every two seconds. This tells you that the Entry Delay time has begun and reminds you to disarm the system to avoid setting off an alarm.

During the last 10 seconds of Entry Delay, you'll hear two beeps every second.

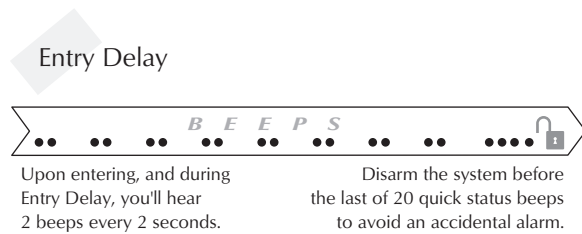

Your installer will work with you to decide which door(s) should be delay door(s), and determine the delay times that will work best for you and your family. Then, the installer will program the Exit and Entry Delay times into your system.

## Extended Delay

 

In some situations, additional time is needed to arm or disarm the system.

In these instances, the installer can program an Extended Delay time, giving you as much as 16 additional minutes to arm or disarm the system before setting off an alarm.

Refer to Appendix A “Doors and Delay Time Settings” on page 36 for a list of actual Exit Delay times.

## Exit Extension

**Note:** In UL Listed systems, this feature is disabled.

Your system may be set up so that the delay time is restarted if you re-open the delay door during the initial delay time.

This is useful if, after arming the system, you walk out the door, then remember something you forgot inside. You can re-enter and exit through the delay door without disarming and re-arming the system.

**Note:** The Exit Extension will work on the first re-entry only.

If your system is not using this feature, you must disarm the system when you re-enter the armed premises to avoid setting off an alarm.

## No Delay—For Instant Alarm



You can choose to turn off the Entry and Exit Delays, causing the delay doors to arm immediately. Anyone entering the house through the delay door when the system is set to No Delay would immediately cause an alarm.

### No Delay is normally used:

- When you're staying at home, after you've armed the system.
- When you're arming your house from the outside. (You must have a wireless touchpad in order to do this.)

### Arming to Level 2 or 3 with No Delay, using a touchpad:

1. Close all perimeter doors and windows.
2. Enter **2** + **C O D E** or **3** + **C O D E**.  
The system sounds two or three short beeps.
3. Immediately after hearing the beeps, press **4** for No Delay.  
Touchpads display, "ARMED TO STAY NO DELAY" or "ARMED TO AWAY NO DELAY," for example.

**Note:** If Quick Arm feature is on, an access code is not required. See page 6 for more information.

Changing the arming level will restore delay doors to their normal Exit and Entry Delay times.


## Auto STAY Arming Feature

The Auto STAY Arming feature helps cut down on false alarms in the event that you arm the system to 3—AWAY, but fail to leave during the Exit Delay time. Here's how it works:

If you arm the system to Level 3—AWAY, and do not leave the premises within the Exit Delay time—	
If feature turned on	The system can tell that no one opened and closed a delay door within the delay time. It assumes that someone is still inside and the panel will arm to 2—STAY to avoid a false alarm.
If feature turned off	The system arms to Level 3—AWAY regardless of whether or not a delay door has been opened and closed. Your movement inside the premises could activate a motion detector, causing an alarm.

The dealer can turn this feature on or off for you. See Appendix A "System Features" on page 36 to see if this feature is available to you.

## Arming While a Door or Window is Open

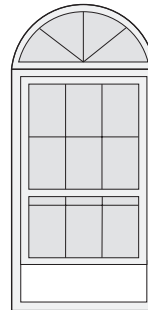

It is possible to arm your system while leaving a door or window open. This is useful if, for example, you like to sleep at night with the window open.

If the door or window has a sensor installed on it, the system must be told to ignore, or *bypass*, that sensor when it's open. All other sensors will remain active.

There are two methods for bypassing a sensor:

- **Directly** – After arming the system, bypass door/window sensors *before* you open them. You must know the sensor number of the door or window you wish to bypass. Your installer can include the zone number as part of the sensor text.
- **Indirectly** – As you are arming, bypass sensors on already-open doors and window. This method should not be used in UL Listed installations.

### REMEMBER:

When a sensor is bypassed, you are allowing that door or window to go unprotected.

### Bypassing a Sensor Directly

Use this method if the system is armed and you would like to open a window without disarming.

Refer to the Appendix A User Sheets to determine what the sensor number is for the sensor you wish to bypass.

**Note:** You cannot bypass sensors directly using a key-chain touchpad.

#### To bypass sensors *directly*:

1. Close all doors and windows.
2. Arm your system to the desired level.
3. At any touchpad, press  $\#$  +  $\square$   $\square$   $\square$   $\square$   $\square$   $\square$ .  
( $\#$  is labeled *Bypass*)
4. Touchpads display, "BYPASS SENSOR \_ \_," or "ENTER SNSR \_ \_." Enter the desired sensor number.
5. Touchpads display, "BYPASSED ZONES 01," or "SENSOR 01 BYPASSED," for example.  
If the touchpad displays "INVALID," or "FAILURE," or if the touchpad sounds one long beep, make sure that you entered a valid sensor number. Heat and smoke sensors cannot be bypassed.
6. Bypass other sensors, if necessary, by repeating Step 3.
7. The bypassed door or window can now be opened.

#### To arm (unbypass) bypassed sensors:

1. Repeat the above procedure substituting the bypassed sensor number or,
2. Close bypassed doors and/or windows and arm your system again.

### Bypassing a Sensor Indirectly

Use this method if you are arming the system and would like to bypass doors and windows already open.

#### To bypass sensors *indirectly*:

1. Leave open only those doors and windows that are to remain open. Close all others.
2. Arm your system to the desired level. The touchpad emits protest beeps and displays "PROTEST," because of the open sensor(s).
3. At any touchpad, press  $\#$  (Bypass). Touchpads with displays show, "BYPASSED ZONES 01," or "SENSOR 01 BYPASSED," for example.
4. The system sounds arming level beeps to indicate that the system is armed and open sensors have been successfully bypassed.

#### To arm (unbypass) bypassed sensors:

1. Close bypassed doors and/or windows.
2. Arm your system again.

#### To bypass sensors indirectly using a keychain touchpad:

1. Press the Lock button once to arm the system and again to bypass open sensors:



### Was the Bypass Successful?

#### To confirm whether or not a sensor was bypassed:

1. Press the Status button on the touchpad.  
( $\square$  is labeled *Status*.)  
Touchpads list bypassed sensors or zones.

### Basic Light Control

---

There are two kinds of light control:

- *Basic* light control, offering instant light control at any touchpad, and
- *Advanced* light control, in which lights turn on and off automatically according to specific situations. (See "Advanced Light Control" on page 18).

#### To turn *all* lights on or off:

1. *From any touchpad:*  
Press  $\square$  +  $\square$ .

*From a 4-button keychain touchpad:*

Press the  Lights button.


#### To turn a *specific* light on or off\*:

1. *From any touchpad:*  
Press  $\square$  + light number.

*From a 4-button keychain touchpad:*

You cannot turn on a specific light using a key-chain touchpad.

\* Refer to the User Sheets in Appendix A to determine which light number is associated with which lamp.

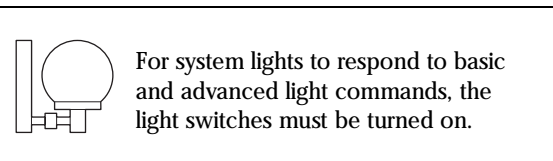

### Basic Output Control

---

Panel output points control the hardware installed on your system. These outputs are usually configured to turn on automatically in response to certain events.

Your installer may have configured your system so that you can control some output points from your touchpad. Have the installer list and explain any outputs that are programmed for your control. Use the following procedure to turn an output on or off.

#### To turn the output on or off:

1. From any touchpad press  $\square$  +  $\square$  + *output number*. If the output was already activated, it will shut off. If the output was off, it will activate.



## Checking the Status of Your System

Checking the system status means finding out about the current condition of your system. This includes finding out if any sensors are open or currently bypassed, whether or not the AC power and backup battery are okay, the nature of the most recent alarm, and more, depending on the features in use and the equipment in your system.

Check the system status if:

- Your system sounds trouble beeps (five short beeps every minute).
- Your touchpads display, "ALARM," and "POLICE," "AUXILIARY," or "FIRE."
- Your touchpads display, "PRESS STATUS" or a blinking \*.

 
 
If an alarm or system trouble condition has occurred, it is displayed on a touchpad the first time you perform a Short or Full Status check. Performing a system status check a second time displays the system status including any trouble conditions.

If any alarm or system trouble is active, it continues to show up in every status check until the system is disarmed.

### Short System Status

A Short Status indicates the current arming level, sensor status (whether open or bypassed), low battery, supervisory, AC power or backup battery failures.

#### To get a Short System Status:

1. Press . ( is labeled *Status*.)

The system sounds beeps according to the current arming level. (One for Level 1, two for Level 2, three for Level 3.) Touchpads display and optional voice modules announce the status information, for example, "SYSTEM IS OK," or "SENSOR 02 OPEN."

### Full System Status

A Full Status combines the Short Status information with added details about specific system features.

#### To get a Full System Status:

1. Press  + .




Interior sirens sound beeps according to the current arming level. Touchpads display and optional voice modules announce the status information, for example, "SYSTEM IS OK," "SENSOR 03 BYPASSED," "SYSTEM BATTERY IS OK," "AC POWER IS OK." If the optional Energy Saver module is installed the system will display/announce its status (on/off) and the current temperature (if on).

## SECTION 5: PANIC ALARMS

Panic alarms are easily activated from any touchpad to quickly alert the central monitoring station to a Fire, Police, or Auxiliary emergency. A panic alarm can be sent at any time, regardless of the current arming level: 1—OFF, 2—STAY, or 3—AWAY.

This system is designed to inform a central monitoring station of the nature of the emergency so the correct personnel can be dispatched immediately.

Each type of panic alarm sounds and reacts differently when activated.

Type of Alarm	Alarm Sound
 <b>Fire</b>	Repeating series of three beeps
 <b>Police</b>	Continuous tone
 <b>Auxiliary</b>	Rapid beeps

### Fire Panic Alarm

The Fire panic alarm sounds from all interior and exterior sirens. On monitored systems, the central monitoring station responds by calling the fire department.

#### To activate a Fire panic alarm from a touchpad:

1. Press and hold both  Fire button(s) for 2 seconds.

### Lighting During a Fire Panic Alarm

If your system is equipped with system lighting, all system lights will turn on and remain on during a Fire panic alarm.

### Police Panic Alarm

The Police panic alarm sounds from all interior and exterior sirens, scaring off any intruder and alerting neighbors to the trouble. On monitored systems, the central monitoring station responds by calling the police.

#### To activate a Police panic alarm from a touchpad:

1. Press and hold the  Police button(s) for 2 seconds.

#### To activate a Police panic alarm from a keychain touchpad:

1. Press and hold the  Lock and  Unlock buttons at the same time for 2 seconds.

### Lighting During a Police Panic Alarm

If your system is equipped with system lighting, all system lights will flash continuously during a Police panic alarm.

### Auxiliary Panic Alarm

The Auxiliary panic alarm sounds from interior sirens only. It is typically set up by your security dealer, based on your specific needs. On monitored systems, the central station responds by calling the service or agency you specified through your dealer, such as an ambulance service.

#### To activate an Auxiliary panic alarm from a touchpad:

1. Press and hold the  Auxiliary button(s) for 2 seconds.

#### To send an Auxiliary panic alarm from a keychain touchpad:

1. Press and hold the  Lights and  Star buttons at the same time for 2 seconds.

### Lighting During an Auxiliary Panic Alarm

If your system is equipped with system lighting, all system lights will turn on and remain on during an Auxiliary panic alarm.

### Siren Time-out

If the system is not disarmed after an alarm, the sirens will continue to sound until the time-out period is reached. The time-out period can only be programmed by your installer or dealer.

Even though reaching the time-out stops the sirens, the alarm will still be in progress and will remain so until the system is manually disarmed.

## SECTION 6: ACCESS CODES

The system requires a valid access code before it will process most commands.

There is one **System Master code** which serves as the primary User Programming code for your system. Only a very limited number of users will need to know this code.

There are two **Partition Master codes** (one for each partition) which allow access to system operations in their respective partitions.

There are 60 **Regular User codes** which act like keys to arm and disarm the system. If necessary, they can be assigned to neighbors, baby-sitters, or repair persons for temporary use. Regular user codes can be changed in User Programming and are easily deleted from the system when no longer necessary.

## Programming Access Codes

The code you use to enter User Programming determines which features such as codes and code attributes you'll be able to change.

A user code can be given certain attributes which limit what the user can do within the system. Attributes may be changed by you, or by a dealer over the phone using downloading software.

The User Sheets in Appendix A provide a location for you to record the actual user codes and the attributes of each. If you need assistance in changing any code attributes contact your dealer.

### Good Access Code Hygiene

To preserve the integrity of your system, keep access codes confidential and delete extra codes as soon as they are no longer needed.

We recommend that you avoid using obvious code patterns such as **1234** or **1111, 2222**, etc.



### System Master Code Privileges

Using the System Master code to enter User Programming allows you to:

- Change the System Master code.
- Change or delete the Partition Master code in the current partition.
- Change or delete Regular User codes in the current partition.

The default System Master code is **1234**. It is important that you change this default and write the new code on the User Sheets in Appendix A.

### Partition Master Code Privileges

Using the Partition Master code to enter User Programming allows you to:

- Change the Partition Master code in the current partition.
- Change or delete the Regular User codes in the current partition.

There is not a default Partition Master code. Write partition master codes on the User Sheets in Appendix A.

### Regular User Code Privileges

You cannot enter User Programming with a Regular User code.

### *The Touchpad Tamper Feature*

The installer can program your system to send a Police alarm in the case of possible touchpad tampering.

If more than 40 keys are pressed when the system asks for a code, and those keystrokes are not part of a valid access code, a siren will sound. Talk to your installer or see Appendix A “Touchpad Information” on page 35 to see if this feature is enabled.

## Changing or Erasing User Codes

A Touchtone phone can be used to change or erase user codes, but alphanumeric or fixed display touchpads work much better because of their extensive feedback. See Appendix C for phone programming instructions.

### *Changing a User Code*

**Note:** To change System and Partition Master codes please see page 42.

#### **To change or assign a user code:**

1. Enter the programming menus by pressing  $\text{9}$  + System or Partition Master  $\text{C00DE}$ .
2. Press  $\text{030 nn 0}$  where  $nn$  is the user 00 through 59.
3. Enter the desired 4-digit code, then  $\text{\#}$ .
4. Press  $\text{*} + \text{00} + \text{\#}$  to exit the programming menus.

**Note:** The system will not accept the same code for two different users.

### *Erasing a User Code*

When a code is deleted from the system, that code no longer acts as a key for operating the system in any manner.

#### **To erase a user code:**

1. Enter the programming menus by pressing  $\text{9}$  + System or Partition Master  $\text{C00DE}$ .
2. Press  $\text{030 nn 0}$  where  $nn$  is user 00 through 59.
3. Enter the System or Partition Master  $\text{C00DE}$ , then  $\text{\#}$ .
4. Press  $\text{*} + \text{00} + \text{\#}$  to exit the programming menus.

## Assigning Code Attributes

Code attributes determine what a person using their code can do. You will want certain users to have more control over the system than others. For example, you would want an adult to have more control over the system than a child. Below are code attributes that you can assign.

### *Assigning the Direct Bypassing Attribute*

Direct Bypassing is a user code attribute that allows the user to bypass open sensors. If the user code does not have this attribute turned on, the user will not be able to bypass sensors directly.

#### **To assign Direct Bypassing to a user:**

1. Enter the programming menus by pressing  $\text{9}$  + System or Partition Master  $\text{C00DE}$ .
2. Press  $\text{030 nn 1}$  where  $nn$  is user 00 through 59.
3. To turn Direct Bypassing:
  - on, press  $\text{2} + \text{\#}$ .
  - off, press  $\text{1} + \text{\#}$ .
4. Press  $\text{*} + \text{00} + \text{\#}$  to exit the programming menus.

### *Assigning the Remote Access Attribute*

Remote Access is a user code attribute that allows the user to access the security system from a telephone. If the user code does not have this attribute turned on, the user will not be able to access the system by off-premises telephones.

#### **To assign Remote Access to a user:**

1. Enter the programming menus by pressing  $\text{9}$  + System or Partition Master  $\text{C00DE}$ .
2. Press  $\text{030 nn 2}$  where  $nn$  is user 00 through 59.
3. To turn Remote Access:
  - on, press  $\text{2} + \text{\#}$ .
  - off, press  $\text{1} + \text{\#}$ .
4. Press  $\text{*} + \text{00} + \text{\#}$  to exit the programming menus.

### *Assigning the Partition Jump Attribute*

Partition Jump is a user code attribute that allows the user to access both partitions. If the user code does not have this attribute turned on, the user will not be able to access both partitions.

#### **To assign Partition Jump to a user:**

1. Enter the programming menus by pressing  $\text{9}$  + System or Partition Master  $\text{C00DE}$ .
2. Press  $\text{030 nn 3}$  where  $nn$  is user 00 through 59.
3. To turn Partition Jump:
  - on, press  $\text{2} + \text{\#}$ .
  - off, press  $\text{1} + \text{\#}$ .
4. Press  $\text{*} + \text{00} + \text{\#}$  to exit the programming menus.



### Assigning the System Test Attribute

System Test is a user code attribute that allows the user to perform system tests. If the user code does not have this attribute turned on, the user will not be able to perform phone or sensor tests.

#### To assign System Testing to a user:

1. Enter the programming menus by pressing  $\text{Ⓢ}$  + System or Partition Master  $\text{ⓐⓐⓓⓔ}$ .
2. Press  $\text{ⓐⓓⓐ} nn \text{ⓔ}$  where *nn* is user 00 through 59.
3. To turn System Testing:
  - on, press  $\text{ⓐ} + \text{Ⓢ}$ .
  - off, press  $\text{ⓐ} + \text{Ⓢ}$ .
4. Press  $\text{Ⓢ} + \text{ⓐⓐ} + \text{Ⓢ}$  to exit the programming menus.

### Assigning the Latchkey Report Attribute

Latchkey Report is a user code attribute that causes the panel to send a message to a pager when the user changes system arming levels. See "Latchkey Paging" on page 21.

#### To assign Latchkey Report to a user:

1. Enter the programming menus by pressing  $\text{Ⓢ}$  + System or Partition Master  $\text{ⓐⓐⓓⓔ}$ .
2. Press  $\text{ⓐⓓⓐ} nn \text{ⓔ}$  where *nn* is user 00 through 59.
3. To turn Latchkey Report:
  - on, press  $\text{ⓐ} + \text{Ⓢ}$ .
  - off, press  $\text{ⓐ} + \text{Ⓢ}$ .
4. Press  $\text{Ⓢ} + \text{ⓐⓐ} + \text{Ⓢ}$  to exit the programming menus.

## SECTION 7:

### SETTING THE TIME AND DATE

Although the installer usually sets the time and date at the time of installation, the user can change it when necessary.

#### To set the System Time:

1. Enter the programming menus by pressing  $\text{Ⓢ}$  + System or Partition Master  $\text{ⓐⓐⓓⓔ}$ .
2. Press  $\text{ⓐⓓⓐ}$ .
3. Enter the correct time in 24-hour format (4 digits), then press  $\text{Ⓢ}$ .  
For example, if the current time is 7:23 a.m., press  $\text{ⓐⓓⓐ} 0723 + \text{Ⓢ}$ .
4. Press  $\text{Ⓢ} + \text{ⓐⓐ} + \text{Ⓢ}$  to exit the programming menus.

#### 24-Hour Format

00:00	Midnight	08:00	8:00 am	16:00	4:00 pm
01:00	1:00 am	09:00	9:00 am	17:00	5:00 pm
02:00	2:00 am	10:00	10:00 am	18:00	6:00 pm
03:00	3:00 am	11:00	11:00 am	19:00	7:00 pm
04:00	4:00 am	12:00	Noon	20:00	8:00 pm
05:00	5:00 am	13:00	1:00 pm	21:00	9:00 pm
06:00	6:00 am	14:00	2:00 pm	22:00	10:00 pm
07:00	7:00 am	15:00	3:00 pm	23:59	11:59 pm

#### To set the System Date:

1. Enter the programming menus by pressing  $\text{Ⓢ}$  + System or Partition Master  $\text{ⓐⓐⓓⓔ}$ .
2. Press  $\text{ⓐⓓⓐ}$ .
3. Enter the current date as 6 digits (*mm/dd/yy*) then press  $\text{Ⓢ}$ .  
For example, if the current date is January 15, 2000, press  $\text{ⓐⓓⓐ} 011500 + \text{Ⓢ}$ .
4. Press  $\text{Ⓢ} + \text{ⓐⓐ} + \text{Ⓢ}$  to exit the programming menus.

## SECTION 8:

### ADJUSTING SYSTEM SOUNDS AND TOUCHPAD BRIGHTNESS

#### Arming Your System Silently

Use the Silent Arming feature to arm your system without disturbing people throughout the house with arming status beeps. There are two methods for implementing Silent Arming:

- Silent on Demand.  
(User presses  $\text{Ⓢ}$  before arming.)
- Arming Always Silent (Silent Arming feature on).

Regardless of the method employed, when Silent Arming is in effect, no Exit beeps sound.

#### Silent Arming on Demand

Pressing  $\text{Ⓢ}$  before arming silences arming status beeps from touchpads and interior sirens for *only* the current arming period.

#### To use Silent Arming on demand:

1. From any touchpad, press  $\text{Ⓢ}$ .
2. Within 4 seconds enter:  $\text{ⓐ} + \text{ⓐⓐⓓⓔ}$  or  $\text{ⓐ} + \text{ⓐⓐⓓⓔ}$ .

**Note:** If Quick Arm feature is on, an access code is not required. See page 6 for more information.

## Arming Always Silent

Turning this feature on in User Programming means that the status beeps that come from touchpads and interior speakers while arming will *always* be silent. You will not have to enter [5] before arming, as with Silent Arming on Demand.

### To enable Silent Arming:

1. Enter the programming menu by pressing [9] + System or Partition Master [C][0][0][E].
2. Press [0][4][1].
3. To turn Silent Arming:
  - on, press [2] + [#]. No system status beeps will sound while arming.
  - off, press [1] + [#]. System status beeps will sound from touchpad while arming.
4. Press [\*] + [0][0] + [#] to exit the programming menu.

## Adjusting the Touchpad Beeps (Fixed Display Touchpad Only)

The frequency or pitch of chime and trouble beeps from each fixed display touchpad can be adjusted individually to a more desirable or distinct tone.

Chime and trouble beep tones sound using the default frequency during, or within 15 seconds of any button activity at that specific touchpad.

### To change status tone pitch:

1. Press and hold [\*] + [0] until you hear a steady tone, then release the buttons.
2. Press and hold [1] to lower the pitch or press and hold [2] to raise the pitch.
3. Release the button when the desired pitch is heard.

After about 15 seconds of no touchpad activity, the steady tone stops sounding.

## Adjusting the System Status Voice Volume

If you have an optional voice module installed, you may want to adjust the volume at which system status messages are announced.

### To change the voice volume:

1. Enter the programming menu by pressing [9] + System or Partition Master [C][0][0][E].
2. Press [0][4][3].
3. Select a volume level [1] – [7] (7 being the loudest) and press [#].
4. Press [\*] + [0][0] + [#] to exit the programming menu.

## Adjusting the Touchpad Display Brightness

You may want to change the brightness of a touchpad display based on its location in a building or room. For example, dim the touchpad display in a bedroom or

enhance a display near a window.

 
Changing the touchpad display affects only the touchpad currently being used.

### To change touchpad display brightness:

1. Enter the programming menu by pressing [9] + System or Partition Master [C][0][0][E].
2. Press [0][4][2].
3. Select a brightness level:
  - [0] + [#] Off
  - [1] + [#] Low
  - [2] + [#] Medium
  - [3] + [#] High
4. Press [\*] + [0][0] + [#] to exit the programming menu.

After dimming the display, pressing any button momentarily returns the display to full brightness. After 15 seconds without touchpad activity, the display returns to the set dimmed level. If an alarm occurs while the display is dimmed, it automatically returns to the full brightness level and stays that way until you disarm your system.

## Adjusting the Volume of the Wireless Siren




(Not investigated by UL) Your system may include a wireless siren that may be supervised or unsupervised.

The system can *supervise* the state of the siren to make sure that it is plugged into the outlet.

In addition to Police, Fire, and Auxiliary alarms, the wireless siren will sound trouble beeps in the event of a trouble condition anywhere in the system, and emit arming status beeps during Entry and Exit Delay periods.

The wireless siren has five volume levels from 0 (silent) to 4 (loudest). All alarms sound at the loudest level, regardless of the volume setting.

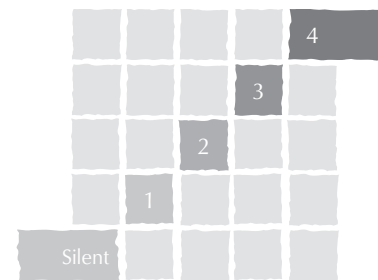

### To change the volume of the wireless siren:

1. Hold down the button on the front of the siren for ten seconds until it beeps, then release it. The siren responds by beeping once, indicating it has entered change volume mode.
2. To increase the volume by one level, press the siren button for one second until it beeps. Repeat until the volume reaches the desired level.
3. After the highest level, the siren sounds one long beep, followed by 4 short beeps to signal the silent level. It then cycles through the levels again.

## SECTION 9: USING THE ENERGY SAVER FEATURE

Use the Energy Saver feature to keep your house within a user-designated temperature range. These high and low temperature points that you set override your normal heating and air conditioning temperature settings. Doing so allows you to use more energy-efficient settings when away from home.

### Energy Saver Example

It works like this:


- At your touchpad, you set a high temperature point (to trigger the air conditioner) and a low temperature point (to trigger the furnace). This needs to be done only once, but can be changed easily if necessary.
- Let's say that you usually keep the temperature in your home at 68°F, but since no one will be there during the day, you turn the Energy Saver feature on. If you've set the low temperature point to 55°F, the furnace will keep the house heated to 55°.
- You're about to return home and would like the house to be heated to its normal 68°F when you arrive. If you have a Phone Interface and Voice Module installed, you can simply call home and turn the Energy Saver feature off, giving control back to the furnace thermostat (68°).

Control your air conditioning temperatures in the same manner.

In addition to controlling temperature, the Energy Saver feature notifies the central monitoring station if your heating or air conditioning unit fails—before pipes freeze or pets are harmed by extreme heat or cold.

### Setting the Energy Saver High and Low Temperature Settings

Initially, you must set the energy saver to the desired high and low temperatures. This is done only once, unless you want to change temperature settings.

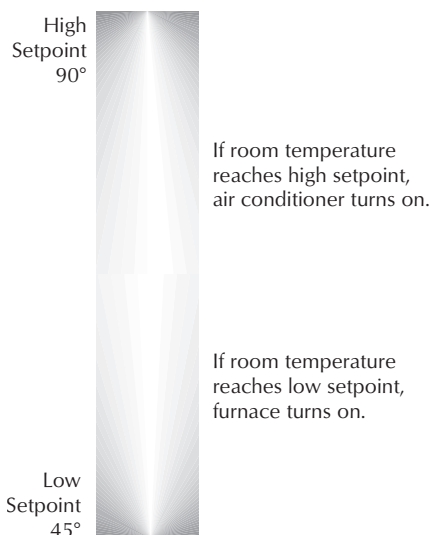

The high and low settings you enter do not control heating and cooling systems, but determine the point at which the furnace or air conditioner is activated.

Temperature settings can range from 45° to 90° Fahrenheit.

#### To set the Energy Saver temperature range from a touchpad:

1. Enter the programming menus by pressing [9] + System or Partition Master [C][0][0][E].
2. Press [0][7][0].
3. Enter the lowest allowable temperature (45–89°F) before the furnace turns on, and press [#].
4. Press [8]. Enter the highest allowable temperature (46–90°F) before the air conditioner turns on, then press [#].
5. Press [\*] + [0][0] + [#] to exit the programming menus.

#### Turning Energy Saver On and Off

To override your normal heating or air conditioning settings, turn the Energy Saver feature on. When you are ready to return to your normal temperature control settings, turn Energy Saver off.

#### To turn Energy Saver on/off from any touchpad:

1. Press [7] + [2]. Alphanumeric touchpads display, "ENERGY SAVER IS ON," for example.


## SECTION 10: NOTIFICATION BY PAGER

Your system can notify up to five different pager phone numbers to report system events. The installer can program any pager to receive pages for one or more of the following groups:

• High Level Reports		• Low Level Reports	
Sensor Alarms	Freeze Alarms	Bypass Sensors	AC Power Failure
Tamper	Freeze Troubles	Low Battery	CPU Low Battery
Restorals	No Activity Alarm	Supervisory	Auto Phone Test
Phone Tests	Fire Panic	Trouble	CPU Back in Service
Receiver Failure	Police Panic	Phone Test	Phone Failure
Receiver Jam	Auxiliary Panic	Event Buffer Full	Touchpad Low Battery
Touchpad Tamper			
Bus Failures			
<ul style="list-style-type: none"> <li>• Opening and Closing Reports</li> <li>• Latchkey Reports</li> <li>• Notify by Exception Reports</li> </ul>			

*Pager Messages*

When an event is reported on a numeric pager, the following information is included:

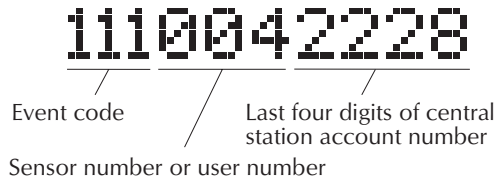

Although all three types of information can be reported on your pager, your pager service determines how the information will actually appear.

*Event Code in Page*

This part of the page let's you know *what* has happened.

**Pager Event Codes**

Code	Indicates
009	A sensor has been restored to its non-alarm state
111	System has been disarmed
115	Sensor test exit
118	System trouble has been fixed
119	System alarm condition has been cancelled
222	System armed to Level 2—STAY
333	System armed to Level 3—AWAY
555	System phone/sensor test
888	System has a trouble condition
999	System is in alarm condition
<b>Note:</b>	If a user arms the system to level 3 (AWAY) the pager will report that the system was armed to level 3 (333). However, if the Auto Stay Arming feature is enabled and the user does not exit the premises, the arming level will revert to level 2 (STAY) without notifying the pager. Refer to the User Sheets in Appendix A to see whether this feature is on or off.

*Sensor Number or User Number in Page*

This part of the page let's you know *who* or *what* is causing the event.

**Pager Sensor/User Numbers**

Code	Indicates
000	System event not caused by a sensor or user
001 – 076	Sensor numbers 1 through 76
600 – 659	User codes 00 through 59 used
678	System Master code used
679	Installer code used
680	Dealer code used
697	Quick Arm used
698	Keyswitch sensor used
699	System armed itself because it is being serviced or powered-up

*Account Number in Page*

This part of the page let's you know *where* (which partition) the event is occurring.


Code	Indicates
XXXX	4-digits of account number

*Streamlining the Page Report*

You can choose to have the four account number digits reported with every page, or to exclude them. Each partition has its own account number, so seeing the digits is useful if multiple partitions are reporting to one pager.

Ask your dealer or installer if you would like the Streamline feature turned on.

Sample pager message with the Streamline feature turned on:

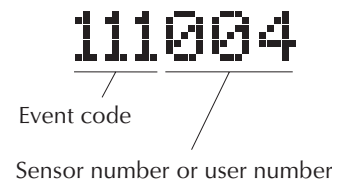

## SECTION 11:

### CREATING TIME SCHEDULES

Time schedules are windows of time defined by a start time, a stop time, and the days of the week these times are effective.

You can create up to 16 time schedules for setting up the following system features: light control, output control, arming, Latchkey Paging, and Notify by Exception reports.

A Touchtone phone can be used to create time schedules, but alphanumeric or fixed display touchpads work much better because of their extensive feedback. See Appendix C for phone programming instructions.

#### To define a time schedule:

1. At an alphanumeric or fixed display touchpad, enter programming menus by pressing **[\*]** + System or Partition Master **[C][0][0][E]**.
2. Press **[0][5] nn [0]** where *nn* is schedule 00 through 15.
3. Enter the start time in 24-hour format (00:00–23:59), then press **[#]**.  
The touchpad displays the new start time.
4. To display the current stop time for this schedule, press **[B]** once.
5. Enter the stop time in 24-hour format, then press **[#]**. The touchpad displays the new stop time.
6. Press **[B]** until the touchpad displays a day of the week you wish to assign this schedule to.
7. Enter
  - **[2] + [#]** to include the day in the schedule (“ON”).
  - **[1] + [#]** to exclude the day in the schedule.
8. Press **[B]** to move to the next day of the week or press **[\*]** and repeat steps 2–8 to define another time schedule.
9. When finished defining time schedules, press **[\*] + [0][0] + [#]** to exit the programming menus.

### Scheduling Consecutive Days

There may be instances when you’d like to schedule a feature event to start one day and stop the next day or a number of days later.

#### One Day Rollover

You can create a schedule that begins on one day, and stops the next day by using only one time schedule. (The stop time must be within 24 hours of the start time.)

#### Example 1 of One Day Rollover.

At home you’d like the Latchkey Opening feature to be effective from 10 p.m. on Tuesday until 5 a.m. on Wednesday.

By taking advantage of One Day Rollover, one time schedule can cover both days. (That schedule is illustrated at right.)

Notice how the stop time is within 24 hours of the start time. The system knows to apply the stop time to the next day (5 a.m. on Wednesday).

	Schedule X
Start	22:00
Stop	05:00
Mon	OFF
Tue	ON
Wed	OFF
Thur	OFF
Fri	OFF
Sat	OFF
Sun	OFF
Part.	1

**Example 2 of One Day Rollover.** Building on Example 1, let’s say that you’d like the Latchkey Opening feature to be effective between 10 p.m. and 5 a.m., Monday through Friday (ending Saturday morning).

By simply applying the start and stop times to each day, one time schedule can cover the entire week.

	Schedule X
Start	22:00
Stop	05:00
Mon	ON
Tue	ON
Wed	ON
Thur	ON
Fri	ON
Sat	OFF
Sun	OFF
Part.	1

### Multiple Day Rollover

The simplest method for defining a window of time that spans multiple days is to use 99:99 to signify an open start or stop time.

#### Example of Multiple Day Rollover.

At your business you'd like specific lights to remain lit from Friday afternoon through the weekend, until Monday morning.

In this situation, the lights need to be scheduled to roll over until they reach a recognizable stop time.

In the figure to the right, Schedule Y is set up to begin at 4 p.m. on Friday afternoon. Since the stop time is 99:99, the lights will remain lit (roll over) until a recognizable stop time is reached.

Schedule Z is set up with an undefined start time (99:99), so if the lights were already lit, they will remain lit until the Schedule Z stop time is reached at 5 a.m.

	Schedule Y	Schedule Z
Start	16:00	99:99
Stop	99:99	05:00
Mon	OFF	ON
Tue	OFF	OFF
Wed	OFF	OFF
Thur	OFF	OFF
Fri	ON	OFF
Sat	OFF	OFF
Sun	OFF	OFF
Part.	1	1

### Attaching Time Schedules

For any schedule to be effective, it needs to be attached to a feature. One schedule can be attached to more than one feature event.

- See "Advanced Light Control" on this page for information on attaching time schedules for light control.
- See "Controlling Outputs by Time Schedule" on page 19 for information on attaching time schedules to outputs.
- See "Scheduled Arming" on page 20 for information on attaching schedules to Arming.
- See "Opening and Closing Reports" on page 20 for information on creating opening and closing schedules.
- See "Latchkey Paging" on page 21 for information on attaching time schedules to Latchkey Paging.
- See "Notify by Exception" on page 23 for information on attaching time schedules to Notify by Exception.

### Time Schedules and Partitions

Once a schedule is attached to a feature event in one partition, that schedule becomes unavailable to the other partition. This prevents the situation where one partition changes a time schedule that inadvertently affects both partitions.

## SECTION 12: ADVANCED LIGHT CONTROL



You can control system lights from any touchpad, as discussed in "Basic Light Control" on page 9.

There are other lighting options that you or your installer can set up, including:

- Turning lights on and off according to a time schedule.
- Turning lights on after system arming for the duration of the Exit Delay.
- Turning lights on for the duration of the Entry Delay so you have enough light to see your way to the touchpad to disarm the system.
- Flashing lights on and off upon successful arming and disarming.

### Controlling Lights By Time Schedule

Lights can be turned on according to time schedules. If you need assistance setting up a time schedule that fits your lighting needs, see "Creating Time Schedules" on page 17.

#### To schedule lights:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}$  $\boxed{0}$  $\boxed{0}$  $\boxed{E}$ .
2. Press  $\boxed{0}$  $\boxed{6}$  $\boxed{4}$  $\boxed{0}$  +  $\boxed{\#}$ .
3. Press  $\boxed{B}$  until the touchpad displays the light number you would like to schedule. Refer to "Appendix A: User Sheets" on page 38 to determine which light number is associated with which lamp.
4. Press  $\boxed{\#}$ . The touchpad displays the first available time schedule.
5. Enter
  - $\boxed{2}$  +  $\boxed{\#}$  to assign the time schedule ("ON") for this light.
  - $\boxed{1}$  +  $\boxed{\#}$  to make the time schedule inactive for this light.
6. Press  $\boxed{B}$  to go to the next time schedule, if needed, and turn the schedule on or off for this light.
7. When you've finished attaching the desired time schedules, press  $\boxed{*}$  +  $\boxed{0}$  $\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.

## Controlling Lights with Sensors

---

Your security system can be programmed to turn on a selected light or lights when sensors are activated. Each time the chosen sensor is activated, the attached light(s) will turn on for 5 minutes. When 5 minutes has passed since the last activation, the light(s) will turn off. For example, if you want house lights to turn on when you open the front door, simply attach the desired lights to the front door sensor.

**Note:** If a light is attached to a sensor *and* a schedule, the light will only turn on and off within the scheduled start and stop times.

### To attach lights to sensors:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}\boxed{0}\boxed{0}\boxed{E}$ .
2. Press  $\boxed{0}\boxed{8}\boxed{0}$ . The touchpad displays "LIGHT n TO Sn x" or "LT n SN x," (where n is the light number and x is the sensor number).
3. Press  $\boxed{A}$  or  $\boxed{B}$  until the light number (1–9) you would like to activate appears.
4. Enter the sensor number (1–76) you wish to activate the light and press  $\boxed{\#}$ .
5. Press  $\boxed{B}$  to assign another light to a sensor or press  $\boxed{*}$  +  $\boxed{0}\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.

### To detach lights from sensors:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}\boxed{0}\boxed{0}\boxed{E}$ .
2. Press  $\boxed{B}$  until the touchpad displays "ATTACH LIGHTS TO SENSORS" or "LITE TO SN" then press  $\boxed{\#}$ .
3. The touchpad displays "LIGHT n TO Sn x" or "LT n SN x," (where n is the light number and x is the sensor number).
4. Press  $\boxed{A}$  or  $\boxed{B}$  until the light number (1–9) you would like to deactivate appears.
5. Enter the sensor number as 0 (no sensor) and press  $\boxed{\#}$ .
6. Press  $\boxed{*}$  +  $\boxed{0}\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.

## Installer Programmable Lighting

---

If you would like specific lights to turn on during Entry and Exit Delay times, or if you would like a light to flash to indicate successful arming and disarming, contact your installer.

## SECTION 13: CONTROLLING OUTPUTS BY TIME SCHEDULE

Outputs may be used to control devices in your home such as automatic window blinds. Outputs that your installer has enabled, can be turned on or off according to time schedules. If you need assistance setting up a time schedule that fits your needs, see "Creating Time Schedules" on page 17.

### To schedule outputs:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}\boxed{0}\boxed{0}\boxed{E}$ .
2. Press  $\boxed{0}\boxed{6}\boxed{5}$  +  $\boxed{\#}$ .
3. The touchpad displays "OUTPUTS." Press  $\boxed{\#}$ .
4. Press  $\boxed{B}$  until the touchpad displays the output number you would like to schedule. Refer to "Appendix A: User Sheets" on page 38 to determine which output is associated with which output number.
5. Press  $\boxed{\#}$ . The touchpad displays the first available time schedule.
6. Enter
  - $\boxed{2}$  +  $\boxed{\#}$  to assign the time schedule ("ON") for this output.
  - $\boxed{1}$  +  $\boxed{\#}$  to make the time schedule inactive for this output.
7. Press  $\boxed{B}$  to go to the next time schedule, if needed, and turn the schedule on or off for this output.
8. When you've finished attaching the desired time schedules, press  $\boxed{*}$  +  $\boxed{0}\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.



## SECTION 14: SCHEDULED ARMING

The Scheduled Arming feature allows the panel to be armed to Level 3–AWAY according to a schedule. When an active schedule start time is reached the panel will exit User Programming, automatically bypass any open sensors, and arm to Level 3–AWAY.

The panel will *not* arm according to an active schedule if the start time is reached while:

- The panel is already armed to Level 3–AWAY.
- The panel is performing a phone or sensor test.

**Note:** The panel cannot be disarmed by schedules.

### To schedule arming:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing **[9]** + System or Partition Master **[C][0][D][E]**.
2. Press **[0][6][6][0]** + **[#]**.
3. The touchpad displays “AWAY.”
4. Press **[#]**. The touchpad displays the first available time schedule as “SCHEDULE 00 OFF,” or “SCH 00 OFF.”
5. Enter
  - **[2]** + **[#]** to assign the time schedule (“ON”) to arm the panel.
  - **[1]** + **[#]** to make the time schedule inactive.
6. Press **[B]** to go to the next time schedule, if needed, and turn the schedule on or off for arming to AWAY.
7. When you’ve finished attaching the desired time schedules, press **[\*]** + **[0][0]** + **[#]** to exit the programming menus.

## SECTION 15: OPENING AND CLOSING REPORTS

The Opening and Closing Reports feature allows pager-holders and/or the central station to be notified whenever the system is armed and/or disarmed.

### When Will this Feature Be Active?

---

The Opening and Closing Reports feature can be enabled only by the installer. There is nothing more that the user needs to program in order to receive the Opening and/or Closing pages.

If a pagerholder no longer wishes to receive the reports, the pagerholder needs to contact the installer to turn off this option for that pager.

Opening and Closing Reports occur without regard to any time schedule. There are no special codes that the user needs to enter in order for the page to be sent.

### Who Will Be Paged?

---

Your system can call up to 5 different pager numbers, as well as the central station, to report an Opening and/or Closing Report.

Refer to “Appendix A: User Sheets” on page 37 to see which pagers have been set up to receive a page for this feature. Contact the installer if you would like to turn Opening and Closing Reports on or off for any programmed pager or for the central station.

### What Will the Pager Report?

---

For Opening Reports, the page reports the arming level (111 for 1–OFF) and the user.

For Closing Reports, the page reports the arming level as 222 (2–STAY) or 333 (3–AWAY), and the user that armed to that level. See “Pager Event Codes” on page 16 for more information.



## SECTION 16: LATCHKEY PAGING

The Latchkey Paging feature allows programmed pagerholders to be notified when the system is armed and/or disarmed during specific hours or under certain conditions. For example, you could program the Latchkey feature to page you if your child doesn't arrive home and disarm the system (using a code with the Latchkey attribute) by the programmed Latchkey time.

### Page In the Event of . . .

You can set up the Latchkey Paging feature to send a page in the following situations:

- Send a page when the system is disarmed. (*Latchkey Opening*)
- Send a page when the system is armed. (*Latchkey Closing*)

### Who Will Be Paged?

Your system can call up to 5 different pager numbers to report a Latchkey Opening and/or a Latchkey Closing. Latchkey pages do not report to the central station.

Refer to "Appendix A: User Sheets" on page 37 to see which pagers have been set up to receive a page for this feature. Contact the installer if you would like to turn Latchkey Paging on or off for any programmed pager.

### Who Can Send a Page?

Only Latchkey-designated users can cause a Latchkey page to be sent. By default, this includes the first 6 Regular User codes. If you would like to include a keychain touchpad as a latchkey user, contact your installer. Any regular user code can be programmed with this attribute. See "Assigning Code Attributes" on page 12.

### What Will the Pager Report?

For Latchkey Opening Reports, the page reports the arming level (111 for 1-OFF) and the user.

For Latchkey Closing Reports, the page reports the arming level as 222 (2-STAY) or 333 (3-AWAY), and the user that armed to that level. See "Pager Event Codes" on page 16.

### Latchkey Opening


The installer can set up Latchkey Opening for one of two types of use: Basic and Advanced.

#### Basic Latchkey Opening

If your system is set up for Basic Latchkey, there are two ways to send a Latchkey Opening page:


#### Based on Time Schedule Only.

1. Assign the Latchkey Opening feature a time schedule. (This needs to be done only once.)
2. Arm the system.
3. Disarming of the system by a Latchkey-designated user within the assigned time schedule, sends an Opening page:

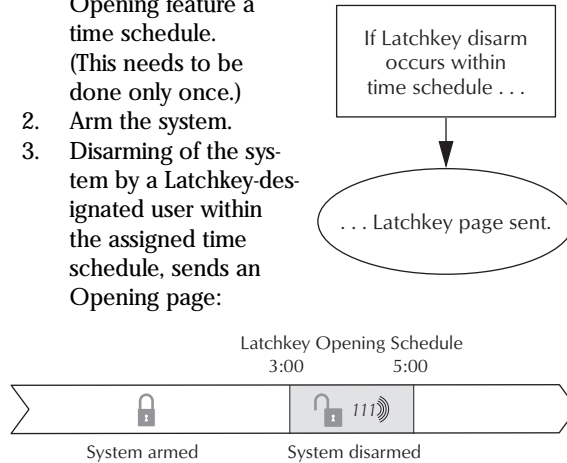

#### Based on Latchkey Modifier [6] Only.


1. Arm the system, then enter [6], or press the Lock button on a keychain touchpad after arming to 3-AWAY.
2. Disarming of the system by a Latchkey-designated user sends an Opening page, regardless of assigned time schedule:

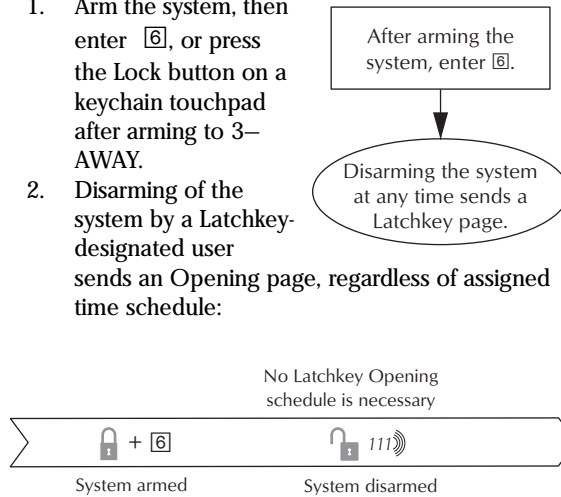


#### Advanced Latchkey Opening

If your system is set up for Advanced Latchkey use, there is one way to send a Latchkey Opening page:

1. Assign the Latchkey Opening feature a time schedule. (This needs to be done only once.)
2. Arm the system, then enter [6], or press the Lock button on a keychain touchpad after arming to 3-AWAY.
3. Disarming of the system by a Latchkey-designated user within the assigned time schedule, sends an Opening page:

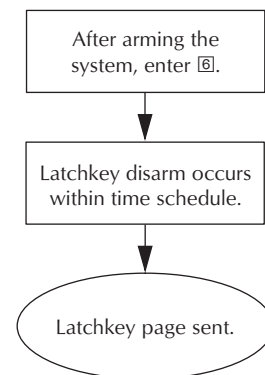


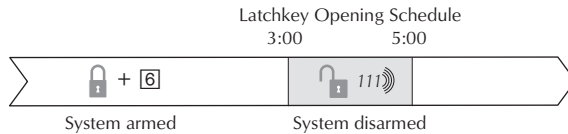


In Advanced Latchkey use, paging is available only during the time schedule(s) that you assign to it.

## Latchkey Closing

Latchkey Closing can be used alone, or in addition to Latchkey Opening.

1. Assign the Latchkey Closing feature a time schedule.
2. The system is disarmed.
3. Arming of the system by a Latchkey-designated user within the assigned time, schedule sends a Closing page:

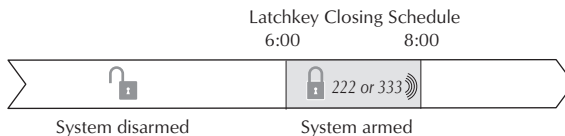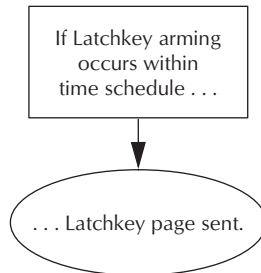

A Touchtone phone can be used to set up Latchkey paging, but touchpads work much better because of their extensive feedback. See "Appendix C" on page 41 for touchpad and phone programming instructions.

## Assigning a Time Schedule to Latchkey Paging

Follow these steps to attach a time schedule to Latchkey Opening and/or Latchkey Closing. If you need assistance setting up a time schedule that fits your needs, see "Creating Time Schedules" on page 17.

### Scheduling Latchkey Opening and/or Closing:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing [9] + System or Partition Master [C][0][0][E].
2. Press [0][6][0][0] + [#].
3. To schedule:
  - Latchkey Opening, press [#] when the touchpad displays "LATCHKEY OPENING" or "LATCH OPEN."
  - Or, press [B] until the touchpad displays "LATCHKEY CLOSING" or "LATCH CLOSE," then press [#].

If you want a page to be sent every time Latchkey-designated users codes arm or disarm the system, apply the same time schedules under Latchkey Opening and Latchkey Closing.

4. The touchpad displays the first available time schedule.
5. Enter
  - [2] + [#] to assign the time schedule to the event.
  - [1] + [#] to make the time schedule inactive for the event.
6. Press [#] to secure your choice.
7. Press [B] to go to the next schedule and repeat step 5.
8. When you've finished attaching the desired time schedules, press [\*] + [0][0] + [#] to exit the programming menus.

## Applying the Latchkey Modifier

The Latchkey modifier ([6]) is pressed after the arming keypress sequence.

### Applying the Latchkey modifier from a touchpad:

1. At any touchpad, press [2] or [3] + [C][0][0][E] + [6].  
The touchpad displays, "LATCHKEY PAGER ON" or "PAGER ON."

**Notes:** [6] must be pressed within 5 seconds of arming.

If Quick Arm feature is on, an access code is not required. See page 6 for more information.

### To apply the Latchkey modifier using a keychain touchpad:

1. Press the Lock [A] button when the system is armed to level 3—AWAY.

## SECTION 17: NOTIFY BY EXCEPTION

The Notify by Exception feature allows programmed pagerholders and/or the central station to be notified when arming or disarming occurs outside of specified time schedules.

Here are two specific examples of how the Notify by Exception feature might be used in a business setting:

- Every morning you'd like to be notified if your business is disarmed after its normal opening time.
- Every evening you'd like to be notified if your business is armed before its normal closing time.

### Page In the Event of . . .

You can set up the Notify by Exception feature to page in the following instances:

- Send a page if the system is disarmed before the Opening time schedule begins or after the Opening time schedule has ended. (*Exception Opening*)
- Send a page if the system is armed before the Closing

time schedule begins or after the Closing time schedule has ended. (*Exception Closing*)

### Who Will Be Paged?

Your system can call up to 5 different pager numbers to report an Open Exception and/or Closed Exception. You can request that the central station receive these two reports as well.


Refer to "Appendix A: User Sheets" on page 37 to see which pagers have been set up to receive a page for this feature. Contact the installer if you would like to turn the Notify by Exception feature on or off for any programmed pager or the central station.

### Who Can Send a Page?

All user codes and keychain touchpads will send a page if used while Notify by Exception feature is in effect.


#### Exception Opening Pages in a Typical Setup

Exception Opening pages occur if the system is disarmed earlier or later than the opening time schedule.

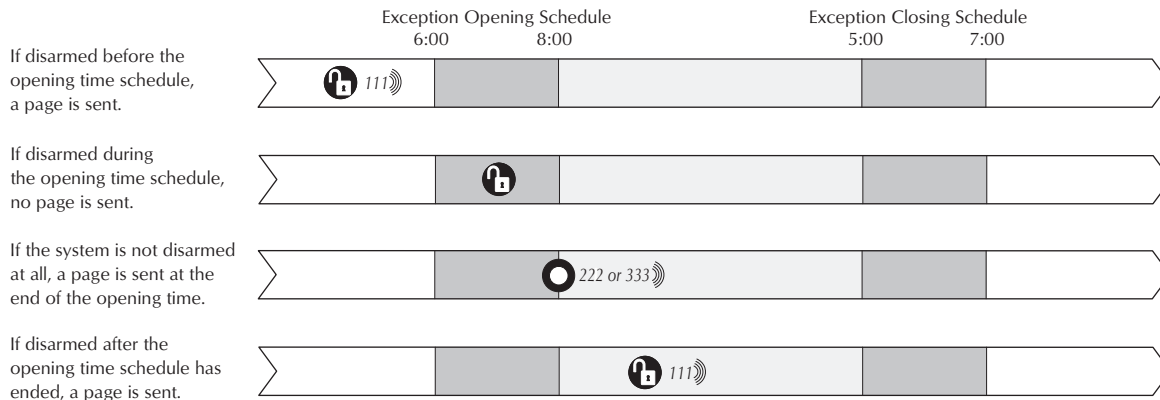

#### Exception Closing Pages in a Typical Setup

Exception Closing pages occur if the system is armed earlier or later than the closing time schedule.

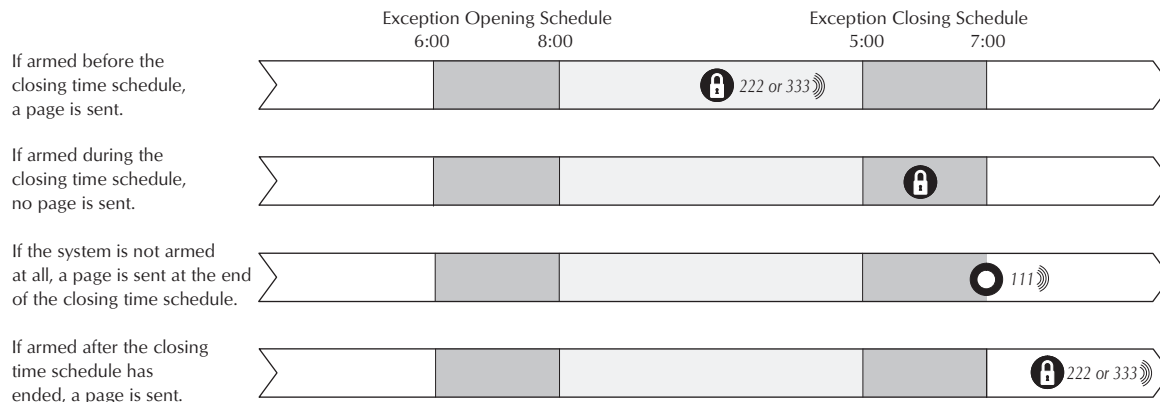

## What Will the Pager Report?

Exception Opening Reports report the arming level as 111 (1–OFF) and the user that disarmed the system.

Exception Closing Reports report the arming level as 222 (2–STAY) or 333 (3–AWAY), and the user that armed to that level. See “Pager Event Codes” on page 16.

## When Will this Feature Be Active?

The most typical setup of this feature makes use of both Exception Opening and Exception Closing. (It is possible to use only Exception Opening or only Exception Closing, however.)

The following figures show what pager message would be sent given the time the system was armed or disarmed.

## Assigning a Time Schedule to Exception Opening and Closing

Follow these steps to define Opening and Closing schedules for Exception paging. If you need assistance setting up a time schedule that fits your needs, see “Creating Time Schedules” on page 17.

A Touchtone phone can be used to set up Notify by Exception, but touchpads work much better because of their extensive feedback. See “Appendix C” on page 41 for touchpad and phone programming instructions.

### Scheduling Exception Opening and/or Closing:

1. At an alphanumeric or fixed display touchpad, enter the programming menus by pressing **[9]** + System or Partition Master **[C][0][D][E]**.
2. Press **[0][6][2][0]** + **[#]**.
3. To schedule:
  - Exception Opening, press **[#]** when the touchpad displays “EXCEPTION OPENING” or “ECEPT OPEN,” then press **[#]**.
  - Exception Closing, press **[B]** until the touchpad displays “EXCEPTION CLOSING” or “ECEPT CLOSE,” then press **[#]**.
4. The touchpad displays the first available time schedule.
5. Enter
  - **[2]** + **[#]** to assign the time schedule to the event.
  - **[1]** + **[#]** to make the time schedule inactive for the event.
6. Press **[#]** to secure your choice.
7. Press **[B]** to go to the next schedule and repeat step 5.
8. When you’ve finished attaching the desired time schedules, press **[\*]** + **[0][0]** + **[#]** to exit the programming menus.

## SECTION 18:

### THE NO ACTIVITY FEATURE

The system can monitor the activity in your home and automatically call for help if normal activities are not detected within a defined period of time.

For example, if someone falls and can’t move, the system will detect that normal activities, such as placing outgoing calls or opening doors and windows, have not occurred for a predetermined No Activity time.

The system sounds a low-volume auxiliary alarm to let you know there may be a problem. If all is well, you can stop the siren by disarming your system. If no one disarms the system for 5 minutes, your system calls the central monitoring station. The central monitoring station will send emergency personnel to the premises to check out the situation.

Refer to “Appendix A: User Sheets” on page 33 to see if the No Activity feature is currently available to you and the duration of the No Activity setting. If the feature is not currently available to you and you wish to have it, contact your installer.

## SECTION 19: USING THE PANEL DOWNLOAD FEATURE

To *download* to the panel is to replace the old information in it with new information. Downloading is performed only by your dealer using software specifically designed for this panel.

Turning the Download feature on allows the dealer remote access to your panel in order to:

- Update your account.
- Back up data from your panel.
- Allow your dealer to quickly implement requested programming changes.

**Note:** Before allowing any download sessions, the system must be disarmed to level 1–OFF.

### To enable/disable the Panel Download setting:

1. Enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}\boxed{0}\boxed{0}\boxed{E}$ .
2. Press  $\boxed{0}\boxed{4}\boxed{0}$ .
3. To turn Downloading:
  - on, press  $\boxed{2}$  +  $\boxed{\#}$ . The dealer will be able to access your system remotely if necessary.
  - off, press  $\boxed{1}$  +  $\boxed{\#}$ . The dealer will not be able to access your system remotely.
4. Press  $\boxed{*}$  +  $\boxed{0}\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.

## SECTION 20: SYSTEM INFORMATION

There is information about your system that is useful to know. This includes the factory code, the system number, and the system level.

After identifying the information for your system, make a note of it in the “Appendix A: User Sheets” on page 37.

### To identify system information:

1. Enter the programming menus by pressing  $\boxed{9}$  + System or Partition Master  $\boxed{C}\boxed{0}\boxed{0}\boxed{E}$ .
2. Press  $\boxed{0}\boxed{1}\boxed{0}$ .
  - The first information displayed is the factory code.  
For example, “F *nnn* – *nnnn*,” or “FACTORY CODE *nnn* \* *nnnn*.”
  - Press  $\boxed{6}$  to display the system number. For example, “N – *nnnnnnnn*,” or “SYSTEM NUMBER \* *nnnnnnnn*.”
  - Press  $\boxed{6}$  to display the system level. For example, “L *nnnn*,” or “SYSTEM LEVEL *nnnn*.”
3. Press  $\boxed{*}$  +  $\boxed{0}\boxed{0}$  +  $\boxed{\#}$  to exit the programming menus.

## SECTION 21: USING A PARTITIONED SYSTEM

The panel can be set up by your installer to operate as a *two-partitioned system*.

A partitioned system would be useful in a strip mall, or residential duplex, where two stores or households could share one system.

### Global Settings

Global system settings affect both partitions. Most are set by the installer. Global settings that are programmed by the user include:

- The time and date.
- The System Master code.

### Partition-Specific Settings

Partition-specific settings affect only one partition. User-programmable, partition-specific settings include:

- Partition Master codes  
(1 per partition for a total of 2).
- A pool of 60 Regular User codes for use by one or the other partition. (Partition 1 Regular User codes + Partition 2 Regular User codes = 60 Regular User codes)
- A pool of 16 time schedules available to one or the other partition. (Partition 1 time schedules + Partition 2 times schedules = 16 time schedules)
- 9 Advanced Light Control setups available to each partition.
- The Latchkey feature.
- The Notify by Exception feature.
- The Silent Arming option.
- The Scheduled Arming feature.
- Speaker volume settings.
- The Energy Saver feature and its high and low setpoints.

To program any of these features for another partition, you must enter the User Programming menu from a touchpad in that partition, or *jump* into that partition, then enter the User Programming menu.

## Jumping Partitions

**Note:** If your system uses just one partition, skip this section.

An alternative to jumping partitions is to arm, disarm, or program from a hardwire touchpad belonging to the other partition.

The ability to jump to another partition is an attribute assigned to each user code see "Assigning Code Attributes" on page 12. By default, the System Master is the only code that can jump partitions. Refer to the "Appendix A: User Sheets" on page 34 to see if any other access codes have the ability to jump partitions.

### To jump partitions:

1. From any hardwired touchpad, press  $\boxed{8} + \boxed{C} \boxed{0} \boxed{0} \boxed{E} + \boxed{8}$ .  
Touchpads display, "ENTER PARTITION" or "ENTER CMD."
2. Press  $\boxed{1}$  if you want to change to Partition 1 or  $\boxed{2}$  if you want to change to Partition 2.  
The touchpad sounds one short beep if the jump was successful. One long beep means the jump was not successful. Alphanumeric touchpads display the text in the newly entered partition.
3. Proceed to arm, disarm, or program as needed.  
The partition assignment reverts back if no keys are entered for 10 seconds.

### Arming and Disarming the Other Partition

Once in the other partition, you need to use a code that is valid in that partition to arm, disarm or program that partition.

### Programming the Other Partition

Only one partition can be programmed at a time. When one partition is using the programming menu, touchpads in the other partition are locked out from any programming activity. Arming and disarming can continue, however.

Some partition-specific settings share resources, such as access codes and time schedules. For example, if Partition 1 uses Regular User numbers 00 through 20, Partition 2 will not be able to see or use those user numbers. The first Regular User number available to Partition 2 would be 21.

The allocation of time schedules works in much the same manner. There are 16 schedules that can be used by either partition, but as soon as Partition 1 attaches a schedule to any event, that schedule cannot be used by Partition 2, and vice versa.

## SECTION 22: USING A TOUCHTONE PHONE TO OPERATE YOUR SYSTEM



Your system may be equipped with a Phone Interface and Voice Module that allows system operation from a Touchtone phone on or off the premises.

The module contains a digital-voice chip, enabling programmed text to be spoken through the phone and/or broadcast through interior speakers. Except for custom words, the voice will speak the text that appears on alphanumeric touchpads in the system.

### Phone Command Prefix



What distinguishes a call to the panel from any other out-going or incoming call is the use of the Phone Command Prefix:

- In the case of on-site operation, if the Phone Command Prefix is dialed first (within 5 seconds of picking up the phone), the panel picks up its ears and waits for a valid access code or command.
- If the system is being accessed remotely, the Phone Command Prefix is used in conjunction with the access code.

The prefix is usually #, but can be changed to \* by the installer. If your prefix has been changed, use \* as the first key you press instead of #.

### Accessing the System from Off-site

To access the system from off-site, the system needs to recognize two things about the call:

- The panel needs to recognize that it should answer the phone.
- The panel needs to recognize that the code entered has the authority to operate the system from off-site.

When using a cellular phone to operate the system, follow the off-site operating instructions.

### How the Panel Answers the Phone

When you call the panel, it needs to recognize that it should answer the incoming call. This is accomplished by one of two methods:

- Ring-Hang-Ring method
- Twelve-Ring method

**Ring-Hang-Ring Method.** You can use this method if there is no chance that an answering machine or person will pick up the call on the first ring.

1. Call the panel. (In most cases this is the same number as the regular phone.)
2. Let the phone ring once, then hang up.
3. Wait between 8 and 30 seconds, then call the panel again. This time the panel will answer (“System hello,”) on the first ring.
4. Enter # (your designated Phone Command Prefix).
5. Enter your access CODE.
6. You hear a short status message, such as, “System is OK.”
7. Proceed with system commands.

**Twelve-Ring.** You can use this method if there is no chance that an answering machine or person will pick up the call before the twelfth ring.

1. Call the panel and let the phone ring. The panel will answer “System hello, ” after the twelfth ring.
2. Enter # (your designated Phone Command Prefix).
3. Enter your access CODE.
4. You hear a short status message, such as, “System is OK.”
5. Proceed with system commands.

### Codes with Remote Access Capability

The ability to access the system from off-site is a code attribute see “Assigning Code Attributes” on page 12.

Check the User Sheets in Appendix A to see which access codes have the ability to operate the system from off-site.

### Touchtone Phone System Operation

Phone operation of your system involves 2 steps:

#### Step 1. Use a Touchtone phone to access the system.

<b>Local Phone Access</b>	Pick up the phone. Within 5 seconds of picking up the phone receiver, enter the command prefix.
<b>Remote Phone Access</b>	Use the Ring-Hang-Ring or the Twelve-Ring method to get the system to answer the call. Then enter # (or designated phone prefix) + CODE

**Step 2. Enter the command.**

Disarm the system	# + 1 + C O D E
Arm to Level 2*	# + 2 + C O D E
Arm to Level 3*	# + 3 + C O D E
Send a Police panic alarm	* + * + * + * + * + * (Available from on-site only.)
Arm system with No Delay*	# + 2 + C O D E + 4 or # + 3 + C O D E + 4
Arm to enable Latchkey*	# + 2 + C O D E + 6 or # + 3 + C O D E + 6
Arm system with exit lights off*	# + 2 + C O D E + 0 or # + 3 + C O D E + 0
Bypass a sensor	Indirectly: Arm system + # + # Directly: # + # + C O D E + Sensor Number
Arm silently*	# + 5 + 2 + C O D E or # + 5 + 3 + C O D E
Turn all lights on/off	# + 0 + 0
Turn specific lights on/off	# + 0 + Light number (1-9)
Cancel an accidental alarm	# + 1 + C O D E
Check the system status	# + for short status # + * * for full status
Turn Chime on/off	# + 7 + 1
Turn Energy Saver on/off	# + 7 + 2
Disable local phone access	# + 7 + 3 (on-site only) or Wait 5 seconds after picking up a local phone.
Check alarm memory	# + 7 + 6
Activate Outputs	# + 7 + 7 + Output number (1-6)
*If Quick Arm feature is on, access code is not required. See page 6 for more information.	

**Sending a Police Panic Alarm**

Your system can be set up so that you can send a Police panic alarm from a Touchtone phone. If your system is set up to send a Police panic alarm:

- Use the \*, regardless of your phone command key.
- Do not wait more than two seconds between key-presses. Continue pressing \* even if you hear the system voice interrupt with a system status.
- Police panic alarms can be activated from a Touchtone phone on the premises only. The alarm cannot be activated from an off-site phone.

**Phone Questions ?***What if someone calls while I'm operating the panel?*

If the phone rings while you're using it to operate the system, you'll hear one long beep for each ring from interior speakers and phones. You can answer the call by simply hanging up on the system, then answering the call as you normally would.

You'll have to initiate another session to resume operation.

*Can I control the system while I'm talking on the phone?*

No.

*How do I perform other phone operations without commanding my security system?*

You can use your phone for transactions such as banking from home by temporarily disengaging phone control to your security system. The commands described below work for one call at a time.

**To disengage local phone control:**

- Enter # + 7 + 3.  
The system responds by returning a dial tone.
- Pick up the phone receiver and wait 5 seconds before dialing any numbers. After the 5 second period, the system disables local phone control and ignores phone commands.



## SECTION 23: TESTING THE SYSTEM

The system contains a test mode that allows you to test sensors and panic signals without creating false alarms in monitored systems. Please follow the instructions in this section carefully.

### Automatic Test Features

Your security system conducts routine tests, checking for problems like power failures, low batteries, sensors that aren't working, and communication trouble with the central monitoring station.

When your system detects a problem, trouble beeps sound to alert you. See "Troubleshooting" on page 31 for an explanation of the causes of trouble beeps and what you can do to fix the problem.

### Manual Tests

The automatic tests your system performs provide continuing reassurance that it is working properly. There are also weekly system tests you can do yourself as an added safeguard. Taking time to do these tests will familiarize you with your system and alert you to anything unusual, such as cut phone lines or sensors that have been tampered with.

### Sensor Test

This test verifies that the sensors in your system are operating correctly. The ability to conduct a sensor test is a code attribute.

Check the User Sheets in Appendix A to see which access codes have the ability to conduct a sensor test. See "Assigning Code Attributes" on page 12 or talk to your installer for information on changing code attributes.

### Resetting Smoke Detectors

Most hardwired and wireless smoke detectors used with this system automatically reset themselves.





#### To reset a smoke alarm:

Disarm the system. The smoke detector will reset once all the smoke has cleared.

In some cases, the installer may have installed a smoke sensor reset switch which you'll need to press.

1. Disarm the system.
2. The light on the smoke detector remains lit until the smoke clears.
3. Disarm system again to reset hardwired detectors.

<b>1. Enter Test Mode by pressing</b> [8] + [C][O][D][E] + [3].	Touchpads display, "Press Status. System Armed to Sensor Test," or " <b>*SENSOR TEST</b> <i>nn</i> MINUTES LEFT." When less than 5 minutes remain in Test Mode time, the system sounds a short beep every 60 seconds.
<b>2. Follow the test procedure for each device.</b>	

Device	Test procedure	Touchpad Result(s)
Touchpad	Send a: <ul style="list-style-type: none"> <li>• Police panic alarm,</li> <li>• Fire panic alarm, and</li> <li>• Auxiliary panic alarm.</li> </ul>	<ul style="list-style-type: none"> <li>• Touchpad Panic POLICE OK</li> <li>• Touchpad Panic FIRE OK</li> <li>• Touchpad Panic AUXILIARY OK</li> <li>• POLICE PANIC OK</li> <li>• FIRE PANIC OK</li> <li>• AUXILIARY PANIC OK</li> </ul>
Wireless Touchpad	Press the Bypass key.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• TOUCHPAD <i>nn</i> OK</li> </ul>
Keychain Touchpad	Press and hold the Lock  and Unlock  buttons simultaneously for 3 seconds.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• TOUCHPAD <i>nn</i> OK</li> </ul>
	Press and hold the Star  and Light  buttons simultaneously for 3 seconds.	<ul style="list-style-type: none"> <li>• Touchpad Panic AUXILIARY OK</li> <li>• AUXILIARY PANIC OK</li> </ul>
Panic button	Press and hold the appropriate panic button(s) for 3 full seconds.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Door/window sensor	Open the secured door or window.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>

Device	Test procedure	Touchpad Result(s)
Smoke detector	Press and hold the test button until the system sounds transmission beeps.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Motion detector	Avoid the motion detector view for 5 minutes, then enter its view.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Rate-of-Rise Heat Detector (Not UL investigated)	Rub your hands together until warm, then place one hand on the detector for 30 seconds.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Shock sensor (Not UL investigated)	Tap the glass twice, away from the sensor. Wait at least 30 seconds before testing again.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Phone Interface and Voice Module	Activate a Police panic by accessing the system using the phone and pressing [*] + [*] + [*] + [*] + [*] + [*].	<ul style="list-style-type: none"> <li>• POLICE PANIC OK</li> </ul>
Supervised wireless siren	<ol style="list-style-type: none"> <li>1. Unplug the siren and check the touchpad display.</li> <li>2. Plug the siren in.</li> </ol>	<ul style="list-style-type: none"> <li>• SENSOR <i>nn</i> OK</li> <li>• Zones <i>nn</i> OK</li> </ul>
Glass guard sensor (Not UL investigated)	Tap the glass 3 or 4 inches from the sensor.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
Freeze sensor (Not UL investigated)	Apply an ice cube wrapped in plastic to the sensor. Do not allow the sensor to get wet.	<ul style="list-style-type: none"> <li>• Zones <i>nn</i> OK</li> <li>• SENSOR <i>nn</i> OK</li> </ul>
<ul style="list-style-type: none"> <li>• If you need more time to complete testing, restart the timer by pressing [8] + [C][O][D][E] + [3].</li> <li>• Check to see that all sensors have been tested by pressing [*]. Touchpads display a list of untested sensors.</li> <li>• You will know that you have finished testing when touchpads display, "SENSOR TEST OK" or "ZONES ALL TESTED."</li> </ul>		
<b>3. Disarm to Level 1 to exit Test Mode.</b>		

### Phone Communication Test

The purpose of this weekly test is to verify that the connection between the central monitoring station and your system are working properly.

Most phone tests take only a few minutes, however, your system will try for up to 15 minutes to establish a connection.

#### To perform a phone communication test:

1. Disarm the system.
2. Press [8] + System or Partition Master [C][O][D][E] + [2].
  - touchpads display, "\*PHONE TEST" or "System Armed to PHONE TEST."
3. If the phone test is successful:
  - the optional voice module will announce, "Phone Test OK."

Within a few minutes, the display should return to the Level 1 display. If it does not return in three minutes, note how long before the Level 1 display returns and contact the installer.

After the test has started, the arming level can be changed to 1—Off, then to 2—Stay or 3—AWAY, if you wish.

## SECTION 24: TROUBLESHOOTING

Your security system uses a variety of different alarm sirens, status beeps, voice messages and trouble beeps to communicate with you. The next few pages describe the different sounds and what they mean. Try to familiarize yourself with the differences. You will hear sounds each time you tell your security system to do something, like arm or disarm. Some sounds you will hear only when there is a problem with the system, like a low battery. And, there are sounds you will only hear in an emergency. Getting to know your system sounds allows you to react quickly and appropriately to the messages you hear.

### Trouble Beeps and Trouble Messages

When your system detects a problem, it lets you know by sounding trouble beeps from system touchpads and sirens, and by displaying trouble signals as messages on touchpads.

Trouble beeps are a series of five short beeps once a minute.

The table on the next page lists the causes of trouble beeps, the visual display you can expect to see, and possible solutions for the trouble condition.

#### *Silencing Trouble Beeps*

If possible, correct the situation which is causing the trouble beeps. If this is not possible, call for service. If the problem is not corrected, trouble beeps and messages start again 4 or 10 hours later.

##### **To silence trouble beeps:**

- Perform a system status check by pressing **[\*]** on a touchpad,
- change the arming level.

The table on the next page describes the conditions under which trouble beeps occur and when they begin. (These sounds are heard from interior sirens and touchpads if available.)

### Common Questions and Answers

**Q.** *I can't arm my system.*

**A.** Try the following:

- If arming to Level 2—STAY or Level 3—AWAY, make sure all monitored perimeter doors and windows are closed.
- Press **[\*]** for a system status and for clues to the problem.
- Call the installer.

**Q.** *I cannot bypass a sensor: my alphanumeric touchpad displays "INVALID" and my fixed display touchpad sounds a single, long beep.*

**A.** Possible explanations include:

- The sensor you're trying to bypass may not be active in the current arming level. For example, an interior

motion detector will not be active in Level 2—STAY.

- You may be trying to bypass a 24-hour sensor that cannot be bypassed, such as a smoke detector.
- Your access code has not been assigned the direct bypassing attribute. See "Assigning the Direct Bypassing Attribute" on page 12.

**Q.** *I can't arm my system to Level 3—AWAY.*

- A.** If a delay door is open while you're trying to arm the system to Level 3, the system will arm to Level 2 instead. Close the delay door, arm the system to Level 3, then exit through a delay door.

#### *Phone Issues*

**Q.** *How do I disable my system long enough to retrieve messages from work or to do banking over the phone?*

**A.** Solutions include:

- Disengage the security system from local phone control by entering **[#] + [7] + [3]**. The system responds by returning a dial tone.
- Pick up the phone receiver and wait 5 seconds before dialing *any* numbers. After the 5 second period, the system disables local phone control and ignores phone commands.

#### *Siren Issues*

**Q.** *When testing my wireless siren, unplugging it does not cause any test results.*

- A.** The test procedure described in "Testing the System" on page 29, applies only if the siren is *supervised*. If the system does not acknowledge the sensor test with two beeps, or the alphanumeric touchpad does not display "SENSOR nn OK," your wireless siren may be unsupervised. Check the User Sheets in Appendix A or ask your installer.

#### *Lighting Issues*

**Q.** *My lights don't come on automatically as they've been programmed to do.*

**A.** Try the following:

- Does the lamp have a working bulb?
- Is the lamp plugged in at a working outlet that is *not* controlled by a light switch?
- Is the lamp plugged in to a lamp module?
- Make sure that you've attached the correct time schedule as described in "Advanced Light Control" on page 18.
- Check to see that you've set up the time schedule correctly as described in "Creating Time Schedules" on page 17.
- Check the User Sheets in Appendix A to see in which partition the light is set up to be active.

### Causes of Trouble Beeps

Touchpad/Voice Feedback After Pressing <b>[*]</b> Key	Trouble Condition
AC POWER FAILURE	<p>The panel power transformer may be unplugged or there may be an AC power outage. If the transformer is plugged in, check the circuit breaker or fuse that controls that outlet.</p> <p>The backup battery will take over, but if AC power is not restored within 15 minutes, the system will alert you and the central monitoring station (if your system is monitored). It reports again when power is restored.</p>
LOW BATT	<p>The power in the emergency backup battery is low and must be recharged or replaced. If AC power is out, the security system may shut down once the battery is below the operating level. When AC power is restored, the panel will recharge the battery. If the trouble condition exists more than 24 hours after AC power is restored, call your security dealer for service.</p>
SENSOR SUPERVISORY	<p>There is a problem with how the sensor is communicating with the panel.</p> <ol style="list-style-type: none"> <li>1. Test the sensor in Test Mode as described on page 29.</li> <li>2. If testing the sensor does not clear the trouble condition, call your security dealer for service.</li> </ol>
SENSOR TROUBLE	<p>A sensor may have an internal problem or a fire/smoke sensor may not have properly reset after activation, or the sensing chamber may be dirty or partially obstructed.</p> <ol style="list-style-type: none"> <li>1. Test the sensor in Test Mode as described on page 29.</li> <li>2. If testing the sensor does not clear the trouble condition, call your security dealer for service.</li> </ol>
SENSOR XX LOW BATTERY	<p>A sensor has a low battery.</p> <ol style="list-style-type: none"> <li>1. Disarm the system.</li> <li>2. Remove the sensor cover. If the battery is an Alkaline AA or AAA, change the battery. If the battery is any other type, call your security dealer for service.</li> </ol>
SENSOR XX TAMPER	<p>A sensor cover is off or open. Secure the cover and trip the sensor to clear the tamper condition.</p>
PHONE FAILURE TROUBLE	<p>The system can't communicate with the central monitoring station. The system tries to report to the central station three times before indicating Phone Failure Trouble, then makes five more reporting attempts.</p> <ol style="list-style-type: none"> <li>1. Make sure the panel is connected to the special phone jack installed by your security dealer.</li> <li>2. Disconnect the panel from the special phone jack and check phones for dial tone.</li> </ol> <p>If you hear a dial tone, call your security dealer for service.</p> <p>If you don't hear a dial tone from any phones, telephone service in your area may be out.</p> <p>Phone Failure Trouble takes precedence over other system problems, so you must clear the Phone Failure message (by disarming the panel) before you're able to see other system messages.</p>
RECEIVER INTERFERENCE <i>or</i> RECEIVER FAILURE	<p>There is a receiver failure or receiver interference problem. Call your security dealer for service.</p>
MEMORY FAILURE <i>or</i> all text is lit on a fixed display touchpad	<p>There is a system memory failure. Call your security dealer for service.</p>

## APPENDIX A: USER SHEETS

Appendix A contains specific information about the setup of your system. The User Sheets should be completed by the installer and the user.

### System Sensors

Record the sensor number and name in the table below. Indicate the partition, whether it is a hardwired (HW) or wireless sensor (WL), or a touchpad (TP).

No.	Sensor Name	Ptn.	HW / WL / TP (circle one)
01		1 / 2	HW / WL / TP
02		1 / 2	HW / WL / TP
03		1 / 2	HW / WL / TP
04		1 / 2	HW / WL / TP
05		1 / 2	HW / WL / TP
06		1 / 2	HW / WL / TP
07		1 / 2	HW / WL / TP
08		1 / 2	HW / WL / TP
09		1 / 2	HW / WL / TP
10		1 / 2	HW / WL / TP
11		1 / 2	HW / WL / TP
12		1 / 2	HW / WL / TP
13		1 / 2	HW / WL / TP
14		1 / 2	HW / WL / TP
15		1 / 2	HW / WL / TP
16		1 / 2	HW / WL / TP
17		1 / 2	HW / WL / TP
18		1 / 2	HW / WL / TP
19		1 / 2	HW / WL / TP
20		1 / 2	HW / WL / TP
21		1 / 2	HW / WL / TP
22		1 / 2	HW / WL / TP
23		1 / 2	HW / WL / TP
24		1 / 2	HW / WL / TP
25		1 / 2	HW / WL / TP
26		1 / 2	HW / WL / TP
27		1 / 2	HW / WL / TP

No.	Sensor Name	Ptn.	HW / WL / TP (circle one)
28		1 / 2	HW / WL / TP
29		1 / 2	HW / WL / TP
30		1 / 2	HW / WL / TP
31		1 / 2	HW / WL / TP
32		1 / 2	HW / WL / TP
33		1 / 2	HW / WL / TP
34		1 / 2	HW / WL / TP
35		1 / 2	HW / WL / TP
36		1 / 2	HW / WL / TP
37		1 / 2	HW / WL / TP
38		1 / 2	HW / WL / TP
39		1 / 2	HW / WL / TP
40		1 / 2	HW / WL / TP
41		1 / 2	HW / WL / TP
42		1 / 2	HW / WL / TP
43		1 / 2	HW / WL / TP
44		1 / 2	HW / WL / TP
45		1 / 2	HW / WL / TP
46		1 / 2	HW / WL / TP
47		1 / 2	HW / WL / TP
48		1 / 2	HW / WL / TP
49		1 / 2	HW / WL / TP
50		1 / 2	HW / WL / TP
51		1 / 2	HW / WL / TP
52		1 / 2	HW / WL / TP
53		1 / 2	HW / WL / TP
54		1 / 2	HW / WL / TP
55		1 / 2	HW / WL / TP
56		1 / 2	HW / WL / TP
57		1 / 2	HW / WL / TP
58		1 / 2	HW / WL / TP
59		1 / 2	HW / WL / TP
60		1 / 2	HW / WL / TP
61		1 / 2	HW / WL / TP
62		1 / 2	HW / WL / TP

No.	Sensor Name	Ptn.	HW / WL / TP (circle one)
63		1 / 2	HW / WL / TP
64		1 / 2	HW / WL / TP
65		1 / 2	HW / WL / TP
66		1 / 2	HW / WL / TP
67		1 / 2	HW / WL / TP
68		1 / 2	HW / WL / TP
69		1 / 2	HW / WL / TP
70		1 / 2	HW / WL / TP
71		1 / 2	HW / WL / TP
72		1 / 2	HW / WL / TP
73		1 / 2	HW / WL / TP
74		1 / 2	HW / WL / TP
75		1 / 2	HW / WL / TP
76		1 / 2	HW / WL / TP

**User Codes**

The table below provide space for you to record user codes and the attributes of each.

- B** User can bypass sensors.
- RA** User can access the system from a phone.
- PJ** User can access both partitions.
- S** User can perform system tests.
- L** Latchkey user.

Defaults are indicated by ✓

	B	RA	PJ	S	L	Code	Ptn.
System Master	✓	✓	✓	✓	NA	(Default: 1234)	NA
Partition 1 Master	✓	✓		✓	NA	(Default: none)	1
Partition 2 Master	✓	✓		✓	NA	(Default: none)	2
00					✓		1 / 2
01					✓		1 / 2
02					✓		1 / 2
03					✓		1 / 2
04					✓		1 / 2
05					✓		1 / 2

	B	RA	PJ	S	L	Code	Ptn.
06							1 / 2
07							1 / 2
08							1 / 2
09							1 / 2
10							1 / 2
11							1 / 2
12							1 / 2
13							1 / 2
14							1 / 2
15							1 / 2
16							1 / 2
17							1 / 2
18							1 / 2
19							1 / 2
20							1 / 2
21							1 / 2
22							1 / 2
23							1 / 2
24							1 / 2
25							1 / 2
26							1 / 2
27							1 / 2
28							1 / 2
29							1 / 2
30							1 / 2
31							1 / 2
32							1 / 2
33							1 / 2
34							1 / 2
35							1 / 2
36							1 / 2
37							1 / 2
38							1 / 2
39							1 / 2
40							1 / 2

	B	RA	PJ	S	L	Code	Ptn.
41							1 / 2
42							1 / 2
43							1 / 2
44							1 / 2
45							1 / 2
46							1 / 2
47							1 / 2
48							1 / 2
49							1 / 2
50							1 / 2
51							1 / 2
52							1 / 2
53							1 / 2
54							1 / 2
55							1 / 2
56							1 / 2
57							1 / 2
58							1 / 2
59							1 / 2

**Touchpad Information**

*Alphanumeric and Fixed Display Touchpads*

Status beeps and Key beeps are programmable by the installer. The Silent Arming feature is user-programmable.

**Note:** Protest beeps upon bypassing will always sound.

Location of TP	Ptn.	Status Beeps	Key Beeps
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off
	1 / 2	On/Off	On/Off

*Is Touchpad Tamper feature on?*

- Yes. If, when the system asks for a code, more than 40 touchpad keys are pressed in rapid succession and those keystrokes are not part of a valid access code, a siren will sound.
- No. Multiple keypresses that are not part of a valid access code will not send an alarm.

*Keychain Touchpads*

There are \_\_\_\_ keychain touchpads in use in the system.

Keychain Touchpad 1—Active for Partition: 1 2  
—Latchkey User: Y N

Press the LOCK key to:

- Increase the arming level.
- Arm the system to Level 3 with no Exit or Entry delay.

Press both at one time to:

- Create a panic alarm.
- \_\_\_\_\_

Keychain Touchpad 2—Active for Partition: 1 2  
—Latchkey User: Y N

Press the LOCK key to:

- Increase the arming level.
- Arm the system to Level 3 with no Exit or Entry delay.

Press both at one time to:

- Create a panic alarm.
- \_\_\_\_\_

Keychain Touchpad 3—Active for Partition: 1 2  
—Latchkey User: Y N

Press the LOCK key to:

- Increase the arming level.
- Arm the system to Level 3 with no Exit or Entry delay.

Press both at one time to:

- Create a panic alarm.
- \_\_\_\_\_

Keychain Touchpad 4—Active for Partition: 1 2  
 —Latchkey User: Y N

Press the LOCK key to:

- Increase the arming level.
- Arm the system to Level 3 with no Exit or Entry delay.

Press both at one time to:

- Create a panic alarm.

Pressing this key triggers \_\_\_\_\_

Pressing this key controls all lights.

Pressing both keys at same time creates Auxiliary panic alarm.

**Accidental Smoke and Fire Alarms**

To silence the alarms and reset the sensor:

- Press [1] + [C][O][D][E], once to silence the alarm.
- Press [1] + [C][O][D][E], again to reset the smoke alarm.

Smoke and fire panic alarms cannot be cancelled and are always reported to the central station.

If, after disarming the system once, the system still thinks a sensor is open, disarm the system again.

In the event of an accidental smoke or fire alarm, follow these dealer instructions:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**Dialer Abort**

*Is the Dialer Abort feature enabled?*

- Yes. I have \_\_\_\_ seconds to cancel an accidental intrusion or auxiliary alarm before it is reported to the central station.
- No. All alarms are reported to the central station immediately.

**Doors and Delay Time Settings**

When the system is armed, enter and exit the premises only through designated delay doors.

Entry Delay Time:

The time allowed to enter the premises and disarm the system.

Exit Delay Time:

The time allowed to leave the premises after arming the system.

Door	Door Location	Ptn.	Entry Delay	Exit Delay
1		1 / 2	:	:
2		1 / 2	:	:
3		1 / 2	:	:
4		1 / 2	:	:
5		1 / 2	:	:

**System Features**

*Partition 1*

Feature	My system features include:
Quick Arm	<input type="checkbox"/> Yes. Press the arming level desired. <input type="checkbox"/> No. Enter arming level, then access code.
Quick Exit	<input type="checkbox"/> Yes. Press [D] and exit your armed premises through a delay door within 2 minutes. <input type="checkbox"/> No. I need to disarm my system in order to exit the premises.
Exit Extension	<input type="checkbox"/> Yes. If I re-enter the armed premises during the Exit Delay time, the Exit Extension will begin. <input type="checkbox"/> No. If I re-enter the armed premises during the Exit Delay time, it will continue to count down and I must disarm the system.
Keyswitch Arming	<input type="checkbox"/> Yes. I can use a key to arm the system. The switch is located: _____ _____ _____ <input type="checkbox"/> No.
Auto STAY Arming	<input type="checkbox"/> Yes. If, after arming to Level 3—AWAY, I don't exit through a designated delay door, the system will arm to Level 2—STAY. <input type="checkbox"/> No. If, after arming to Level 3—AWAY, I don't exit through a designated delay door, the system will continue to arm to Level 3—AWAY. And, if my system contains motion detectors, movement may cause an alarm.



*Partition 2*

Feature	My system features include:
Quick Arm	<input type="checkbox"/> Yes / <input type="checkbox"/> No
Quick Exit	<input type="checkbox"/> Yes / <input type="checkbox"/> No
Exit Extension	<input type="checkbox"/> Yes / <input type="checkbox"/> No
Keyswitch Arming	<input type="checkbox"/> Yes / <input type="checkbox"/> No Switch Location _____ _____ _____
Auto STAY Arming	<input type="checkbox"/> Yes / <input type="checkbox"/> No

**If the Power Goes Out**

Your system has a backup battery that keeps your system operational during a power failure. An optional feature allows your system to alert the central monitoring station if the power is off for more than 15 minutes. It reports again when power has been restored.

**No Activity Time**

My system uses the No Activity feature.

*Partition 1*

- Yes. If there is no activity in my system for \_\_\_\_ hours (12-99, default 24), the system will send a No Activity report to the central station.
- No. My system setup does not include this feature.

*Partition 2*

- Yes. If there is no activity in my system for \_\_\_\_ hours (12-99, default 24), the system will send a No Activity report to the central station.
- No. My system setup does not include this feature.

**Resetting the Smoke Detector**

To reset smoke detectors:

- They are reset automatically.
- Press the reset switch.

**System Information**

System Information	Code
Factory code	
System number	
System level	

**Paging**

For what events will the central station or pagers be notified?

Reporting Features	CS 1	CS 2	CS 3	Pagers				
				1	2	3	4	5
High Level Reports								
Low Level Reports								
Opening/Closing Reports								
Latchkey Reports	N/A	N/A	N/A					
Exception Reports								
Stream-lining	N/A	N/A	N/A					
Partition	N/A	N/A	N/A					

According to my pager provider, the central station account number will appear as:

\_\_\_\_\_

\_\_\_\_\_

## Lights

The housecode for the X-10 modules is:

Partition 1: \_\_\_\_\_

Partition 2: \_\_\_\_\_

Record the location of each light.

### Partition 1

Light	Location of Light
1	
2	
3	
4	
5	
6	
7	
8	
9	

### Partition 2

Light	Location of Light
1	
2	
3	
4	
5	
6	
7	
8	
9	

## Outputs

Output	Ptn.	Location	Name
1	1 / 2		
2	1 / 2		
3	1 / 2		
4	1 / 2		
5	1 / 2		
6	1 / 2		

## Energy Saver

### Partition 1

The low setpoint is currently set for \_\_\_\_ degrees.

The high setpoint is currently set for \_\_\_\_ degrees.

### Partition 2

The low setpoint is currently set for \_\_\_\_ degrees.

The high setpoint is currently set for \_\_\_\_ degrees.

## Alarm Sounds and Status Beeps

### Alarm Sounds

Alarm Type	Alarm Sound
Fire	Repeating series of three beeps.
Police	Continuous tone.
Auxiliary	Rapid Beeps.

### Status Beeps

Beep Type	Beep Sound
Exit Delay	2 or 3 beeps (indicating arming level), followed by 1 beep every 4 seconds, followed by 10 seconds of quick beeps (indicating end of exit delay), followed by 2 or 3 beeps (indicating set arming level).
Entry Delay	2 beeps every 2 seconds, followed by 2 beeps every second for the last 10 seconds.
Chime	2 beeps whenever a protected door or window is opened.
Chime on Close	1 long beep when a protected door or window is closed.
Protest	Repeating pattern of 1 long beep, followed by 1 short beep, followed by 1 long beep.
Trouble	5 short beeps once every minute.
Sensor Test	1 short, high-pitched beep when a sensor/touchpad tests OK.  1 short, low-pitched beep when a sensor/touchpad fails a test. Contact your dealer for information or service.  1 short beep every minute during the last 5 minutes of sensor test.

**APPENDIX B:  
PLANNING FOR EMERGENCIES**

Develop plans for a variety of emergency situations. Periodically discuss and rehearse emergency plans that include the following:

- Understand how to use your security system.
- Know the normal state of doors and windows; open, closed, or locked.
- Use a different escape route if closed doors feel hot to the touch.
- Emphasize that everyone should escape as quickly as possible. Do not stop to gather any belongings.
- Crawl and hold your breath as much as possible to help reduce smoke inhalation during your escape.
- Meet at a designated outdoor location.
- Emphasize that no one should return to the premises if there is a fire.
- Notify fire department from a neighbor's phone.

**WARNING!** If you arrive at the premises and hear sirens, do not attempt to enter the building. Call for emergency assistance from a neighbor's phone.


**Floor Plan Example**

The figure below is an example of a multilevel floor plan. Use this example as a guide and draw your floor plan on the next page.

**Your Floor Plan**



Use the following guidelines when drawing your floor plan:

- Show all building levels.
- Show exits from each room (two exits per room are recommended).
- Show the location of all security system components.
- Show the locations of any fire extinguishers.

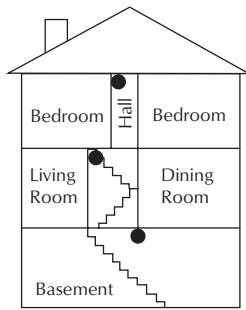


A smoke detector should be located on each level.

- Required smoke detector
- Ⓜ Heat detector
- ⊗ Indicates smoke detector is optional if door is not provided between basement and recreation rooms.

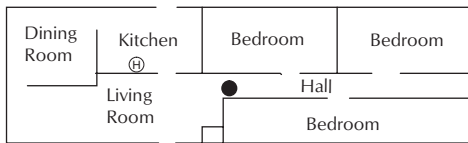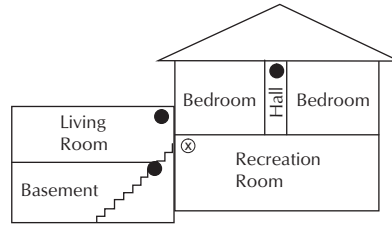

Smoke detectors should be located between the sleeping area and the rest of the family living unit.

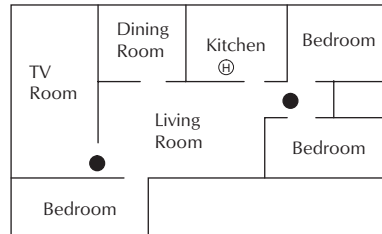

In family living units with more than one sleeping area, locate a smoke detector at each area.

NOTE: Ceiling-mounted smoke detectors should be located in the center of the room or hall, or not less than 4 inches from the wall. When the detector is mounted on the wall, the top of the detector should be 4 to 12 inches from the ceiling.

NOTE: Do not install smoke detectors where normal ambient temperatures are above 100°F or below 40°F. Also, do not locate detectors in front of AC/ Heat registers or other locations where normal air circulation will keep smoke from entering the detector.

NOTE: Additional information on household fire warning is available at nominal cost from: The National Fire Protection Association, Batterymarch Park, Quincy, MA 02269. Request Standard No. NFPA74.

**Alarm System Limitations**

Not even the most advanced alarm system can guarantee protection against burglary, fire, or environmental emergencies. All alarm systems are subject to possible compromise or failure-to-warn, for a variety of reasons including:

- If sirens are not placed within range of persons sleeping, in remote areas of the premises, or if they are placed behind doors or other obstacles.
- If intruders gain access through unprotected entry points or areas where sensors are bypassed.
- If intruders have the technical means of bypassing, jamming, or disconnecting any or all parts of the system.
- If power to sensors is disconnected or inadequate.
- If freeze, flood, or any environmental sensors are not located in areas where the specific condition can be detected.
- If smoke does not reach a smoke sensor. For example, smoke sensors cannot detect smoke in chimneys, walls, roofs, or smoke blocked by a closed door. Sensors may not detect smoke on building levels different from their installed location. Sensors may not warn in time when fires are caused by smoking in bed, explosions, improper storage of flammables, overloaded electrical circuits, or other hazardous conditions.
- If telephone lines are out of service. Telephone lines are also vulnerable to compromise by any of several means.

Inadequate maintenance is the most common cause of alarm failure. Therefore, test your system once each week to verify sensors, sirens, and phone communications are all working correctly.

**Note:** Although having an alarm system can make you eligible for reduced insurance premiums, the system is no substitute for insurance.

**WARNING! Security systems and devices cannot compensate you for life or property losses.**

**If Your System Needs Service**

If you have any questions about your security system or if it ever needs servicing, please contact your security dealer.

Company Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Phone Number (\_\_\_\_) \_\_\_\_\_

Contact Name \_\_\_\_\_



## APPENDIX C: PROGRAMMING YOUR SYSTEM

You can program the following items on your system:

- System time and date
- User codes
- Schedules
- Schedule events
- Downloading feature
- Silent Arming feature
- Brightness of touchpads
- Volume of speakers
- Chime features
- Energy saver options
- Attach lights to sensors

### Two Methods to Program Your System

There are 2 methods for programming your system:


- Programming menus—Offer visual text cues from your touchpad.
- Programming shortcuts—Allow you to type in a sequence of numbers for a specific programming task.

Either method requires a valid System or Partition Master code. You cannot program the system using a regular user code.

### Using Programming Menus

The programming menus are arranged much like a computer software program: Each menu containing multiple options.

To navigate through the menus:

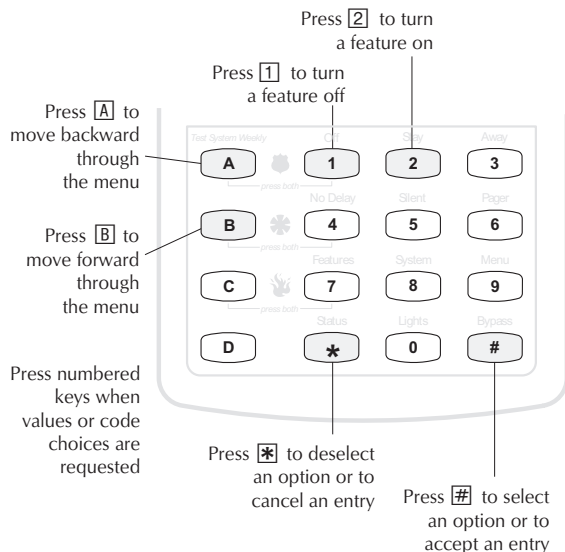

### Examples of Programming Using Menus

Here are two examples of programming using system menus. The examples describe each step involved in programming a user code and in erasing a user code from an alphanumeric and fixed display touchpad.

#### To change or assign a user access code:

1. Enter the programming menus by pressing

1. Press **[9]** + System or Partition Master **[C][0][D][E]**.
2. Press **[B]** until the touchpad displays “USER CODES,” then press **[#]**.
3. Press **[B]** until the touchpad displays the type of code you wish to change (Regular User codes, Partition Master Codes, or System Master code), then press **[#]**. For example, if you want to change a Regular User code, press **[#]** when the touchpad displays “REGULAR USER CODES” or “REG CODES.”
4. Press **[B]** until the touchpad displays the user code you wish to change, then press **[#]**. For example, if you want to change Regular User code 2, press **[#]** when the touchpad displays “USER 02” or “REG CODE 02.”
5. Enter the new code and press **[#]**.
6. Press **[B]**. “DIRECT BYPASSING” or “BYPASS” appears:
  - Press **[1]** + **[#]** to turn the option *off* for this user code.
  - Press **[2]** + **[#]** to turn the option *on* for this user code.
7. Press **[B]**. “REMOTE ACCESS” or “REMOTE” appears:
  - Press **[1]** + **[#]** to turn the option *off* for this user code.
  - Press **[2]** + **[#]** to turn the option *on* for this user code.
8. Press **[B]**. “PARTITION JUMP” or “PTN JP” appears:
  - Press **[1]** + **[#]** to turn the option *off* for this user code.
  - Press **[2]** + **[#]** to turn the option *on* for this user code.
9. Press **[B]**. “SYSTEM TESTS” or “TESTS” appears:
  - Press **[1]** + **[#]** to turn the option *off* for this user code.
  - Press **[2]** + **[#]** to turn the option *on* for this user code.
10. Press **[B]**. “LATCHKEY REPORT” or “LATCH” appears:
  - Press **[1]** + **[#]** to turn the option *off* for this user code.
  - Press **[2]** + **[#]** to turn the option *on* for this user code.
11. Press **[\*]** + **[B]** to move to the next user code, or **[\*]** + **[0][0]** + **[#]** to exit the programming menus.

**Note:** The system will not accept the same code for two different users.

**To erase a user code:**

1. Enter the programming menus by pressing **[9] + System or Partition Master [C][0][0][E]**.
2. Press **[B]** until the touchpad displays "USER CODES," then press **[#]**.
3. The touchpad displays "REGULAR USER CODES" or "REG CODES." Press **[#]**. (You cannot delete the System Master code.)
4. Press **[B]** until the touchpad displays the user code you wish to erase, then press **[#]**. For example, if you want to change User code 4, press **[#]** when the touchpad displays "USER 04" or "REG CODE 04."
5. Enter the System or Partition Master code you used in Step 1 and press **[#]**. The deleted code appears as "USER 04 \*\*\*\*" or "RG 01 ----," for example.
6. Press **[\*] + [B]** to move to the next user code, or **[\*] + [0][0] + [#]** to exit the programming menus.

**To change or delete the Partition Master Code:**

1. Enter the programming menus by pressing **[9] + System or Partition Master [C][0][0][E]**.
2. Press **[B]** until the touchpad displays "USER CODES," then press **[#]**.
3. The touchpad displays "REGULAR USER CODES" or "REG CODES." Press **[B]** until the display reads "PARTITION MASTER CODE" or "PTN MASTER,"

then press **[#]**.

4. Enter the System Master Code to delete the existing Partition Master Code  
OR enter a new 4 digit Partition Master Code to replace the existing code, then press **[#]**.
5. Press **[\*] + [0][0] + [#]** to exit the programming menus.

**To change the Master Code:**

1. Enter the programming menus by pressing **[9] + System Master [C][0][0][E]**.
2. Press **[B]** until the touchpad displays "USER CODES," then press **[#]**.
3. The touchpad displays "REGULAR USER CODES" or "REG CODES." Press **[B]** until the display reads "SYSTEM MASTER CODE" or "SYS MASTER," then press **[#]**.
4. Replace the existing code with the new 4 digit System Master Code then press **[#]**.
5. Press **[\*] + [0][0] + [#]** to exit the programming menus.

**Using Programming Shortcuts**

A programming shortcut is a number that "jumps" you to a particular spot in the programming menus.

A series of shortcut numbers takes you directly to the feature or code you want to change.

**1. Enter User Programming.**

<b>Local Phone</b>	<b>[#] + [9] + [C][0][0][E]</b>
<b>Remote Phone Access</b>	Dial the phone number + <b>[#] + [C][0][0][E] + [#] + [9] + [C][0][0][E]</b>
<b>Touchpad</b>	<b>[9] + [C][0][0][E]</b>

**2. Enter a programming command sequence.**

<b>Time</b>	<b>[*] + [0][2][0] + [T][T][T][T] + [#]</b>
<b>Date</b>	<b>[*] + [0][2][1] + [D][D][M][M][Y][Y] + [#]</b>
<b>Regular User Codes</b>	<i>User 00:</i> <b>[*] + [0][3][0][0][0][0] + [N][N][N][N] + [#]</b> <i>User 01:</i> <b>[*] + [0][3][0][0][1][0] + [N][N][N][N] + [#]</b> <i>User 02:</i> <b>[*] + [0][3][0][0][2][0] + [N][N][N][N] + [#]</b> (Continues through User 59) <i>User 59:</i> <b>[*] + [0][3][0][5][9][0] + [N][N][N][N] + [#]</b> If using alphanumeric or fixed display touchpads, use <b>[A]</b> and <b>[B]</b> to scroll through the code attributes and change them as required.
<b>Partition Master Codes</b>	<i>Partition 1:</i> <b>[*] + [0][3][1][0] + [N][N][N][N] + [#]</b> <i>Partition 2:</i> <b>[*] + [0][3][1][1] + [N][N][N][N] + [#]</b>
<b>System Master Code</b>	<b>[*] + [0][3][2][0] + [N][N][N][N] + [#]</b>
<b>Direct Bypassing Attribute</b>	<b>[*] + [0][3][0][N][N][1] + [1] (off) or [2] (on) + [#] (nn = user no.)</b>

## 2. Enter a programming command sequence. (continued)

Remote Access Attribute	* + 030NNN2 + 1(off) or 2(on) + # (nn = user no.)
Partition Jump Attribute	* + 030NNN3 + 1(off) or 2(on) + # (nn = user no.)
System Test Attribute	* + 030NNN4 + 1(off) or 2(on) + # (nn = user no.)
Latchkey Report Attribute	* + 030NNN5 + 1(off) or 2(on) + # (nn = user no.)
Downloading	* + 040 + 1(off) or 2(on) + #
Silent Arming	* + 041 + 1(off) or 2(on) + #
Touchpad Brightness	* + 042 + 0 through 3 + #
Volume	* + 043 + 0 through 7 + #
Voice Chime	* + 044 + 1(off) or 2(on) + #
Chime on Close	* + 045 + 1(off) or 2(on) + #
Time Schedule xx (00-15)	<p>Start Time: * + 05XX0 + TTTT + #</p> <p>Stop Time: * + 05XX1 + TTTT + #</p> <p>Mon: * + 05XX2 + 1(off) or 2(on) + #</p> <p>Tues: * + 05XX3 + 1(off) or 2(on) + #</p> <p>Wed: * + 05XX4 + 1(off) or 2(on) + #</p> <p>Thurs: * + 05XX5 + 1(off) or 2(on) + #</p> <p>Fri: * + 05XX6 + 1(off) or 2(on) + #</p> <p>Sat: * + 05XX7 + 1(off) or 2(on) + #</p> <p>Sun: * + 05XX8 + 1(off) or 2(on) + #</p>
Latchkey Opening	<p>Attaching schedules for Latchkey Opening operation:</p> <p>Sched 0: * + 06000 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 06001 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 06015 + 1(off) or 2(on) + #</p>
Latchkey Closing	<p>Attaching schedules for Latchkey Closing operation:</p> <p>Sched 0: * + 06100 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 06101 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 06115 + 1(off) or 2(on) + #</p>
Exception Opening	<p>Attaching schedules for Exception Opening operation:</p> <p>Sched 0: * + 06200 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 06201 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 06215 + 1(off) or 2(on) + #</p>
Exception Closing	<p>Attaching schedules for Exception Closing operation:</p> <p>Sched 0: * + 06300 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 06301 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 06315 + 1(off) or 2(on) + #</p>
Light 1	<p>Attaching schedules for Light 1 operation:</p> <p>Sched 0: * + 064000 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064001 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064015 + 1(off) or 2(on) + #</p>

## 2. Enter a programming command sequence. (continued)

Light 2	<p>Attaching schedules for Light 2 operation:</p> <p>Sched 0: * + 064100 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064101 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064115 + 1(off) or 2(on) + #</p>
Light 3	<p>Attaching schedules for Light 3 operation:</p> <p>Sched 0: * + 064200 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064201 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064215 + 1(off) or 2(on) + #</p>
Light 4	<p>Attaching schedules for Light 4 operation:</p> <p>Sched 0: * + 064300 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064301 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064315 + 1(off) or 2(on) + #</p>
Light 5	<p>Attaching schedules for Light 5 operation:</p> <p>Sched 0: * + 064400 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064401 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064415 + 1(off) or 2(on) + #</p>
Light 6	<p>Attaching schedules for Light 6 operation:</p> <p>Sched 0: * + 064500 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064501 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064515 + 1(off) or 2(on) + #</p>
Light 7	<p>Attaching schedules for Light 7 operation:</p> <p>Sched 0: * + 064600 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064601 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064615 + 1(off) or 2(on) + #</p>
Light 8	<p>Attaching schedules for Light 8 operation:</p> <p>Sched 0: * + 064700 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064701 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064715 + 1(off) or 2(on) + #</p>
Light 9	<p>Attaching schedules for Light 9 operation:</p> <p>Sched 0: * + 064800 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 064801 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 064815 + 1(off) or 2(on) + #</p>
Output 1	<p>Attaching schedules for Output 1 operation:</p> <p>Sched 0: * + 065000 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065001 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065015 + 1(off) or 2(on) + #</p>




## 2. Enter a programming command sequence. (continued)


Output 2	<p>Attaching schedules for Output 2 operation:</p> <p>Sched 0: * + 065100 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065101 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065115 + 1(off) or 2(on) + #</p>
Output 3	<p>Attaching schedules for Output 3 operation:</p> <p>Sched 0: * + 065200 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065201 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065215 + 1(off) or 2(on) + #</p>
Output 4	<p>Attaching schedules for Output 4 operation:</p> <p>Sched 0: * + 065300 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065301 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065315 + 1(off) or 2(on) + #</p>
Output 5	<p>Attaching schedules for Output 5 operation:</p> <p>Sched 0: * + 065400 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065401 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065415 + 1(off) or 2(on) + #</p>
Output 6	<p>Attaching schedules for Output 6 operation:</p> <p>Sched 0: * + 065500 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 065501 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 065515 + 1(off) or 2(on) + #</p>
Arm to AWAY	<p>Attaching schedules for Arming to AWAY operation:</p> <p>Sched 0: * + 066000 + 1(off) or 2(on) + #</p> <p>Sched 1: * + 066001 + 1(off) or 2(on) + #</p> <p>(Continues through Schedule 15)</p> <p>Sched 15: * + 066015 + 1(off) or 2(on) + #</p>
Energy Saver	<p>Setpoints</p> <p>Low: * + 070 + NN + #</p> <p>High: * + 071 + NN + #</p> <p>(enter temperature value in Fahrenheit)</p>
Factory Code	* + 010
System Number	* + 011
System Level	* + 012
Attach Lights to Sensors	<p>Attaching schedules for Arming to AWAY operation:</p> <p>Light 1: * + 080 + NN + # (nn = sensor no. to be attached)</p> <p>Light 2: * + 081 + NN + # (nn = sensor no. to be attached)</p> <p>(Continues through Light 9)</p> <p>Light 9: * + 088 + NN + # (nn = sensor no. to be attached)</p>
Exit	* + 00 + #

To enter the Programming Menu, press


9 + System Master or Partition Master Code

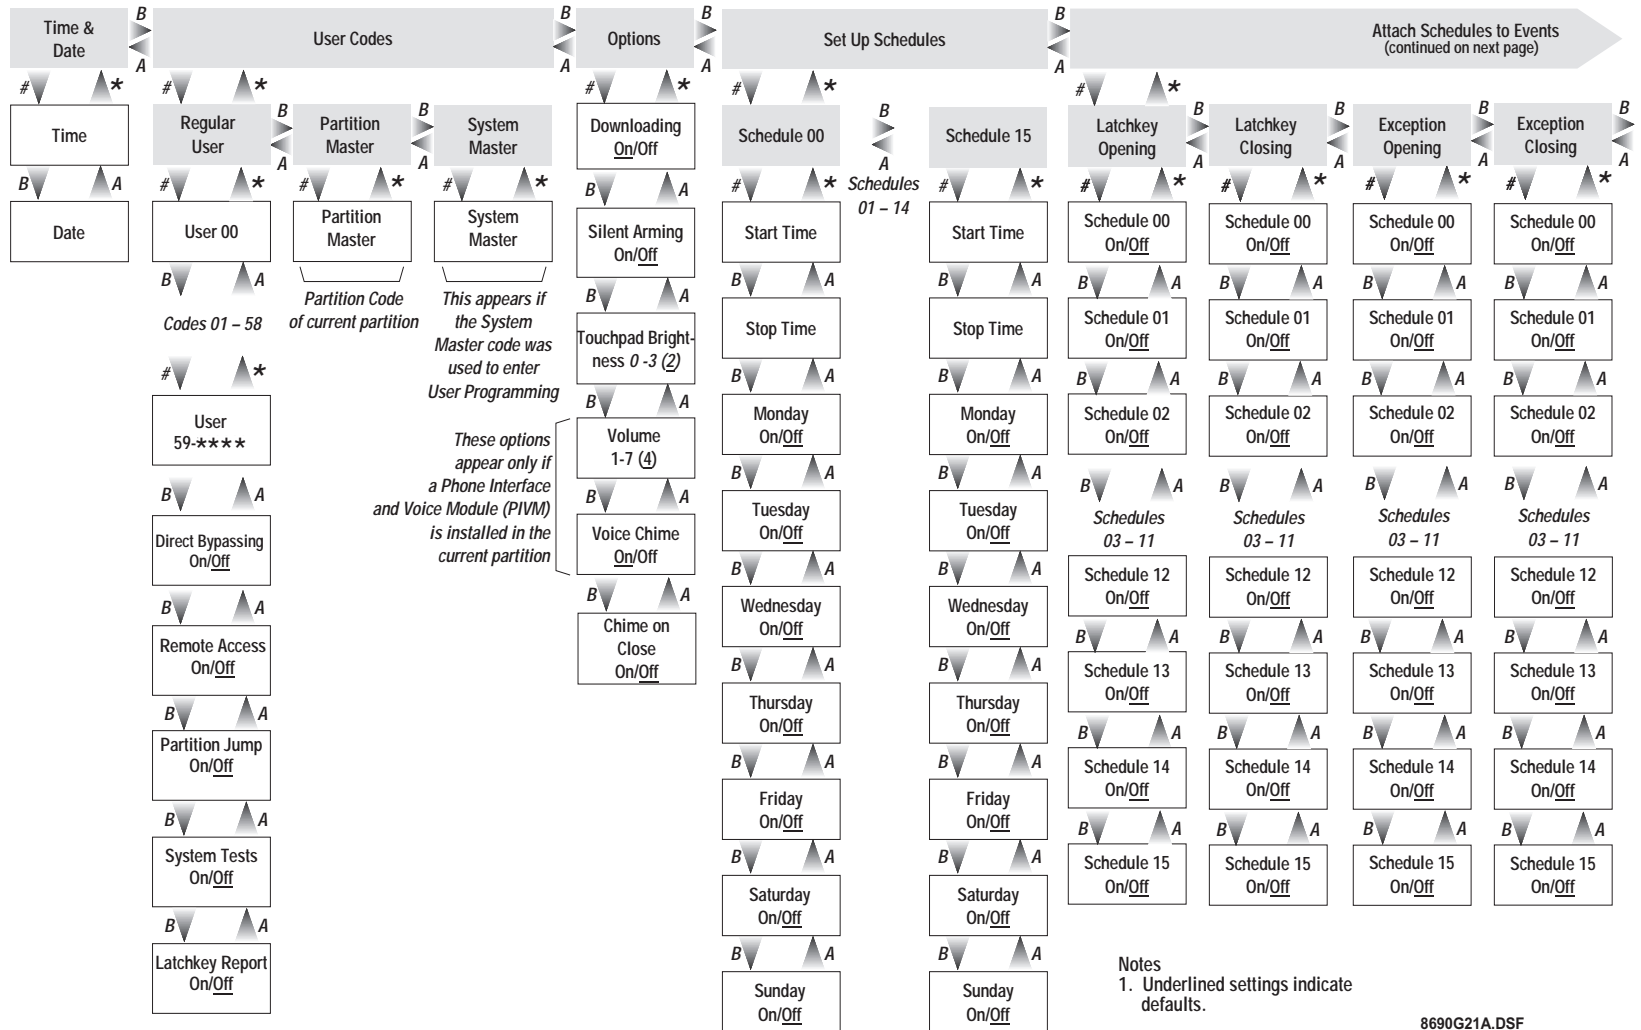

Attach Schedules to Events (continued)

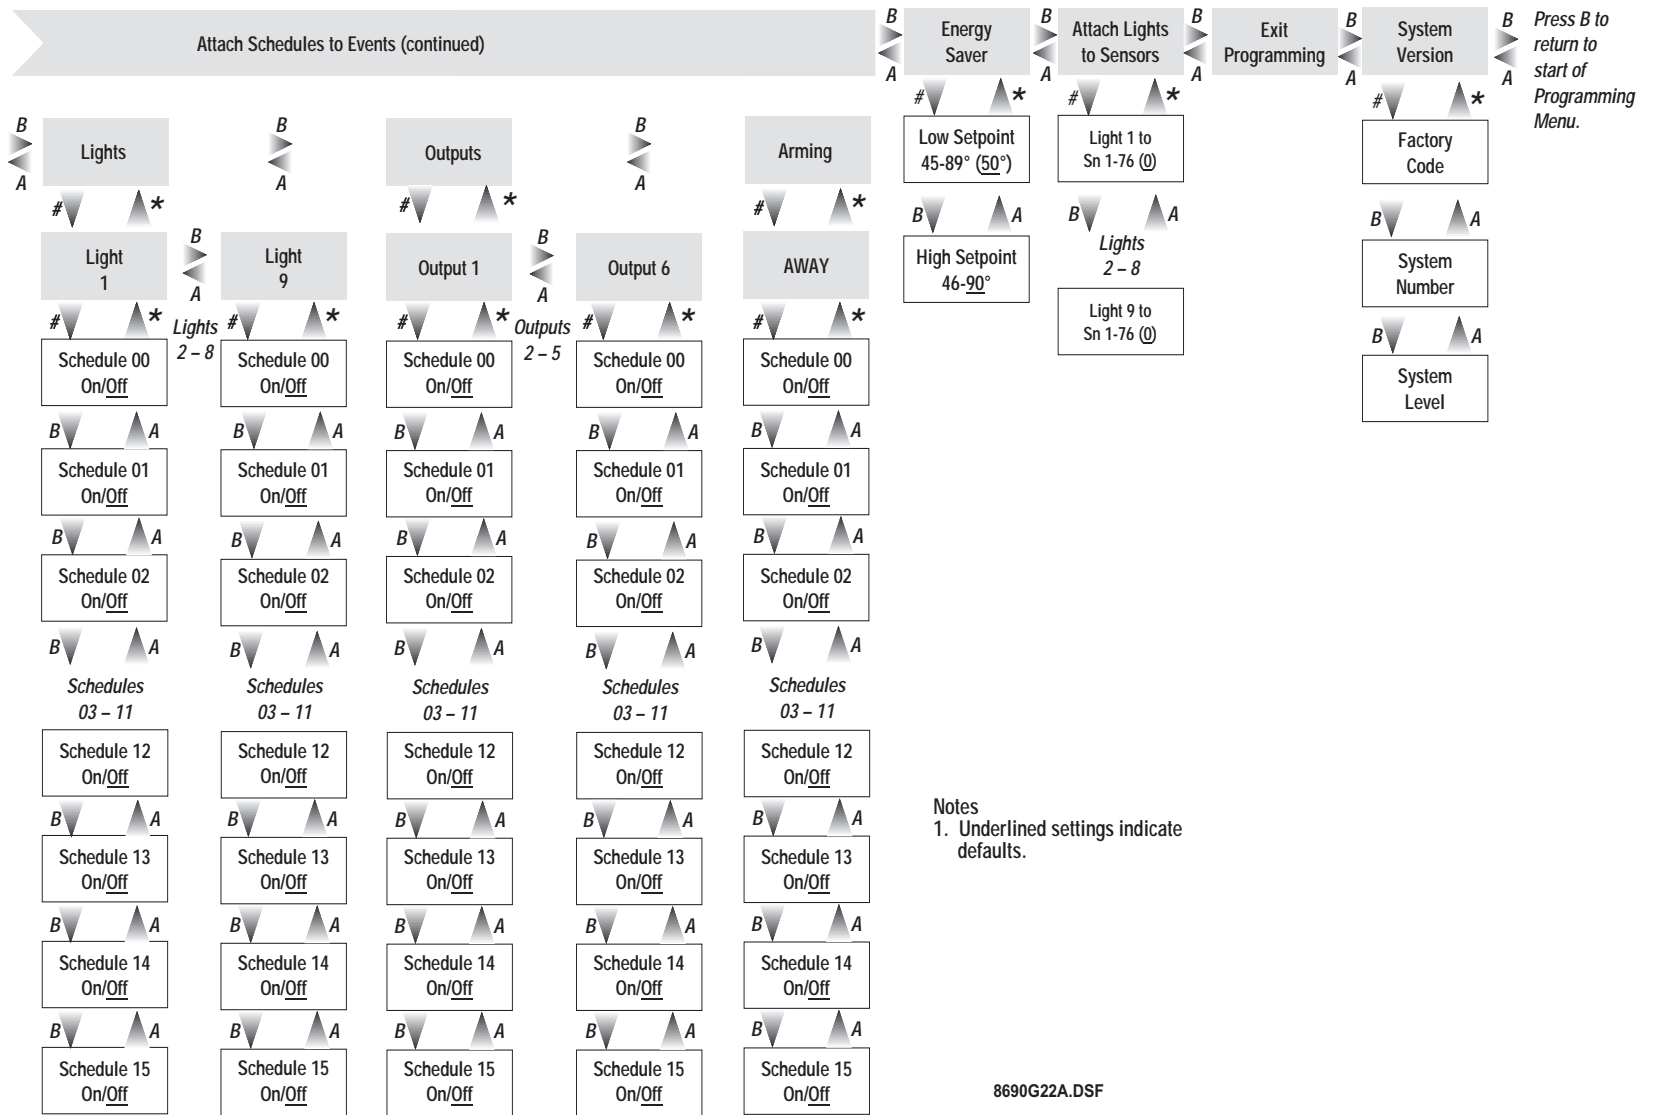

Notes: \_\_\_\_\_

 

**A**

Access codes, description 2  
 Accessing the system from off-site 27  
 Accidental alarms 36  
   cancelling 4  
 Account number 16  
   in page 16  
 Adjusting  
   volume of Supervised Wireless Siren 14  
 Advanced light control 18  
 Alarms, cancelling 4  
 Arming  
   levels 5  
   lighting during 18  
   to Level 2-STAY 5  
   while a door or window is open 8  
   with No Delay 8  
 Assigning Code Attributes 12  
 Attributes  
   jumping partitions 26  
   Latchkey 21  
   remote access to system via phone 27  
   sensor test 29  
 Auto STAY Arming feature 8  
 Automatic test features 29  
 Auxiliary panic alarm  
   activating 11  
   lighting during 11  
   sound of 10

**B**

Basic light control 9  
 Battery Backup feature 37  
 Bypassing sensors  
   directly 9  
   indirectly 9

**C**

Cancelling accidental alarms 4  
 Cellular phones 4  
 Changing user codes 12  
 Checking the system 10  
 Chime feature 3, 7  
 Chime-On-Close feature 7  
 Codes  
   jumping partition attribute 26  
   remote access attribute 27  
   sensor test attribute 29  
 Communication test 30  
 Consecutive days, scheduling 17  
 Controlling Lights by Sensors 19

**D**

Date, setting system 13  
 Dealer code 16  
 Dialer Abort 4  
 Dialer Abort feature 36  
 Disarming  
   and lighting during 18  
   the system 5  
   to Level 1-OFF 5

Disengaging local phone control 28  
 Door/window sensors 29  
 Download feature 25

**E**

Energy Saver feature 15, 26  
 Entry Delay 36  
   beeps 3  
   description 7  
   lighting during 18  
 Erasing user codes 12  
 Event code 16  
 Exit Delay 36  
   beeps 3  
   description 7  
   lighting during 18  
   time 4  
 Exit Extension feature 36, 37

**F**

Factory code 25  
 False alarms 29, 36  
 Features  
   Battery Backup 37  
   Chime 3  
   Dialer Abort 4  
   Energy Saver 26  
   Key Beeps 3  
   Latchkey 26  
   Latchkey Paging 17  
   light control 17  
   No Activity 24  
   No Delay 8  
   Notify by Exception 17, 26  
   Quick Arming 6  
   Silent Arming 13  
   Streamlining 16  
   Touchpad Tamper 12  
   Voice Chime 7  
 Fire alarm ii, 10  
 Fire panic  
   alarm 10  
   lighting during 10  
 Fixed display touchpad 2  
   LEDs 3  
 Full System Status 10

**G**

Garage door openers 4  
 Glass guard sensors 30  
 Global settings 26

**H**

Ham radios 4  
 Hi-Tech Wireless Handheld Touchpad 2

**I**

Installer code 16

**J**

Jumping partitions 26

**K**

Key Beeps feature 3, 35  
 Keychain touchpads 29, 35  
   arming to Level 2 5  
   disarming to Level 1 5  
 Keyswitch arming 2, 16, 36, 37

**L**

Latchkey feature 26  
 Latchkey-designated users 21  
 LEDs 3  
 Level 1-OFF  
   from a Touchtone phone ii, 28  
   from an alphanumeric or fixed display touchpad 5  
   from an alphanumeric or LED touchpad 5  
   with a keychain touchpad 5  
 Level 2-STAY  
   from a Touchtone phone ii, 28  
   from an alphanumeric or fixed display touchpad 5  
   with a keychain touchpad 5  
 Level 3-AWAY  
   from a Touchtone phone ii, 28  
   from an alphanumeric or fixed display touchpad 6  
   with a keychain touchpad 6  
 Light control  
   advanced 9  
   available per partition 26  
   basic 9  
   by time schedule 18  
 Local phone access 27

**M**

Manual test features 29  
 Motion detectors 30  
 Multiple Day Rollover 18

**N**

No Activity feature 24  
 No Delay feature  
   description 8  
   from a Touchtone phone ii, 28  
 Notify by Exception feature 26

**O**

One Day Rollover 17  
 Opening doors or windows 8

**P**

Pager reports, streamlining 16  
 Panic alarms 10  
 Panic buttons 29  
 Partitioned systems  
   jumping partitions 26  
 Partition Master code  
   privileges 11  
 Partition Master codes 26  
 Partitioned systems  
   programming 27

Partitions 16, 18

Partition-specific settings 26

Phone 28

banking 28

disabling control 28

Phone access 27

Phone Command Prefix 27

Phone control

local

controlling the system while using the phone 28

disengaging from system to conduct other phone operations 28

sending a Police alarm 28

remote

accessing the system 27

Phone Failure Trouble 32

Phone test 30

Police alarm ii

activating from a keychain touchpad 10

activating from an alphanumeric or LED touchpad 10

lighting during 11

sending from a Touchtone phone 28

sound 10

Preventing accidental alarms 4

Protest beeps 3

## **Q**

Quick Arming feature 6, 16, 36, 37

Quick Exit feature 6, 36, 37

## **R**

Rate-of-Rise heat detectors 30

Regular User codes 11

Remote phone access 10

Resetting smoke detectors 29, 36

Ring-Hang-Ring method 27

## **S**

Scheduled light control 9

Sensor test beeps 3

Sensor test, conducting a 29

Sensors

bypassing directly 9

bypassing indirectly 9

Setting the system time and date 13

Shock sensors 30

Short System Status 10

Silent Arming 26

arming always silent 14

silent on demand 13

Silent Arming feature 35

Siren time-out 11

Sirens, wireless 14

Smoke detectors 30, 36

resetting 29

Speaker volume 26

Status beeps 3, 35

Status, checking the system 10

Streamlining pager reports 16

Supervised Wireless Siren

adjusting the volume 14

Supervised wireless siren 30

System level 25

System Master Code 11

System Master code 16

System Status 10

System Status Voice Volume 14

System tamper prevention 12

System Tests user code attribute 13

## **T**

Television remote controls 4

Temperature range, setting 15

Test mode 29, 30

Testing the system 29

Time schedules 26

assigning for advanced lighting 18

assigning for Latchkey paging 22

assigning for Notify by Exception 24

creating 17

Multiple Day Rollover 18

One Day Rollover 17

scheduling consecutive days 17

using with partitioned systems 18

Time, setting system 13

Time-out for sirens 11

Touchpad Tamper feature 12, 35

Touchpads 2, 29, 35

alphanumeric 2

display brightness 14

fixed display 2

wireless 2

Trouble beeps 3, 29

Trouble conditions 10

Troubleshooting 29

Turning off local phone control 28

Twelve-Ring method to access system

remotely 27

## **U**

User codes 16

changing 12

different types 11

erasing 12

Latchkey-designated 21

## **V**

Voice Chime feature 7

Volume, adjusting Supervised Wireless Siren 14

## **W**

Window sensors 29

Wireless

siren 14

Touchpad 2

#### FCC Notices

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Install a quality radio or television outdoor antenna if the indoor antenna is not adequate.
- Reorient or relocate the panel.
- Move the panel away from the affected equipment.
- Move the panel away from any wire runs to the affected equipment.
- Connect the affected equipment and the panel to separate outlets, on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.
- Send for the FCC booklet How to Identify and Resolve Radio-TV Interference Problems, available from the U.S. Government Printing Office, Washington, D.C. 20402. Stock Number: 004-000-00345-4.

Changes or modifications not expressly approved by Interactive Technologies, Inc. can void the user's authority to operate the equipment.

This equipment complies with part 68 of the FCC rules. On the FCC label affixed to this equipment is the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.

The REN is used to calculate the maximum number of devices your telephone line will support with ringing service. In most areas the sum of all device RENs should not exceed 5.0. Contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, your telephone company may temporarily disconnect your service. If possible, you will be notified in advance. When advance notice is not practical, you will be notified as soon as possible. You will also be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. You will be given advanced notice in order to maintain uninterrupted service. The telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

#### Declaration of Conformity (DoC)

Interactive Technologies, Inc. declares that the ITI model no. 60-792-95R is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Canada Notice

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. The department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

For your protection, make sure that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together.

#### Caution

Do not attempt to make connections yourself. Contact the appropriate electrician or electric inspections authority.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop that is used by the device to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the LNs of all the devices does not exceed 100. Load Number: 0.2B AC.

"AVIS: - L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme a certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère n'assure toutefois pas que le matériel fonctionnera a la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel a ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêchent pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunication ne permettent pas que l'on raccorde leur matériel a des jacks d'abonné, sauf dans les cas précis prévus pas les tarifs particuliers de ces entreprises.

Les réparations de matériel homologué doivent être effectuées pas un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander a l'utilisateur de débrancher un appareil a la suite de réparations ou de modifications effectuées par l'utilisateur ou a cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise a la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement. - L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours a un service d'inspection des installations électriques, ou a un electricien, selon le cas".

Une note explicative sur les indices de charge (voir 1.6) et leur emploi, a l'intention des utilisateurs du matériel terminal, doit être incluse dans l'information qui accompagne le matériel homologué. La note pourrait être rédigée selon le modèle suivant:

"L'indice de charge (IC) assigné a chaque dispositif terminal indique, pour éviter toute surcharge, le pourcentage de la charge totale qui peut être raccordée a un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100."

L'indice de charge de cet produit est \_\_\_\_\_.

#### Trademarks

ITI is a registered trademark of Interactive Technologies, Inc. Concord, SuperBus, SnapCard, and ToolBox are trademarks of Interactive Technologies, Inc. X-10 is a registered trademark of X-10 (USA), Inc.

This manual may refer to products that are announced but are not yet available.



**Interactive Technologies, Inc.**  
2266 Second Street North  
North Saint Paul, MN 55109-2900  
T: 651/777-2690  
F: 651/779-4890  
1-800-777-1415  
[www.itii.com](http://www.itii.com)

an **interlogix** company.

© 2000 Interlogix™, Inc.

ITII is a registered trademark of Interlogix, Inc. Concord and Interlogix are trademarks of Interlogix, Inc.

Specifications are subject to change. Some features are optional.  
For reprints, order manual 466-1513-01 Rev. A