

## Appendix A : Programming Menu

- Program
1. *Change system time or delay time*
    1. *Change system time*
    2. *Program (enable) timed lights*
    3. *Program (enable) timed options*
    4. *Change entry or exit delay*
    5. *Change siren time*
  2. *Program sensor, light or option*
    1. *Program sensor*
      1. *Learn new sensor*
      2. *Delete sensor*
      3. *Change sensor description*
      4. *Change sensor armed level*
      5. *Change sensor status*
      6. *Sensor siren*
        1. *Sensor siren on (alarm audible - default)*
        2. *Sensor siren off (silent alarm)*
      7. *Sensor cancel option*
        1. *Sensor cancel option home (local only)*
        2. *Sensor cancel option away (default)*
      8. *Sensor status*
    2. *Program lights, options, or house code*
      1. *Program or change lights*
      2. *Program or change options*
      3. *Delete lights*
        1. *Delete light*
        2. *Not delete light*
      4. *Delete options*
        1. *Delete option*
        2. *Not delete option*
      5. *Change house code*
        1. *Change light house code*
        2. *Change option house code*
        3. *Change siren house code*
        4. *House code status*
  3. *Change passwords*
    1. *Change master password*
    2. *Change visitor password*
    3. *Change emergency code (duress feature)*
    4. *Change program password (installer password)*
  4. *Enable/Disable tamper (Sensor front open option)*
    1. *Sensor front open option on (reports tamper)*
    2. *Sensor front open option off (doesn't report tampers - default)*
  5. *System options*
    1. *System phone number 1*
    2. *System phone number 2*
    3. *System code number (access number)*
    4. *Sensor status time (S-Time)*
    5. *Home ID code (cuzcode)*
    6. *Toggle phone DTMF (tones)*
      1. *DTMF on*
      2. *DTMF off*
    7. *Motion status time (security time-out)*
    8. *System cancel option (cancel/removal messages)*
      1. *System cancel option on*
      2. *System cancel option off*
  7. *Program MCU options*
    1. *Local, no phone line supervision*
    2. *Monitored, no phone line supervision*
    3. *Monitored, phone line supervision, status message on phone line failure*
    4. *Monitored, phone line supervision, alarm on phone line failure*
    5. *Toggle phone I/O (interrogator)*
    9. *Toggle R G phone (remote answer)*
  8. *C.S. Download*
  9. *F.C. Download*

All items are available to program password (installer). *Italicized items are available to the end user.*

*version 3.0 + up =  
regular ITI sensors  
10-382*

*earlier versions need the  
slightly rounded cover wires*

