

## Honeywell Wireless Home Security System with Voice Management

Starter Kit: Quick Start-up

### ***IMPORTANT***

*Before starting read all warnings in Owner's Manual on page 8, and refer to the headings indicated below.*

The System will prompt you through programming and will confirm each programming step. (You will need a screwdriver and a pencil.)

#### **Program the Control Panel**

1. Open the Control Panel Door by pressing the release tab on top.
2. Install the 9-volt battery provided.  
Control Panel will beep; System Voice will greet you.
3. Select and set Access Code-any 4 numbers (optional).
4. Set the System Clock with the current time.

#### **Program the Door/Window Sensors**

1. To remove cover, press release button on top of transmitter.
2. Install the two alkaline batteries provided.
3. Program Control Panel: Press Add, Sensor (until you hear location you want).
4. Program Sensor: Press program button on front of transmitter.

#### **Program KeyChain Remote.**

1. Press Add, Sensor (until you hear KeyChain Remote).
2. Press star button on KeyChain Remote.

#### **Install Door/Window Sensors**

1. Plan positioning. Align arrow on magnet with line on transmitter.

2. Affix transmitter to door or window frame.
3. Affix magnet to edge of door or window (within 3/8" of transmitter).  
Use Door/Window Adapter(s) if needed.

### **Install the Control Panel**

1. Connect Control Panel to telephone jack (cord provided).
2. Choose a place for the Control Panel, and install.
3. Plug in the transformer.

### **Set Home Security Functions**

*(Control Panel door must remain closed.)*

#### **To Arm the System:**

1. Press **ARM Door & Windows**.
2. Press **ARM Motion Sensors** (if installed or if needed for 3).
3. Press **ARM Motion Sensors** again (to activate LatchKey Alert, optional).

**Once System is armed, 30-second Exit Delay allows you to go out through a protected door.**

#### **To Disarm the System:**

1. Press **DISARM**.
2. Or use **CODE** buttons to enter your Access Code.

**Each time you re-enter your home through a protected door, 30-second Entry Delay gives you time to disarm the System.**

**If you set off the alarm accidentally, simply turn it off (Disarm), then turn it back on again.**

#### **To Set Home Control Functions or Check System Status:**

Press appropriate buttons on Control Panel.

## **Program the Lighting Modules**

1. Set identification code dials on fronts of units (using your screwdriver).

House Code for the entire system:

The same letter for both units (any letter except A and P).

Unit Code for each individual unit:

A different number for each, or the same one for both (any number 1-8).

2. Program House Code.

Control Panel: Press **Add, Light Control** (until you hear the House Code letter you have selected), **DONE**.

3. Program Lighting Module Operation:

To turn on light by Entry/Exit Delay (lights will stay on for 30 seconds):

Press **Add, Light Control, Unit #**(until you hear the number of the Lighting Module you are programming), **Entry/Exit Delay, DONE**.

- To turn on light by a Sensor, whenever it is triggered (light will stay on for 4 minutes):

Press **Add, Light Control, Unit #**(until you hear the number of the Lighting Module you are programming), **Sensor** (until you hear the name of the Sensor you are programming), **DONE**.

To turn on light by System Clock Timer:

Press **Add; Light Control; Unit #; (Start) Time, Hours, Minutes, DONE; (Stop) Time, Hours, Minutes, DONE**.

## **Install Lighting Modules**

1. Switch lamp on.
2. Unplug lamp, then replug cord into Lighting Module.
3. Plug Lighting Module into wall outlet.

## **Select System Options** (Choose any, all, or none.)

Option 1 - Siren Off

Option 2 - System Voice Off

Option 3 - Security Alert First Call

- Option 4 - Security Alert Second Call
- Option 5 - LatchKey Alert/Power Out First Alert Call
- Option 6 - LatchKey/Power Out Second Call
- Option 7 - Activate Power Out Alert
- Option 8 - Set Latchkey Time
- Option 9 - Record Message

**Program System Options** (including telephone numbers)

1. Press **Add**; press **Option #** repeatedly until you hear the number you want.
2. Follow System Voice for additional steps; press **DONE**.

If you do not have Touch-tone telephone service, press 0 on red keys before entering telephone numbers.

To program for calling to standard numeric pager: Press 0,1 on red keys before entering the pager telephone number.

To program for calling to a "blind connect" pager: Press 0, 2 on red keys before entering the pager telephone number.