

Contact ID Alarm Mapping

Sensor name or Type	Express	Concord 1	Concord 2	Concord 2.5	Simon 2	Simon 3	Allegro
AC Power Failure	1301	1301	1301	1301	1301	1301	1301
AC Power Restored	3301	3301	3301	3301	3301	3301	3301
Alarm Cancel						1406	
Antenna Tamper							
Antenna Tamper Restore							
Auto Forced Arm	1457	1457	1457	1457			
Automation Device Not Responding				1330			
Auxiliary Alarm Cancelled Touchpad							
Auxiliary Alarm Panic Touchpad							
Burglary Alarm						1130	1130
Burglary Alarm Cancel							
Burglary Alarm Entry/Exit							1134
Burglary Alarm Interior							1132
Burglary Alarm Perimeter							1131
Burglary Bypass							
Burglary Restoral							
Burglary Trouble Restore							
Burglary Unbypass							
Burglary: Trouble							
Bus Device Not Heard	1330	1330	1330	1330			
Bus Module Tamper							
Bus Module Tamper							
Bus Module Tamper Restore							
Callback						1606	
Cancel Report (Alarm canceled in less the 5 min.)							
Cellular Backup Failure				1353			
Closing Report	3401	3401	3401	3401	3401	3401	3401
Duress Alarm	1121	1121	1121	1121	1121	1121	1121
Duress Alarm							
Early to Close		3451	3451	3451			
Early to Close							
Early to Open		1451	1451	1451			
Early to Open							
Emergency Alarm							1100
Emergency Alarm							
Emergency Alarm Cancel							
Emergency Bypass							
Emergency Restoral							
Emergency Supervisory							
Emergency Trouble							
Emergency Trouble Restore							
Emergency Unbypass							
Energy Save <Freeze Limit		1159	1159	1159			
Energy Saver Alarm is Cancelled							
Energy Saver Enabled		1330					
Entering Sensor Test	1607		1607	1607			1607
Equipment Failure (TIM EEPROM)							
Equipment Failure (TIM EEPROM)			1627	1627			1330
Events Report	1623	1623	1623	1623			
Exit Fault	1138	1138	1138	1138			1457
Exiting Installer Programming			1628	1628			
Exiting Sensor Test	3607		3607	3607			3607
Fail to Close		1454	1454	1454	1454	1454	
Fail to Open		1453	1453	1453	1453	1453	
Fire Alarm						1110	1110
Fire Alarm Cancel							
Fire Bypass							
Fire Panic Touchpad							
Fire Restoral							
Fire Supervisory							
Fire Trouble							
Fire Trouble Restore							
Fire Unbypass							
Force Armed	3401	3401	3401	3401		1570	1570
Force Armed Auto							

Freeze Alarm						1153	
Freeze Alarm Cancel							
Freeze Bypass							
Freeze Restoral							
Freeze Supervisory							
Freeze Trouble							
Freeze Trouble Restore							
Freeze Unbypass							
Gas Alarm						1162	1162
Gas Alarm Cancel							
Gas Bypass							
Gas Restoral							
Gas Supervisory							
Gas Trouble							
Gas Trouble Restore							
Gas Unbypass							
Latchkey						1642	
Late to Close		3452	3452	3452			
Late to Open		1452	1452	1452			
Listen In						1411	
Low Panel Battery	1302	1302	1302	1302	1302	1302	1302
Low Panel Battery Resored	3302	3302	3302	3302	3302	3302	3302
Low Sensor Battery						1384	1384
Low Sensor Battery Restored						3384	
Marginal Two Way Device Com.							
Medical Prescription Missed							
No Activity	1102	1102	1102	1102	1102	1102	
No Activity							
No Activity Alarm Cancelled							
Opening Report	1401	1401	1401	1401	1401	1401	1401
Panel Back in Service	3308	3308	3308	3308			
Panel Tamper					1137	1137	1137
Panel Tamper Restore							
Panel Tamper Restore							
Panic Alarm						1120	
Panic Alarm Cancel							
Panic Bypass							
Panic Restoral							
Panic Supervisory							
Panic Trouble							
Panic Trouble Restore							
Panic Unbypass							
Phone Failure							
Phone Line 1 Failure			1351	1351			
Phone Line 1 Restore			3351	3351			
Phone Line 2 Failure							
Phone Line 2 Restore							
Phone Line Back Up							
Phone Line Back Up [Not Sent]							
Phone Line Restore							
Phone Test Automatic	1602	1602	1602	1602	1602	1602	1602
Phone Test Manual	1601	1601	1601	1601	1601	1601	1601
Phone Trouble							
Police Alarm Cancelled							
Police Panic							1120
Police Panic Touchpad							
Police Silent Alarm							1122
Receiver Jammed	1355	1355	1355	1355	1355	1355	1355
Receiver Supervisory	1355	1355	1355	1355			
Recent Closing	1459		1459	1459			1459
Smoke Detector Reset				3111			
Supervisory Sensor						1381	1381
Tamper Restore Touchpad							
Tamper Sensor						1380	1383
Tamper Touchpad							
Temp. >Freeze Limit +5		3159	3159	3159			
Temp. >Freeze Limit +5							
Temp. Data not received from ES		1333	1333	1333			
TIM Lost(Not heard from for <4 min)							1350
Touchpad Auxiliary Panic	1100	1120	1100	1100	1120		
Touchpad Fire Panic	1115	1110	1115	1115	1110		1115
Touchpad Police Panic	1120	1130	1120	1120	1130		

Touchpad Tamper	1137	1137	1137	1137			
Touchpad Tamper Restore	3137	3137	3137	3137			
Transmitter Battery Resoral							
Transmitter Battery Trouble							
Two Trip Error	3138		3138	3138			
Untyped Alarm							
Untyped Alarm Cancel							
Untyped Bypass							
Untyped Restoral							
Untyped Supervisory							
Untyped Trouble							
Untyped Trouble Restore							
Untyped Unbypass							
Untyped Zone Bypassed							
Untyped Zone Supervisory							
Wireless Touchpad LB Restore		3380	3380	3380			
Wireless Touchpad Low Battery		1384	1384	1384			
Wireless Touchpad Supervisory		1381	1381	1381			

Data codes beginning with a "1" may report as a "E"

Data codes beginning with a "3" may report as a "R"

Data in Red need to be checked for accuracy

Alarm

Sensor Groups	Express	Concord 1	Concord 2	Concord 2.5	Simon 2	Simon 3
00-01	1120	1120	1120	1120	1120	1120
02-03	1122	1122	1122	1122	1122	1122
04-07	1100	1100	1100	1100	1100	1100
08-09	1130	1130	1130	1130	1130	1130
10-12	1134	1130	1134	1134	1130	1130
13	1131	1130	1131	1131	1130	1130
14-20	1132	1130	1132	1132	1130	1130
21-25						
26	1110	1110	1110	1110	1110	1110
27-28						
29	1150	1153	1150	1150	1153	1153
32						
33	1320		1320	1320		
34	1151		1151	1151	1162	1162
35	1130		1130	1130		

Sensor Groups	Allegro*
00-01	1120
02-03	1122
04 & 06	1100
05 & 07	
08-09	1130
10	1134
11-12	
13	1131
14-20	1132
21-25	
26	1110
27-28	
29	
32	
33	
34	1162
35	

Restore

00-01	3120	3120	3120	3120	3120	3120
02-03	3122	3122	3122	3122	3122	3122
04-07	3100	3100	3100	3100	3100	3100
08-09	3130	3130	3130	3130	3130	3130
10-12	3134	3130	3134	3134	3130	3130
13	3131	3130	3131	3131	3130	3130
14-20	3132	3130	3132	3132	3130	3130
21-25						
26	3110	3110	3110	3110	3110	3110
27-28						
29	3150	3153	3150	3150	3153	3153
32						
33	3320		3320	3320		
34	3151		3151	3151	3162	3162
35	3130		3130	3130		

00-01	
02-03	
04-07	
08-09	
10-12	
13	
14-20	
21-25	
26	
27-28	
29	
32	
33	
34	
35	

*Allegro's Sensor Groups are different then our other panels. See Below

Misc. Zone Classification	Express	Concord 1	Concord 2	Concord 2.5	Simon 2	Simon 3	Allegro
System	00	00	00	00	00	00	00
Normal Sensors	01-99	01-99	01-99	01-99	01-24	01-24	01-20
User Code	600-699	100-199	600-699	600-699	31-35	31-35	31-36
Bus Device	500-595	200-299	500-595	500-595	--	--	--
TP Aux Panic	597	--	597	597	25	25	97
TP Police Panic	598	--	598	598	27	27	98
TP Fire Panic	599	--	599	599	28	28	99
Premise Phone	--	900	900	900	--	--	--
Remote Access	--	902	902	902	--	--	--
Keyswitch Arming	908	908	908	908	--	--	--
Reboot or CPU Failure	909	909	909	909	--	--	--
Panel Tamper	--	--	--	--	26	26	--
During Phone Conversation	--	901	--	--	--	--	--
RF TP Zones	--	300-399	--	--	--	--	--
Misc. Zones	900-999	900-999	900-999	900-999	--	--	--
Duress Code					36	36	37
Master Code					30	30	30

