



# Simon XT User and Installation Errata

466-2315A • January 2008  
Copyright © 2008 GE Security

## Introduction

This is the *Simon XT User and Installation Errata* (466-2315A) for the GE Security *Simon XT User Manual* (466-2266C) and *Simon XT Installation Manual* (466-2265D). This document includes information on this product that did not make it into the manual. Where information differs between the documents, this document supersedes the manual.

## User manual corrections

The following changes apply to the *Simon XT User Manual* (466-2266C):

- Page 13: Section on canceling and preventing accidental alarms: The dialer delay range is between 15 and 45 seconds, not 0 and 254 seconds.

## Installation manual corrections

The following changes apply to the *Simon XT Installation Manual* (466-2265D):

- Page 7: Table 3. The personal help button's recommended sensor group should be 06, 07, 01, 03.
- Page 19: SIA system requirements are the same as the UL system listed on page 18, not page 1.
- Page 19: The duress/panic code programming is in *Table 12* on page 40, not *Table 23* on page 52.
- Page 24: Follow the instructions in *Chapter 4 Programming* to add the sensors to panel memory.
- Page 25: To detect if the siren wire is cut (open), *Hardwired siren supervision* must be turned on. (See *Table 23* on page 52.)
- Page 30: Powering up the panel. Maximum battery charge current is 45 mA, not 60 mA.
- The following entries should appear in *Table 39* on page 73:

#	Phrase
129	Dining room
130	Family room
131	Laundry
132	Sliding door
133	Patio

#	Phrase
134	Pool
135	Window
136	Door
137	Baby
138	Toy room

#	Phrase
139	Room
140	Boy's
141	Girl's
142	Fire
143	Sun room

### Technical support

888 GE Security (888.437.3287). Toll-free in the US, Puerto Rico, and Canada.  
503.885.5700 outside the toll-free area or contact your local dealer.

[www.gesecurity.com](http://www.gesecurity.com)