


Wireless Fire Pull Station

Document Number 46-949 Rev. A
November 1994

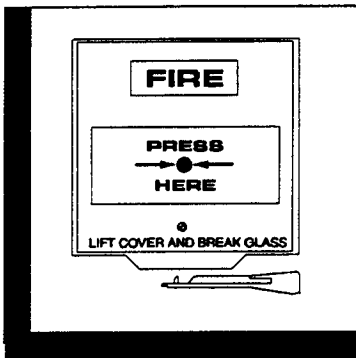

Material code 831341
Model 60-589

INSTALLATION INSTRUCTIONS

About This Document

This document describes how to program, install, and test the Wireless Fire Pull Station.

Product Summary

The Wireless Fire Pull Station is a manually activated device connected to a Sprint Door/Window Sensor. The transmitter is activated by pressing the black dot on the white plastic plate. The Wireless Fire Pull Station is a wall-mounted device that can be used in residential or commercial installation sites.

Installation Considerations

Use the following guidelines when installing the Wireless Fire Pull Station.

- Try to keep all Wireless Fire Pull Stations within 100 ft. of the Master Control Unit (MCU). The transmitter in the Wireless Fire Pull Station has an open-air range of up to 500 feet, but the installation environment may influence this range.
- Determine the best locations for each fire pull station so it is easily accessible.
- The 3.5 VDC battery will last at least 12 months.
- If the battery fails, the MCU reports a supervisory condition.

Tools Needed

- A Phillips screwdriver (to remove the cover and for mounting the back box)
- A standard blade screwdriver (to assemble the unit after programming and mounting)

Programming

The following describes how to program the Wireless Fire Pull Station.

Note: Refer to the *FONSAFE Installation Manual* (46-926) for more detailed instructions.

- 1) At the MCU, press PROGRAM.
- 2) Enter the 4-digit Master Password.
- 3) Enter 2, 1, and 1. The MCU responds *Trip Sensor n or Press Reset To Exit.* (n is the next available sensor number.)
- 4) Lift up the clear plastic cover and press the black dot to trip the sensor. The MCU responds *Fire Emergency Sensor n Learn OK. Please Enter Description Number.*
- 5) Enter the description code (see the *FONSAFE Installation Manual*).
- 6) Reset the Wireless Fire Pull Station by inserting the reset key in the lower right-side front corner of the unit. Push the key inward until the white plastic plate pops out toward you, then pull the reset key out.
- 7) Exit program mode by entering RESET and OFF.

Mounting the Wireless Fire Pull Station

The following describes how to mount the Wireless Fire Pull Station.

- 1) Place the back box on a wall in the desired location and mark the 4 mounting holes (see Figure 1).

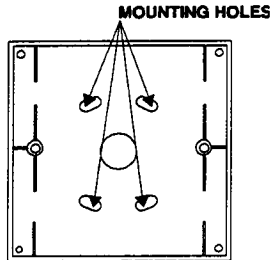


Figure 1. Mounting Hole Locations

- 2) Install anchors (included) at these locations. Anchors are not required where studs are present.
- 3) Place the back box on the wall and insert 4 screws (included) at the marked locations.
- 4) Remove the Phillips screw from the front of the Wireless Fire Pull Station (see Figure 2).

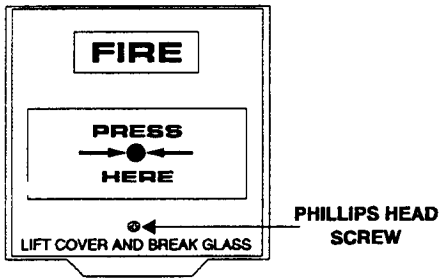


Figure 2. Phillips Screw Location

- 5) Remove the front cover and set it aside.
- 6) Place the Door/Window Sensor in the center of the back box with the sensor bottom facing out (see Figure 3).

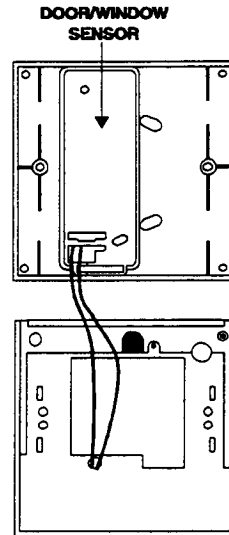


Figure 3. Door/Window Sensor Location

- 7) Remove the white plastic plate from the Wireless Fire Pull Station (see Figure 4).

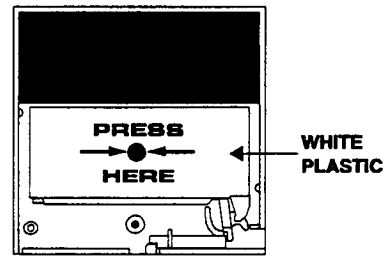


Figure 4. White Plastic Plate Location

- 8) Place the Wireless Fire Pull Station on the back box and secure it to the back box with the 2 black flathead machine screws provided (see Figure 5).

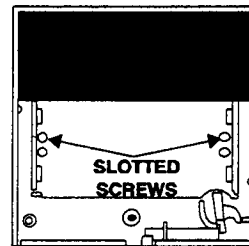


Figure 5. Slotted Screw Locations

- 9) Replace the white plastic plate.
- 10) Replace the Wireless Fire Pull Station cover with the screw.

