

INSTALLATION INSTRUCTIONS

Doc No. 48-227
January, 1988




Interactive Technologies Inc.
2266 North Second Street
North St. Paul, Minnesota 55108
(612) 777-2690
Technical Services (800) 777-2624

PENDANT PANIC SENSOR ITI Part #60-329

OVERVIEW

The Pendant Panic Sensor is designed to be carried by an individual in either a pocket or purse, or (if removable cord is attached) may be worn around the neck as a pendant.

The circuitry for the Pendant Panic Sensor is very simple. There are no reed switches or external wiring, and the sensor is powered by a 3.6V Lithium battery. When the special push-button switch is activated by pressing the PUSH button on the end of the sensor, a violation signal will be sent to the CPU. An unobstructed signal may be received at a distance of up to 500' from the CPU.

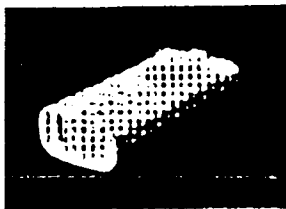

FCC COMPLIANCE

This equipment complies with FCC Rules, Part 15. Operation is subject to the following two conditions: (1) this equipment may not cause harmful interference and (2) this equipment must accept any interference that may be received, including interference that may cause undesired operation.

PROGRAMMING


Program the Pendant Panic Sensor using the Hand Held Programmer. Programming is done as for any portable Panic Button. With the SX-V, Panic Sensors are typically programmed to number 02-07 or 10-11. For the CareTaker, program the sensor to Group #13-15 and whatever individual sensor number is appropriate. Both systems give these sensor and group numbers a Fire/Panic priority. When using the programming cord, observe polarity.

INSTALLATION

Once the Pendant Panic Sensor is programmed, it is ready to go. Simply slip it into your pocket, or if you wish to wear the sensor around your neck, insert the cord under the cord clip on the upper end of the sensor.

TESTING

To test the Pendant Panic Sensor, put your system into Level 9, Sensor Test, and press the Pendant Panic button. The system should respond as if to an alarm, with the violated sensor's number. If it does not respond, check your programming and test again.

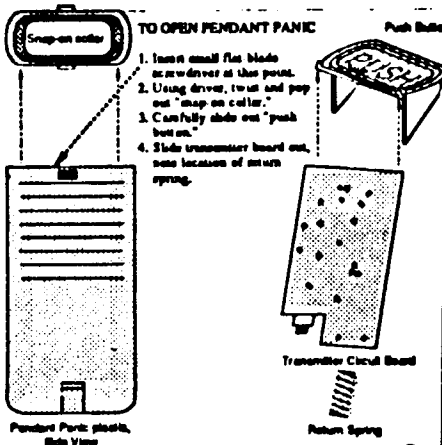

To re-assemble the unit, repeat the four steps listed above in reverse order.

It is important to note that the panic's plastic housing may become damaged by repeatedly opening the unit. Therefore care must be taken when inserting the small screwdriver.

