

INSTALLATION INSTRUCTIONS

Doc No. 46-390-C
October, 1992



Interactive Technologies Inc.
2266 North Second Street
North St. Paul, Minnesota 55109
(612) 777-2690
Technical Services (800) 777-2624

HANDHELD WIRELESS TOUCHPAD ITI Part #60-372

OVERVIEW

The Hand Held Wireless Touchpad is housed in a pocket size plastic case, that is light weight and portable. It is used to arm and disarm the RF Commander CPU and can also be used to perform some programming functions. The Status and Bypass buttons work the same as most all ITI Products.

Estimated battery life is 5 to 8 years.

The POLICE shield Key is used to manually trigger an emergency alarm. The POLICE button must be held for one second to set off the alarm. This guards against accidental triggering.

 
 
 
Try to use the Touchpad within 100 feet of the CPU. Consistent operation cannot be guaranteed at greater distances.

Although the open air range of ITI sensors can be over 500 feet, the installation environment will influence this distance. The 100 foot distance recommendation is given as a starting guideline inside a building. In your actual installation, transmission range may be much greater.

Programming


To gain access to the programming socket and battery, push in on the cover and slide it up and off. Connect the cable from your Handheld programmer to the Programming Socket observing polarity (see diagram). NOTE: Proper polarity is indicated by the Touchpad if its internal beeper emits 7 beeps when connected. Press the House Code key. Enter the same House Code as the CPU. Press ENTER. Display should read DONE. If FAIL, check plug polarity and try again.

NOTE: The command button feature will not work with RF Commander CPU software prior to version 2.6. To find out what software version is in your RF Commander perform a Phone Test, the RF Commander will indicate its software version to the CS-4000 receiver. The CS-4000 receiver must have CPATYPE set to ON.

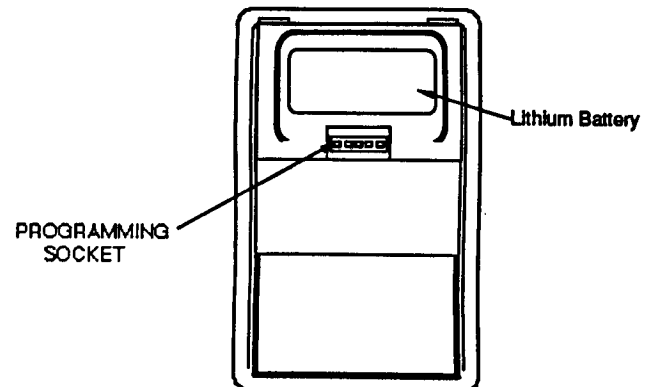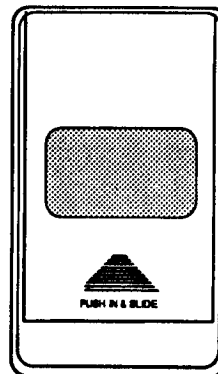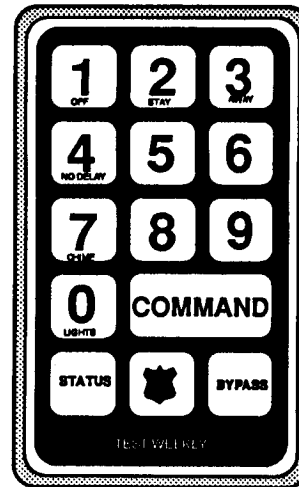

OPTIONAL WALL MOUNTING

 1. Remove Hand Held Touchpad's back cover plate.
2. Notice on the inside face of back cover plate there are two knock outs that are used for screw placement. Mount back cover plate to wall using #6 flat head wood screws.

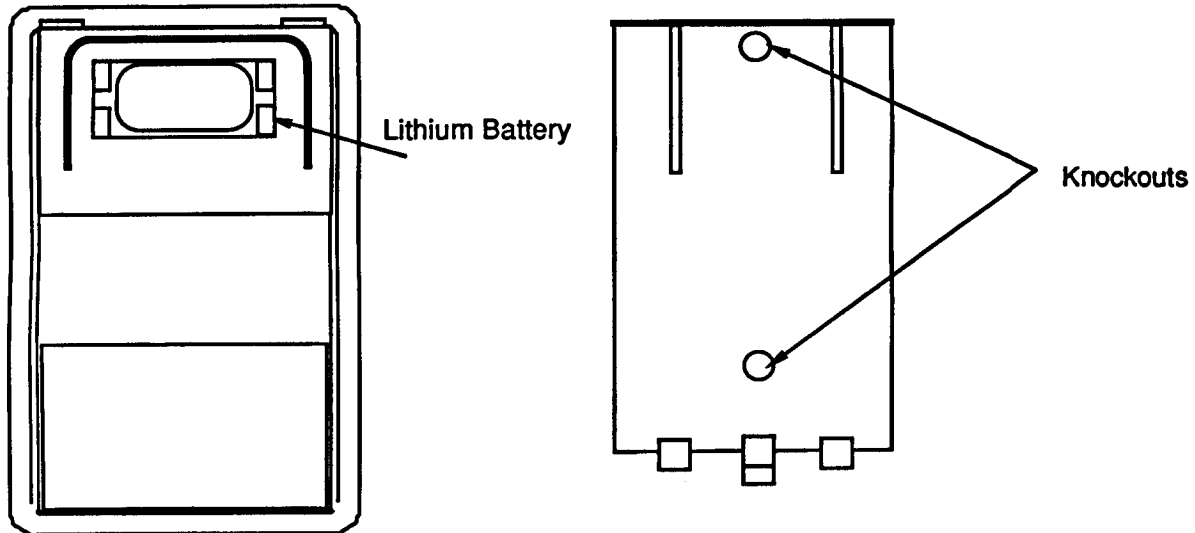

3. Replace touchpad to back cover plate.

FCC NOTICE

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Interactive Technologies, Inc. can void the user's authority to operate the equipment.