

INSTALLATION INSTRUCTIONS



OVERVIEW

The Speaker allows the Installer and Home Owner to have voice annunciations directly from the CPU.

INSTALLATION

To install the Speaker Kit, use the following procedure:

1. Unplug the transformer, turn the CPU Power switch Off and disconnect the CPU Back-up battery.
2. The kit includes one speaker and two plastic standoffs. Identify the holes in the CPU board for the plastic standoffs as shown below.
3. Carefully press the notched end of the speaker standoff into each of the holes in the CPU board. Be extremely careful not to press too hard. The standoffs fit tight but will seat. Wiggle the standoffs as you press.
4. Install the speaker on the wedged end of the standoffs with same procedure as above, be careful not to press too hard or the ears on the speaker holder might break.
5. Connect the speaker wires (polarity not important) to terminals 16 and 11.
6. Plug the transformer back in, reconnect CPU Back-up battery and turn CPU Power switch back ON.

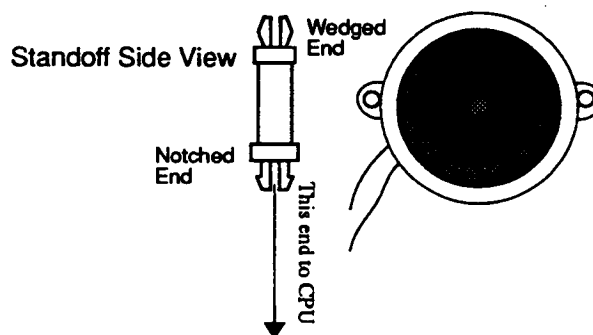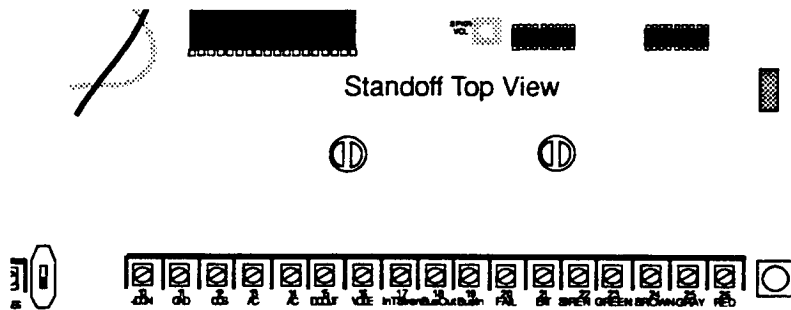

FCC NOTICE

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Interactive Technologies, Inc. can void the user's authority to operate the equipment.