

C&K LCD Keypad Notes


To enter LCD keypad programming press from any keypad first press Installer Code [default is 0 1 2 3 4 5], * 0 1 #. The keypad should now display SERVICE MESSAGE?

You can use the BYPASS key to scroll forward through all the options. You can also use the * and BYPASS buttons to scroll backwards. The following options can be programmed... Keypad Address, Service Message, Dealer Message, Panic Labels and Zone Labels.

The 236 Panel can address 7 LCD keypads, the 238 and the 2316 panel can address 8 LCD Keypads, each LCD keypad must be addressed differently. Enter the Keypad Address option and program a number from 1 to 8.

1

ALPHA II Programming Template

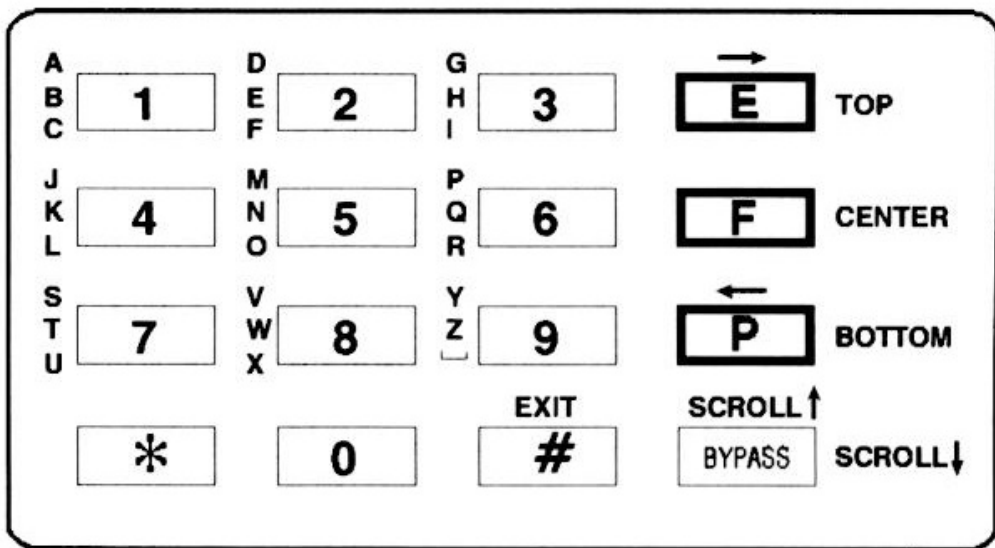

Numbers are programmed just by pressing which number you desire, letters are programmed by pressing one of the panic buttons and which letters you require. For example by pressing the F key and the 4 key you get a K, by pressing the P key and the 8 key you get an X. A space is the P key and the 9 key. When you are done with a zone label press the # key will save the zone label.

Press the * key and the E key moves the cursor to the Right.

Press the * key and the P key moves the cursor to the Left.

Pressing the P key and the 9 key erases or enters a space.

You can only enter upper case letters.

To leave LCD keypad programming press the * key and the # key.

Some systems have * and # key replaced with and keys.

For the Service message you could enter the monitoring station phone number.