




Zone Programming *56

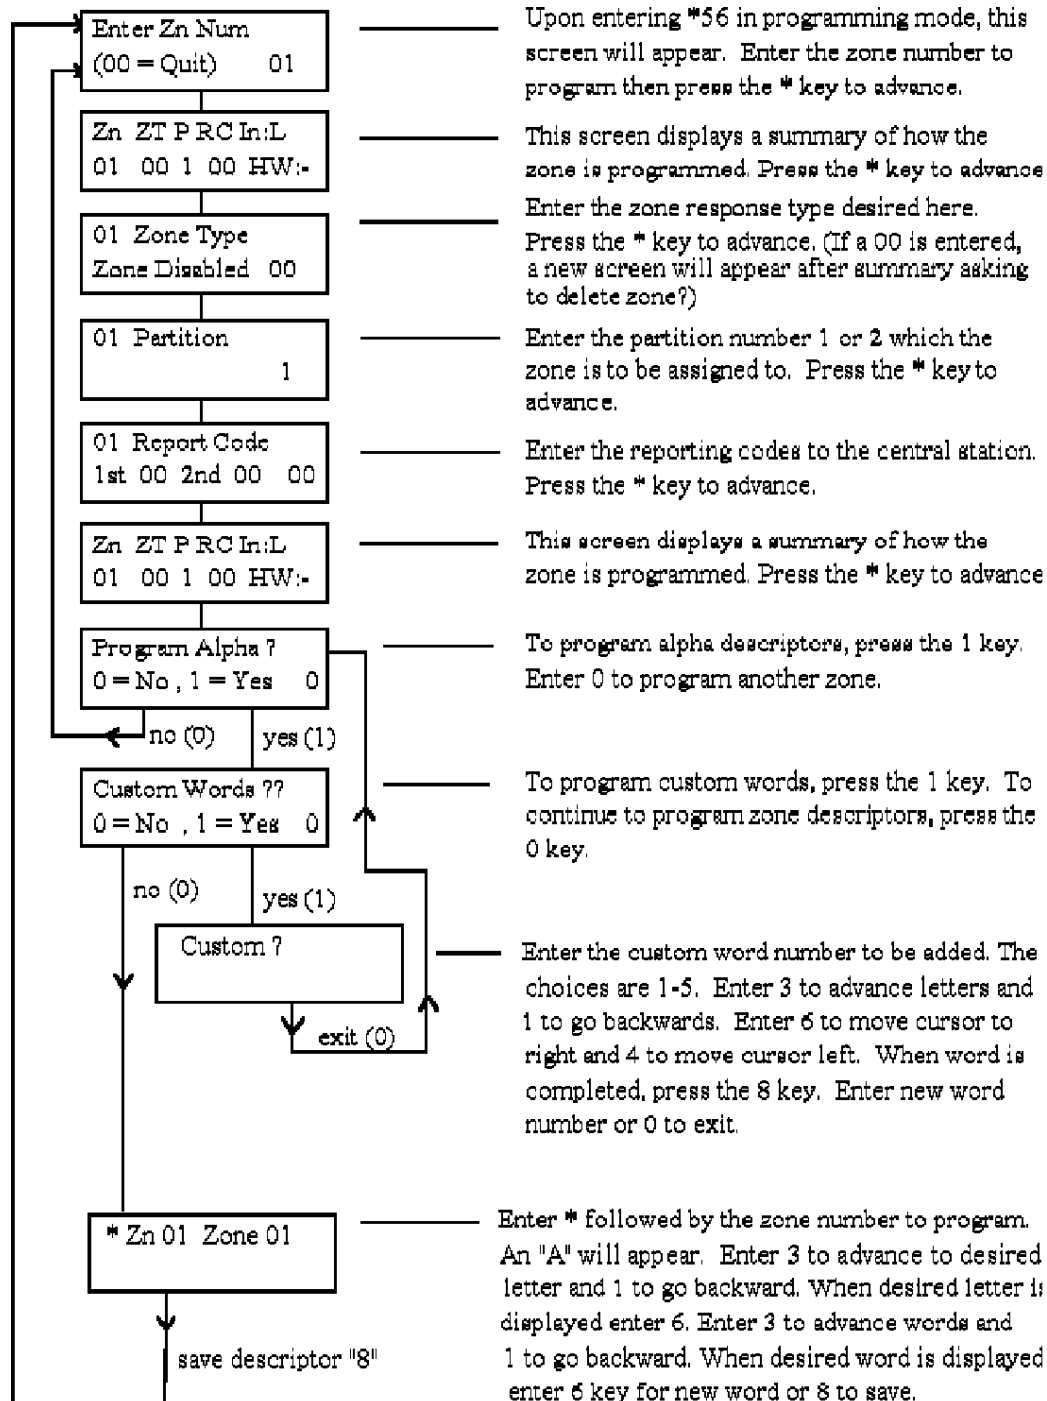


Zone Programming *56 (with 5800 wireless)

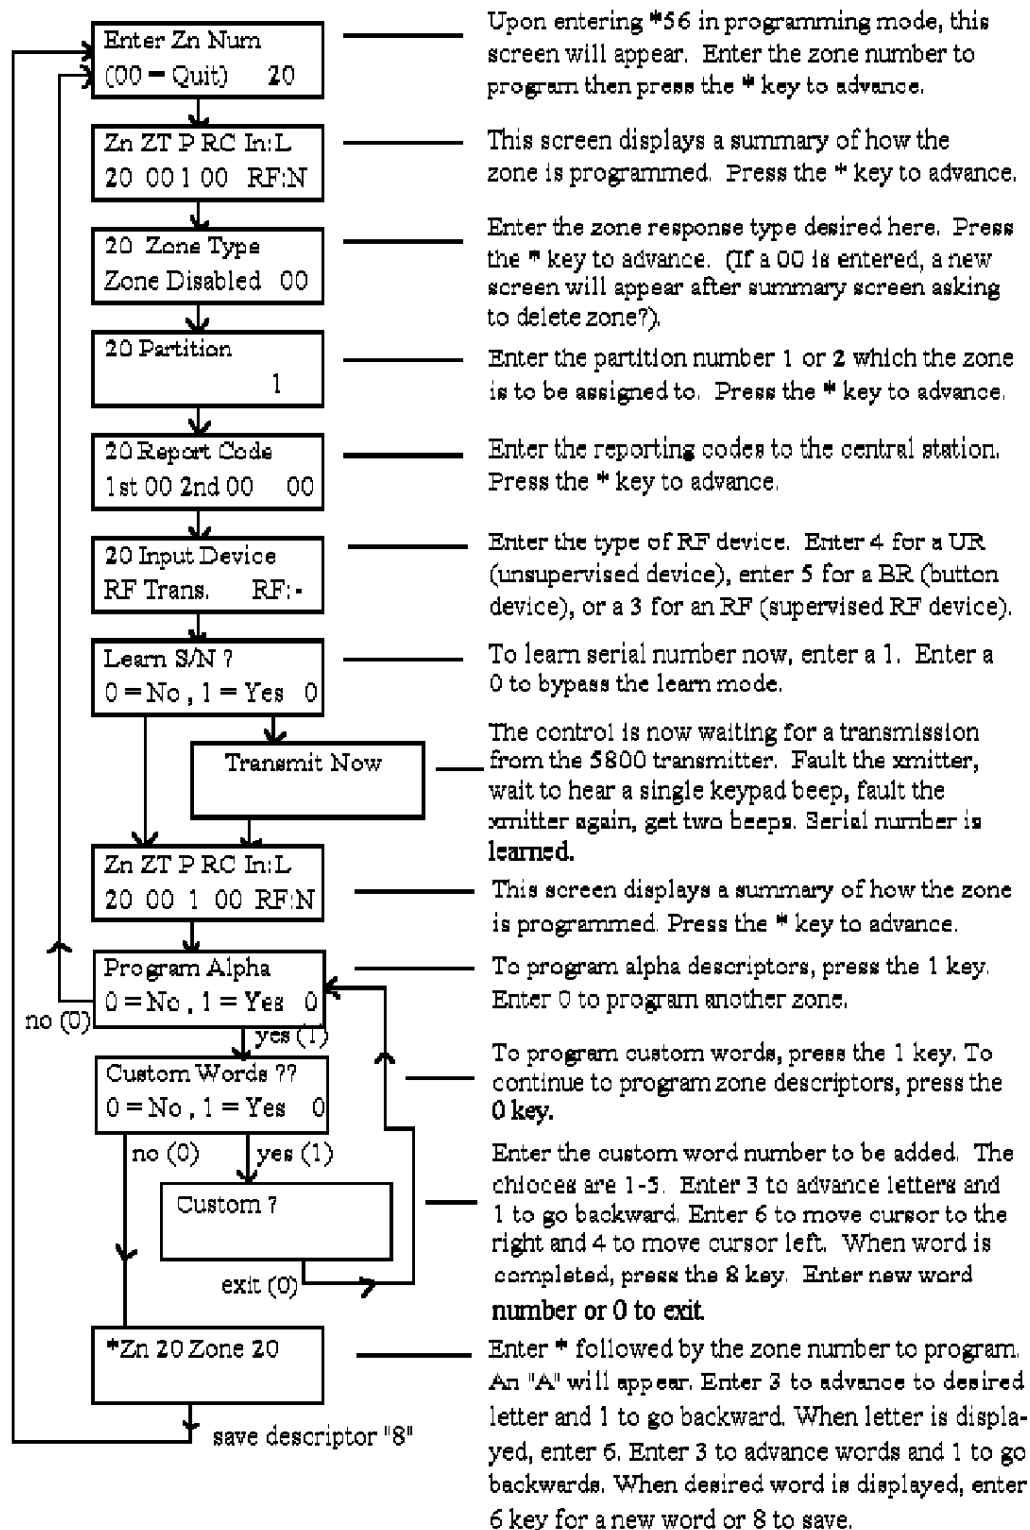

*80 Relay Programming

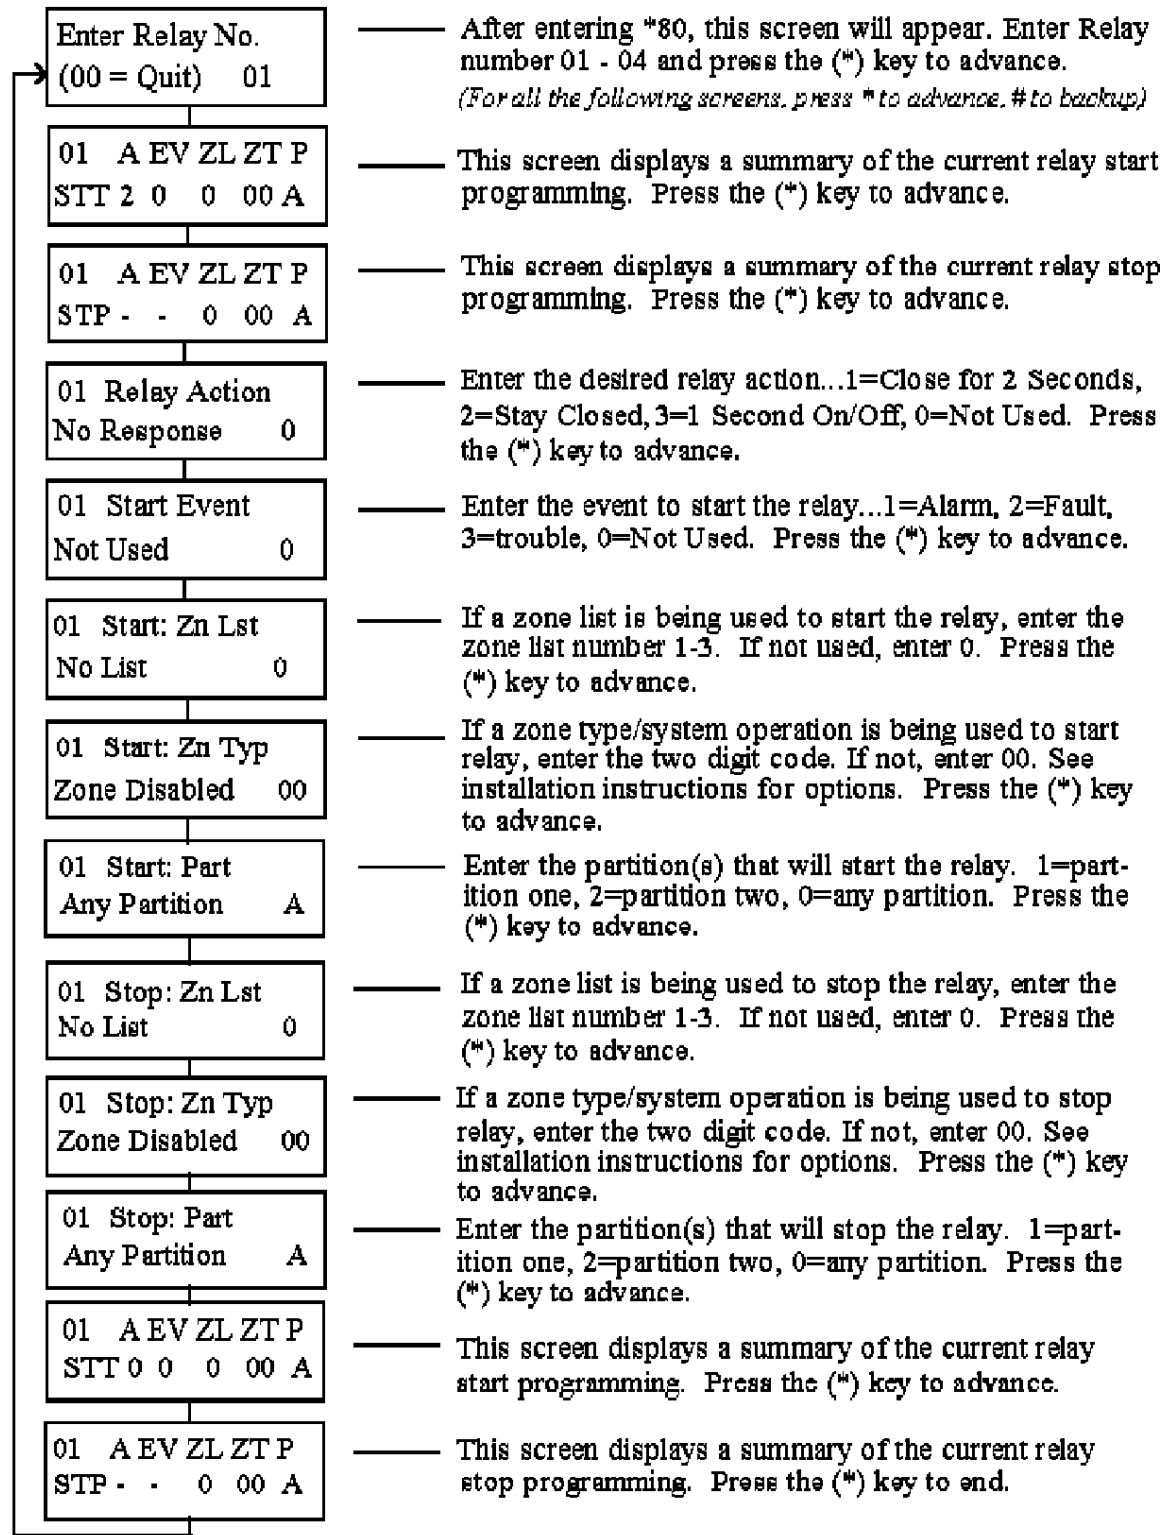


*81 Zone List Programming

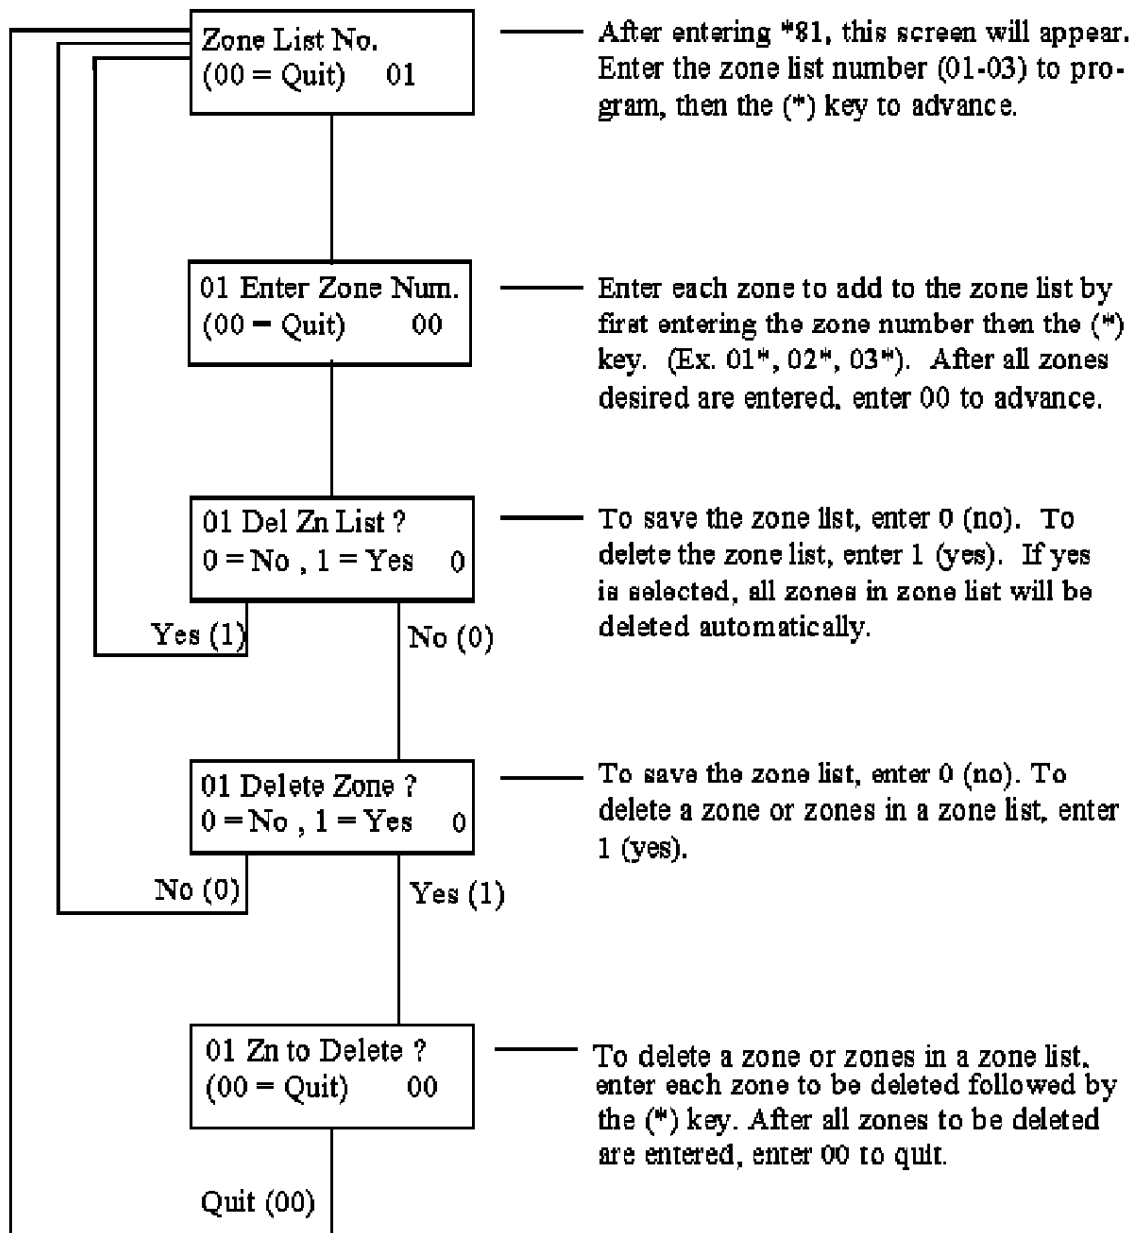

NOTE: A zone lists content can be viewed by entering #81 instead of *81. After entering #81, select the zone list to view, enter the (*) key, then each zone in the list can be viewed by entering the (*) key. When finished, enter 00 to quit.

Alpha Programmming *82

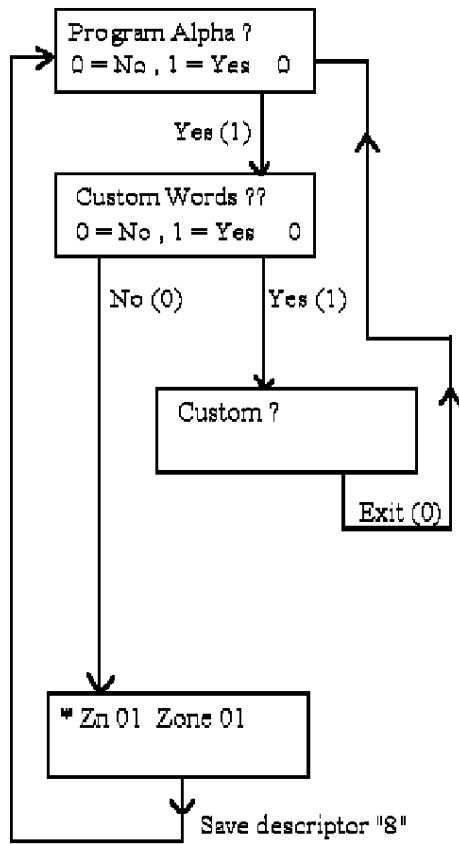

Upon entering *82 in programming mode, this screen will appear.



Menu-Driven Programming Guide
FA150C Control

By Christopher Martin