

RadionicsTM

**D2000 Series Control/Communicators
Program Entry Guide**

Notice

The material and instructions covered in this manual have been carefully checked for accuracy and are presumed to be reliable. However, Radionics, Inc. assumes no responsibility for inaccuracies and reserves the right to modify and revise this manual without notice.

It is our goal at Radionics to always supply accurate and reliable documentation. If a discrepancy is found in this documentation, please mail a photocopy of the corrected material to:

Radionics, Inc.
c/o Technical Communications Department
1800 Abbott Street
Salinas, California 93901

About This Manual

This manual describes the programming parameters available to the D2000 Series Control/Communicators (except D2012/D2012U). This manual follows the organization of the D2212 product handler in the D5200 Programmer.

Each programming section, program item, and its page number is listed in the table of contents on the following pages.

Throughout the rest of this manual, programming prompts are shown in bold italic letters (e.g. ***Phone 1.***)

Use the *Program Record Sheet* (P/N 35113) to record your program entries. Installation instructions can be found in the Installation Manual; the Keypad Diagnostics sheet provides specific diagnostic and testing information; a Security System User's Guide is provided with the keypad.

Other Lettering Conventions used in this manual...

D6500 reports are shown in "typewriter style" letters. For example, AC FAILED indicates the report the panels send to report an AC power failure.

Using this Guide for Keypad Programming

A text keypad is required for keypad programming.

For an explanation of *Keypad Programming*, see page 51 of this manual.

Default Entries and Selections for Keypad Programming appear in shaded areas. Information that is specific to Keypad programming is also shown in shaded areas in this manual.

| | |
|----------------------------------------|------------------------------------------|
| 1. SYSTEM CONFIGURATION.....1 | 2 RAM PHONE..... 16 |
| 1 ACCOUNT NUMBER.....1 | 3 ANSWER ARMED..... 16 |
| 2 SWINGER COUNT1 | 4 ANSWER DISARMED 17 |
| 3 KEWSWITCH1 | 5 ANSWER MACHINE..... 17 |
| 4 CUSTOM IDLE TEXT1.....2 | |
| 5 CUSTOM IDLE TEXT2.....2 | |
| 6 CUSTOM SERVICE TEXT2 | |
| 2. PHONE3 | 6. OPEN/CLOSE 18 |
| 1 DTMF DIALING3 | 1 ENTRY DLY TIME..... 18 |
| 2 PHONE 13 | 2 EXIT DLY TIME 18 |
| 3 PHONE 23 | 3 EXTENDED DLY..... 18 |
| 4 PHONE ROUTING3 | 4 EXIT TONE 19 |
| PHONE ROUTING SET TO <i>No</i>3 | 5 NO DELAY 19 |
| PHONE ROUTING SET TO <i>Yes</i>4 | 6 EXCURSION..... 19 |
| 5 FIRE ROUTE.....4 | STEP OUTSIDE 19 |
| 6 NON-FIRE ROUTE.....4 | EXIT 20 |
| 7 PT TRBL ROUTE4 | |
| 8 RESTORAL ROUTE4 | 7. A, B, C KEYS 21 |
| 9 CLOSING ROUTE4 | 1 A-KEY REPORT 21 |
| 10 OPENING ROUTE4 | 2 A-KEY ALARM OUTPUT..... 21 |
| 11 CANCEL ROUTE.....4 | 3 A-KEY ACK TONE 22 |
| 12 SYS TRBL ROUTE5 | 4 A-KEY TEXT 22 |
| 13 SYS RES ROUTE.....5 | 5 B-KEY ALARM REPORT..... 22 |
| 14 DURESS ROUTE5 | 6 B-KEY OUTPUT 22 |
| 15 TEST ROUTE.....5 | 7 B-KEY ACK TONE 22 |
| | 8 B-KEY TEXT 22 |
| | 9 C-KEY ALARM REPORT..... 22 |
| | 10 C-KEY OUTPUT 22 |
| | 11 C-KEY ACK TONE 22 |
| | 12 C-KEY TEXT 22 |
| 3. REPORTS.....6 | 8. BELL..... 23 |
| 1 O/C RPTS-ALL ON6 | 1 BELL TIME..... 23 |
| 2 O/C RPTS-PART ON.....6 | 2 BELL TEST 23 |
| 3 RESTRICTED O/C6 | 3 SINGLE RING 23 |
| 4 DELAY ALRM RPT7 | 4 ALARM ON 2 FAIL..... 23 |
| 5 CANCEL RPT.....7 | |
| 6 RESTORAL RPTS8 | 9. TEST TIMER 24 |
| 7 AC FAIL BUZZ/RPT.....8 | 1 TEST INTERVAL..... 24 |
| 8 POINT USER FLAG8 | 2 HOURS TO NEXT..... 24 |
| | 3 MINUTES TO NEXT..... 25 |
| | 4 DEFER TEST RPT..... 25 |
| 4. RECEIVER9 | 10. ADDRESS CONFIGURATION..... 26 |
| 1 RCVR FORMAT9 | 1 ADDRESS 1 26 |
| PULSE REPORT GROUP TABLE13 | 2 ADDRESS 2 26 |
| 2 FIRE GROUP13 | 3 ADDRESS 3 26 |
| 3 NON-FIRE GROUP13 | 4 ADDRESS 4 26 |
| 4 PT TRBL GROUP.....13 | 5 ADDRESS 5 26 |
| 5 RESTORAL GROUP13 | 6 ADDRESS 6 26 |
| 6 CLOSING GROUP.....13 | 7 ADDRESS 7 26 |
| 7 OPENING GROUP.....13 | 8 ADDRESS 8 26 |
| 8 CANCEL GROUP14 | |
| 9 SYS TRBL GROUP.....14 | 11. POINT CODES 27 |
| 10 SYS RES GROUP14 | 1 POINT 1 27 |
| 11 DURESS GROUP15 | 2 POINT 2 27 |
| 12 TEST GROUP15 | |
| 5. REMOTE PROGRAMMING16 | |
| 1 RAM PASSCODE.....16 | |

Table of Contents

| | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> 3 POINT 3..... 27 4 POINT 4..... 27 5 POINT 5..... 27 6 POINT 6..... 27 7 TO 24 POINTS 7 TO 24 27 DIGIT 1, POINT TYPE 28 DIGIT 2, ALARM RESPONSE..... 32 DIGIT 3, POINT OPTIONS..... 33 DIGIT 4, DEVICE ADDRESS 34 DIGIT 5, SENSOR LOOP..... 35 SOME RECOMMENDED POINT CODES 37 <p>12. POINT TEXT 39</p> <ul style="list-style-type: none"> 1 TO 24 POINT TEXT..... 39 <p>13. RELAYS 40</p> <ul style="list-style-type: none"> RELAY FUNCTION LOGIC..... 40 1 RELAY 1 LOGIC..... 40 2 RELAY 2 LOGIC..... 40 RELAY FUNCTIONS..... 41 3 RELAY 1 FUNC 1..... 41 4 RELAY 1 FUNC 2..... 41 5 RELAY 2 FUNC 1..... 41 6 RELAY 2 FUNC 2..... 41 RELAY FUNCTION SELECTIONS..... 41 RELAY PARAMETERS, FOR KEYPAD PROGRAMMING ONLY!..... 44 <p>14. USER TEST 45</p> <ul style="list-style-type: none"> 1 USR TST, BELL..... 45 2 USR TST, BATTERY..... 45 3 USR TST, COMM..... 45 <p>15. PASSCODES 46</p> <ul style="list-style-type: none"> 1 INSTLR CODE 46 2 PASSCODE LENGTH 46 3 CODE 8 = DURESS 46 4 PASSCODE RQUIRED..... 47 5 CHANGE PASSCODE..... 47 PASSCODE-# TYPE 48 PASSCODE-#..... 48 <p>16. RF PARAMETERS 49</p> <ul style="list-style-type: none"> 1 SUPERVISION INTERVAL..... 49 | <p>17. PROGRAM LOCK 50</p> <ul style="list-style-type: none"> 1 RETURN TO DEFAULT 50 2 PROGRAM LOCK 50 3 DISABLE SYSTEM 50 <p>KEYPAD PROGRAMMING..... 51</p> <ul style="list-style-type: none"> GETTING STARTED..... 51 VIEW MODE 51 <ul style="list-style-type: none"> WHAT'S VIEW MODE?..... 51 VIEW MODE KEYS..... 51 MODIFY MODE..... 52 <ul style="list-style-type: none"> WHAT'S MODIFY MODE? 52 MODIFY MODE KEYS..... 52 SCROLL LISTS..... 52 YES AND NO ENTRIES..... 53 AN EXAMPLE, ENTERING CUSTOM TEXT 53 <p>KEYPAD PROGRAMMING TIPS..... 54</p> <p>INDEX..... 56</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

1. SYSTEM CONFIGURATION

The *SYSTEM CONFIGURATION* Group contains the **Account Number**, **Swinger Count**, **Keyswitch**, **Custom Idle Text**, and **Custom Service Text** prompts.

1 Account Number

Default: 0000
Selections: 0 to 9, B to F

0000
 0 to 9, B to F

Enter four characters for the **Account Number** to transmit to the receiver. Enter leading zeroes (0) for account numbers less than four digits. For example: enter 0123 for account number 123.

2 Swinger Count

Default: 4
Selections: 1, 2, 3, 4

4
 1, 2, 3, 4

The **Swinger Count** prompt sets the swinger count for the Swinger Bypass point option. When the number of alarms or troubles reaches the swinger count, the system automatically bypasses points programmed for Swinger Bypass. Turning the system Off clears the bypass. If a 24-hour point swinger bypasses while the system is Off, turning the system On (starting exit delay) and then turning it off (pressing clear during exit delay) clears the bypass. Swinger Bypass is a point trouble and will activate the point trouble relay function.

When a point is Swinger Bypassed, the Point Trouble relay function is activated. See Relay Functions, page 41.

SIA recommends the swinger count be set to 1.

Use **Digit 2** of the point code assigns the Swinger Bypass feature to a point.

3 Keyswitch

Default: Momentary
Selections: Easikey, Momentary

0
 1, 0

See the Installation Manual for instructions on connecting a momentary keyswitch to a point. **This panel is not compatible with maintained contact keyswitches.**

Operating the keyswitch (shorting the point) turns the system All On with delays if the system is Off. Any faulted controlled points (point code digit 1 is 6, 7, 8, 9, B, or C) are automatically bypassed.

If the system is All On or Part On, with or without delays, operating the keyswitch (shorting the point) turns the system Off.

Leave the **Keyswitch** prompt set to Momentary if you are not using a keyswitch on your system.

Setting the **Keyswitch** prompt to Easikey allows a properly connected Easikey system to disarm the system. It can not be used to arm the system. If the system is All On or Part On, with or without delays, presenting the electronic key to the Easikey reader (the Easikey shorts the point) turns the system off. If the system is Off, presenting the electronic key to the Easikey reader (the Easikey shorts the point) has no effect.

4 Custom Idle Text1

5 Custom Idle Text2

Default: RADIONICS

Selections: A to Z, 0 to 9,
! # , . - / : < >

RADIONICS
D2000 Series

A to Z, 0 to 9,
! # ' , - / : < >

The system displays the two lines of custom text you enter here at all text keypads whenever the system is off and idle. Each line contains a maximum of 16 characters.

Up to 15 Seconds for Text to Load: It may take up to 15 seconds for the custom text you program here to appear in all text keypads connected to the system.

6 Custom Service Text

Default: Blank

Selections: A to Z, 0 to 9,
! # , . - / : < >

Blank

A to Z, 0 to 9,
! # ' , - / : < >

The system displays the text you enter here in the second line of the keypad display when ever the first line reads, "CALL FOR SERVICE." You can enter the phone number for your service department as the Custom Service Text.

Up to 15 Seconds for Text to Load: It may take up to 15 seconds for the custom text you program here to appear in all text keypads connected to the system.

2. PHONE

The *PHONE* Group contains prompts that configure the system for dialing and sending reports on the telephone line.

1 *DTMF Dialing*

| | | |
|--------------------|----------------|------------|
| Default: | Yes | 1 |
| Selections: | Yes, No | 1,0 |

When ***DTMF Dialing*** is set to Yes, the panel dials in the DTMF (Dual Tone Multi-Frequency) format for all dialing attempts.

When ***DTMF Dialing*** is set to No, the panel pulse dials for all dialing attempts.

2 *Phone 1*

3 *Phone 2*

| | | |
|--------------------|----------------------------------|----------------------------------|
| Default: | Blank | Blank |
| Selections: | 0 to 9, C, D, #, *, Blank | 0 to 9, C, D, #, *, Blank |

Leaving both Phone 1 and Phone 2 'Blank' creates a local system with no reports transmitted.

Enter up to 19 characters for each phone number. ***The # and * characters only work when the panel is DTMF dialing.*** The panel dials these characters just as if you pressed them on a telephone keypad. Enter **C** for a three-second delay. Enter **D** for a seven-second dial tone wait.

If you program a # or * to disable call waiting, warn your customer that eliminating their call waiting service requires a change to their security system.

4 *Phone Routing*

| | | |
|--------------------|----------------|-------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

Phone Routing set to No

When this prompt is set to the default, No, the panel dials as shown in the table below. The panel only sends reports to Phone 2 after two failed attempts sending to Phone 1.

| <u>Attempt</u> | <u>Phone Number</u> | <u>Attempt</u> | <u>Phone Number</u> |
|----------------|---------------------|----------------|--------------------------|
| 1 | Phone Number 1 | 6 | Phone Number 2 |
| 2 | Phone Number 1 | 7 | Phone Number 1 |
| 3 | Phone Number 2 | 8 | Phone Number 2 |
| 4 | Phone Number 2 | 9 | Phone Number 1 |
| 5 | Phone Number 1 | 10 | Phone Number 2 |
| | | 11 | Communication Fail Event |

If ***Phone 2*** is left blank, five attempts are made to ***Phone 1***.

If you set the Phone Routing prompt to No, skip to the REPORTS Group (page 6). The prompts in the remainder of this group set the routing groups.

2. PHONE Group

Phone Routing set to Yes

Set this prompt to Yes to route reports to Phone 1 or Phone 2. Reports are routed by group. A description of each routing group follows. The panel makes five attempts to each routing destination.

Reports routed to Phone 1 have a higher priority than reports routed to Phone 2. When the panel has reports to send to Phone 1 and Phone 2 it sends all reports for Phone 1, then starts sending the reports for Phone 2. If the panel fails to send an event to Phone 1 it creates a Communication Fail Event for Phone 1 and begins the Phone 2 reports.

If the panel is working on Phone 2 reports and there is a new event for Phone 1, the panel continues with the Phone 2 reports until the Phone 2 buffer is empty, and then goes to the Phone 1 event.

| Route Group | Default / Selections | | Reports |
|-------------------------|------------------------------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| 5 Fire Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Fire alarm reports from points or ABC keys. |
| 6 Non-Fire Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Non-Fire alarm reports from points or ABC keys. Point tamper alarms. Point missing alarms. |
| 7 Pt Trbl Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Trouble, missing, missing RF, low battery RF, bypass, or swinger bypass reports from, Fire and Non-Fire points combined. Point tamper troubles. |
| 8 Restoral Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Restoral reports from Fire and Non-Fire points combined. RF battery restorals. Point tamper restorals. |
| 9 Closing Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Closing reports. |
| 10 Opening Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Opening reports. |
| 11 Cancel Route | Local Phone 1 Only Phone 2 Only, Both | 0 1 2 3 | Cancel reports. |

2. PHONE Group

| Route | Default / Selections | Reports |
|--------------------------|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12 Sys Trbl Route | Local Phone 1 Only Phone 2 Only, Both | <p>0 RAM Access Fail reports (unsuccessful attempt to connect a remote programmer).</p> <p>1</p> <p>2</p> <p>3 Comm Fail reports (communication failure event) for Phone 1 and Phone 2.</p> <p>Watchdog reset reports (system automatically reset).</p> <p>Battery Missing reports.</p> <p>Battery Low reports.</p> <p>AC Fail reports.</p> <p>RF Receiver Trouble (Address 7, Address 8)</p> <p>RF Receiver Tamper (Address 7, Address 8)</p> |
| 13 Sys Res Route | Local Phone 1 Only Phone 2 Only, Both | <p>0 RAM Access OK reports (successful connection to a remote programmer).</p> <p>1</p> <p>2</p> <p>3 Comm Restoral reports (successful communication after a communication failure event).</p> <p>Re-Boot reports (panel reset with the Stand-by Switch or a remote programmer).</p> <p>Battery Restoral reports (missing or low battery restored).</p> <p>AC Restore reports.</p> <p>RF Receiver Trouble Restoral (Address 7, Address 8)</p> <p>RF Receiver Tamper Restoral (Address 7, Address 8)</p> |
| 14 Duress Route | Local Phone 1 Only Phone 2 Only, Both | <p>0 Duress reports.</p> <p>1</p> <p>2 User Tamper (six attempts with bad passcode).</p> <p>3</p> |
| 15 Test Route | Local Phone 1 Only Phone 2 Only, Both | <p>0 Test reports.</p> <p>1</p> <p>2 Service Start (Stand-by Pin locked down, Installer code entered.)</p> <p>3</p> <p>Service Stop (Standby-by Pin unlocked. The panel only sends a Service Stop report if a Service Start was transmitted).</p> |

3. REPORTS

1 *O/C Rpts-All On*

Default: No
Selections: Yes, No

0
1, 0

If you set the ***O/C Rpts-All On*** prompt to Yes, the system transmits closing reports to the receiver when users turn the system All On. If any points are bypassed, bypass reports are also sent. The panel transmits opening reports when users turn the system off from the All On state.

If the user turns the system Off after an alarm, the system attaches an **AFTER ALARM** message to the **Modem II** opening report. See *RECEIVER Group*, page 9 for a description of the Modem II report format.

If you set the ***O/C Rpts-All On*** prompt to No, the system does not send closing reports to the receiver when users turn the system All On.

2 *O/C Rpts-Part On*

Default: No
Selections: Yes, No

0
1, 0

If you set the ***O/C Rpts-Part On*** prompt to Yes, the system transmits closing reports to the receiver when users turn the system Part On with the 0 (zero) key. If any points are bypassed, bypass reports are also sent. It transmits opening reports when users turn the system Off from the Part On state.

If the user turns the system Off after an alarm, the system attaches an **AFTER ALARM** message to the **Modem II** opening report. See *RECEIVER Group*, page 9 for a description of the Modem II report format.

If you set the ***O/C Rpts-Part On*** prompt to No, the system does not send closing reports to the receiver when users turn the system Part On with the 0 (zero) key.

3 *Restricted O/C*

Default: No
Selections: Yes, No

0
1, 0

Set the ***Restricted O/C*** prompt to Yes and the system only sends opening reports when the user turns the system Off after an alarm. The system attaches an **AFTER ALARM** message to the **Modem II** opening report. See *RECEIVER Group*, page 9 for a description of the Modem II report format.

With the ***Restricted O/C*** prompt set to Yes the system only sends closing reports when a point is bypassed.

Set the ***Restricted O/C*** prompt to No to send unrestricted opening and closing reports.

4 Delay Alrm Rpt

Default: 0
Selections: 0 to 255

0
 0 to 255

Delay Alrm Rpt helps prevent false alarm reports. Reporting characteristics for individual points are programmed in digit two of the **Point Code**.

Special Voice Verification function when you set the Delay Alrm Rpt prompt to 255: See 255 = Voice Verification below.

If a point with 2, 3, 7, or 8 in **Digit 2** creates an alarm event, the system waits the number of seconds you entered at the **Delay Alrm Rpt** prompt before transmitting reports to the receiver.

If a user enters a passcode to silence an alarm or turns the system off before **Delay Alrm Rpt** expires:

- No alarm, cancel, or restoral reports are sent to the receiver for these points.
- All other reports, including alarm reports for points programmed with a 1, 4, 5, 6, or 9 in **Digit 2** are sent. If programmed for cancel reports, a cancel report is sent for points with a 1, 4, 5, 6, or 9 for **Digit 2**.
- 'Missing' alarms are sent as 'missing' troubles.
- 'Tamper' alarms are sent as 'tamper' troubles.

If no passcode is entered before **Delay Alrm Rpt** expires all reports are sent.

If the system is On with No Delay, alarm output at terminals 4 and 5 follows the alarm delay programmed here. The alarm sounds at the keypad without delay.

When mixing Delay Alarm points (**Digit 2** set for 7 or 8), with No Delay Alarm points (**Digit 2** set for 5, 6, or 9), the alarm output follows the programmed alarm delay if Delay Alarm points are faulted first.

255 = Voice Verification: Only set the Delay Alrm Rpt prompt to 255 when using an optional 2-way Voice Verification Module. When the Delay Alrm Rpt is set to 255, an alarm event on a point with 2, 3, 7, or 8 in Digit 2, **sends** an alarm report and begins the 2-way voice verification process. Do not set the Delay Alrm Rpt to 255 if a Voice Verification Module is not connected to the panel as unexpected panel operation will result.

Duress reports and A, B, C Key reports are affected by Alarm Report Delay. These reports are sent immediately in all cases.

SIA (Security Industry Association) recommends the Delay Alarm Report feature be enabled with the delay set to 15 seconds. Enter 15 at this prompt to comply with the SIA recommendation.

Zero (0) disables the **Delay Alrm Rpt** feature for all points.

5 Cancel Rpt

Default: Yes
Selections: Yes, No

1
 1, 0

Set the **Cancel Rpt** prompt to Yes to enable cancel reports. If a user turns the system off after an alarm, but before bell time expires, the alarm report is followed by a cancel report.

If the user turns the system Off before **Delay Alrm Rpt** time expires the panel sends no alarm, cancel, or restoral report for points programmed with a 2, 3, 7, or 8 in digit 2 of the point code.

If you set the **Cancel Rpt** prompt to No the panel does not send cancel reports.

6 Restoral Rpts

| | | |
|--------------------|-----------------------|----------------|
| Default: | Yes | 1 |
| Selections: | No, Yes, Delay | 0, 1, 2 |

Set the **Restoral Rpts** prompt to Yes to send restoral reports to the receiver for **all** points. The system sends restoral reports when points return to normal (not faulted) after an alarm or trouble report.

Set the **Restoral Rpts** prompt to No to prevent the system from sending restoral reports for any point.

Set the **Restoral Rpts** prompt to Delay to delay sending restoral reports until bell time expires.

7 AC Fail Buzz/Rpt

| | | |
|--------------------|-------------------------------|----------|
| Default: | No Buzz, No Report | 0 |
| Selections: | No Buzz, No Report | 0 |
| | Buzz, No Report | 1 |
| | Buzz, Report | 2 |
| | Buzz, Tag-Along Rpt | 3 |
| | No Buzz, Report | 4 |
| | No Buzz, Tag-Along Rpt | 5 |

The panel monitors AC power. When AC power to terminals 1 and 2 is interrupted, the panel waits 60 seconds. If AC power is not restored within 60 seconds, it provides the response programmed in **AC Fail Buzz/Rpt**.

When set to **No Buzz, No Report** the system only winks the OK light at the keypad to indicate a system trouble. It does not sound the trouble tone or send a report to the receiver.

When set to **Buzz, No Report** the system winks the OK light at the keypad to indicate a system trouble and sounds the trouble tone. No report is sent to the receiver.

When set to **Buzz, Report** the system winks the OK light at the keypad, sounds the trouble tone, and sends an AC Fail report to the receiver.

When set to **Buzz, Tag-Along Rpt** the system winks the OK light and sounds the trouble tone at the keypad after 60 seconds. It sends an AC Fail report to the receiver as a tag along with all reports sent to the receiver until AC restores.

When set to **No Buzz, Report** the system winks the OK light at the keypad and sends an AC Fail report to the receiver.

When set to **No Buzz, Tag-Along Rpt** the system winks the OK light. It sends an AC Fail report to the receiver as a tag along with all reports sent to the receiver until AC restores.

8 Point User Flag

| | | |
|--------------------|----------------|-------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

Set this prompt to Yes to send a flag with each Modem II report that tells the D6500 to convert point numbers to Radionics' D8112 style ZONEX format, and User ID numbers to D8112 type COMEX format.

4. RECEIVER

1 Rcvr Format

| | | |
|--------------------|---------------------|-------------|
| Default: | Modem | 1 |
| Selections: | Modem, Pulse | 1, 0 |

Set **Rcvr Format** to Modem to transmit reports in Radionics Modem II format with its advanced reporting capabilities. **You must have firmware revision 8.00 or greater installed in your D6500 receiver.** The **Modem II Reports Chart** below shows reports available.

The D6500 line card ack tone table must contain "Modem II for D9112." See the *6500: Line Program Entry Guide*.

Set **Rcvr Format** to Pulse to transmit in 4x2 Pulse format. Be sure to program codes for each Report Group. See the **Pulse Report Group Table**, page 13.

Modem II Reports Chart

| Modem II Report | Description |
|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AC FAILURE | No AC power to system. Panel is running on battery. |
| AC RESTORE | AC Power is restored to normal. |
| ALARM REPORT POINT 001 (-099) | Alarm report from points 1 to 24 or from an A, B, C, key. See <i>A, B, C KEYS</i> for instructions on setting reports from the keys. |
| ALARM REPORT RECENT CLOSING ID=001 POINT=001(24) | If there is an alarm within two minutes of a closing event, the system sends an ALARM RECENT CLOSE report. |
| ALARM CROSS POINT 001 (-099) | Alarm report from points 1 to 24 with point code for Cross or Partner Point. The ALARM RECENT CLOSE message overrides the ALARM CROSS POINT message. The ALARM EXIT ERROR message does not apply to Cross, Partner, Double Knock, or Alarm Verification Points |
| BATTERY LOW | System battery is low. |
| BATTERY MISSING | System battery is disconnected. Battery must be missing for 60 seconds. |
| BATTERY RESTORE | Missing or low battery is restored. |
| CANCEL REPORT | Cancel report from keyswitch. |
| CANCEL REPORT ID 001 (-008) | Cancel report with user ID for users 1 to 8. |
| CLOSING REPORT | Closing report when passcode is not used. See the Passcode Required prompt in the <i>PASSCODES Group</i> , page 46. Using a keyswitch or a remote programmer also sends this closing report with no user ID. |
| CLOSING REPORT ID 001 (-008) | Closing report with user ID for users 1 to 8. |

4. RECEIVER Group

| Modem II Report | Description |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COMM FAIL PHONE (1-2) | Communication failure event. See Phone 1, Phone 2 in the <i>PHONE Group</i> , page 3. |
| COMM RESTORAL PHONE (1-2) | Successful communication after a communication failure event. See Phone 1, Phone 2 in the <i>PHONE Group</i> , page 3. |
| DURESS ID 008 | Passcode 8 used to turn the system On, turn the system Off, or to silence an alarm. See the Code 8 = Duress prompt in the <i>PASSCODES Group</i> , page 46. |
| EXIT ERROR 001 (-024) | When a point is faulted at the end of exit delay it generates an Exit Alarm. Exit alarm report from points 1 to 24. |
| FIRE ALARM POINT 001 (-099) | Fire Alarm report from points 1 to 24. |
| FIRE ALARM CROSS POINT 001 (-024) | Cross Point Fire Alarm report from points 1 to 24. |
| MISSING ALARM POINT 001 (-024) | Missing non-fire controlled point, point is On (armed). Alarm response locally. |
| MISSING TROUBLE POINT 001 (-024) | Missing non-fire controlled point, point is Off (disarmed), or 24-hr non-fire point. Trouble response locally. |
| OPENING REPORT | Turning the system Off with a keyswitch or a remote programmer sends this opening report with no User ID. |
| OPENING REPORT ID 001 (-008) | Opening report with User ID for users 1 to 8. |
| OPEN FROM ALARM | Turning the system Off after an alarm with a keyswitch point or a remote programmer sends this opening report with no User ID. |
| OPEN FROM ALARM ID 001 (-008) | Opening report after an alarm with User ID for users 1 to 8. |
| PERM INST ARMED | Remote programmer used to turn the system Part On with No Delays, or user turned the system Part On with No Delays and no passcode is required. See the Passcode Rquired prompt in the <i>PASSCODES Group</i> , page 46. |
| PERM INST ARMED ID 001 (-008) | User with ID shown (1 to 8) turned the system Part On with No Delays. |
| PERM DLAY ARMED | Remote programmer used to turn the system Part On (with Delays), or user turned the system Part On with Delays and no passcode is required. See the Passcode Rquired prompt in the <i>PASSCODES Group</i> , page 46. |
| PERM DLAY ARMED ID 001 (-008) | User with ID shown (1 to 8) turned the system Part On (with Delays). |
| POINT BYPASS POINT 001 (-024) | Point 1 to 24 bypassed. Points can be bypassed from the keypad or from a remote programmer. Bypass reports are only sent when Opening and Closing reports are enabled in the <i>OPEN/CLOSE Group</i> , page 18. |
| RAM ACCESS OK | Normal remote programmer session termination. |

4. RECEIVER Group


| Modem II Report | Description |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RAM ACCESS FAIL | Remote programmer made connection with panel, but passcode was incorrect, or call was not terminated with a Good-bye or Reset-Bye. |
| RESTORAL REPORT POINT 001 (-024) | Restoral report from points 1 to 24. |
| RE-BOOT | Panel reset with the Standby Pin (See <i>Installation Manual</i>) or a remote programmer. |
| RF BATTERY LOW POINT 001 (-024) | Battery is low in RF Sensor, keypad, or arming device. |
| RF BATT RESTORE POINT 001 (-024) | Battery is restored in RF Sensor, keypad, or arming device. |
| RF Rcvr Tamper SDI 7 (8) | Enclosure tamper from premises RF receiver (D208RF, D216RF). SDI number is the device address (7 or 8). See <i>ADDRESS CONFIGURATION</i> , page 26. |
| RF Rcvr Tamper Restoral SDI 7 (8) | Enclosure tamper restoral from premises RF receiver (D208RF, D216RF). SDI number is the device address (7 or 8). See <i>ADDRESS CONFIGURATION</i> , page 26. |
| RF Rcvr Trouble Device 7 (8) | Trouble from premises RF receiver (D208RF, D216RF) SDI number is the device address (7 or 8). See <i>ADDRESS CONFIGURATION</i> , page 26. |
| RF Rcvr Trbl Restoral Device 7 (8) | Restoral from premises RF receiver (D208RF, D216RF) SDI number is the device address (7 or 8). See <i>ADDRESS CONFIGURATION</i> , page 26. |
| RF TAMPER TROUBLE | Tamper RF point, controlled point, system Off. |
| RF TAMPER RESTORAL | Tamper restoral, RF point. |
| SERVICE START | Installer mode entered (Stand-by locked down, Installer passcode entered). |
| SERVICE STOP | Installer mode exited. |
| SWINGER BYPASS POINT 001 (-024) | Point 1 to 24 bypassed automatically by the system after four alarms or troubles in one armed or disarmed period. You can program the swinger bypass feature to activate after less than four alarms or troubles. See Swinger Count , page 1. Use the point code to program this feature by point. See the <i>POINT CODES Group</i> , page 27. |
| TEST REPORT | Automatic test timer report. |
| TROUBLE REPORT POINT 001 (-024) | Trouble on points 1 to 24, Fire and Non-Fire combined. |
| USR CODE TAMPER | This report transmitted after six attempts to enter an invalid passcode. |
| WATCHDOG RESET | System automatically reset. Call Radionics if reports persist. |

If you choose Modem format, skip to the REMOTE PROGRAMMING Group, (page 16). The prompts in the remainder of the RECEIVER Group have no meaning for the Modem format.

Pulse Report Groups

If you select the pulse format you need to set the report code for each report group. Pulse 4x2 reports consist of a four-digit account number, a one-digit report group code, and a one-digit point or User ID number.

For example: a panel with the **Account Number** prompt set to 1213, the **Rcvr Format** prompt set to pulse, the **Fire Group** prompt set to 3, and point 1 programmed as a fire point would send the following report for an alarm on Point 1.

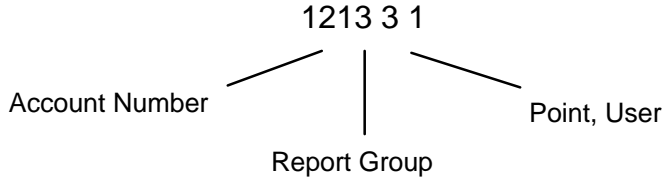

The pulse format allows for only one digit in the Point, User position. If you install more than eight points and report in pulse format, the panel combines reports as shown in the table below.

| | | | | | | | | |
|---------------------------------------|----|----|----|----|----|----|----|----|
| Point Number reported in Pulse Format | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Point Number displayed at keypad | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |

Use the Pulse Report Group Tables on the next three pages to designate Report Group codes for this installation.

Warning! *Do not duplicate report group codes. You will not be able to distinguish reports from groups with duplicated codes.*

Pulse Report Group Table

The table below shows the Report Group prompts. There are more Report Group prompts on the next two pages.

The expanded reports available in the Modem II format are not available in the pulse format.

| Report Group | Default / Selections | Point, User Number | Description |
|-------------------------|---------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 Fire Group | 0 0 - 9, B - F | 1 to 8 9 or 0 | Fire alarm from points 1 to 24. Fire alarm from key A, B, or C. See <i>A,B,C KEYS Group</i> . There is no pulse format versions of the Modem II <code>ALARM CROSS POINT</code> report. The Cross Point feature creates two point alarms. See the <i>POINT CODES Group</i> , page 27. |
| 3 Non-Fire Group | 0 0 - 9, B - F | 1 to 8 9 or 0 | Non-Fire alarm from points 1 to 24. Non-Fire alarm from key A, B, or C. See <i>A,B,C KEYS Group</i> . There are no pulse format versions of the Modem II <code>ALARM RECENT CLOSE</code> , <code>ALARM CROSS POINT</code> , or <code>EXIT ALARM</code> reports. All occur as <code>ALARM</code> reports. The Cross Point feature creates two point alarms. See the <i>POINT CODES Group</i> , page 27. |
| 4 Pt Trbl Group | 0 0 - 9, B - F | 1 to 8 | Trouble, missing, bypass, or swinger bypass reports from, Fire and Non-Fire points combined. Multiple trouble conditions may create duplicate trouble reports. For example, a point could send a trouble for an open sensor loop, then a trouble for missing. |
| 5 Restoral Group | 0 0 - 9, B - F | 1 to 8 | Restoral on points 1 to 24, Fire and Non-Fire combined. |
| 6 Closing Group | 0 0 - 9, B - F | 0 1 to 8 | Closing report when passcode not required to turn system on (see <i>Passcode Required</i> prompt, page 47), or keyswitch is used. Closing report with User ID for users 1 to 8. |
| 7 Opening Group | 0 0 - 9, B - F | 0 1 to 8 | Opening report when keyswitch is used, or Part On no delay, or Part On with delay. Opening report with User ID for users 1 to 8. |

4. RECEIVER Group

| Report Group | Default / Selections | Point, User Number | Description |
|-------------------------|-------------------------|--------------------|----------------------------------------------------------------------------------------------------|
| 8 Cancel Group | 0 0 - 9, B - F | 0 | Cancel report when keyswitch is used. |
| | | 1 to 8 | Cancel report with User ID for users 1 to 8. |
| 9 Sys Trbl Group | 0 0 - 9, B - F | 1 | Reports an unsuccessful attempt to connect a remote programmer. |
| | | 2 | Not used. |
| | | 3 | The system automatically reset. Call Radionics if reports persist. |
| | | 4 | Not used. |
| | | 5 | Not used. |
| | | 6 | Reports battery is missing. |
| | | 7 | Reports battery is low. |
| | | 8 | No AC power to system. Panel is running on battery. |
| | | 9 | Communication failure event for Phone 1. |
| | | B | Communication failure event for Phone 2. |
| | | C | RF Tamper (points or receiver). |
| | | D | RF Low Battery. |
| | | E | RF Receiver 7 Trouble. |
| F | RF Receiver 8 Trouble. | | |
| 10 Sys Res Group | 0 0 - 9, B - F | 1 | Successful connection to a remote programmer. |
| | | 2 | Not Used. |
| | | 3 | Panel reset with the Stand-By Switch (see the <i>Installation Manual</i>) or a remote programmer. |
| | | | Not used. |
| | | 4 | Not used. |
| | | 5 | Not used. |
| | | 6 | Reports missing or low battery restored. |
| | | 7 | AC power is restored. |
| | | 8 | Communication restoral for Phone 1. |
| | | 9 | Communication restoral for Phone 2 |
| | | B | RF Tamper Restore (points or receiver). |
| | | C | RF Battery Restore. |
| | | D | RF Receiver 7 Restoral. |
| E | RF Receiver 8 Restoral. | | |
| F | | | |

4. RECEIVER Group

| Report Group | Default / Selections | Point, User Number | Description |
|------------------------|---------------------------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11 Duress Group | 0 0 - 9, B - F | 1 to 3 4 5 7,8 | Not used. This report transmitted after six attempts to enter an invalid passcode. Duress passcode entered at keypad. See Code 8 = Duress. Not used. |
| 12 Test Group | 0 0 - 9, B - F | 1 to 5 6 7 8 | Not used. Service Stop. Service Start. Test Report. |

5. REMOTE PROGRAMMING

Use the prompts in this group to configure your system for programming with a Radionics remote programmer.

1 RAM Passcode

Default: 999999
Selections: 0 to 9, A to F

999999
 0 to 9, A to F

Six characters required. Remote programmers send this code to the panel to gain access to the panel.

2 RAM Phone

Default: Blank
Selections: 0 to 9, C, D, #, *, Blank

Blank
 0 to 9, C, D, #, *, Blank

Enter up to 19 characters for the panel to dial to reach a remote programmer. The # and * characters are only dialed when the panel is programmed for DTMF dialing. See *DTMF Dialing*, page 3. The panel dials these characters just as if you pressed them on a telephone keypad.

If you program a # or * to disable call waiting, warn your customer that canceling Call Waiting service will require a change to their security system.

C produces a three-second dial delay.

D produces a seven-second dial tone wait. If the panel detects dial tone before the seven-second delay expires, it continues dialing immediately.

Remote Programming initiated from the keypad (Key 2)

If **RAM Phone** is blank – After you press the 2-Key, the panel seizes the phone line and waits for the remote programmer handshake.

If **RAM Phone** is programmed with a phone number – After you press the 2-Key, the panel seizes the phone line, dials the **RAM Phone** number and waits for the remote programmer handshake.

3 Answer Armed

Default: 0
Selections: 0 to 15

0
 0 to 15

Set the number of rings you would like the panel to wait before seizing the phone line for a remote programming session when the system is All On (armed).

The panel will not seize the phone line when the system is All On (armed) if this prompt is set to 0 (zero).

When **Answer Machine** is programmed Yes, the entry in **Answer Armed** has no effect on the panel's operation.

4 Answer Disarmed

Default: 0
Selections: 0 to 15

0
 0 to 15

Set the number of rings you would like the panel to wait before seizing the phone line for a remote programming session when the system is Off (disarmed), Part On, or On with no delay.

If this prompt is set to 0 (zero), the panel will not seize the phone line when the system is Off (disarmed), Part On, or On with no delay.

When **Answer Machine** is programmed Yes, the entry in **Answer Disarmed** has no affect on the panel's operation.

5 Answer Machine

Default: No
Selections: Yes, No

0
 1, 0

Set this prompt to Yes to enable the answering machine bypass feature.

When **Answer Machine** is programmed Yes, you must set the answering machine to pick up the phone on four or more rings. This feature does not work if the answering machine picks up the phone after one ring.

When **Answer Machine** is programmed Yes, the panel picks up the phone for a remote programming session if it detects the following events in order:

| Events at the Panel | What you do from the Remote Programmer |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. 2 rings. | Dial the panel phone number. Listen for two rings. Hang up. |
| 2. 30 seconds with no rings. | Wait 30 seconds. |
| 3. 2 rings. | Re-dial the panel phone number. Listen for two rings. Hang up. |
| 4. 30 seconds with no rings. | Wait 30 seconds. |
| 5. Panel picks up on first ring. | Re-dial the panel phone number. When the panel picks up the phone, begin remote programming. If you are using a text keypad "SYSTEM PROGRAM, USING PHONE LINE," appears in the keypad display. |

6. OPEN/CLOSE

Use the prompts in this group to set entry and exit delays and other opening/closing options.

1 Entry Dly Time

Default: 30
Selections: 0 to 255

30
0 to 255

Entry delay is the time the system allows users to turn the system off. If the user fails to turn off the system before entry delay expires an alarm event occurs. Users must enter through a point programmed for entry delay to start the entry delay timer. All Controlled points are delayed once the timer starts. See *POINT CODES* page 27.

2 Exit Dly Time

Default: 60
Selections: 0 to 255

60
0 to 255

Exit delay is the time the system allows users to exit the premises. All Controlled points are delayed once the timer starts. See *POINT CODES* page 27.

Exiting through a protected point or moving through a protected area after exit delay expires causes an alarm event to occur. The system sounds three long tones at the keypads at the end of exit delay.

3 Extended Dly

Default: 120
Selections: 0 to 255

120
0 to 255

Use the Extended Delay for systems requiring extended entry and exit delays for some points. For example, you could use this feature to allow system users to enter and exit through an overhead garage door.

The system uses the Extended Delay for controlled points programmed with B or C for digit one of the point code. If a user starts exit delay and then faults an Extended Point (opens the garage door), the system switches from Exit Delay Time to the Extended Delay. You can program this delay with enough time to allow the user to open the garage door, drive out, and then close the door.

If you bypass an Extended Delay Point the system switches to the Extended Delay. The system makes the switch even if the point is not faulted when you bypass it.

If you bypass an Extended Delay Point and the point is faulted and then returns to normal within the extended exit delay, the point returns to the system. This allows users to turn the system on with the garage door open and still have protection on the door. Any other point type that is bypassed and returns to normal during exit delay does not automatically return to the system.

If the system is On and a user enters through an Extended Point (opens the garage door) first, the system uses the Extended Delay for entry delay. If the user enters through a point not programmed for extended delay (the front door) first, and then through an Extended Delay Point (opens the garage door), the system will NOT use the Extended Delay for entry delay.

4 Exit Tone

| | | |
|--------------------|----------------|-------------|
| Default: | Yes | 1 |
| Selections: | Yes, No | 1, 0 |

Use this prompt to turn off the keypad tone that annunciates Exit Delay, and the **Excursion** (Step Outside and Exit) feature.

Program **Exit Tone** Yes to enable the exit delay tone and excursion tone.

Program **Exit Tone** No to disable the exit delay tone and excursion tone.

5 No Delay

| | | |
|--------------------|--------------------------------------------------|---------------|
| Default: | Part On | 1 |
| Selections: | Disabled, Part On, All On, All & Part | 0 to 3 |

The No Delay feature allows users to turn their system On with no Entry or Exit Delay (Instant Arming). If this prompt is set to Part, users can turn their system Part On with No Delay by pressing the 0 (zero) key twice.

If this prompt is set to All, users can turn their system All On with No Delay by pressing the 9 key twice. If this prompt is set to All & Part, users can turn their system All or Part On with no delay.

If this prompt is set to Disabled, users can not turn their system on with No Delay. Entry and exit delay are always provided.

Selecting Disabled for the No Delay prompt also disables the Excursion Feature. See **Excursion** below.

6 Excursion

| | | |
|--------------------|----------------------------|----------|
| Default: | Disabled | 0 |
| Selections: | Disabled | 0 |
| | All Step | 1 |
| | Part Step | 2 |
| | All & Part Step | 3 |
| | All Exit | 4 |
| | Part Exit | 5 |
| | All & Part Exit | 6 |

Use the **Excursion** prompt to configure the system for either the **Step Outside** or **Exit** user features.

Step Outside

If you enable the **Step Outside** feature, pressing the Clear key at the keypad when the system is On with No Delay starts the Exit delay tone (if **Exit Tone** is programmed Yes) and bypasses all points programmed for delay (digit 1 of point code is 6 or 8). The rest of the system remains On.

The tone and bypass remain until the user presses the Clear key a second time, returning the system to its fully On state. If a point is faulted when the user presses the Clear key the second time, the tone and bypass continue. The user must either clear the fault (close the door) or turn the system off with their passcode.

The Step Outside feature allows users to pick up the morning paper or let the dog out without turning the system off.

All Step only allows users access to the Step Outside feature when the system is All On with No Delay (instant).

Part Step only allows users access to the Step Outside feature when the system is Part On with No Delay (instant).

All & Part Step allows users access to the Step Outside feature when either All or Part of the system is On with No Delay (instant).

Exit

If you enable the **Exit** feature, pressing the Clear key at the keypad when the system is On with No Delay starts exit delay. The system sounds the Exit delay tone (if **Exit Tone** is programmed Yes) and bypasses all points programmed for exit delay (Digit 1 of point code is 6 or 8). **The rest of the system remains On with No Delay.** The tone and bypass remain until exit delay expires. The system returns to the **On with No Delay** state. The Exit feature allows one user to exit a system that is On with No Delay, leaving whoever is left inside fully protected.

If the user presses Clear during the 'exit delay,' the system returns to On with No Delay.

A faulted point (open door) at the end of 'exit delay' creates an 'Exit Error' alarm.

If there is an alarm within two minutes of the end of 'exit delay,' the system sends an 'Alarm Recent Close' report.

All Exit only allows users access to the Exit feature when the system is All On with No Delay (instant).

Part Exit only allows users access to the Exit feature when the system is Part On with No Delay (instant).

All & Part Exit allows users access to the Exit feature when either All or Part of the system.

7. A, B, C KEYS

Use the prompts in this group to set the report code, the custom text, and alarm output for the keypad's A, B, C keys.

You can program the relay outputs (terminals 9 and 10) to respond to these keys in the *RELAYS Group*. See page 40.

Users must press the A, B, C, keys twice to activate them. This 'double action' prevents accidental activation.

If using a 4-Button Keychain Keypad, its special (*) key performs the same functions as programmed for the C key.

1 A-Key Report

Default: 00
Selections: 0 to 9
 2 digits required for Pulse Format

0
 0 to 9
 2 digits required

Enter the report the system transmits to the receiver when a user presses the A-Key, B-Key, or C-Key. The panel does not send reports for the 00 default entry.

Review your entries for the prompts in *RECEIVER FORMAT* on page 9 before you program this prompt.

Modem Format Example: If you enter 25 at the **A-Key Report** prompt, the system transmits `ALARM REPORT POINT=025`, when you press the A-Key.

Pulse Format Example: The first digit you program here sets the report group. The second digit sets the point number. If you enter 10 at the **A-Key Report** prompt, the system transmits an alarm report, report group 1, point 0.

Warning! Do not enter a report that conflicts with other system or point reports. The Pulse Report Group Table in *RECEIVER FORMAT*, page 9, shows all system and point reports. Test the A, B, C buttons to be certain they transmit the reports you expect.

2 A-Key Alarm Output

Default: No Output
Selections: No Output
 Steady
 Pulse

0
 0
 1
 2

These prompts set the system response to the key at the Alarm Output, terminals 4 and 5. Set the prompt to Steady for steady output. A user must enter a passcode at the keypad to silence the output before bell time expires.

Set the prompt to Pulse for a pulsed (Fire) output at the Alarm Output. **If the system is programmed for the Modem transmission format, see RECEIVER Group (page 9), the panel sends a fire alarm.** A user must enter a passcode at the keypad to silence the output before bell time expires.

3 A-Key Ack Tone

Default: No
Selections: Yes, No

0
1
2

When this prompt is set to Yes the system sounds an acknowledgment tone at the keypad when the report sent by the activation of the key is acknowledged by the receiver.

If the key is not programmed to send reports, see **A-Key Report** above, there is no acknowledgment tone.

4 A-Key Text

Default: A-KEY
(B-KEY, C-KEY)
Selections: A to Z, 0 to 9,
! # , - / : < >

A-KEY
(B-KEY, C-KEY)
A to Z, 0 to 9,
! # ' . , - / : < >

Enter up to 16 Characters of custom text. The system displays this text when the key is activated.

5 B-Key Alarm Report**6 B-Key Output****7 B-Key Ack Tone****8 B-Key Text**

See the descriptions for the A-Key prompts above.

9 C-Key Alarm Report (* Key for 4 Button Keychain Keypads)**10 C-Key Output** (* Key for 4 Button Keychain Keypads)**11 C-Key Ack Tone** (* Key for 4 Button Keychain Keypads)**12 C-Key Text** (* Key for 4 Button Keychain Keypads)

See the descriptions for the A-Key prompts above.

8. BELL

The prompts in this group configure the Alarm Output (Bell) at terminals 4 and 5.

1 Bell Time

| | | |
|--------------------|----------|----------|
| Default: | 6 | 6 |
| Selections: | 0 to 255 | 0 to 255 |

The **Bell Time** prompt sets the minutes of alarm output at terminals 4 and 5. Both Fire Bell function (pulsed output) and the Burglary Bell function (steady output) follow the **Bell Time** duration.

Enter the number of minutes of alarm output at terminals 4 & 5 for both fire and burglary (non-fire) functions. If you are using the **Alarm on 2 Fail** feature, program at least 3 minutes in **Bell Time**. See below.

Check with your AHJ (Authority Having Jurisdiction) to determine the appropriate Bell Time for your installation. Many communities restrict bell time.

2 Bell Test

| | | |
|--------------------|---------|------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

If you set the **Bell Test** prompt to Yes, the system sounds the bell for two seconds when users turn the system All On with key 9.

If the system sends closing reports, the bell sounds when the closing report is acknowledged by the receiver. If the system does not send closing reports, the bell sounds at the expiration of Exit Delay.

3 Single Ring

| | | |
|--------------------|---------|------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

Set the **Single Ring** prompt to Yes to limit the alarm output from the same non-fire point to one per arming cycle. Setting this prompt to No allows every alarm activation from a non-fire point to generate an alarm output during an arming cycle.

Fire points always provide alarm output for every alarm activation. **Single Ring** only affects the alarm output. It does not prevent reports from being sent.

4 Alarm on 2 Fail

| | | |
|--------------------|---------|------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

Setting the **Alarm on 2 Fail** prompt to Yes provides an alarm output after two failed attempts to transmit an alarm report from any point when the system is On. Alarm output is provided even if the point is not programmed for alarm output. **Bell Time** must be programmed with at least three minutes to use the **Alarm on 2 Fail** feature.

Set this prompt to No if you want to prevent an alarm output from silent points even when the system fails to communicate with the receiver.

See the *POINT CODES Group*, page 27 for information on programming points for alarm output.

9. TEST TIMER

The prompts in this group configure the system's automatic test report timer.

1 *Test Interval*

Default: No Report
Selections: No Report
 1 Day
 7 Days
 28 Days

| |
|---|
| 0 |
| 0 |
| 1 |
| 2 |
| 3 |

Set ***Test Interval*** to **No Report** to disable the test report feature.

Set ***Test Interval*** to **1 Day** to transmit test reports every 24 hours.

Set ***Test Interval*** to **7 Days** to transmit test reports every 7 days.

Set ***Test Interval*** to **28 Days** to transmit test reports every 28 days.

2 *Hours to Next*

Default: 0
Selections: 0 to 23

| |
|---------|
| 0 |
| 0 to 23 |

Enter the number of hours until the next test report at this prompt.

The system adds the entries in the ***Hours to Next*** and ***Minutes to Next*** prompts and waits that period before it sends the next test report to the receiver. From that report on, the system sends reports at the interval set by the ***Test Intrvl*** prompt.

If both the hours and minutes are 0 (zero) the system sends the next report one interval from the end of your programming session.

If you are using a remote programmer, the waiting period begins after you complete the programming session. If you did not send program changes to the panel during the remote programming session you must end the programming session with a Reset Bye.

For D5200 or Keypad programming, the waiting period begins after you return the Standby Pin to normal operation.

3 Minutes to Next

Default: 0
Selections: 0 to 59

0
 0 to 59

Enter the number of minutes until the next test report at this prompt.

The system adds the entries in the **Hours to Next** and **Minutes to Next** prompts and waits that period before it sends the next test report to the receiver. From that report on, the system sends reports at the interval set by the **Test Intrvl** prompt.

If both the hours and minutes are 0 (zero) the system sends the next report at the end of your programming session.

If you are using a remote programmer, the waiting period begins after you complete the programming session. You must end the programming session with a Reset Bye.

For D5200 or Keypad programming, the waiting period begins after you return the Standby Pin to normal operation.

4 Defer Test Rpt

Default: No
Selections: Yes, No

0
 1,0

Set the **Defer Test Rpt** prompt to Yes to defer the test report one interval if any other report is transmitted in the current interval.

The report is deferred one interval from the time of the last report. For example, if the **Test Intrvl** prompt is set to 1 Day, and the system transmits an opening report at 9:00PM, the interval begins at 9:00PM. If the system transmitted no other reports before 9:00PM the following day, at 9:00PM the system would transmit the test report.

10. ADDRESS CONFIGURATION

Use the prompts in this group to configure the system for devices connected to the Data terminal (terminal 6).

Remember you can only connect four point expanders to the Data terminal (terminal 6). Count Text Keypads with Points as point expanders.

1 Address 1

2 Address 2

3 Address 3

4 Address 4

5 Address 5

6 Address 6

7 Address 7

8 Address 8

| | |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Default: | Text Keypad (Address 1) Not Used (Addresses 2-8) |
| Selections: | Not Used LED Keypad Text Keypad Text Keypad with Points RF Point Expander, 8 RF Point Expander, 16 Point Expander |

| |
|---|
| 2 |
| 0 |
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |

Enter the type of device connected to the system for each address. Remember, you can only connect four point expanders to the system.

Do not connect more than one device with the same address to the panel.

Although LED Keypads have no means to set an address, you must enter LED Keypad for one address if you are going to connect one to the system. Use one address for all LED Keypads.

If you are using one text keypad, you must set its address to Address 1. If you are using more than one text keypad, be sure one of them has its address set to Address 1.

The system stores the master copy of the Custom Idle Text, Custom Service Text, and point text in the text keypad with its address set to 1.

Keypad programming requires a text keypad with its address set to 1. You will always be able to program from a text keypad with its address set to 1, even if you change the Address 1 prompt from the default text keypad.

If you are using an RF Point Expander, its address must be set for Address 7 or Address 8. If you are using two RF Point Expanders, set one for address 7 and the other for address 8.

11. POINT CODES

Use the Point Code Charts to set a five-digit point code for each point. The point code determines how the system responds to changes on the point sensor loops. Points respond to opens and shorts. **RF expansion points respond with 'short' for faulted devices.** When an RF point is tripped, another trip of the same sensor will not be detected for 5 or more seconds, depending upon sensor type. See the *Installation Manual* for a complete description of point sensor loops.

The charts on the pages that follow show the defaults and selections for programming.

| | Default Code/Text | | Default Description |
|---------------------------------------|-------------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 Point 1 | 2600A | PT1 FIRE/VERIFY | Fire Point Fire point with alarm verification. Reports and alarm output enabled. Point 1 is powered for two-wire smoke detectors. |
| 2 Point 2 | 8820A | PT2 PART/DELAY | Delay Door Delayed "Part" point. Point arms when user turns the system Part (or All) On. Point will start entry delay. Reports and alarm output enabled. Trouble on short when the system is Off. Swinger bypass enabled. Alarm report delay enabled. |
| 3 Point 3 | 8820A | PT3 PART/DELAY | Delay Door Same responses as Point 2 . |
| 4 Point 4 | 9820A | PT4 PART/NO DLY | Door, No Delay No Delay "Part" point. Point arms when user turns the system Part (or All) On. Point will not start entry delay. Reports and alarm output enabled. Trouble on short when the system is Off. Swinger bypass enabled. Alarm report delay enabled. |
| 5 Point 5 | 7820A | PT5 ALL/NO DELAY | Motion Detector No Delay "All" point. Point only arms when user turns the system All On. Point will not start entry delay. Reports and alarm output enabled. Trouble on short when the system is Off. Swinger bypass enabled. Alarm report delay enabled. |
| 6 Point 6 | 7820A | PT6 ALL/NO DELAY | Motion Detector Same responses as Point 5 . |
| 7 to 24 Points 7 to 24 | 0000A | PT## PT DISABLED | Point Disabled The system does not monitor disabled points. |

Digit 1, Point Type

For Digit 1 selections 3, 4, 5, 6, 7, 8, 9, B, C:

- If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a **RECENT CLOSING** message with the alarm report.

For Digit 1 selections 6, 7, 8, 9, B, C:

- If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned Off, it sends an **EXIT ERROR** message with the alarm report.

Set Digit 1 to 0 (zero) for points used for RF keypads and arming devices:

- If you want to use an RF Keypad or other arming device, you must assign each device to a point number in order to 'learn' the device into the system. Set *Digit 1* to 0 for RF Keypad and arming device points.

| | |
|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0 Disabled | Point doesn't respond to opens or shorts. Set digit 1 to 0 if you are using this point number for an RF Keypad or arming device. |
| 1 Fire | Short on sensor loop starts fire alarm response. Open on sensor loop causes trouble response. Fire points are not bypassable. Single Ring programming option does not apply to fire points. 'Missing' fire points generate a trouble response when the system is On or Off. |
| 2 Fire with Alarm Verification (use Fire with Alarm Verification for Point 1 only) | Short on sensor loop starts verification process: 1. Panel removes power to Point 1 for four seconds to reset smoke detectors. 2. Short on loop within 120 seconds of reset starts alarm response. If the point remains normal or open for the 120 second verification window there is no alarm response. Verification is not recommended for RF points. 'Missing' fire points generate a trouble response when the system is On or Off. 'RF Tamper' for fire points generates a trouble response when the system is On or Off. Do not use Fire Alarm Verification points as Cross or Partner points. See Digit 3, page 33. |
| 3 Buzz on Fault (Voice Active) | When the panel is off, a short or open buzzes the keypad. When the panel is All or Part On (armed), a short or open causes an alarm response. Buzz on Fault points are not bypassable. Single Ring programming option applies. See Single Ring on page 23. Buzz on fault points do not generate trouble reports even if you program Digit 3 to send them. See Digit 3, page 33. When you program Digit 3 for trouble reports text keypads display a trouble condition for faults on Buzz on Fault points, otherwise they sound the trouble tone only with no display. 'Missing' Buzz on Fault points generate an alarm response when On, a trouble response when Off. 'RF Tamper' for a Buzz on Fault point generates an alarm response when On, a trouble response when Off. Voice Active Function: When the Delay Alarm Rpt prompt is set to 255, the Buzz on Fault point type works differently for on-board points (see Delay Alarm Rpt on page 7). The Delay Alarm Rpt prompt is only set to 255 when a 2-way Voice Verification Module is connected to the panel. The Voice Verification Module shorts a Buzz on Fault (Voice Active) point to tell the panel a 2-way Voice Verification session is active. |

| | |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>4 24-hour, visible</p> | <p>Short or open causes alarm response if no Trouble option. See Digit 3 on page 33. 24-hour points are not bypassable. Single Ring programming option applies. See Single Ring. <i>'Missing' 24-hour points generate a trouble response when the system is On or Off.</i> <i>'RF Tamper' for a 24-hour point generates a trouble response when the system is On or Off.</i></p> |
| <p>5 24-hour, invisible</p> | <p>Short or open causes alarm response if no Trouble option. See Digit 3 on page 33. No alarm tones at keypad, except when point is programmed for alarm output. If point is programmed for alarm output, keypad sounds alarm tones for point alarms. Point lights do not light for alarms. 24-hour points are not bypassable. Single Ring programming option applies. See Single Ring. <i>'Missing' 24-hour points generate a trouble response when the system is On or Off.</i> <i>'RF Tamper' for a 24-hour point generates a trouble response when the system is On or Off.</i></p> |
| <p>6 Controlled, All, Delay</p> | <p>When panel is All On (armed) short or open starts entry delay if no Trouble option. See Digit 3 on page 33. "All" points must be normal (not faulted) or bypassed before panel can be "All" armed. If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report. If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned off, it sends an EXIT ERROR message with the alarm report. <i>'Missing' Controlled points generate an alarm response when On, a trouble response when Off.</i> <i>'RF Tamper' for a Controlled point generates an alarm response when On, a trouble response when Off.</i></p> |
| <p>7 Controlled, All, No Delay</p> | <p>When panel is All On (armed), short or open causes alarm response. "All" points must be normal (not faulted) or bypassed before panel can be "All" armed. If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report. If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned off, it sends an EXIT ERROR message with the alarm report. <i>'Missing' Controlled points generate an alarm response when On, a trouble response when Off.</i> <i>'RF Tamper' for a Controlled point generates an alarm response when On, a trouble response when Off.</i></p> |

| | |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>8 Controlled, Part, Delay</p> | <p>When panel is All or "Part" On (armed) short or open starts entry delay if no Trouble option. See Digit 3 on page 33.</p> <p>"Part" points must be normal (not faulted) or bypassed before panel can be "Part" armed.</p> <p>If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report.</p> <p>If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned Off, it sends an EXIT ERROR message with the alarm report.</p> <p>'Missing' controlled points generate an alarm response when On, a trouble response when Off.</p> <p>'RF Tamper' for a Controlled point generates an alarm response when On, a trouble response when Off.</p> |
| <p>9 Controlled, Part, No Delay</p> | <p>When panel is All or Part On (armed), short or open causes alarm response.</p> <p>"Part" points must be normal (not faulted) or bypassed before panel can be "Part" armed.</p> <p>If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report.</p> <p>If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned Off, it sends an EXIT ERROR message with the alarm report.</p> <p>'Missing' Controlled points generate an alarm response when On, a trouble response when Off.</p> <p>'RF Tamper' for a Controlled point generates an alarm response when On, a trouble response when Off.</p> |
| <p>A Keyswitch</p> | <p>Shorting then restoring Keyswitch points toggles the panel from All (or Part) On to Off, off to All On.</p> <p>The trouble option, see Digit 3 (page 33), determines how keyswitch points respond to opens when the system is Off. When the system is All or Part On, an open produces an alarm response. A keyswitch always causes a trouble condition if it is opened in the Off state, regardless of the value programmed in Digit 3.</p> <p>If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report.</p> <p>'Missing' keyswitch points generate an alarm response when On, a trouble response when Off.</p> <p>'RF Tamper' for keyswitch points generates an alarm response when On, a trouble response when Off.</p> |

| | |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>B Extended Delay, All</p> | <p>When panel is All On (armed) short or open starts Extended Delay if no Trouble option. See Digit 3 on page 33. You must fault the extended delay point first. If a non-extended delay point is faulted first, extended delay is not used.</p> <p>Faulting an Extended Delay point when the system is in exit delay extends exit delay to the value programmed in the Extended Delay prompt. See Extended Delay in the <i>OPEN / CLOSE Group</i>, page 18, for a detailed explanation of the Extended Delay feature.</p> <p>“Extended Delay” points must be normal (not faulted) or bypassed before the system can be “All” armed.</p> <p><i>If you bypass an Extended Delay Point the system switches to the Extended Delay. The system makes the switch even if the point is not faulted when you bypass it.</i></p> <p><i>Extended delay points that are bypassed and then restore during exit delay are automatically unbypassed and returned to the system.</i></p> <p>If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report.</p> <p>If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned Off, it sends an EXIT ERROR message with the alarm report.</p> <p><i>‘Missing’ Extended delay points generate an alarm response when On, a trouble response when Off.</i></p> <p><i>‘RF Tamper’ for an Extended delay point generates an alarm response when On, a trouble response when Off.</i></p> |
| <p>C Extended Delay, Part</p> | <p>When panel is Part or All On (armed) short or open starts Extended Delay if no Trouble option. See Digit 3 on page 33. You must fault the extended delay point first. If a non-extended delay point is faulted first, extended delay is not used.</p> <p>Faulting an Extended Delay point when the system is in exit delay extends exit delay to the value programmed in the Extended Delay prompt. See Extended Delay in the <i>OPEN / CLOSE Group</i> (page 18) for a detailed explanation of the Extended Delay feature.</p> <p>“Extended Delay” points must be normal (not faulted) or bypassed before the system can be “Part” or “All” armed.</p> <p><i>If you bypass an Extended Delay Point, the system switches to the Extended Delay. The system makes the switch even if the point is not faulted when you bypass it.</i></p> <p><i>Extended delay points that are bypassed and then restore during exit delay are automatically unbypassed and returned to the system.</i></p> <p>If an alarm occurs on these points within two minutes of a closing (exit time expired, Excursion/Exit included), the system sends a RECENT CLOSING message with the alarm report.</p> <p>If these points are faulted at the end of exit delay, the system waits a period equal to entry delay before sending an alarm report. If the system is not turned Off, it sends an EXIT ERROR message with the alarm report.</p> <p><i>‘Missing’ extended delay points generate an alarm response when On, a trouble response when Off.</i></p> <p><i>‘RF Tamper’ for extended delay points generates an alarm response when On, a trouble response when Off.</i></p> |

Digit 2, Alarm Response

| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|---|---|---|---|---|
| <p>No Alarm Response - set Digit 2 to 0 (zero) only if you want no alarm response for this point.</p> <p>Set Digit 2 to 0 if you are using this point number for an RF Keypad or arming device.</p> | X | | | | | | | | | |
| <p>Reports - Points send alarm, cancel, trouble, bypass, swinger bypass, and restoral reports as programmed. Bypass reports are only sent with closing reports.</p> | | X | X | X | X | | X | X | X | X |
| <p>Alarm Report Delay - If a user enters their passcode to silence an alarm before the programmed Alarm Report Delay time expires, the alarm is canceled. No alarm, cancel, or restoral report is sent. Program Delay Alrm Rpt in REPORTS to determine the duration of the delay.</p> <p>Voice Active Function: When the Delay Alrm Rpt prompt is set to 255, Alarm Report Delay points (Digit 2 = 2, 3, 7, or 8) begin the 2-way Voice Verification process. See Delay Alrm Rpt on page 7.</p> <p>Duress reports and A, B, C Key reports are NOT affected by the Alarm Report Delay. These reports are sent immediately in all cases.</p> | | | X | X | | | | X | X | |
| <p>Swinger Bypass - The Swinger Count prompt in the SYSTEM CONFIGURATION Group sets the swinger count for this Swinger Bypass point option. When the number of alarms or troubles in an armed or disarmed period reaches the swinger count, the system automatically bypasses points programmed for Swinger Bypass. Turning the system Off clears the bypass. If a 24-hour point swinger bypasses while the system is Off, turning the system On (starting exit delay) and then turning the system Off (pressing Clear) clears the bypass. Swinger Bypass is a point trouble and will activate the point trouble relay function.</p> <p>When a point is Swinger Bypassed, the Point Trouble relay is activated.</p> | | | | X | X | | | | X | X |
| <p>Alarm Output - Points programmed for alarm output provide output at terminals 4 and 5 as part of the alarm response. Fire points provide a pulsed output. Non-Fire points provide a steady output. Output lasts for the duration programmed in Bell Time. Fire output always takes precedence over non-fire output.</p> | | | | | | X | X | X | X | X |

Digit 3, Point Options

If **Digit 1** is set to 1 (fire point), and **Digit 3** is set to 9, the point functions as a Cross Fire Point. If **Digit 1** is set to 1, and **Digit 3** is set to D, the point functions as a Partner Fire Point. Programming digit 3 to other than 9, 0, or D (when Digit 1 = 1, fire point) causes inappropriate point behavior.

| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| <p>No Point Options - set Digit 3 to 0 (zero) for no point options. Set Digit 3 to 0 if you are using this point for an RF Keypad or arming device.</p> | X | | | | | | | | | | | | | | | | |
| <p>Trouble on Open - An Open on the sensor loop for 24-hour points (Digit 1 = 4, 5, or A) causes a trouble response when the panel is Off, All, or Part On. When the system is On, Controlled, Delay Points (Digit 1 = 6 or 8) start entry delay on short only. An open causes an instant alarm. When the system is Off, an open causes a trouble response.</p> <p>When the system is NOT disarmed, an open on a keyswitch (Digit 1=A) causes an instant alarm.</p> | | X | | | | X | | | | X | | | | X | | | |
| <p>Trouble on Short - A short on the sensor loop for 24-hour points (Digit 1 = 4 or 5) causes a trouble response when the panel is Off, All, or Part On. When the system is On, Controlled, Delay Points (Digit 1 = 6 or 8) start entry delay on an open only. A short causes an instant alarm.</p> | | | X | | | | X | | | | X | | | | | X | |
| <p>Trouble on Open or Short - An Open or Short on the sensor loop for 24-hour points (Digit 1 = 4 or 5) causes a trouble response when the panel is Off, All, or Part On. When the system is On, Controlled, Delay Points (Digit 1 = 6 or 8) create instant alarms on an open or short.</p> | | | | X | | | | X | | | | X | | | | X | |
| <p>Double Knock - Points programmed for double knock require two alarm activations within 120 seconds (open and/or short on the sensor loop) before the system begins an alarm response. If the point returns to and remains in a normal or trouble condition for the duration of the 120 second double knock window, there is no alarm response. Do not use Double Knock with the Keyswitch point type.</p> | | | | | X | X | X | X | | | | | | | | | |
| <p>Cross Point - Cross Points are paired with a Partner Point. The Partner Point is always the next highest point number. For example, if Point 1 is a Cross Point, Point 2 must be its Partner Point.</p> <p>Cross and Partner points require an alarm activation on their paired point within 120 seconds (open and/or short on the sensor loop) before the system begins an alarm response.</p> <p>If a cross (or partner) point returns to the normal state in the 120 second Cross Point window and there is no alarm event on the point its paired with, there is no alarm response.</p> <p>If the point remains in alarm for the duration of the 120 second Cross Point window, the panel generates an alarm response, even if the point its paired with does not go into alarm.</p> <p>If you Bypass a Cross or Partner Point, it swinger Bypasses, or it is in a trouble condition (point trouble, RF trouble, missing) its paired point generates alarm responses on its own.</p> <p>Alarm reports will not include the CROSS POINT message unless the alarm response is generated by both points of the pair.</p> <p>If a Cross (or Partner) Point is not paired with a Partner (or Cross Point), it generates alarm responses on its own.</p> <p>Radionics recommends that you do not pair different point types for the Cross/Partner function.</p> | | | | | | | | | | X | X | X | X | | | | |
| <p>Partner Point - See Cross Point above.</p> | | | | | | | | | | | | | | X | X | X | X |

Digit 4, Device Address

Digit 4 tells the system what device a point is connected to. **Digit 5** tells the system the sensor loop on the device. The panel's on-board points are numbered 1 to 6. Leave Digits 4 and 5 at their default setting ('0' for **Digit 4**, 'A' for **Digit 5**) for on-board sensor loops. If you program a point number less than 6 to a point expander, the system ignores the panel's on-board sensor loop for that point.

For example, to make Point 5 a motion detector connected to loop D of a D222 Text Keypad with Address 7, set the Address 7 prompt in the *ADDRESS CONFIGURATION Group* and Digits 4 and 5 of the point code as follows:

- **Address 7** = Text Keypad with Points
- **Digit 4** = 7
- **Digit 5** = D (motion detector wired to loop D of the D222 Text Keypad)

The panel ignores the on-board sensor loop for Point 5.

Although eight addresses are available, you can only connect four devices with point expansion to the panel's 'DATA' terminal.

Important! Points with **Digit 4** set to an address that is not programmed for a point expander will not generate alarm, trouble, or missing reports. Check the *ADDRESS CONFIGURATION Group* (page 26) to be certain that any address programmed in **Digit 4** of a point code is programmed for a point expander.

| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|---|---|---|---|
| On-Board - Detection devices for this point are connected to one of the panel's on-board sensor loops. | X | | | | | | | | |
| Address 1 - Detection devices for this point are connected to an expansion device with Address 1. <i>If you are connecting a text keypad to the system, you must use Address 1.</i> <i>If you connect more than one text keypad, make sure one of the keypads is set for Address 1.</i> | | X | | | | | | | |
| Address 2 - Detection devices for this point are connected to an expansion device with Address 2. | | | X | | | | | | |
| Address 3 - Detection devices for this point are connected to an expansion device with Address 3. | | | | X | | | | | |
| Address 4 - Detection devices for this point are connected to an expansion device with Address 4. | | | | | X | | | | |
| Address 5 - Detection devices for this point are connected to an expansion device with Address 5. | | | | | | X | | | |
| Address 6 - Detection devices for this point are connected to an expansion device with Address 6. | | | | | | | X | | |
| Address 7 - Detection devices for this point are connected to an expansion device with Address 7. <i>If you are connecting a RF Point Expander to the system, it can only use Address 7 or Address 8.</i> | | | | | | | | X | |
| Address 8 - Detection devices for this point are connected to an expansion device with Address 8. <i>If you are connecting a RF Point Expander to the system, it can only use Address 7 or Address 8.</i> | | | | | | | | | X |

Digit 5, Sensor Loop

Digit 5 of the point code tells the panel what sensor loop to use for the point. Sensor loops for off-board points are lettered (A to P). Enter the letter of the sensor loop you're using for this point.

For example, to make Point 5 a motion detector connected to loop D of a D222 Text Keypad with Address 7, set Digits 4 and 5 of the point code as follows:

- **Digit 4** = 7 (keypad set for Address 7)
- **Digit 5** = D (motion detector wired to loop D of the D222 Text Keypad)

The panel ignores the on-board sensor loop for Point 5.

If you have an RF point expander connected to the system and are using an RF keypad, you must assign the keypad a point number.

For example, you could include a D204RF Keypad in your system by following the steps below.

1. Connect a D208RF Point Expander module to the panel as shown in the module instructions.
2. Select a point number for the RF keypad. Low battery reports for the keypad will include this point number. You might want to assign RF keypads to the highest point numbers to avoid having the keypads appear in the middle of points assigned to detection devices.
3. Program the point code for the point selected in step 2. Digits 1, 2, and 3 should be set to 0. **Digit 4** should be set to the address of the point expander you connected in step 1. Remember RF point expanders can only use addresses 7 or 8. Set **Digit 5** to the sensor loop on the point expander you want to use for the RF keypad.
4. 'Learn' the keypad into the system as the point number you selected in step 2. The *Keypad Diagnostics Sheet* contains complete instructions for learning RF points.

The panel's on-board sensor loops are fixed to point numbers as labeled on the panel, 1 to 6. If you are using an on-board sensor loop, you need to set **Digit 4** to 0 (zero). You can leave **Digit 5** at the default, 'A'. The panel actually ignores **Digit 5** if **Digit 4** is set to 0 (zero).

11. POINT CODES Group

| Selection | Digit 1 Point Type | Digit 2 Alarm Response | Digit 3 Point Options | Digit 4 Device Address | Digit 5 Sensor Loop |
|-----------|------------------------------------------------------|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|---------------------------|------------------------|
| 0 | Disabled <i>Set to 0 for RF keypad.</i> | No reports, No Swinger, No Output <i>Set to 0 for RF keypad.</i> | No Troubles, Not Cross Point, Not Partner Point <i>Set Digit 3 to 0 for RF keypad.</i> | On-Board | |
| 1 | Fire | Reports , No Report Delay, No Swinger, No Output | Trouble Open , No Trouble Short, No Double Knock, No Cross Point, No Partner Point. | Device Address 1 | |
| 2 | Fire with Alarm Verify (use with Point 1 only) | Reports , Report Delay, No Swinger, No Output | No Trouble Open, Trouble Short , No Double Knock, No Cross Point, No Partner Point. | Device Address 2 | |
| 3 | Buzz on Fault | Reports, Report Delay, Swinger , No Output | Trouble Open, Trouble Short , No Double Knock, No Cross Point, No Partner Point. | Device Address 3 | |
| 4 | 24hr, Visible | Reports , No Report Delay, Swinger , No Output | No Trouble Open, No Trouble Short, Double Knock , No Cross Point, No Partner Point. | Device Address 4 | |
| 5 | 24hr, Invisible | No Reports, No Report Delay, No Swinger, Output | Trouble Open , No Trouble Short, Double Knock , No Cross Point, No Partner Point. | Device Address 5 | |
| 6 | Controlled, All, Delay | Reports , No Report Delay, No Swinger, Output | No Trouble Open, Trouble Short , Double Knock , No Cross Point, No Partner Point. | Device Address 6 | |
| 7 | Controlled, All No Delay | Reports, Report Delay, No Swinger, Output | Trouble Open, Trouble Short , Double Knock , No Cross Point, No Partner Point | Device Address 7 | |
| 8 | Controlled, Part, Delay | Reports, Report Delay, Swinger, Output | No Trouble Open, No Trouble Short, No Double Knock, Cross Point , No Partner Point. | Device Address 8 | |
| 9 | Controlled, Part, No Delay | Reports , No Report Delay, Swinger, Output | Trouble Open , No Trouble Short, No Double Knock, Cross Point , No Partner Point. | | |
| A | Keyswitch | | No Trouble Open, Trouble Short , No Double Knock, Cross Point , No Partner Point. | | A |
| B | Extended Delay, All | | Trouble Open, Trouble Short , No Double Knock, Cross Point , No Partner Point | | B |
| C | Extended Delay, Part | | No Trouble Open, No Trouble Short, No Double Knock, No Cross Point, Partner Point . | | C |
| D | | | Trouble Open , No Trouble Short, No Double Knock, No Cross Point, Partner Point . | | D |
| E | | | No Trouble Open, Trouble Short , No Double Knock, No Cross Point, Partner Point . | | E |
| F | | | Trouble Open, Trouble Short , No Double Knock, No Cross Point, Partner Point . | | F |
| G to P | | | | | G to P |

Some Recommended Point Codes

The tables below show some recommended point codes. Many other point code options are available. You can create custom point functionality using the many point features available. Be sure to thoroughly test any point code to be certain the system functions as you expect.

Smoke Detector

(trouble on open, alarm output)

| | Reports | Local |
|--------------------------------|---------|-------|
| Alarm Verification (Pt 1 only) | 260## | 250## |
| No Verification | 160## | 150## |
| Cross Point | 168## | 158## |
| Partner Point | 16C## | 15C## |
| RF Point | 160## | 150## |

Door with Entry/Exit Delay

(swinger bypass, alarm output, alarm report delay)

| | Reports | Local |
|------------------------|---------|-------|
| Delay on Open | 882## | 852## |
| Trouble on Short | | |
| Delay on Short | 881## | 851## |
| Trouble on Open | | |
| Delay on Open or Short | 880## | 850## |
| No Troubles | | |
| RF Point | 880## | 850## |

Door or Window with No Entry/Exit Delay

(swinger bypass, alarm output, alarm report delay)

| | Reports | Local |
|------------------|---------|-------|
| Trouble on Short | 982## | 952## |
| Trouble on Open | 981## | 951## |
| No Troubles | 980## | 950## |
| RF Point | 980## | 950## |

Garage Door with Extended Entry/Exit Delay

(swinger bypass, alarm output, alarm report delay)

| | Reports | Local |
|------------------|---------|-------|
| Trouble on Short | B82## | B52## |
| Trouble on Open | B81## | B51## |
| No Troubles | B80## | B50## |
| RF Point | B80## | B50## |

Motion Detector

(swinger bypass, alarm output, alarm report delay)

| | Reports | Local |
|------------------|---------|-------|
| Trouble on Short | 782## | 752## |
| Trouble on Open | 781## | 751## |
| No Troubles | 780## | 750## |
| Cross Point | 78A## | 75A## |
| Trouble on Short | | |
| Cross Point | 789## | 759## |
| Trouble on Open | | |
| Cross Point | 788## | 758## |
| No Troubles | | |
| Partner Point | 78E## | 75E## |
| Trouble on Short | | |
| Partner Point | 78D## | 75D## |
| Trouble on Open | | |
| Partner Point | 78C## | 75C## |
| No Troubles | | |
| RF Point | 780## | 750## |

Tamper

(swinger bypass, alarm output, alarm report delay)

| | Reports | Local |
|------------------|---------|-------|
| Trouble on Short | 782## | 752## |
| Trouble on Open | 781## | 751## |
| No Troubles | 780## | 750## |
| RF Point | 780## | 750## |

**RF Keyswitch or Other Arming Device
(no alarm response)**

RF arming devices do not create 'point' alarms. Program all points assigned to RF keypads or other RF arming devices to 000###.

**Panic Device
(swinger bypass)**

| | Reports | Local |
|------------------------------------------------------|----------------|--------------|
| Silent, Invisible Alarm on Open Trouble on Short | 542## | 552## |
| Silent, Invisible Alarm on Short Trouble on Open | 541## | 551## |
| Silent, Invisible Alarm on Open or Short No Troubles | 540## | 550## |
| Alarm Output Alarm on Open Trouble on Short | 592## | 552## |
| Alarm Output Alarm on Short Trouble on Open | 591## | 551## |
| Alarm Output Alarm on Open or Short No Troubles | 590## | 550## |
| RF Point Silent, Invisible | 540## | 550## |
| RF Point Alarm Output | 540## | 550## |

**Keyswitch
(swinger bypass, alarm output)**

| | Reports | Local |
|-----------------|----------------|--------------|
| Trouble on Open | A91## | A51## |

12. POINT TEXT

1 to 24 Point Text

Default: See Point Code Table.
Selections: A to Z, 0 to 9,
 ! # ' , - / : < >

A to Z, 0 to 9,
 ! # ' , - / : < >

Enter custom text to appear in text keypads for each point. The default text appears in the point code table at the beginning of the *POINT CODES Group* section of this manual (page 27).

Up to 15 Seconds for Text to Load: It may take up to 15 seconds for the custom text you program here to appear in all text keypads connected to the system.

13. RELAYS

A D133 or D134 Relay Module is required to use the system's external relay outputs (terminals 9 and 10). One module is required for each output used. See the *Installation Manual* for instructions.

You can program each of the system's two relay outputs with one or two functions. With the **Relay # Logic** prompts, you can configure the outputs so that they activate when the condition for either function exists, or only activate when the conditions for both functions exist.

The D5200 programmer displays an additional Relay Parameter prompt if the relay function you've selected requires that you program additional information.

For example, if you select the Follow Point function for **Relay 1, Func 1** and press Enter, the D5200 displays the parameter prompts, **Point 1** (Yes, No), followed by **Point 2** (Yes, No), ... and finally **Point 24** (Yes, No). The parameter prompts tell the system what points the relay is to follow.

If you select Reset for **Relay 1, Func 1** and press Enter, the D5200 goes directly to **Relay 1, Func 2**. The Reset function does not require any parameters.

Relay Function Logic

The Relay 1, and Relay 2, Logic prompts allow you to further define the conditions under which the panel activates the relay drivers.

1 Relay 1 Logic

2 Relay 2 Logic

| | | |
|--------------------|-------------------------|----------|
| Default: | Function 1 Only | 0 |
| Selections: | Function 1 Only | 0 |
| | Function 1 or 2 | 1 |
| | Function 1 and 2 | 2 |

When **Relay 1 Logic** or **Relay 2 Logic** is set to **Function 1 Only**, the system activates the relay output when Function 1 calls for activation. Function 2 is ignored.

When **Relay 1 Logic** or **Relay 2 Logic** is set to **Function 1 or 2**, the system activates the relay output when either Function 1 or Function 2 calls for activation, or when both do.

When **Relay 1 Logic** or **Relay 2 Logic** is set to **Function 1 and Function 2**, both Function 1 and Function 2 must call for activation before the system activates the relay output.

Relay Functions

3 Relay 1 Func 1

Default: No Output 0 to 24
 Selections: See *Relay Function Selections, below.*

The *Relay 1, Func 1* prompt sets Function 1 for Relay Output 1 (terminal 9).

4 Relay 1 Func 2

Default: No Output 0 to 24
 Selections: See *Relay Function Selections, below.*

The *Relay 1, Func 2* prompt sets Function 2 for Relay Output 1 (terminal 9).

5 Relay 2 Func 1

Default: No Output 0 to 24
 Selections: See *Relay Function Selections, below.*

The *Relay 2, Func 1* prompt sets Function 1 for Relay Output 2 (terminal 10).

6 Relay 2 Func 2

Default: No Output 0 to 24
 Selections: See *Relay Function Selections, below.*

The *Relay 2, Func 2* prompt sets Function 2 for Relay Output 2 (terminal 10).

Relay Function Selections

| Programmers / Keypad | | Description |
|----------------------|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No Output | 0 | No output at the relay terminal. |
| Alarm | 1 | Provides a steady output when a point is in an alarm condition. The relay output follows Bell Time. This output does not occur for alarms caused by A, B, C Keys. Entering a combination to acknowledge an alarm resets the relay. Select the points to monitor for alarms at the <i>Parameter</i> prompt. |
| Alarm Memory | 2 | Provides a steady output when a point shows alarm memory at the keypad. Turning the system On clears alarm memory and ends the output. This output does not occur for alarms caused by A, B, C Keys. Select the points to monitor for alarm memory at the <i>Parameter</i> prompt. |

| Programmers / Keypad | | Description |
|----------------------|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Point Trouble | 3 | Provides a steady output when selected points are in trouble. Select the points to monitor for troubles at the Parameter prompt. Swinger Bypass is a point trouble and will activate the point trouble relay function. |
| Follow Point | 4 | Provides a steady output when selected points are faulted (including point trouble and alarm). Select the points to monitor for faults at the Parameter prompt. |
| Watch Tone | 5 | Activates the relay output in parallel to the watch tone for selected points. See <i>Key 7, Watch Tone</i> in the <i>User's Guide</i> . If you set the watch tone to No Tone, the Watch Tone relay does not activate. Select the points for Watch Tone monitor at the Parameter prompt. |
| A,B,C Key, Steady | 6 | Activates the relay output when a user presses a selected function key. The relay output remains activated until a user performs a System Reset (presses 3 and enters their passcode). Select the Function Keys to monitor at the Parameter prompt. |
| A,B,C Key, Pulse | 7 | Activates the relay output when a user presses a selected function key. The relay output pulses until a user performs a System Reset (presses 3 and enters their passcode). Select the Function Keys to monitor at the Parameter prompt. |
| A,B,C Key, Momentary | 8 | Activates the relay output when a user presses a selected function key. The relay output activates for ten seconds. Do not program both relays for this function, doing so may cause inconsistent relay operation. Select the Function Keys to monitor at the Parameter prompt. |
| Off with Passcode | 9 | Activates the relay for ten seconds when a selected user turns the system off with a passcode. Do not program both relays for this function, doing so may cause inconsistent relay operation. Select the Users to monitor at the Parameter prompt. |
| Follow Alarm Output | 10 | Parallels activity at the alarm output (terminals 4 and 5). |
| All On | 11 | Activates the relay at the start of exit delay when the system is All On. The output remains activated until the system is turned Off. |
| Part On | 12 | Activates the relay at the start of exit delay when the system is Part On. The output remains activated until the system is turned Off. |
| Reset | 13 | Activates the relay output when a user presses the 3 key to reset the system. The relay output activates for four seconds. Do not program both relays for this function, doing so may cause inconsistent relay operation. |
| AC Failure | 14 | Provides a steady output when the system detects a loss of power at terminals 1 and 2. The driver remains activated until AC power restores. |
| Battery Trouble | 15 | Provides a steady output when the system detects a low or missing battery condition. The relay remains activated until the battery restores. |
| Communication Fail | 16 | Provides a steady output when the system fails to communicate with the receiver within ten dialing attempts when two phone numbers are programmed, or five dialing attempts when one phone number is programmed. The relay remains activated until the system successfully communicates a report to the receiver. |
| Communicating | 17 | Activates the relay output when the system seizes the phone line. The relay remains activated until the system releases the phone line. |

| Programmers / Keypad | | Description |
|----------------------|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ground Start | 18 | Activates the relay output for 900 milliseconds after the system seizes the phone line. Use this function to generate dial tone on ground start systems. Do not program both relays for this function, doing so may cause inconsistent relay operation. |
| Entry and Exit Delay | 19 | Relay provides a steady output during entry and exit delays. |
| Extended Delay | 20 | Relay provides a steady output during extended delay. The relay will not activate if you fault an extended delay point before you start exit delay, or if you bypass the extended delay point while you are in exit delay. |
| Pulsed Output | 21 | This function provides a continuous pulsed output. Do not assign this function to a relay without 'anding' it to another function. See Relay 1 (2) Logic (page 40). For example, 'anding' this function to the <i>Alarm</i> function results in pulsed output for the duration of Bell Time . The Pulsed Output does not activate when alarms from A, B, C Keys occur. |
| 2-Second Output | 22 | Provides a two-second output. 'And' this function to another function for a two-second output. See Relay 1 (2) Logic . For example 'anding' this function to the <i>Follow Point</i> function results in a two-second relay activation on a point fault. 2-Second Output does not activate when alarms from A, B, C Keys occur. Do not 'and' this function to the A,B,C Key, Momentary, A,B,C Key, Pulse, Ground Start, or Follow Alarm Output functions. Do not use this function for both Relay 1 and Relay 2. |
| RF, Light Key | 23 | Pressing the 'light' key (light bulb graphic) on RF keypads toggles this relay off and on. |
| Voice Request | 24 | The Voice Request relay function is intended for use with an optional 2-way Voice Verification Module. The Voice Request relay activates for two seconds when the acknowledgment of an alarm report from an Alarm Report Delay point (Digit 2 = 2, 3, 7, or 8) is received at the panel. Panels with firmware revision 2.5 or earlier, Relay Function 24 does not provide the Voice Request function. For those panels, Relay Function 24 is RF Special Key. |

RELAY PARAMETERS, for Keypad Programming Only!

The parameter prompts shown in the table that follows are for programming from the keypad.

If you didn't program one of the Relay Functions (the first four prompts in this group) with a Relay Function from 1 to 9 (see *Relay Selections, page 40*), or you left the RELAYS Group prompts at their defaults, leave the prompts below at their defaults.

If you selected a Relay Function from 1 to 9 you need to program a parameter for that function. Take care to read the instructions carefully.

Each relay parameter has its own group. Each prompt in the group allows you to assign a point or user to the relay function.

For example, if you chose Alarm for the relay 1 function 1, you would use the prompts in **Group 18, Relay 1, Func 1 Parameter**, to tell the system which points you wanted to activate the relay.

| Group | Prompt | Default |
|------------------------------|-----------------------|---------|
| 18 Relay 1, Func 1 Parameter | 1 Point 1 (or User 1) | No |
| | 2 Point 2 (or User 2) | No |
| | to . . . | No |
| | 24 Point 24 | No |
| 19 Relay 1, Func 2 Parameter | 1 Point 1 (or User 1) | No |
| | 2 Point 2 (or User 2) | No |
| | to . . . | No |
| | 24 Point 24 | No |
| 20 Relay 2, Func 1 Parameter | 1 Point 1 (or User 1) | No |
| | 2 Point 2 (or User 2) | No |
| | to . . . | No |
| | 24 Point 24 | No |
| 21 Relay 2, Func 2 Parameter | 1 Point 1 (or User 1) | No |
| | 2 Point 2 (or User 2) | No |
| | to . . . | No |
| | 24 Point 24 | No |

14. USER TEST

If the user presses 1 at the keypad and then enters their passcode, the system performs a user test. Prompts 1 to 3 tell the system what functions to perform for the user test.

1 *Usr Tst, Bell*

| | | |
|--------------------|----------------|------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1,0 |

Setting the *Usr Tst, Bell* prompt to Yes makes a bell test part of the user test. The system activates the Alarm Output (Terminals 4 and 5) for three seconds. Light 1 on the keypad winks for the duration of the test.

Set this prompt to Yes for UL 1023, Household Fire systems.

2 *Usr Tst, Battery*

| | | |
|--------------------|----------------|------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1,0 |

Setting the *Usr Tst, Battery* prompt to Yes makes a battery test part of the user test. Pressing 1 causes the system to run solely on battery power for four minutes. Light 1 winks while the panel is on battery power. If the battery voltage falls below 12.1 VDC during that four minutes the system restores AC power and displays a system trouble at the keypad by flashing the OK light. See System Troubles in the User's Guide.

The system sends a low battery report to the receiver.

Users can end the test by pressing the Clear key.

Set this prompt to Yes for UL 1023, Household Fire systems.

3 *Usr Tst, Comm*

| | | |
|--------------------|----------------|------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1,0 |

Setting the *Usr Tst, Comm* prompt to Yes makes a communication test part of the user test. When the user presses 1 and enters a passcode the system sends a test report to the receiver. Light 1 winks during the test. If the system fails to communicate with the receiver, the system goes into Communication Failure and displays a system trouble at the keypad by flashing the OK light. See *Check System* in the User's Guide.

The system makes five attempts to send the report if only one phone number is programmed. It makes ten attempts if two numbers are programmed. See **Phone 1, Phone 2**, in the *PHONE Group*, page 3.

15. PASSCODES

If you are programming from the keypad, you must exit the programming mode to program passcodes. Use Show User (the 6 key) and your installer passcode. Follow the instructions in the *Security System User's Guide*.

1 *Instlr Code*

Default: 654321
Selections: 0 to 9, Blank

654321
 0 to 9

Installers enter this passcode to perform keypad programming. They can also use it to perform tests and to change passcodes. You can not use the installer's passcode to turn the system Off.

The installer passcode always requires six digits. Even when the **Passcode Length** prompt (next prompt) is less than 6, you must enter six digits for this prompt. If you enter less than six digits and increase the **Passcode Length** later, the Installer Code is disabled.

The D5200 and remote programmers will not let you program the same passcode for the installer and a user. The system will prevent users changing their own passcodes at the keypad from duplicating the installer code. However, the system does not prevent installers programming from the keypad, from programming the same passcode for the installer and a user.

Use the D5200 or Remote Programmer to fill this prompt with spaces to disable the installer passcode.

2 *Passcode Length*

Default: 3
Selections: 3 to 6

3
 3 to 6

You can fix the length of user passcodes from 3 to 6 digits. All passcodes have the same length.

Warning! *If you shorten the passcode length after entering passcodes you could possibly create duplicate passcodes. For example, passcodes 1235 and 1236 both shorten to 123. If you lengthen passcodes you disable some. For example, if you add passcode 396 and then increase the passcode length to four digits, 396 becomes 396F. It is not possible to enter an F from the keypad. Passcode 396 has effectively been disabled.*

3 *Code 8 = Duress*

Default: No
Selections: Yes, No

0
 1, 0

Setting this prompt to Yes makes the passcode for User 8 the duress passcode. The passcode will operate the system normally and send a duress report to the receiver.

4 Passcode Rquired

| | | |
|--------------------|----------------|-------------|
| Default: | No | 0 |
| Selections: | Yes, No | 1, 0 |

Setting this prompt to Yes configures the system so that users have to enter a passcode to turn the system On (press 9, enter passcode).

Pressing 9 after entering the passcode turns the System All On with no delay (press 9, enter passcode, press 9).

To turn the system Part On users press 0 and then enter their passcode (press 0, enter passcode). Pressing 0 after entering the passcode turns the System Part On with no delay (press 0, enter passcode, press 0).

5 Change Passcode

| | | |
|--------------------|-------------------------|----------|
| Default: | Owner & User | 2 |
| Selections: | Disabled | 0 |
| | Owner | 1 |
| | Owner & User | 2 |

Disabled prevents any user from changing their passcode from the keypad.

Owner only allows type Owner type passcodes to change passcodes from the keypad.

Owner & User allows Owner and User types to change passcodes from the keypad.

The *Security System User's Guide* provided with each keypad contains complete instructions for changing passcodes from the keypad.

Prompts 6 through 21 allow you to choose Passcode Type and to input a unique passcode for up to 8 users.

Passcode-# Type

(There are 8 passcodes available. The “#” represents passcodes 1 to 8.)

Default: **Owner** (for User 1)
 Disabled (for Users 2 to 8)

Selections: **Disabled**
 Owner
 User
 One-Time

See User's Guide for instructions on setting Passcode Type from the Keypad.

Disabled disables the passcode.

Owner allows the user to change other users' passcodes and passcode types, and is required to configure the “Watch Tone” responses. All other user functions are also available.

User allows a user to change only their own passcode. A User passcode type can not change passcode type. A User can not change other users' passcodes. A User can not adjust “Watch Tone” responses. All other user functions are available.

One-Time allows the user to disarm the system one time. All other system functions are available. Owners can reactivate One-Time passcodes.

Passcode-#

(There are eight passcodes available. The “#” represents passcode number 1 to 8.)

Default: **123 (456)** for Passcode 1
 Blank for Passcodes 2 to 8

Selections: **0 to 9, Blank**

See User's Guide for instructions on setting User Passcodes from the Keypad.

The **Passcode #** prompt sets the passcode for each user.

The passcode length for all passcodes is set by the **Passcode Length** prompt. Enter the number of digits for the passcode set by the **Passcode Length**.

Note that **Usr 1 Passcode** in the default program is 123456. **Passcode Length** in the default program is set at 3. Effectively, the passcode for User 1 is 123.

- If you change **Passcode Length** to 4, the Passcode 1 becomes 1234.
- If you change **Passcode Length** to 5, the Passcode 1 becomes 12345.
- If you change **Passcode Length** to 6, the Passcode 1 becomes 123456.

16. RF PARAMETERS

Use the prompts in this group to configure the system for Premises RF devices. If you don't intend to use RF devices, there is no need to change these prompts from their defaults.

| |
|--------------------------------------|
| 1 <i>Supervision Interval</i> |
|--------------------------------------|

Default: **24 (hours)**
Selections: **12, 24**

| |
|-----|
| 1 |
| 0,1 |

The ***Supervision Interval*** is the number of hours the RF receiver waits to hear from an RF point before it sends a missing report to the receiver for that point.

DANGER!

If you're programming from the keypad you can lock yourself out of the panel by changing prompts in this group from their defaults!

17. PROGRAM LOCK

Use the prompts in this group to return all prompts to their factory defaults, lock out programming from the keypad, and disable the system.

| |
|----------------------------------------------------------------|
| 1 Return to Default <i>(Keypad Programming Only)</i> |
|----------------------------------------------------------------|

Default: ***This prompt only appears when programming from the Keypad.***

Selections:

0

1,0

This prompt only appears during Keypad programming. Entering 1 returns all prompts to their factory defaults. The change occurs when you press the Modify key after making your entry. See *Keypad Programming* on the next page for instructions on using the Modify key.

The DataLock code does not return to its default. DataLock codes can only be changed using the D5200 programmer or a remote programmer.

| |
|-----------------------|
| 2 Program Lock |
|-----------------------|

Default: **No**

Selections: **Yes, No**

0

1, 0

Set this prompt to Yes to prevent programming from the keypad. Use the D5200 or a remote programmer to re-activate keypad programming.

Programming from the Keypad? Don't accidentally lock yourself out of the panel's keypad programming feature by changing this prompt to 1. Changes to this program item take effect when you exit keypad programming.

| |
|-------------------------|
| 3 Disable System |
|-------------------------|

Default: **No**

Selections: **Yes, No**

0

1, 0

Set this prompt to Yes to disable the system. Point processing stops and the keypad stops functioning when you unlock the Standby Pin at the conclusion of the programming session. Keypads indicate a system trouble. Text keypads display "DISABLE" and the text you programmed in ***Custom Service Text***.

Warning! ***You cannot enable the system from the keypad after setting this prompt to Yes. The system turns off all user and installer functions.***

You must use the D5200 programmer or a remote programmer to enable the system after using this prompt to disable it.

Keypad Programming

Getting Started

Text Keypad Required: You must have a text keypad with its address set to 1 connected to the panel to use keypad programming. You can not program from an LED keypad. You don't need to leave the text keypad connected to the system after the programming session.

You do not have to reserve an address for a text keypad to use keypad programming. When the standby switch is locked down, the system will allow you to use a text keypad with its address set to 1 for keypad programming, even though address 1 may be programmed for another device.

Follow the steps below to start keypad programming.

1. Lock the Standby Switch down. You must connect a D222 Text Keypad (Address set to 1) to the panel to program. The D222 can be removed after programming.
2. Press the **1** key on the D222 keypad.
3. Enter your "Installer" passcode. The default Installer passcode is 654321. The default passcode length is 3, so if you have not changed the default entries, press **654**.
The keypad begins scrolling the installer menu.
4. Press the **8** key to enter keypad programming, View Mode. If you press the CLEAR key now the keypad exits the programming mode and returns to the installer menu.

View Mode

What's View Mode?

In View Mode you are able to 'view' each program prompt. You must enter the Modify Mode to make changes for any prompt. When you first enter View Mode you are at Group 1, Prompt 1. The example below shows Group 1, Prompt 1, Account Number, with an entry of 1234.

| |
|------|
| 1.1 |
| 1234 |

The group and prompt number appear in line 1. For most prompts, the current entry for the prompt is in line 2. The exceptions are the prompts containing phone numbers, Phone 1, Phone 2, and RAM Phone. The first seven characters for these prompts appear on line 1 with the group and prompt numbers. The remaining characters appear on line 2.

View Mode Keys

- A-Key** Pressing the A-Key while in View Mode enters Modify Mode where you can change the entry for a prompt. Modify Mode is described in the next section.
- B-Key** Pressing the B-Key in View Mode moves you to the first prompt in the previous group.
If you were at 3.2 (group 3, prompt 2), pressing the B-Key would move you to 2.1 (group 2, prompt 1).
- C-Key** Pressing the C-Key in View Mode moves you to the first prompt in the next group.
If you were at 3.2 (group 3, prompt 2), pressing the C-Key would move you to 4.1 (group 4, prompt 1).
- *-Key** Pressing the *-Key in View Mode moves you to the next prompt in the group.
If you are at the last prompt in the group when you press the * key the system wraps to prompt 1.
- Clear** Pressing the Clear-Key in View Mode exits keypad programming.

Modify Mode

What's Modify Mode?

In Modify Mode you are able to 'modify' the entry for any prompt. Pressing the A-Key in view mode puts the system in modify mode. MOD (short for modify) appears to the right of the group and prompt numbers. See below.

| |
|--------------|
| 1.1 MOD B |
|--------------|

The current entry for the prompt is cleared from line 2 of the display. The first character of the scroll list appears in the leftmost position of the display. Using the scroll list to complete the new entry is described below. See *Keys* below.

Even though the current value of the prompt was cleared when you entered modify mode, you can leave modify mode and return to view mode without changing the entry by pressing the Clear key.

Modify Mode Keys

- A-Key** Pressing the A-Key while in View Mode enters Modify Mode. Pressing the A-Key while in Modify Mode writes the displayed value to panel memory and returns to View Mode. The display shows the new value. Because the system is no longer in modify mode, MOD is no longer appears to the right of the group and prompt numbers.
- B-Key** Pressing the B-Key in Modify Mode scrolls backward through the scroll list of characters. See *Scroll Lists* below.
- C-Key** Pressing the C-Key in Modify Mode scrolls forward through the scroll list of characters. See *Scroll Lists* below.
- *-Key** Pressing the *-Key in Modify Mode accepts the character displayed in the current character position and then moves one character position to the right.
Do not press the star key unless you intend to enter another character to the right of the current character position.
If your entry is complete, press the A-Key to accept your entry.
- Clear** Pressing the Clear-Key in modify mode exits modify mode and returns to view mode with out changing the current value of the prompt.
- 0 to 9** Pressing the 0 to 9 keys in modify mode enters the corresponding digit in the display in the current character position. You must press the * key to move to the next character position.

Scroll Lists

Many prompts have alphabetic characters as valid entries. Scroll lists allow you to enter alphabetic and other special characters without having to enter numeric 'codes' for these non-numeric characters.

When you press the A-Key to move to modify mode from view mode the system erases the current value of the prompt from the display, adds 'MOD' to the right of the group and prompt numbers in the top line of the display, and displays the first character of the scroll list in the leftmost character position of the bottom line of the display.

Scroll lists display allowable alphabetic characters (A to Z) first, then the allowable numeric characters (0 to 9), then the special characters (! # ' , - / : < >), and finally the 'space' character.

The C-Key moves forward through the scroll list. The B-Key moves backward through the scroll list.

Yes and No Entries

In view mode the system spells out YES or NO for Yes/No prompts. When you enter modify mode the system always displays N for no. Pressing either the B-Key or C-Key toggles Y for yes into the display.

An Example, Entering Custom Text

There are four types of custom text you can program for the system. Idle text, Service text, ABC key text, and point text.

The example below describes the procedure for entering custom text at the keypad. You may find it helpful to set up the system and try entering the text as shown. We'll change the default point text for point 2, 'PT2 PART/DELAY', to 'GARAGE'.

The procedure starts from the first prompt in view mode.

The first display in view mode appears below.

```
1.1
0000
```

Note that the second line shows the factory default for the first prompt in the first group (1.1), 0000.

Press the C-Key eleven times to scroll the display to the first prompt in group 12.

```
12.1
PT1 FIRE/VERIFY
```

Press the *-Key to move to the second prompt in group 12.

```
12.2
PT2 PART/DELAY
```

Press the A-Key to enter Modify mode. 'MOD' appears to the right of the group and prompt numbers. 'A' replaces the default text in the second line. 'A' is the first character in the scroll list.

```
12.2 MOD
A
```

For this example we're entering 'GARAGE' for the point 2 custom text. Press the C-Key to scroll forward through the scroll list. After the first press, the display shows 'B' in the second line of the display.

```
12.2 MOD
B
```

Press the C-Key five more times to scroll 'G' into the display.

```
12.2 MOD
G
```

Press the *-key to accept the 'G' and move to the second character position in line 2. 'A' appears in the second position.

```
12.2 MOD
GA
```

Press the *-key to accept the second letter, 'A' , and move to the third character position in line 2. 'A' appears in the third position.

```
12.2 MOD
GAA
```

Press the *-key until 'R' appears in the display, then press * to accept the 'R' and move to the fourth character position. 'A' appears in the fourth position.

Continue using the C-key and the *-key to enter GARAGE.

Did you remember not to press the *-key when the 'E' appeared in the display?

If you didn't the display now looks like this:

```
12.2 MOD
GARAGEA
```

If your display looks correct (GARAGE appears in the second line) go ahead and add the 'A' by pressing the *-key so we can show you how to recover.

You can quickly remove the last 'A' by pressing any of the numeric keys (0 to 9) to backspace.

Now the display looks like the figure below.

```
12.2 MOD
GARAGE
```

Press the A-Key to exit Modify mode. 'MOD' disappears from the display. You're back in view mode, looking at the entry you just made. Make sure it's correct before moving to the next prompt.

Keypad Programming Tips

- Be careful when backspacing, you can backspace beyond your entry and into the first line of the display. If this happens, press the Clear-key and start your entry over again.
- Remember you can exit Modify Mode at any prompt without changing the entry by pressing the clear key.
- When you're not sure of your entry or where you're at while keypad programming pressing the Clear key is always the safest action to take.
- View Mode will always show you the current value of any prompt.
- Numbers can be entered directly, except at prompts for custom text. For example, to enter a '5' in the telephone number, you can press the 5-key. You don't have to use the scroll list.
- Remember the B-key scrolls you backwards through scroll lists. Sometimes the quickest route to the character you want is backwards. For example, the quickest way to get from the first character in the text scroll list, 'A' to the 'space' character, the last character, is by pressing the B-key.

Notes

| | | | |
|------------------------------|------------------------------------------------|---------------------------|-------------------------------------------------|
| E | | N | |
| Easikey | 1 | No Delay | 19 |
| entry delay | 18, 27, 28, 29, 30, 31, 33 | Non-Fire alarm reports | 4 |
| Entry Dly Time | 18 | Non-Fire Group | 13 |
| Excursion | 19 | Non-Fire Route | 4 |
| Exit | 20 | | |
| exit delay1 | 10, 19, 20, 23, 28, 29, 30, 31, 32, 37, 42, 43 | O | |
| Exit Dly Time | 18 | O/C Rpts-All On | 6 |
| Exit Tone | 19 | O/C Rpts-Part On | 6 |
| Extended Delay | 18, 31, 36, 43 | Off with Passcode | 42 |
| Extended Dly | 18 | One-Time passcodes | 48 |
| | | OPEN/CLOSE | 18 |
| F | | Opening Group | 13 |
| factory defaults | 50 | Opening reports | 4, 6 |
| Fire alarm reports | 4 | Opening Route | 4 |
| Fire Group | 13 | | |
| fire point | 4, 10, 12, 13, 23, 27, 28, 32, 33 | P | |
| Fire Route | 4 | Part On | 42 |
| Fire with Alarm Verification | 28 | Partner Point | 9, 28, 33, 36, 37 |
| Follow Point | 42 | Passcode Length | iv, 46, 48 |
| | | Passcode Rquired | 47 |
| G | | Passcode Type | 47 |
| Getting Started | 51 | Passcode-# | 48 |
| Good-bye | 11 | Passcode-# Type | 48 |
| Ground Start | 43 | PASSCODES | 46 |
| | | Phone 1 | ii, iii, 4, 5, 10, 14, 45, 51 |
| H | | Phone 2 | iii, 4, 5, 10, 14, 45, 51 |
| Hours to Next | 24 | PHONE Group | 3 |
| | | Phone Routing | 3, 4 |
| I | | Point Code | iv, 1, 7, 9, 11, 18, 19, 20, 27, 34, 35, 37, 39 |
| installer passcode | 46 | point expanders | 26, 35 |
| Instlr Code | 46 | POINT TEXT | 39 |
| | | Point Trouble | 42 |
| K | | Point User Flag | 8 |
| Keypad Programming | ii, iv, 44, 50, 51, 54 | PROGRAM LOCK | 50 |
| Keyswitch | iii, 1, 9, 10, 13, 14, 30, 33, 36, 37, 38 | Pt Trbl Group | 13 |
| | | Pt Trbl Route | 4 |
| L | | pulse format | 12 |
| lock out | 50 | Pulse Report Group Table | 13 |
| low battery report | 45 | Pulse Report Groups | 12 |
| | | Pulsed Output | 43 |
| M | | R | |
| Minutes to Next | 25 | RAM Access Fail reports | 5 |
| Modem II | 6, 8, 9, 10, 11, 13 | RAM Access OK reports | 5 |
| Modify Mode | iv, 51, 52, 53, 54 | RAM Passcode | 16 |
| Modify Mode Keys | 52 | RAM Phone | 16 |
| momentary keyswitch | 1 | Rcvr Format | 9 |
| Motion Detector | 27, 37 | Re-Boot reports | 5 |
| | | RECEIVER | 9 |
| | | Relay 1 Func 1 | 41 |
| | | Relay 1 Func 2 | 41 |
| | | Relay 1 Logic | 40 |
| | | Relay 1, Func 1 Parameter | 44 |
| | | Relay 1, Func 2 Parameter | 44 |

| | | | |
|---------------------------|--------------------------------------|-------------------------------------|----------------|
| Relay 2 Func 1 | 41 | Sys Trbl Group | 14 |
| Relay 2 Func 2 | 41 | Sys Trbl Route | 5 |
| Relay 2 Logic | 40 | SYSTEM CONFIGURATION | iii, 1, 32 |
| Relay 2, Func 1 Parameter | 44 | system trouble | 8, 45, 50 |
| Relay 2, Func 2 Parameter | 44 | | |
| Relay Function Logic | 40 | | |
| Relay Function Selections | 41 | T | |
| Relay Functions | 41 | Technical Communications Department | ii |
| Relay Output 1 | 41 | Test Group | 15 |
| Relay Output 2 | 41 | Test Interval | 24 |
| relay outputs | 21, 40 | Test reports | 5 |
| RELAY PARAMETERS | 44 | Test Route | 5 |
| RELAYS | 40 | TEST TIMER | 24 |
| remote programmer | 5, 9, 10, 11, 14, 16, 24, 25, 46, 50 | | |
| REMOTE PROGRAMMING | 16, 17, 24 | | |
| REPORTS | 6 | U | |
| Reset | 42 | UL 1023 | 45 |
| Reset Bye | 24, 25 | User 8 | 46 |
| Reset-Bye | 11 | USER TEST | 45 |
| Restoral Group | 13 | Usr 1 Passcode | 48 |
| restoral reports | 7, 8, 32 | Usr Tst, Battery | 45 |
| Restoral Route | 4 | Usr Tst, Bell | 45 |
| Restoral Rpts | 8 | Usr Tst, Comm | 45 |
| Restricted O/C | 6 | | |
| Return to Default | 50 | V | |
| RF devices | 49 | View Mode | iv, 51, 52, 54 |
| RF keypad | 28, 35, 36, 37, 43 | View Mode Keys | 51 |
| RF PARAMETERS | 49 | Voice Active | 28 |
| RF Point Expander | 26, 34, 35 | Voice Request | 43 |
| RF, Light Key | 43 | Voice Verification | 7 |
| RF, Special Key | 43 | Voice Verification Module | 7, 28 |
| | | | |
| S | | W | |
| Scroll Lists | 52, 54 | Watch Tone | 42, 48 |
| SDI number | 11 | Watchdog | 5 |
| Service Start | 5 | | |
| Service Stop | 5 | Y | |
| SIA | 1, 7 | Yes and No Entries | 53 |
| silent points | 23 | | |
| Single Ring | 23 | Z | |
| Smoke Detector | 37 | ZONEX format | 8 |
| Standby Pin | 5, 11, 24, 25, 50, 51 | | |
| Step Outside | 19 | | |
| Supervision Interval | 49 | | |
| Swinger Bypass | 1, 32 | | |
| Swinger Count | iii, 1, 11, 32 | | |
| Sys Res Group | 14 | | |
| Sys Res Route | 5 | | |



1800 Abbott Street Salinas, CA 93901

Customer Service (800) 538-5807

™ The Radionics logo is a registered trademark of Radionics, Inc., Salinas, CA, U.S.A.
© 1997 Radionics, Inc., Salinas, CA, U.S.A. All rights reserved.