


INSTALLATION INSTRUCTIONS

MOUNTING THE CP-120

Depress the latch with a screwdriver to separate the two covers.

Secure the rear cover to the wall with the screws provided. If the wall is made of drywall or plaster, drill holes into the wall and install the plastic screw inserts provided; then secure the rear cover to wall. *For optimum performance, the CP-120 should be mounted with the microphone aimed downward.*

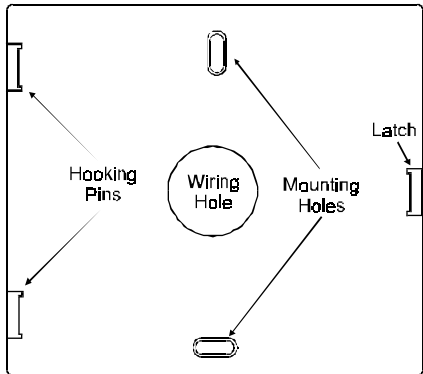

REAR COVER

Insert the wires through the hole in the rear cover.

Align the hooking pins and latch on the rear cover with the front cover. Press firmly. The two covers will lock into place.


(See reverse for wiring instructions)

INSTALLATION INSTRUCTIONS

WIRING THE CP-120


Pass the 6-wire telco cable through the opening in the rear cover and connect to phone jack J1.

All connections, including power, are made through the telco cable. The CP-120 is supplied with a 25 ft. cable. Cable length should not exceed 200 ft.

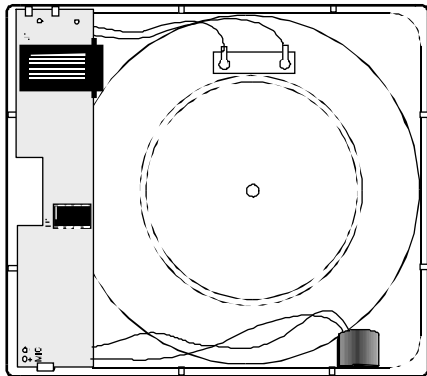

FRONT COVER

If your application requires a longer cable, use the diagram below for making a replacement cable:

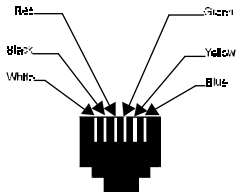

Use RJ11 connector.

(See reverse for mounting instructions)