


**ADT Unimode 5 & Unimode 200
AC Terminal Block Cover
Product Installation Drawing**

Document 50369 Rev B 6/11/97 ECN 97-212

CAUTION! Make certain all power is removed before any connections are made.

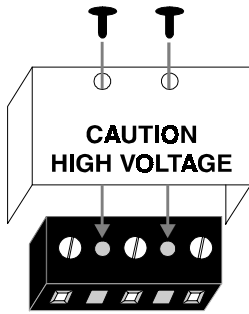

1. Connect AC power wiring to Terminal TB1 on the Unimode 5 main circuit board or TB8 on the Unimode 200 main circuit board.
2. Position the enclosed terminal block cover over TB1 on the Unimode 5 or TB8 on the Unimode 200, making certain to align the two holes in the cover with the two unused holes in the terminal block.
3. Secure the terminal block cover with the two supplied plastic studs by placing the studs in the cover holes and pressing firmly until seated in the terminal block.

4. To remove the terminal block cover for servicing, make certain AC power has been disabled.
5. Carefully pry the two studs from the cover and terminal block and lift the terminal block cover from the terminal block. **CAUTION! Do not attempt to remove the studs by grasping and lifting the terminal cover. Damage to the cover and/or terminal block may result.**

