



OLS120/220 Supervised Power Supply/Charger

Overview:

The OLS120/220 is a power limited supply/chargers that will convert a 220VAC 50/60Hz input, into a 12VDC or 24VDC power limited output, with 4 amps of continuous supply current (see specifications).

Specifications:

- Switch selectable 12VDC or 24VDC **power limited output.**
- Input 220VAC 50/60Hz, .48 amp.
- Maximum charge current .5 amp.
- 4 amps continuous supply current at 12VDC and 24VDC.
- Filtered and electronically regulated outputs.
- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switch over to stand-by battery when AC fails (zero voltage drop).
- AC input and DC output LED indicators.
- AC fail supervision (form "C" contacts).
- Low battery supervision (form "C" contacts).
- Short circuit and thermal overload protection.
- Includes battery leads.

Specified at 25° C ambient.

Power Supply Voltage Output Specifications:

Output VDC	Switch Position	Max. Load DC
12VDC	SW 1 - Closed	4 amps
24VDC	SW1 - Open	4 amps

Installation Instructions:

The OLS120/220 should be installed in accordance with The National Electrical Code and all applicable Local Regulations.


1. Mount the OLS120/220 in desired location.
2. Set the OLS120/220 to desired DC output voltage via SW1 (see power supply voltage output selection chart).
3. Connect AC power to terminals marked [L & N], connect ground to terminal marked [G].
Use 18 AWG or larger for all power connections (Battery, DC output).
Use 22 AWG to 18 AWG for power limited circuits (AC Fail/Low Battery reporting).
Keep power limited wiring separate from non-power limited wiring (115VAC 50/60Hz Input, Battery Wires). Minimum .25" spacing must be provided.
4. Connect devices to be powered to terminals marked [+ DC -].
Note: It is good operating practice to measure and verify output voltage before connecting devices to ensure proper operation of equipment.
5. When the use of stand-by batteries are desired, they must be lead acid or gel type.
Connect battery to terminals marked [- BAT +] (battery leads included).
Use two (2) 12VDC batteries connected in series for 24VDC operation.
Note: When batteries are not used a loss of AC will result in the loss of output voltage.
6. Connect appropriate signaling notification devices to AC Fail & Low battery supervisory relay outputs marked [N.C., C, N.O.].

LED Diagnostics:

Red (DC)	Green (AC)	Power Supply Status
ON	ON	Normal operating condition
ON	OFF	Loss of AC, Stand-by battery supplying power
OFF	ON	No DC output
OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output.

Terminal Identification:

Terminal Legend	Function/Description
L, G, N	Connect 220VAC 50/60Hz to these terminals: L to Hot, N to Neutral, G to ground.
+ DC -	12 / 24VDC 4 amps continuous power limited output.
AC FAIL N.O., C, N.C.	Used to notify loss of AC power, e.g. connect to audible device or alarm panel. Relay normally energized when AC power is present. Contact rating 1 amp @ 115VAC / 28VDC
Low Battery N.O., C, N.C.	Used to indicate low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1 amp @ 115VAC / 28VDC Low battery threshold: 12VDC output threshold set @ approximately 10.5VDC, 24VDC output threshold set @ approximately 21VDC.
- BAT +	Stand-by battery connections. Maximum charge rate .5 amp.

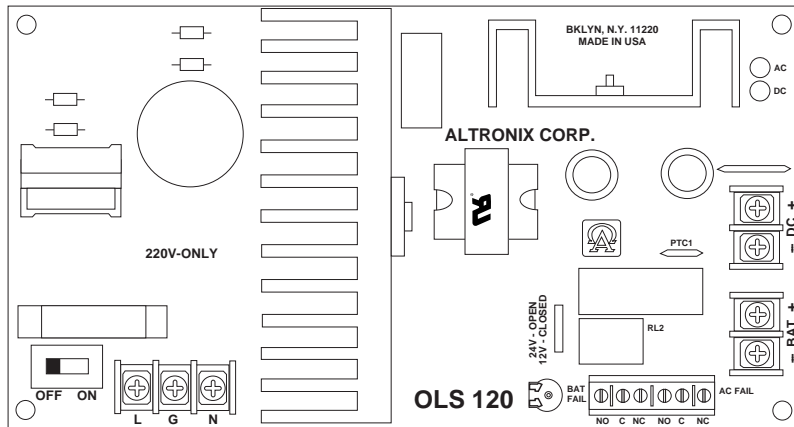

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

