




SMP5PM Supervised Power Supply/Charger

Overview:

The SMP5PM is a supervised power limited supply/chargers that will convert a low voltage AC input, into a 12VDC or 24VDC power limited output, with 4 AMP of continuous supply current (see specifications).

Specifications:

- Switch selectable 12VDC or 24VDC **power limited output**
- Maximum charge current .5 AMP
- 4 AMP continuous supply current at 12-24VDC
- Filtered and electronically regulated outputs
- Built-in charger for sealed lead acid or gel type batteries
- Automatic switch over to stand-by battery when AC fails (zero voltage drop)
- AC input and DC output LED indicators
- AC fail supervision (form "C" contacts)
- Low battery supervision (form "C" contact)
- Short circuit and thermal overload protection
- Includes battery leads

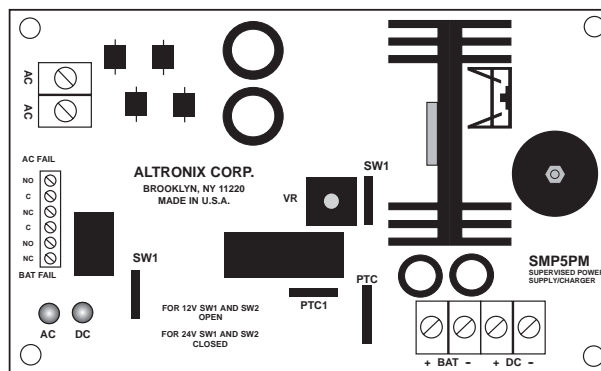

Board Dimensions: 6.5”L x 3.5”W x 1.75H

Specified at 25° C ambient.

Voltage Output/Transformer Selection Table:

Output VDC	Switch Position	Max. Load DC	Transformer Requirement (Recommended Altronix Part #'s)
12VDC	SW 1, 2 Open	4 AMPS	24 VAC / 100 VA (T24130 or T2885)
24VDC	SW1, 2 Closed	4 AMPS	28 VAC / 175 VA (T28140)

Note: Transformers with higher VA ratings may be used for all output voltages above as long as you do not exceed 28VAC or 45VDC.

Installation Instructions:

The SMP5PM should be installed in accordance with The National Electrical Code and all applicable Local Regulations.

1. Mount the SMP5PM in desired location.
2. Set the SMP5PM to desired DC output voltage via SW1 (see voltage output/transformer selection table).
3. Connect proper transformer to terminals marked AC (see voltage output/transformer selection table).
Use 18 AWG or larger for all power connections (Battery, DC output).
Use 22 AWG to 18 AWG for power limited circuits (AC Fail/Low Battery reporting).
4. Connect devices to be powered to terminals marked + DC -.
Note: It is good operating practice to measure and verify output voltage before connecting devices to ensure proper operation of equipment.
5. When the use of stand-by batteries are desired, they must be lead acid or gel type.
Connect battery to terminals - BAT + as marked on the unit (battery leads included).
Use two (2) 12VDC batteries connected in series for 24VDC operation.
Note: When batteries are not used a loss of AC will result in the loss of output voltage.
6. Connect appropriate signaling notification devices to AC Fail & Low battery supervisory relay outputs marked NC, C, NO.


LED Diagnostics:

Red (DC)	Green (AC)	Power Supply Status
ON	ON	Normal operating condition
ON	OFF	Loss of AC, Stand-by battery supplying power
OFF	ON	No DC output
OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output

Terminal Identification:

Terminal Legend	Function/Description
AC/ AC	Low voltage AC input (see voltage output/transformer selection table). For 12VDC output use 16VAC or higher with 85 VA power rating or higher. For 24VDC output use 28VAC with 140 VA power rating or higher. Caution: Do not apply voltages above 28 VAC (28 VAC is maximum input rating)
+ DC -	12 / 24VDC 4 AMP continuous power limited output.
AC FAIL NC, C, NO	Used to notify loss of AC power, e.g. connect to audible device or alarm panel. Relay normally energized when AC power is present. Contact rating 1AMP @ 120VAC / 28VDC
Low Battery NC, C, NO	Used to indicate low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1AMP @ 120VAC / 28VDC. Low battery threshold: 12VDC output threshold set @ approximately 10.5VDC, 24VDC output threshold set @ approximately 21VDC.
- BAT +	Stand-by battery connections. Maximum charge rate .5 AMP.

Maximum input voltage not to exceed 28VAC

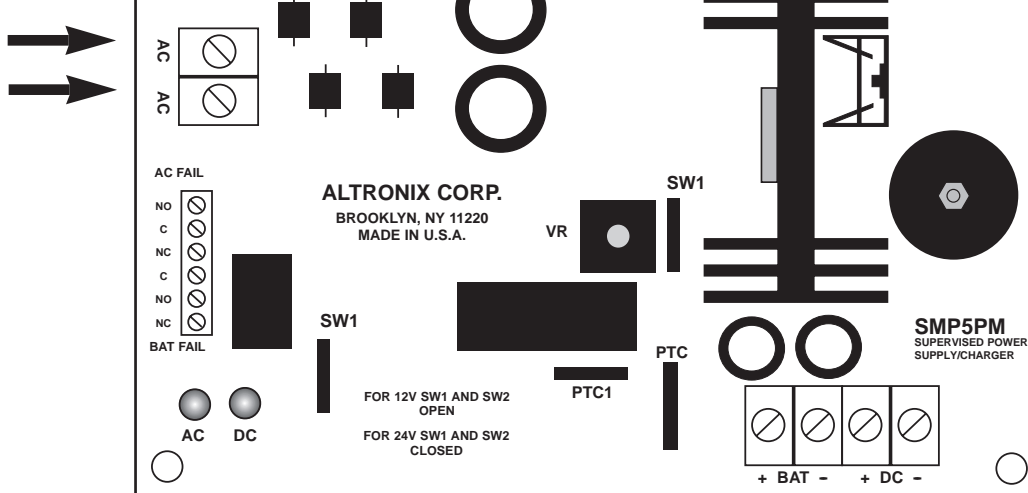

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.



Altronix Corp.
140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
website: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.