## WIRING INSTRUCTIONS

1845 W. 205th Street. Torrance, CA 90501-1510

**MODEL MDC-16 SERIES** 

**CONTROL COMMUNICATORS** 

## TERMINALS

- 16 VAC Class II plug in transformer (20 VA maximum). Use #18AWG twisted 1 & 2 pair and keep wire run as short as possible.
- Earth Ground these terminals should be connected to a metallic cold water 3 & 4 pipe or equivalent. Use minimum #16 AWG wire and approved ground clamps (not furnished). Keep ground wires as short as possible.
  - Earth Ground (cold water pipe) Connect with approved type of ground clamp 4 (not furnished). Use #16AWG wire (or larger) and keep wire run as short as possible. This terminal is the circuit ground (common) and provides reference for ground fault detection.
- Auxiliary Power 12 V DC, terminal 5 is negative, terminal 6 is positive. 5, 6 Detection devices such as ultrasonic, passive infrared, photoelectric sound discriminator, etc. may be powered from these terminals.

Prior to connecting devices to these power terminals you must calculate the total power consumption of all devices used in the system. Be certain that the total current does not exceed 800 mA continuous.

When calculating total current you must consider: remote stations, alarm bell (terminals 51, 52) smoke detectors (terminals 49, 50) and the devices to be connected to these terminals.

Each MPC-32D = 70 mA. Each MPC-32DL = 70 mA at its lowest brightness level. Each brightness level increases the current draw by 10 mA to a maximum of 150 mA at maximum brightness.

- Tamper Switch (optional for cabinet). If an internal cabinet tamper is desired connect a Normally Closed (push to close) switch to these 7,8 terminals. If a tamper switch is not used, these terminals should be strapped together. Optional Equipment: Tamper Switch - Model TS/B (8403-0220).
- 9, 10, 11, 12 Remote Station Use of these terminals is optional. If a standard momentary keyswitch is required for only arming and disarming the system it may be connected to these terminals. Only LED indicators can be used and the maximum current available for the LED's is 100 mA.
  - 9 Keypad Power + 10 Status LED
  - 11 Armed LED
  - 12 Momentary Switch
  - Maximum allowable loop resistance to keyswitch is 500 ohms. NOTE 1:
  - Total current used may not exceed 100 mA and must be NOTE 2: considered part of available auxiliary power. (Average remote LED = 20 mA)

13, 14 Remote Stations - MPC-32D & MPCP32DL Controls

15. 16 The installation of up to four (4) MPC-32D's is allowed in the System.


To eliminate possible interference from extraneous sources, the data pair terminals 13 and 14 must be minimum #22 AWG twisted pair.

To enhance RFI and EMI rejection, the data pair must be terminated with an end-of-line resistor.

We suggest that keypads be wired in a daisy chain manner as shown in Fig. 1. In this configuration a 150 ohm terminating resistor is installed across the data pair at the last keypad.

NOTE: When using the ET or ETX version of the MDC Control Communicators, you may also use the MPC-8D or MPC-8D/L Keypads.






If the installation requires home run wiring (see Fig. 2) from each keypad to the control panel, a terminating resistor will be necessary across the data pair at each keypad. The value of the resistor will be as follows:

- 1 Keypad = 150 ohms
- 2 Keypads = 300 ohms each
- 3 Keypads = 450 ohms each
- 4 Keypads = 600 ohms each

NOTE: Resistors of these values may not be readily available from your supplier. Therefore, select a resistor value as close to, but greater than, the specified value. A 1/4 watt resistor will be adequate.

## HOME RUN EXAMPLE:

FIG. 2

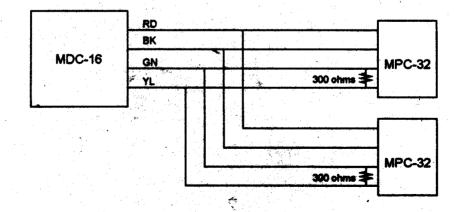

Each keypad must have its address selected by setting the two dip switches located on the back of the keypad. MPC-32D's, MPC-32DL's will each be addressed (per model) as number 1 thru 4 as follows:

SW	ITCH	A	В
	unit	Off	Off
2nd	unit	0n	Off
	unit	Off	On
4th	unit	On	On

NOTE: If keypad wires will be homerun to MDC-16, limit these distances to 100 feet maximum.

Keypad connections are

MDC-16	MPC-32D	
Data 13	Yellow }	150 ohms
Data 14	Green	Terminating
Ground 15	Black	Resistor
Power 16	Red	

Each MPC-32D = 70 mA (maximum 4)
Each MPC-32DL = 70 mA (lowest brightness level)
= 150 mA (maximum brightness level)

17 thru 48 Protection Loops Zone 1 thru zone 16 are connected to these terminals as indicated in Fig. 3 (Pg. 6).

All loops are two wire and may be wired as the following "Loop Types".

- 1. Normally Open: This loop requires the use of detection devices or switches that close (short) on alarm.
- 2. Normally Closed: This loop requires the use of detection devices or switches that open on alarm.
- 3. Normally Open and Normally Closed: This loom requires an end of line resistor (2.2 K ohms) and will accept both types of switch operation (open or closed).
- 4. Normally Open with Trouble Report on Break: This loop requires an end of line resistor (2.2 K ohms) and detection devices or switches that "close" (short) on alarm. An open condition (loss of 2.2 K ohms resistor) will produce: a trouble condition.
- 5. Normally Closed with Trouble Report on Short: This loop requires an end of line resistor (2.2 K ohms) and detection devices or switches that "open" on alarm. A short will produce a trouble condition.

49, 50 Smoke Detector Power 12 V DC is provided. Terminal 49 is negative, terminal 50 is positive. The positive side is interrupted for 5 seconds to reset the smoke detectors. Refer to Operating Instructions for Reset procedure from the Personal Control. To meet UL 864 fire protective signalling systems, you must use four-wire smoke detectors and Model MDC-FSM Fire Supervisory Model (see Installation Instructions).

NOTE: The current used from these terminals must be included in calculating auxiliary power available from terminals 5 & 6.


51, 52

Alarm Bell 12 V DC is provided. Terminal 51 is negative, terminal 52 is positive. The positive terminal is the one being switched ON and OFF. The bell should be connected with 18 AWG wire as a minimum. See MDC-FSM Installation Instruction Manual for Bell Supervision.

NOTE: The current used from these terminals must be included in calculating auxiliary power available from terminals 5 & 6.

53, 54 Speakers (Siren driver output) Connect speakers, minimum 8 ohms, to these terminals:

## **EXAMPLES:**

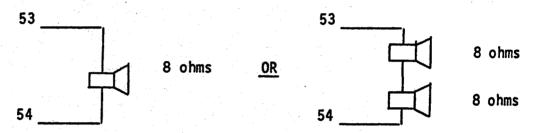


55, 56
(6)
Listen-In A listen in preamplifier (maximum 100 mA) may be connected. Terminal 55 is the audio connection, terminal 56 is the negative power and terminal 6 is the positive power.

NOTE: The current used by the preamplifier must be included in calculating auxiliary power available from terminals 5 & 6.

57, 58, 59 Auxiliary Relay #2 Form "C" dry contacts. Terminal 57 is the relay common Terminal 58 is the Normally Closed contact which will open during alarm. Terminal 59 is the Normally Open contact which will close during alarm.

NOTE: If the MDC-16 has been programmed for Battery Test, the transformer must be wired as shown.

Relay #2 normally closed contact terminals 57 and 58 will open two minutes after disarming the system. This will cause the control/communicator to operate from the battery for the programmed time.

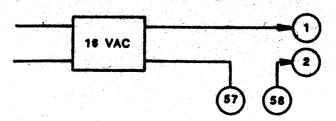

- 60, 61, 62

  Auxiliary Relay #1 Form "C" dry contacts. Terminal 60 is the relay common. Terminal 61 is the Normally Closed contact which will open during alarm. Terminal 62 is the Normally Open contact with will close during alarm.
- Radio Transmitter Key These terminals are normally open and will close on alarm. When programmed for R.F. transmission, the data to be transmitted will appear on terminals 67 and 68. Refer to hookup diagram for RF-RM1 for further details.
- Telephone Line Connections Provisions are made for two telephone lines. When programmed for their use, the communicator will have the ability to call out on both lines. Full line seizure will assure that house phones are disconnected from the telco network while the communicator is in operation.

	65 Premise Tip 66 Premise Ring	To house phones
PHONE LINE #2	67 Telco Ring 68 Telco Tip	From Telco
	69 Premise Tip 70 Premise Ring	To house phones
PHONE LINE #1	71 Telco Ring 72 Telco Tip	From Telco

BATTERY PLUG: Use battery type 12 volt 1.8 amp-hr Morse Model RB-1215 or 12 volt 6.5 amp-hr Morse Model RB-1265 or equivalent.

