

PORTABLE PANIC BUTTONS Model # 60-035

The Portable Panic Button has <u>not</u> been investigated by Underwriters Laboratories.

Portable, hand held "panic" transmitters can be carried about the house. They are used as panic buttons typically to activate 24-hour "police emergency" alarms or 24-hour "medical emergency" alarms. They could, however, be programmed to any Sensor Number from 02 to 76.

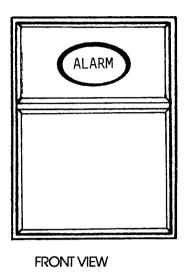

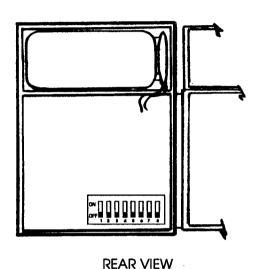

PORTABLE PANIC BUTTON

NOTE: PORTABLE PANIC BUTTONS DO NOT SEND A SUPERVISORY SIGNAL AS DO OTHER TRANSMITTERS. This is so they can be taken from the house without causing supervisory reports to be sent to the Central Station indicating they are missing. Because the portable panic button does not test itself through the use of supervisory signals it is important to instruct the customer to test the device regularly.

PROGRAMMING THE "PORTABLE PANIC BUTTON"

Program the Portable Panic Button's proper HOUSE CODE and SENSOR NUMBER by properly setting the switches on an eight position dip switch on the transmitter's PC board.

Switches 1 and 2 set the HOUSE CODE; 3-5 the first digit of the SENSOR NUMBER; and 6-8 the second digit of the SENSOR NUMBER.

SELECTING THE "HOUSE CODE"

To select the correct HOUSE CODE you must correctly set switch 1 and switch 2 of the 8 position switch block as follows:

HOUSE CODE	SWITCH : -2-		
0	OFF	OFF	
1	OFF	ON	
2	ON	OFF	
3	ON	ON	

SELECTING THE 2 DIGIT SENSOR NUMBER

To select the correct 2 digit sensor number you must correctly set switches 3-5 for the first digit and 6-8 for the second digit. Refer to the table below:

	1st DIGIT	2nd DIGIT		
SENSOR	SWITCHES	SWITCHES		
NUMBER	3 4 5	6 7 8		

POLICE EMERGENCY, unsupervised, loud intermittent police siren

02	OFF O	FF (OFF	OFF	ON	OFF
03	OFF O	FF (OFF	OFF	ON	ON

POLICE EMERGENCY, unsupervised, silent

04	OFF C)FF	OFF	ON	OFF	OFF
05	OFF C) FF	OFF	ON	OFF	ON

POLICE EMERGENCY, supervised, loud intermittent police siren

06* OFF OFF ON ON OFF

POLICE EMERGENCY, supervised, silent

07* OFF OFF ON ON ON

MEDICAL EMERGENCY, unsupervised, low level beeping siren

10**	OFF OFF ON	OFF OFF OFF
11**	OFF OFF ON	OFF OFF ON

** NOTE: Sensors 10 and 11 are set aside for Medical Emergency, however, they are UNSUPERVISED. Thus, they would be used with a ITI Portable Panic Button.

The central station operator can change 10 and/or 11 to supervised if you want to use them with a fixed panic button wired to a supervised transmitter. He or she would use the GROUP command as shown below:

GROUP 10 01 C <> Where 10 is the sensor number <>< Where 11 is the sensor number

Refer to the Central Station Manual for more details.

INSTALLATION

Most of the time Portable Panic Buttons don't require any installation, since your customer will want them to remain completely portable. However, sometimes you might want to attach some Velcro hook and loop tape to a Panic Button. You could then locate them next to a entry door that a stranger might come to, near beds, etc.

^{*} NOTE: Sensors 06 and 07 are also set aside for Police Emergency, however, they are SUPERVISED. Thus, they would be used with a regular supervised transmitter wired to a panic button of some type. They would not be used with unsupervised portable panic transmitters.