

Fire Command Center/Fire Alarm Annunciators D1256/D1257

Installation Instructions



Contents

1.0	Introduction	5
1.1	Before You Begin	5
1.2	Type Styles Used Here.....	5
1.2.1	Tips, Notes, Cautions and Warnings	5
1.3	Organization and Layout	5
2.0	Specifications	6
3.0	Overview	7
3.1	D1256/D1257 Features	7
3.1.1	D1256	7
3.1.2	D1257	7
3.2	Description	7
3.2.1	Display	7
3.2.2	Audible Tones.....	7
3.2.3	Switch Settings	8
4.0	Installation	9
4.1	Mounting the D1256 and D1257	9
4.1.1	Mounting Locations	9
4.2	Wiring the D1256 and D1257	9
4.3	Programming the Control Panel	10
4.3.1	Command Center Assignments	10
4.3.2	Area Text.....	10
4.3.3	Custom Function.....	10
4.3.3.1	CF 128 – ALARM SILENCE ?	10
4.3.3.2	CF 129 – TROUBLE SILENCE ?.....	11
4.3.3.3	CF 130 – DETECTOR RESET ?	11
4.3.3.4	CF 131 – ANUNCIATOR RESET.....	11
4.3.4	Menu/Function List.....	11
4.3.4.1	Menu Item and Function	12
4.3.4.2	CC Address #	12
4.3.5	Passcode Worksheet.....	12
4.3.5.1	Passcode	12
4.3.6	User Interface.....	13
4.3.6.1	Command Center Functions	15

Contents

Figures

Figure 1: D1256/D1257 Internal Arrangement.....	7
Figure 2: Example 1 – Area Text.....	10
Figure 3: Example 2 – Custom Function	10
Figure 4: Example 3 – Menu/Function List.....	11
Figure 5: Example 4 – Passcode Worksheet	12
Figure 6: Example 5 – User Interface for D7212B1, D9112B1, and D9124 (using the D9112LTB).....	13
Figure 7: Example 6 – User Interface for D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G and D9124 (using the D9112LTB-EX or D9412GLTB)	14

Tables

Table 1: D1256/D1257 Installation Instructions Organization.....	5
Table 2: D1256/D1257 Specifications	6
Table 3: Key to Figure 1.....	7
Table 4: Switch Address Settings.....	8
Table 5: Wiring Connections.....	9
Table 6: Menu/Function List Description.....	12

1.0 Introduction

1.1 Before You Begin

Before installing the D1256 or D1257, you should be familiar with the *Operation and Installation Guide* and *Program Entry Guide* for the control panel you are using. When using the D1256 or D1257 with the D9112B1 Control Panel, the firmware must be Revision 2.1 or higher.

1.2 Type Styles Used Here

We use special type styles to help you identify the objects described in this guide.

Text usually indicates selections that you may use while programming your control panel. It can also indicate an important fact to be noted.

Text represents a prompt when used in a description.


Text references you to another section of the guide, or to a different guide. We also use *Text* to symbolize names for records that you will create.

Courier Text shows what may be printed on the Display or internal printer.

[CAPITALIZED TEXT] in brackets represents user input (keystrokes or buttons). Capitalization may also be used for emphasis.

1.2.1 Tips, Notes, Cautions and Warnings

Throughout this document helpful tips and notes will be presented concerning the entire application and/or programming the unit. They will be set off as follows:



1.3 Organization and Layout

These installation instructions consist of three chapters and an appendix. *Table 1* below provides a brief description of each section.

Chapter 1	<u>Introduction</u> This is the chapter you are reading.
Chapter 2	<u>Overview</u> Description of the different parts of the D1256 & D1257.
Chapter 3	<u>Installation</u> Procedures on how to mount and wire the D1256 & D1257 plus procedures on programming the control panel.

Table 1: D1256/D1257 Installation Instructions Organization

D1256/D1257

Specifications

2.0 Specifications

Power	Nominal 12 VDC supplied by the control panel	
Current Required	Idle:	104 mA
	Maximum:	206 mA, with annunciator lighted and warning tone on.
Wiring	4-wire supplies Data In, Data Out, +12 VDC, and Common. Maximum data loop resistance is 10 Ω .	
Dimensions (H x W x D)	Base (HxW):	11.6 cm x 20.7 cm (4.6 in. x 8.2 in.)
	Cover:	10.9 cm x 20.6 cm x 2.9 cm (4.3 in. x 8.12 in. x 0.8 in.)
Color	Fire engine red	
Display	16 character vacuum fluorescent display. Each character is a 14-segment unit. Soft blue color.	
Operating Temperature	0°C to +50°C (+32°F to +122°F)	
Relative Humidity	5% to 85% @ +30°C (86°F)	

Table 2: D1256/D1257 Specifications

3.0 Overview

3.1 D1256/D1257 Features

The D1256 Fire Command Center and the D1257 Fire Alarm Annunicator are 4-wire serial devices used with the following Bosch Security Systems control panels:

- D7212B1
- D7212, D7212G
- D9112
- D9124 (using the D9112LTB)
- D9112B1
- D7412, D7412G
- D9412, D9412G
- D9124 (using the D9112LTB-EX or D9412GLTB)

Each control panel listed here supervises up to eight command centers/annunicators. You can connect a total of 32 command centers/annunicators to the system. The number of supervised command centers/annunicators, number of areas, and the available power affect the total number of command centers/annunicators you can connect to the system.

3.1.1 D1256

The D1256 provides annunciation as well as system control.


Four function keys on the D1256 provide quick execution of alarm silencing, trouble silencing, annunciator display reset, and sensor reset functions.

3.1.2 D1257

The D1257 provides remote annunciation without system control capability. It is well suited for use in locations where the public may have access to it.

Two keys on the D1257 allow the user to step forward or backward through a list of system events.

3.2 Description

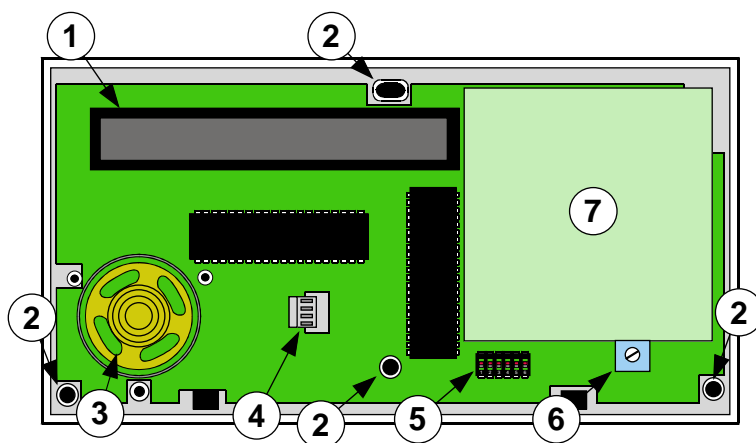

Item	Description
1	Vacuum florescent display
2	Mounting hole
3	Speaker for sounder
4	Wiring harness connector
5	Address DIP switches
6	Speaker volume control (potentiometer)
7	Keypad (arrangement is different for D1256 and D1257)

Table 3: Key to Figure 1

Figure 1: D1256/D1257 Internal Arrangement

3.2.1 Display

Both the D1256 and D1257 use a 16-character English language display with custom programmable text. The custom text programmed at the control panel appears in the LED display (see #1, Figure 1).

They display the latest status conditions of the fire system using words, numbers, and symbols. When an alarm occurs, it is displayed until the user acknowledges the event at a command center. When a series of events affecting the system occur, each event displays in order of its priority.

3.2.2 Audible Tones

Both the D1256 and D1257 have a built-in speaker that produces several distinct warning tones. The speaker volume can be changed by adjusting the potentiometer (see Figure 1). Turn the potentiometer clockwise to increase and counterclockwise to decrease the volume. You cannot connect external annunciation devices to the annunciators.

D1256/D1257

Overview

The following signals are silenced by pressing the appropriate key at the D1256 Fire Command Center.

- **Fire Signal** – When the system is in alarm, the annunciators emit a pulsed, high pitched "bell" tone.
- **Invalid Key Buzz** – When an invalid key, or sequence of keys, is pressed, the annunciators emit a flat buzz tone.
- **Keypad Encoding Tone** – Emits a muted beep tone as each key is pressed to indicate that the entry has been accepted. To disable this feature, see *Section 3.2.3 Switch Settings*.
- **Trouble Buzzer** – When a trouble event occurs, such as a service alert, the annunciators emit a two tone warble until you press the [TROUBLE SILENCE] key on the D1256.

3.2.3 Switch Settings

A 6-position switch located under the D1256 and D1257 cover allows you to select the address of each annunciator and silence the keypad encoding tones (see *Figure 1*).

To access the switches:

1. Remove the front cover.
 - a. Using a small flat-bladed screwdriver, gently push in the two bottom tabs of the enclosure cover.
 - b. While pushing the tabs in, lift the cover away from the base.
2. Set the switches as follows:

Address #	Switch					
	1	2	3	4	5	6
Address #1	ON	ON	ON	ON	ENCODING TONE ON/OFF	ON
Address #2	OFF	ON	ON	ON		ON
Address #3	ON	OFF	ON	ON		ON
Address #4	OFF	OFF	ON	ON		ON
Address #5	ON	ON	OFF	ON		ON
Address #6	OFF	ON	OFF	ON		ON
Address #7	ON	OFF	OFF	ON		ON
Address #8	OFF	OFF	OFF	ON		ON

Table 4: Switch Address Settings

4.0 Installation

4.1 Mounting the D1256 and D1257

The D1256 and D1257 are low profile, surface-mounted units molded in durable red plastic. They can be mounted using the following optional packages:

- D56 Command Center Keypad Conduit Box (protected surface or flush mount)
- D54B Command Center Flushmount Kit (brass)
- D54C Command Center Flushmount Kit (stainless steel)

4.1.1 Mounting Locations

Do not mount annunciators in a location where they are exposed to direct sunlight. Direct sunlight can interfere with the display screen's visibility and damage internal components. Do not mount the annunciators in wet or moist locations.

4.2 Wiring the D1256 and D1257

A four-wire flying lead (see *Wiring harness connector* in *Figure 1*) is required for the data and power connections between the annunciators and the control panel. The annunciators come with a wiring harness consisting of four color-coded flying leads with a female four-pin connector plug at one end.

To wire the D1256 and D1257:

1. Power down the control panel.
2. Connect the flying leads of the wiring harness (provided) to the wiring terminals on the panel.

D1256/D1257 Harness		Connecting to a compatible control panel (see <i>Section 3.1 D1256/D1257 Features</i>)	Connecting an additional annunciator to the D9100 Carrier Module (a component within the D9124)
12 VDC (red)	to	Terminal 32	12 VDC (Terminal 1)
Data In (yellow)	to	Terminal 31	Data Out (Terminal 3)
Data Out (green)	to	Terminal 30	Data In (Terminal 4)
COMMON (black)	to	Terminal 29	COMMON (Terminal 2)

Table 5: Wiring Connections

3. Follow the procedures in *Section 3.2.3 Switch Settings*.
4. Turn the command center over and plug in the wiring connector through the opening in the back of the enclosure base.
5. Mount the annunciator's base to the wall. Secure it in place using the three mounting holes inside the enclosure base.
6. Replace the cover. Align and insert the top two tabs of the enclosure cover into the top two tab slots of the enclosure base.
7. Hold the top edges of the enclosure cover and base in position.
8. While pushing the tabs inward, press the enclosure and cover down until the cover snaps into place.

Installation

4.3 Programming the Control Panel

The *Command Center*, *User Interface*, *Command Menu* (D7212B1, D9112B1, and D9124 (using the D9112LTB)) or *Function List* (D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G and D9124 (using the D9112LTB-EX or D9412GLTB)), and *Passcode Worksheet* sections of the control panel program determine the annunciator displays and functions available from the D1256. Key points to consider are described in the remainder of this section.

4.3.1 Command Center Assignments

- Command Center Text.** The D1256 can be used on any one of the eight addresses in the control panel. Sections 4.3.2 through 4.3.4.2 describe programming for one D1256 assigned to Command Center #1.
- Supervised.** Certain local jurisdictions may require that fire system annunciators be supervised. If this is a requirement in your area, set supervision to YES for the addresses that use fire alarm annunciators.
- Scope.** The D1256 is designed to acknowledge fire alarms and troubles, not burglar alarms and troubles. Set the scope to include fire areas only.
- Area.** Program the area number of the fire area(s) as normal.

4.3.2 Area Text

	Area 1	Area 2
Area # is On	P R E S S A L A R M S I L	_____
Area # Not Ready	C H E C K F I R E S Y S	_____
Area # is Off	* F I R E S Y S T E M *	_____
Area # Acct is On	P R E S S A L A R M S I L	_____

Figure 2: Example 1 – Area Text

- Area # is On – PRESS ALARM SIL.** Fire area should remain in the OFF state at all times. If the authority level is not programmed correctly, the fire alarm area arms and PRESS ALARM SIL displays on the fire alarm annunciator. Pressing the [ALARM SILENCE] key will both silence any alarm(s) and disarm the area. This causes the fire alarm annunciator to show the normal * FIRE SYSTEM * display.
- Area # Not Ready – CHECK FIRE SYS.** Most fire alarm areas consist of all 24-hour points and the **Area # Not Ready** display is not used. If a controlled point type is used for some type of fire supervision device, and the device becomes off-normal, CHECK FIRE SYS displays on the fire command center.
- Area # is Off – * FIRE SYSTEM *.** This is the normal idle text for the fire alarm annunciator.
- Area # Acct is On – PRESS ALARM SIL.** Fire area should remain in the OFF state at all times. If the authority level is not programmed correctly, the fire alarm area arms and PRESS ALARM SIL displays on the fire alarm annunciator. Pressing the [ALARM SILENCE] key silences any alarm(s) and disarms the area. This causes the fire alarm annunciator to show the normal * FIRE SYSTEM * display.

4.3.3 Custom Function

	Text	
CF 128	A L A R M S I L E N C E ?	1 2 5 6 0 0 E _____
CF 129	T R O U B L E S I L E N C E ?	A 4 C C _____
CF 130	D E T E C T O R R E S E T ?	A 4 7 _____
CF 131	A N U N C I A T O R R E S E T	1 2 5 6 0 0 C _____

Figure 3: Example 2 – Custom Function

These items must be programmed as indicated in the *Custom Functions* section of *Command Center* to make the D1256 function keys operational. The passcode 125600 has been chosen for the following examples, although any passcode may be used.

4.3.3.1 CF 128 – ALARM SILENCE ?

Key Stroke: [1][2][5][6][0][0][E]. This custom function is programmed as the first Menu item. It is executed when the [ALARM SILENCE] key is pressed on the D1256. The key stroke entry of 125600E is seen by the control panel as a valid passcode entry in the area having the authority level to silence a ringing fire bell in the area. The "E" at the end of the string represents the [ENTER] key on the command center.

4.3.3.2 CF 129 – TROUBLE SILENCE ?

Key Stroke: [A][4][C]. This custom function is programmed as the second item in the Menu and is executed whenever the [TROUBLE SILENCE] key is pressed on the D1256. This entry is equivalent to the execution of a [COMMAND][4] at the D1256.

4.3.3.3 CF 130 – DETECTOR RESET ?

Key Stroke: [A][4][7]. This custom function is programmed as the third Menu item and is executed when the [DETECTOR RESET] key is pressed on the D1256. This entry is equivalent to the execution of a [COMMAND][47] at the D1256.

4.3.3.4 CF 131 – ANUNCIATOR RESET

Key Stroke: [1][2][5][6][0][0][C]. This custom function is programmed as the fourth command menu item and is executed when the [ANNUNCIATOR RESET] key is pressed. Execution of this function clears the "View Memory" buffer, but does not clear the event out of the event log contained with the control panel.

4.3.4 Menu/Function List**Menu/Function List**

Menu Item	Function	CC Address 1	CC Address 2	CC Address 3	CC Address 4	CC Address 5	CC Address 6	CC Address 7	CC Address 8
1	1 2 8	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
2	1 2 9	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
3	1 3 0	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
4	1 3 1	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
5	_ _ 9	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
6	_ 1 0	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
7	_ 1 2	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
8	_ 2 1	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
9	_ 2 9	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
10	_ 3 2	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No
11	_ _ _	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No	Yes / No

Figure 4: Example 3 – Menu/Function List

In the control panel's *Program Record Sheet*, this section is referenced as the *Menu List* [for Control Panels D7212B1, D9112B1 and D9124 (using the D9112LTB)] and as the *Function List* [for Control Panels D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G, and D9124 (using the D9112LTB-EX or D9412GLTB)].

Installation

4.3.4.1 Menu Item and Function

Bosch Security Systems recommends programming the first ten menu items as indicated in *Table 6*. The first four menu items must be programmed as indicated in *Table 6* for the D1256 to function properly. The first four keys on the D1256 annunciator execute the first four menu items turned on at the command center address. Menu items five through ten are optional features that can be programmed into the D1256 system.

See the *Fire System User's Guide* (P/N: 71-06991-000) for further explanation of these optional programmable items.

Note: Please make sure that CF 128 to 131 and any other functions that you are using in the menu are programmed E (Enabled) not P (Passcode Required).

Menu Item	Function	Description
1	128	ALARM SILENCE?
2	129	TROUBLE SILENCE?
3	130	DETECTOR RESET?
4	131	ANUNCIATOR RESET
5	9	VIEW MEMORY?
6	10	VIEW PT STATUS?
7	12	FIRE TEST?
8	21	VIEW LOG?
9	29	REMOTE PROGRAM?
10	32	DISPLAY REV?

Table 6: Menu/Function List Description

4.3.4.2 CC Address

Program command center addresses to YES for the first four menu items and the optionally program menu items five through ten as YES.

4.3.5 Passcode Worksheet

Passcode Worksheet

User Flag	User	Passcode	User Window	Area Auth								User Name
				1	2	4	5	6	7	8		
000	00	-----	--	15	15	15	15	15	15	15	15	_____
001	01	125600	--	14	---	---	---	---	---	---	---	_____

Figure 5: Example 4 – Passcode Worksheet

4.3.5.1 Passcode

A special passcode must be programmed as a valid passcode for the system to work. This passcode is used in Custom Functions 128 and 131. Any user number can be used to establish this mandatory valid passcode. It must additionally be created as a valid passcode in the area to which the D1256 is assigned. Bosch Security Systems recommends using authority level 14 in conjunction with the passcode you choose (see Authority Level Selections).

4.3.6 User Interface

Cmd Center Function				Authority Level Selections															
Blank = Disabled / E = Enabled / P = Passcode				Blank = Disabled / E = Enabled															
#	Function	Command	E/P	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
1	Disarm		P																
2	Master Arm	CMD 1																	
3	Mstr Arm Inst	CMD 11																	
4	Perim Inst	CMD 2																	
5	Perim Delay	CMD 3																	
6	Watch Mode	CMD 6																	E
7	Perim Partial	CMD 8																	
8	View Area Stat																		E
9	View Event Mem	CMD 40	E																E
10	View Pt Status		E																E
11	Walk Test	CMD 44																	E
12	Fire Test	CMD 58	E																E
13	Send Report	CMD 41/42																	E
14	Not Used																		
15	Chg Display	CMD 49	E																E
16	Chg Time/Date	CMD 45																	E
17	Chg Passcode	CMD 55																	E
18	Add Passcode	CMD 56																	
19	Del Passcode	CMD 53																	E
20	Extend Close	CMD 51																	E
21	View Log																		E
22	Print Log																		E
23	User Cmd 7	CMD 7																	E
24	User Cmd 9	CMD 9																	E
25	Bypass a Pt	CMD 0																	
26	Unbypas a Pt	CMD 00																	E
27	Reset Sensors	CMD 47	E																E
28	Relay Control	CMD 54																	E
29	Remote Program	CMD 43	E																E
30	Move to Area	CMD 50																	E
31	Not Used																		
32	Display Rev	CMD 59	E																E
33	Service Walk																		E
34	Default Text	CMD 57																	E
35	Change Skeds	CMD 52																	E
	Force Arm		P																
	Area O/C		P																
	Restricted O/C		P																
	Perimeter O/C		P																
	Send Duress		P																
	Passcode Arm		P																
	Passcode Disarm		P															E	

Figure 6: Example 5 – User Interface for D7212B1, D9112B1, and D9124 (using the D9112LTB)

Installation

Command Center Functions			
#	Functions	Command	E/P*
1	Disarm ?		P
2	Master Arm Delay ?	CMD 1	
3	Master Arm Instant?	CMD 11	
4	Perimeter Instant ?	CMD 2	
5	Perimeter Delay ?	CMD 3	
6	Watch Mode ?	CMD 6	
7	Perimeter Part ?	CMD 8	
8	View Area Status ?		
9	View Memory ?	CMD 40	E
10	View Pt Status ?		E
11	Walk Test ?	CMD 44	
12	Fire Test ?	CMD 58	
13	Send Report ?	CMD 41/42	
14	Door Control ?	CMD 46	
	Cycle Door ?		
	Unlock Door ?		
	Secure Door ?		
37	Access Control Level?		
15	Change Display ?	CMD 49	
16	Change Time/Date ?	CMD 45	
17	Change Passcode ?	CMD 55	
18	Add User ?	CMD 56	
19	Del User ?	CMD 53	
20	Extend Close ?	CMD 51	
21	View Log ?		E
22	Print Log ?		
23	User Command 7 ?	CMD 7	
24	User Command 9 ?	CMD 9	
25	Bypass a Point ?	CMD 0	
26	Unbypass a Point ?	CMD 00	
27	Reset Sensors ?	CMD 47	E
28	Change Relays ?	CMD 54	
29	Remote Program ?	CMD 43	E
30	Move To Area ?	CMD 50	
32	Display Rev ?	CMD 59	E
33	Service Walk ?		
34	Default Text ?	CMD 57	
35	Change Skeds ?	CMD 52	

Figure 7: Example 6 – User Interface for D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G and D9124 (using the D9112LTB-EX or D9412GLTB)

Note: Please make sure that CF 128 to 131 and any other functions that you are using in the menu are programmed E (Enabled) not P (Passcode Required).

Command Center Functions		
#	Custom Functions	E/P*
128	Custom Function 128	E
129	Custom Function 129	E
130	Custom Function 130	E
131	Custom Function 131	E
132	Custom Function 132**	
133	Custom Function 133**	
134	Custom Function 134**	
135	Custom Function 135**	
136	Custom Function 136**	
137	Custom Function 137**	
138	Custom Function 138**	
139	Custom Function 139**	
140	Custom Function 140**	
141	Custom Function 141**	
142	Custom Function 142**	
143	Custom Function 143**	

#	Report Levels	Authority Levels†														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	Force Arm ?															
	Area O/C ?															
	Restricted O/C ?															
	Perimeter O/C ?															
	Send Duress ?														E	
	Passcode Arm ?															
	Passcode Disarm ?														E	

† Authority Level options: E = Enabled, Blank = Disabled.

Figure 7 (cont'd): Example 6 – User Interface for D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G and D9124 (using the D9112LTB-EX or D9412GLTB)

4.3.6.1 Command Center Functions

The following command center function must be turned on to enable the [DETECTOR RESET] key.

- #27 Reset Sensors

It is suggested that the items below be included in the menu.

- #9 View Event Memory
- #10 View Point Status
- #12 Fire Test
- #21 View Log
- #29 Remote Program
- #32 Display Rev

Installation



Further customization can be required if the D1256 is connected to a D7212B1, D9112B1, or D9124 (using the D9112LTB) is located in an unsecured area, and/or if D1255 Command Centers are installed in the same system. The factory loaded program for the D9124 makes these functions available without requiring a passcode entry.

For example, the D1256 is connected to a D7212B1, D9112B1, or D9124 (using the D9112LTB) located in a secure area, but the D1255 Command Centers are also installed, restricting command center functions by requiring a passcode in Cmd Center Function is advisable.

Note: For D7212B1, D9112B1, or D9124 (using the D9112LTB) Control Panels, it is important to program each of the command center functions with an E (Enabled) and not P (Passcode Required). If any of the command center functions are programmed with a P (Passcode Required), then that custom function must also be programmed to execute that menu item from the command center. This custom function must include the appropriate passcode to let the programmed function work properly. For example, if View Event Memory were to be passcode protected and the chosen passcode was 125600, the macro string would be [A][4][0][1][2][5][6][0][0][E]. Consideration should be given to passcode protecting the command center function in combined burglary/fire applications.

Function numbers for standard User Interface command center functions can be programmed in the Menu Function List for D1256 and D1255 addresses. Remember to enable functions only as appropriate for the command center at the address. As the D1256 does not have numeric keys, it can not be used to access functions requiring a passcode.

Note: For D7212, D7212G, D7412, D7412G, D9112, D9412, D9412G and D9124 (using the D9112LTB-EX or D9412GLTB) Control Panels, embedding passcodes inside Custom Functions is not allowed. Therefore, any command used in a Custom Function, should not be passcode protected.

Please make sure that CF 128 to 131 and any other functions that you are using in the menu are programmed E (Enabled) not P (Passcode Required).