

DUO 240

Ceiling-Mount Dual Technology Intrusion Detector



Installation Instructions

1. INTRODUCTION

DUO 240 is a microcomputer-controlled, ceiling-mounted dual-technology intrusion detector. Its operation is based on two physical phenomena - the infrared (IR) radiation emitted by the human body and the Doppler frequency shift caused by a person moving in a microwave (MW) field. The IR and MW technologies, when combined in a single detector, complement each other to assure the most reliable detection and immunity to false alarms.

The superiority of the DUO 240 over other dual detectors has been achieved by the advent of a **True Motion Recognition™** algorithm (patents applied for). This advanced motion analysis

method provides the DUO 240 with the ability to distinguish between the true motion of a human body and any other disturbances which invariably cause false alarms.

Another unique feature of the DUO 240 is the **MW Motion Simulator** circuit (patents applied for), which simulates the effect created by a human body moving in the MW field. The simulation routine is carried out periodically for the purpose of self-testing, supervision and assurance that the MW detector operates properly.

2. SPECIFICATIONS

Input Voltage: 9 to 16 VDC

Current Drain: About 30 mA @ 12 VDC

PIR SECTION

Detector: Low noise dual-element pyroelectric sensor

Trip Indication: Green LED flashes for up to 5 seconds

True Motion Event Verification Counter: Selectable, 1 or 2 motion events

Detection Pattern: A virtually conical pattern of maximum 9 m (30 ft) diameter, when installed on a 4.5 m (15 ft) ceiling (Fig. 1).

MW SECTION

Oscillator: Microstrip DRO-stabilized type

Frequency: 10.525 GHz in USA, 10.687 and 2.45 GHz in the UK and Europe.

Detection Range: Adjustable from 25% to 100%

Trip Indication: Green LED lights for up to 5 seconds

ALARM & TAMPER DATA

Alarm Indication: Red LED lights for 2-3 seconds if both detectors trip

Relay Contacts: Normally closed, 0.1 A resistive/24 VDC; 18Ω resistor in series with contacts

Alarm Duration: 2-3 seconds (red LED lights and output relay contacts open)

Tamper Switch Contacts: Normally closed, 50 mA resistive/24 VDC

PHYSICAL CHARACTERISTICS

Dimensions (H x Ø): 24 x 86 mm (3.4 x 0.95 in.)

Weight: 64 gr (2 oz)

Color: White

MOUNTING

Maximum Mounting Height: 4.5 m (15 ft)

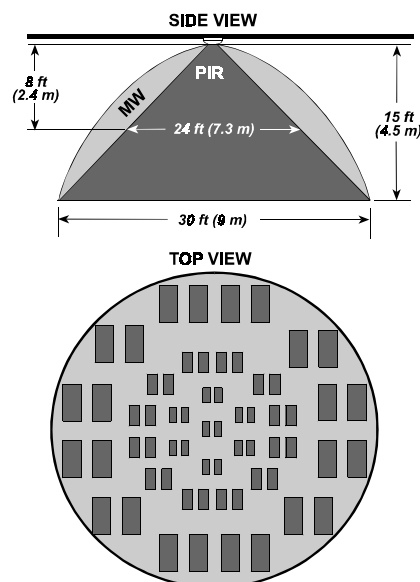


Figure 1. DUO 240 Coverage Pattern

ENVIRONMENTAL CONDITIONS

Operating Temperature: -10°C to 50°C (14°F to 122°F)

Storage Temperature: -20°C to 60°C (-4°F to 140°F)

RFI Protection: Greater than 30 V/m (20 to 1000 MHz)

PATENTS

U.S. Patent 5,237,330 (other patents pending)

3. INSTALLATION

3.1 General Guidelines

A few important rules must be observed before selecting a mounting location.

- Microwave radiation passes through glass and nonmetallic walls and floors. Be sure to adjust the MW range to the necessary minimum, to reduce the possibility of interference from lower floors.
- Large reflecting objects (especially metals) within the coverage area can distort the microwave detector's coverage pattern.
- Although the DUO 240 is extremely immune to air turbulence and RF interference, avoid installation in a room with very

strong air drafts or close to high-power electrical cables. It is also recommended to avoid aiming the detection pattern at sources of bright light and/or heat.

- If two DUO 240 units are installed in the same room, they should be mounted at least 2 m (6 ft) apart.
- Always mount the unit on a firm and stable ceiling and remember that the height above the floor determines the size of the circular coverage pattern.
- Do not install the DUO 240 in places where one of the two detectors alarms constantly or intermittently, due to environmental interference.

3.2 Mounting

Select the mounting location in accordance with the guidelines in Section 3.1. Make sure that the expected intruder's path will cross the detector's coverage pattern. DUO 240 units can be mounted at the maximum height of 4.5 m (15 ft). Proceed as follows:

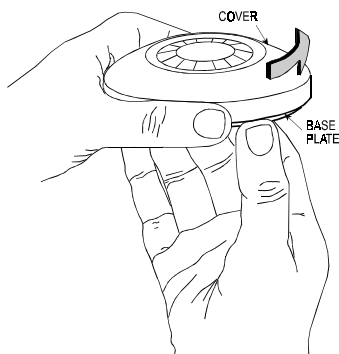


Figure 2. Separating the cover from the Base

A. Hold the base with one hand as shown in Fig. 2. Twist the cover counter-clockwise with the other hand until it stops. Separate the cover from the base, and put it in a safe place, to avoid accidental damage.

B. Press the base against the ceiling in the selected location. Mark the two points for drilling through the mounting holes (see Fig. 3).

Note: The mounting holes are accessible without removing the printed circuit board from the base. Do not drill with the detector held in place, to avoid contaminating the unit with dust and drilled fragments.

C. Put the base aside, drill the two holes in the ceiling and insert masonry anchors if necessary.

D. Punch out at least one wiring knockout (preferably the one close to the terminal block).

E. Align the unit, complete with the printed circuit board, with the mounting holes and fasten it firmly to the ceiling with two screws.

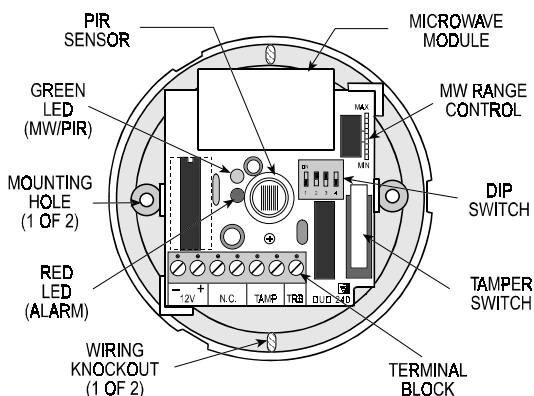


Figure 3. Component Layout

3.3 Wiring

Connect wires to the terminal block in the following order (Fig. 4):

Terminal: TAMP (tamper switch)

Connect to: A normally closed 24-hour tamper zone of the control panel.

Details: When the cover is removed, the tamper switch contacts open.

Terminal: NC (alarm relay)

Connect to: Normally closed burglar protection zones of the control panel.

Details: Upon alarm or power failure, the output relay's normally closed contacts open.

Terminal: TRB (trouble output)

Connect to: 24-hour trouble zone, parallel to an E.O.L. resistor (see Figure 5).

Details: The TRB open collector output will be grounded upon detector malfunction, causing disturbance in the trouble zone of the associated alarm system.

Alternative: A buzzer or an interface relay (100 mA max.) may be connected across the TRB output and the 12 V (+) terminals.

Terminals: 12 V(+) and (-)

Connect to: A power source within the range of 9 VDC to 16 VDC. Take care not to reverse the polarity.

Details: It is advisable to connect the power source only after all other connections have been completed and rechecked. Disconnect the AC mains from the alarm control panel and verify that the voltage supplied to the detector is above 9 Volts with the backup battery as the only power source.

Note: Use RTV to seal the base opening(s) to prevent insects from entering the detector.

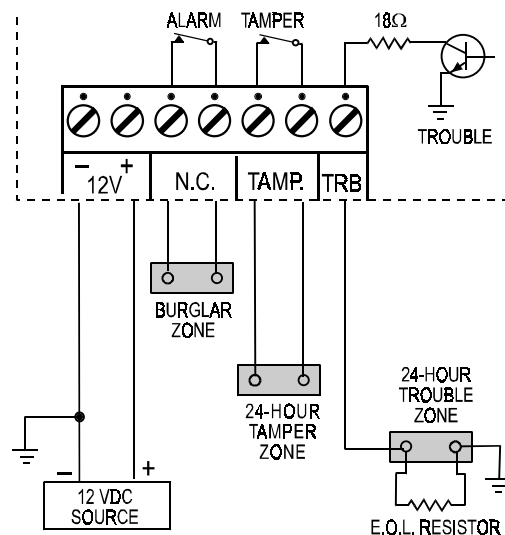


Figure 4. Terminal Block Wiring

3.4 The Power-up Process

After connecting the (+) and (-) terminals to the power source, the DUO 240 starts a 60-second warm-up period, indicated by alternate flashing of the green and red LEDs.

Caution! If the alternate flashing of the LEDs does not stop within 60 seconds, a failure has been detected by the self-test circuitry and the TRB output is activated

4. INDICATORS AND SELECTORS

4.1 LED Indications

The two LEDs (Fig. 3), which are hidden behind the lens when the cover is installed, are visible through the lens when illuminated. They are used to signal various alarm and trouble messages as shown in Table 1 below:

Notes:

1. During walk testing, the first LED to respond is the green one. It illuminates steadily (MW detection) or flashes (PIR

detection), depending on which detector discovered the movement first. Upon subsequent discovery of the movement by the other detector, the green LED will go off and the red LED will illuminate (alarm).

2. If the green and red LEDs continue to flash beyond the warm-up period, a malfunction has been diagnosed. Replace the unit without delay.

Table 1. Interpreting the LEDs states

GREEN	RED	Significance
Off	Off	No detection
On	Off	MW walk-test detection
Flashes	Off	PIR walk-test detection
Off	On	Alarm: MW + PIR detection
Flashes	Flashes	<ul style="list-style-type: none"> Trouble is being detected by the self test circuitry, or Initial warm-up routine (stops 60 seconds after power up).

4.2 Mode Selector

The DIP switch mode selector is mounted on the unit's PC board (Fig. 5). It controls four functions as demonstrated in Fig. 5 and as detailed in Table 2.

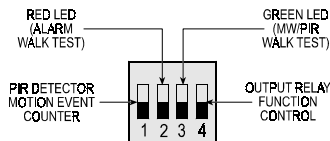


Figure 5. DIP Switch Mode Selector

Table 2. Mode Selector Switch functions

Switch	State	Function
SW-1	OFF	One motion event trips the PIR
	ON	Two motion events trip the PIR
SW-2	OFF	Alarm walk test is disabled*
	ON	Alarm walk test is enabled
SW-3	OFF	MW/PIR walk test is disabled*
	ON	MW/PIR walk test is enabled
SW-4	OFF	Output relay opens upon alarm
	ON	Output relay opens upon alarm and when trouble is detected.

* Setting SW-2 and SW-3 to OFF does not disable the trouble indication (flash/flash).

5. INITIAL ADJUSTMENT

5.1 Setting the Motion Event Counter

If you wish to set the PIR detector for maximum false alarm immunity, shift DIP switch No. 1 (SW-1) to ON. In this position, two consecutive motion events are required to trip the PIR detector.

For faster catch performance, shift SW-1 to OFF. In this position, only one motion event is required to trip the PIR detector.

5.2 PIR Walk Test

- Rotate the MW RANGE control all the way toward MIN.
- Verify that DIP switch SW-3 is set to ON (the green walk-test LED is enabled).
- Mount the front cover in place: line up the ridge on the cover with the cavity in one of the two projections on the base circumference (Fig 6). Fit the cover over the base, and rotate the cover clockwise until it stops.
- Walk into the detector's field of view at the expected far edge of the coverage area. The green LED should flash for up to 5 seconds each time your motion is detected.

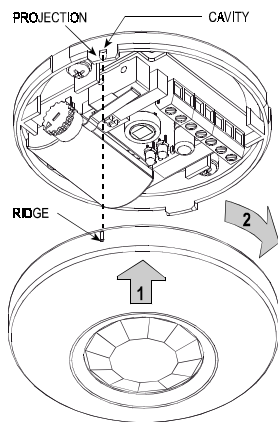


Figure 6. Remounting the Cover

- If PIR detection is not obtained at the far edge of the coverage area, verify that the infrared radiation is not blocked or diverted by intervening objects such as large lampshades, air conditioning ducts etc.

Note: If the green LED illuminates steadily, your motion has been detected by the MW detector and not by the PIR.

5.3 MW Walk Test

- Remove the front cover.
- Verify that the MW range control is set to MIN and that DIP switch SW-3 is set to ON (the green walk-test LED is enabled).
- Start by moving into the coverage area at the far edge. The green LED should light steadily for up to 5 seconds each time your motion is detected.
- If your motion was not detected at the far edge of the coverage area, advance the MW RANGE control slightly toward MAX and try again until your motion is detected reliably at the far edge.

Caution! The MW detection range must not exceed the far edge of the desired coverage area.

- Walk across the coverage area at various ranges and verify that your motion is consistently detected.

Note: If PIR trips interfere with your test, disable the PIR by inserting a small piece of cardboard in front of the sensor.

5.4 Alarm Walk Test

- Set DIP switches SW-2 and SW-3 to ON (both LEDs are enabled).
- Temporarily mount the detector's cover in place.
- Walk across the detector's field of view in different directions, at various distances from the detector, and verify proper detection throughout the entire coverage area (the red LED will illuminate for 2 to 3 seconds).
- When done, remove the cover and set DIP switches SW-2 and SW-3 to OFF to prevent unauthorized people from tracing the coverage pattern.
- Remount the cover.

Attention! To assure proper function of the detector, the range and coverage area should be checked at least twice a year. Furthermore, it is recommended to perform a walk test at the far end of the coverage pattern to assure an alarm signal prior to each time the alarm system is armed.

6. WARNINGS

Although this detector is a highly reliable device, it does not guarantee complete protection against intrusion. Even the most sophisticated detectors can sometimes be defeated or may fail to warn because:

- The detector will not function if the DC power supplied to it is incorrect or improperly connected.

- Detection is confined to the area covered by the detection pattern as adjusted by the installer.

- A PIR detector does not provide full volumetric coverage of the protected area. It can only detect motion that disturbs the sensitive beam array spread within the protected space.

- D. Motion will not be detected by PIRs if it takes place behind closed doors, floors, walls, ceilings, glass partitions, windows and shutters.
- E. The detection ability of the PIR detector may be reduced by malicious masking or by spraying various materials on the optical lens. Mechanical tampering may also damage the optical system.
- F. The PIR detector's performance can decrease as the ambient temperature within the protected area approaches the range of 32° - 40°C (90° -105°F).
- G. The protection pattern provided by the microwave detector may be altered by metal objects or foil-covered insulation.

H. Even the most reliable electrical devices, including this detector, may go wrong because of unexpected failure of component parts.

The above list includes the most common reasons for failure to detect intrusion, but it is by no means comprehensive. It is therefore recommended that the detector and the entire alarm system be checked weekly, to ensure proper performance.

An alarm system should not be regarded as a substitute for insurance. Home and property owners or renters should be prudent enough to continue insuring their lives and property, even though they are being protected by an alarm system.

WARRANTY

Visonic Ltd. and/or its subsidiaries and its affiliates ("the Manufacturer") warrants its products hereinafter referred to as "the Product" or "Products" to be in conformance with its own plans and specifications and to be free of defects in materials and workmanship under normal use and service for a period of twelve months from the date of shipment by the Manufacturer. The Manufacturer's obligations shall be limited within the warranty period, at its option, to repair or replace the product or any part thereof. The Manufacturer shall not be responsible for dismantling and/or reinstallation charges. To exercise the warranty the product must be returned to the Manufacturer freight prepaid and insured.

This warranty does not apply in the following cases: improper installation, misuse, failure to follow installation and operating instructions, alteration, abuse, accident or tampering, and repair by anyone other than the Manufacturer.

This warranty is exclusive and expressly in lieu of all other warranties, obligations or liabilities, whether written, oral, express or implied, including any warranty of merchantability or fitness for a particular purpose, or otherwise. In no case shall the Manufacturer be liable to anyone for any consequential or incidental damages for breach of this warranty or any other warranties whatsoever, as aforesaid.

This warranty shall not be modified, varied or extended, and the Manufacturer does not authorize any person to act on its behalf in the modification, variation or extension of this warranty. This warranty shall apply to the Product only. All products, accessories or attachments of others used in conjunction with the Product, including batteries, shall be covered solely by their own warranty, if any. The Manufacturer shall not be liable for any damage or loss whatsoever, whether directly, indirectly, incidentally, consequentially or otherwise, caused by the malfunction of the Product due to products, accessories, or attachments of others, including batteries, used in conjunction with the Products.

The Manufacturer does not represent that its Product may not be compromised and/or circumvented, or that the Product will prevent any death, personal and/or bodily injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. User understands that a properly installed and maintained alarm may only reduce the risk of events such as burglary, robbery, and fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no death, personal damage and/or damage to property as a result.

The Manufacturer shall have no liability for any death, personal and/or bodily injury and/or damage to property or other loss whether direct, indirect, incidental, consequential or otherwise, based on a claim that the Product failed to function. However, if the Manufacturer is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, the Manufacturer's maximum liability shall not in any case exceed the purchase price of the Product, which shall be fixed as liquidated damages and not as a penalty, and shall be the complete and exclusive remedy against the Manufacturer.

Warning: The user should follow the installation and operation instructions and among other things test the Product and the whole system at least once a week. For various reasons, including, but not limited to, changes in environmental conditions, electric or electronic disruptions and tampering, the Product may not perform as expected. The user is advised to take all necessary precautions for his /her safety and the protection of his/her property.



VISONIC LTD. (ISRAEL): P.O.B 22020 TEL-AVIV 61220 ISRAEL. PHONE: (972-3) 645-6789, FAX: (972-3) 645-6788
 VISONIC INC. (U.S.A.): 10 NORTHWOOD DRIVE, BLOOMFIELD CT. 06002-1911. PHONE: (860) 243-0833, (800) 223-0020 FAX: (860) 242-8094
 VISONIC LTD. (UK): UNIT 1, STRATTON PARK, DUNTON LANE, BIGGLESWADE, BEDS. SG18 8QS. PHONE: (01767) 600857 FAX: (01767) 601098
 ©VISONIC LTD. 1998 DUO 240 D-1825-0 NEW: DE1825- (REV. 2, 4/98)

