



---

Home Security

---

***FirstGuard***<sup>™</sup>

(VISTA-10SE)

Security System

---

**PROGRAMMING GUIDE**  
**(Includes Programming Form)**

---

# TABLE OF CONTENTS

<b>Programming Form</b> .....	3
<b>Mechanics of Programming</b> .....	7
General Programming Information .....	7
Entering the Programming Mode .....	7
Programming a Data Field .....	8
Reviewing a Data Field/Erasing an Entry in a Data Field .....	8
Menu Mode Programming (*56, *80, *81, *82, & *83).....	8
Exiting the Programming Mode .....	8
<b>5800 Series Transmitter Input Loop Identification</b> .....	9
<b>New Alpha Vocabulary List</b> (For Entering Zone Descriptors) .....	10
<b>Character (ASCII) Chart</b> (For Adding Custom Words).....	10
<b>Zone Response Type Definitions</b> .....	11
<b>Data Field Descriptions</b> (in numerical order) .....	13
<b>Remote Programming and Control (Downloading)</b> .....	20
General Information .....	20
Equipment Required .....	20
Remote Programming Information .....	20
Remote Programming Advisory Notes .....	21
<b>Summary of Connections Diagram</b> .....	23



★47 SPLIT/DUAL REPORTING

[0 = Disable (Backup report only)]

**TO PRIMARY PHONE No.**

- 1 = Alarms, Restore, Cancel
- 2 = All Reports except Open/Close, Test
- 3 = Alarms, Restore, Cancel
- 4 = All Reports except Open/Close, Test
- 5 = All Reports (Dual Reporting)

**TO PRIMARY PHONE No.**

- 6 = All reports except Open/Close
- 7 = All reports
- 8 = All reports
- 9 = All reports except Open/Close

**TO SECONDARY PHONE No.**

- Other Reports
- Open/Close, Test
- All Reports
- All Reports
- All Reports

**TO PAGING No.\* (SECONDARY)**

- \*\* Alarms, Open/Close, Troubles
- \*\* Alarms, Troubles
- \*\* Alarms, Open/Close, Troubles
- \*\* Alarms, Open/Close for Users 5 –25, Troubles

\* Can only be used if Primary reporting is Ademco Contact ID.

\*\* A 10-digit code is sent to the pager consisting of a 4-digit Subscriber #, a 3-digit Event code, and a 3-digit User or Zone number. See the DESCRIPTION OF DATA FIELDS section for an explanation of the 10-digit code.

★48 15 SEC DIALER DELAY (BURG)

†  [0 = no]; 1 = yes

★49 PERIODIC TEST MESSAGE

†  [0 = none]; 1 = 24 hrs; 2 = wkly; 3 = monthly. Enter Test Code in field ★64.

★50 SESCOA/RADIONICS SELECT

†  [0 = Radionics (0-9, B-F reporting)]; 1 = SESCOA (0-9 only reporting)  
Select 0 for all other formats.

★51 CONFIRMATION OF ARMING DING

†  [0 = no]; 1 = yes ; 2 = yes, but with RF arming only.

★52 ZONE 3 RESPONSE TO OPEN

†  [0 = 400 ms nominal]; 1 = 10 ms nominal

† Entry of a number other than one specified will give unpredictable results.

★56 ZONE ASSIGNMENT/ALARM REPORT CODES (See explanation on next page)

ZONE DESCRIPTION	ZONE No. (Zn)	ZONE TYPE (ZT)	ALARM RPT CODE (Hex) (RC)	INPUT DEVICE (In)	LEARNED RF INPUT (L)
<b>ZONES ON CONTROL:</b>					
Wired Zone 1	<input type="text" value="0"/> <input type="text" value="1"/>	<input type="text" value="0"/> <input type="text" value="1"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Wired Zone 2	<input type="text" value="0"/> <input type="text" value="2"/>	<input type="text" value="0"/> <input type="text" value="1"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Wired Zone 3	<input type="text" value="0"/> <input type="text" value="3"/>	<input type="text" value="1"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Wired Zone 4	<input type="text" value="0"/> <input type="text" value="4"/>	<input type="text" value="0"/> <input type="text" value="3"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Wired Zone 5	<input type="text" value="0"/> <input type="text" value="5"/>	<input type="text" value="0"/> <input type="text" value="9"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Wired Zone 6	<input type="text" value="0"/> <input type="text" value="6"/>	<input type="text" value="0"/> <input type="text" value="3"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	HW	—
Keypad Panic (★ & #, or B)	<input type="text" value="0"/> <input type="text" value="7"/>	<input type="text" value="0"/> <input type="text" value="7"/>	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	—	—
Duress	<input type="text" value="0"/> <input type="text" value="8"/>	— —	<input type="text" value="0"/> <input type="text" value="1"/>   <input type="text" value=""/>	—	—
Tamper	<input type="text" value="0"/> <input type="text" value="9"/>	<input type="text" value="0"/> <input type="text" value="5"/>	<input type="text" value="0"/> <input type="text" value="0"/>   <input type="text" value=""/>	—	—
Keypad Panic (1 & ★, or A)	<input type="text" value="9"/> <input type="text" value="5"/>	<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>   <input type="text" value=""/>	—	—
Keypad Panic (3 & #, or C)	<input type="text" value="9"/> <input type="text" value="6"/>	<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>   <input type="text" value=""/>	—	—

**RF EXPANSION ZONES:** With 4281L, up to 4 RF expansion zones available; 4281M or 4281H, up to 8; 5881L, up to 8; 5881M or 5881H, up to 16.

**ENTER FOR 5800 ONLY**

1st RF Expansion Zone	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
2nd	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
3rd	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
4th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
5th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
6th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
7th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
8th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
9th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
10th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
12th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
13th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
14th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
15th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
16th	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

IN THE PREVIOUS PAGE'S ZONE ASSIGNMENT TABLE:

**Zn = ZONE NUMBER** Zone Nos. are from 01 to 63, 95, 96. Some are pre-assigned. With Field \*22 set for RF (5700 or 5800), use Zone Nos. 10-63 .

**ZT = ZONE TYPE**

00 = Zone Not Used	05 = Trouble Day/Alarm Night	10 = Interior w/Delay
01 = Entry/Exit	06 = 24 Hr Silent	20 = Arm-Stay*
02 = Do not use	07 = 24 Hr Audible	21 = Arm-Away*
03 = Perimeter	08 = 24 Hr Aux	22 = Disarm*
04 = Interior Follower	09 = Fire	23 = No Alarm Response

\* 5800 RF Systems only

ADEMCO DEFAULTS					
Zn:	01	02	03	04	05
ZT:	[01]	[04]	[03]	[03]	[09]
Zn:	06	07	95	96	
ZT:	[07]	[06]	[00]	[00]	

**RC = ALARM REPORT CODE** Two Hex Digits. For each Hex Digit, enter: 00-09 for 0-9, 10 for A, 11 for B, 12 for C, 13 for D, 14 for E, 15 for F.  
If "00" is entered in the first pair of boxes, there will be no report for that zone.  
For contact ID reporting, this is an enabling code only. Make any hex digit entry (other than "00") in the first pair of boxes. The second pair of boxes will be ignored.

**In = LOOP INPUT DEVICE** HW: Hard Wire Enter 3 for RF: Supervised RF  
Enter 4 for UR: Unsupervised RF  
Enter 5 for BR: Button Type RF

These are automatically assigned, except "UR" and "BR" for 5800 RF.

**L = RF INPUT LOOP** Used with 5800 RF Loop Input Devices. Record transmitter input number.

**TO PROGRAM SYSTEM STATUS, & RESTORE REPORT CODES (\*60-\*75):**

**With a 3+1 or 4+1 Standard Format:** Enter a code in the first box: 1-9, 0, B, C, D, E, or F. Enter "#+10" for 0, "#+11" for B, "#+12" for C, "#+13" for D, "#+14" for E, "#+15" for F.

A "0" (not "#+10") in the first box will disable a report.  
A "0" (not "#+10") in the second box will result in automatic advance to the next field when programming.

**With an Expanded or 4+2 Format:** Enter codes in both boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

A "0" (not "#+10") in the second box will eliminate the expanded message for that report.  
A "0" (not "#+10") in both boxes will disable the report.

**With Ademco Contact ID Reporting:** Enter any digit (other than "0") in the first box, to enable zone to report (entries in the second boxes will be ignored).

A "0" (not "#+10") in the first box will disable the report.

Examples: For Code 3 (Single Digit), enter:    
For Code 32 (Two Digits), enter:    
For Code B2 (Hexadecimal) enter:

**SYSTEM STATUS REPORT CODES (\*60-\*68)**

- \*60 TROUBLE REPORT CODE
- \*61 BYPASS REPORT CODE
- \*62 AC LOSS REPORT CODE
- \*63 LOW BATTERY REPORT CODE
- \*64 TEST REPORT CODE
- \*65 OPEN/EXIT ALARM CODE  /   
2nd digit of OPEN REPORT is automatically sent as the user number if expanded or 4+2 reporting is selected.  
2nd digit of EXIT ALARM REPORT is automatically sent as the 2nd digit of the zone alarm report code programmed in \*56, if expanded or 4+2 reporting is selected.
- \*66 AWAY/STAY CLOSE CODE  /   
2nd digit of any CLOSE REPORT is automatically sent as the user number, if expanded or 4+2 reporting is selected.
- \*67 RF XMTR LOW BAT RPRT CODE
- \*68 CANCEL REPORT CODE

**RESTORE REPORT CODES (\*70-\*75)**

- \*70 ALARM RESTORE RPRT CODE   
2nd digit is automatically sent as the 2nd digit of the zone alarm report code programmed in \*56, if expanded or 4+2 reporting is selected.
- \*71 TROUBLE RESTORE RPRT CODE
- \*72 BYPASS RESTORE RPRT CODE

- \*73 AC RESTORE REPORT CODE
- \*74 LOW BAT RESTORE RPRT CODE
- \*75 RF XMTR LO BAT RST CODE

**OUTPUT AND SYSTEM SETUP (\*80-\*92)**

- \*80 OUTPUT RELAYS
- \*81 ZONE LISTS FOR OUTPUT RELAYS    
*Program only if Relays are to be used. See next page.*
- \*82 CUSTOM ALPHA EDITING: (Also entered from field \*56): See procedure in Installation instructions.
- \*83 SEQUENTIAL MODE: Used for enrolling transmitters after all other zone information has been programmed. (Also can be accomplished from field \*56): See procedure in Installation instructions.
- \*91 OPTION SELECTION [0 = None]; 4 = AAV   
**Note:** AAV should not be used when Paging or Alarm reports are being sent to a secondary number. See DATA FIELD DESCRIPTIONS section for details.
- \*92 REPORTS PER ARMED PERIOD   
[0 = 10 max total alarm + alarm restore], 1 = unlimited

**DOWNLOAD INFO (\*94, \*95)**

- \*94 DOWNLOAD PHONE No.   
Enter up to 12 digits: 0-9; #+11 for '\*'; #+12 for '#'; #+13 for a pause. Do not fill unused spaces. If fewer than 12 digits entered, exit field by pressing \* (and press 95, if entering next field). To clear entries from field, press \*94\*.
- \*95 RING DET COUNT FOR DOWNLOADING   
[0=Disable Station Initiated Download]; 1-14=number of rings (1-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14); 15=answering machine defeat (#+15=15).
- \*96 INITIALIZES DOWNLOAD ID, SUBSCRIBER ACCOUNT No. FOR INITIAL DOWNLOAD. No entry required.
- \*97 SETS ALL PROGRAM FIELDS TO ADEMCO DEFAULT VALUES. **DO NOT KEY. See Warning at top of page 3.**

**TO EXIT PROGRAM MODE (\*98 or \*99)**

Press \*98 or \*99 if exiting programming, or next field number if continuing. See below.

- \*98 EXITS PROGRAMMING MODE and prevents re-entry by: Installer Code + 8 + 0.
- \*99 EXITS PROGRAMMING MODE and allows re-entry by: Installer Code + [8] + [0], or by: Pressing [\*] and [#] at the same time within 50 seconds of powering up..



# MECHANICS OF PROGRAMMING

This section provides information on how programming is performed in this system. It will enable you to understand how to enter and exit the programming mode, and how to program the data fields and the user-friendly interactive menu modes (\*56, \*80, \*81, \*82, \*83). We therefore urge you to read and understand the following before proceeding with any programming.

## General Programming Information

Characteristics for each installation are stored in non-removable, electrically erasable, non-volatile EEROM memory. Most of the data fields have been programmed for specific Westec values. However, there are some fields that may need to be programmed for each particular installation to establish its specific alarm and reporting features. These are: field \*40: PABX ACCESS CODE, field \*91: OPTION SELECTION (AAV), and field \*94: DOWNLOAD PHONE NUMBER.

The Programming Form in this manual shows those data fields that have been pre-programmed for Westec (Westec values are shown in the boxes in the programming form).



The following program fields **must be** programmed (as required) before doing any programming.

- \*22. RF SYSTEM
- \*25. OUTPUT RELAY MODULE

See ***Programming System Setup Fields*** on next page.

It is possible to program the system at any time, even at the installer's premises prior to the actual installation. Simply apply power temporarily to the control and then program the fields that need to be programmed.

***Important Note:*** You cannot enter the programming mode unless the system is disarmed.

There are two programming modes: data field programming and interactive menu mode programming. Data field programming is used for setting various system options and menu programming is used for programming zone information, programming relay outputs, and for entering 5800 series transmitter serial numbers.



To program the system, you must use an Ademco 6139 two-line Custom English (Alpha) keypad connected to keypad terminals on the control (4, 5, 6, & 7). A Custom English keypad need not necessarily remain in the system after programming.

Programming can also be performed remotely from the installer's office/home, using an IBM personal computer, a modem, and either Ademco's V-Link<sup>®</sup> downloading software (Rev. 4 or higher), or Ademco's *Compass* Windows downloading software. See the ***REMOTE PROGRAMMING AND CONTROL (DOWNLOADING)*** section in this manual.

## Entering the Program Mode

You may use one of the following methods:

- (a) Press both the [\*] and [#] keys at the same time **within 50 seconds after power is applied to the Control**, or
- (b) After power up, enter the following: **Installer code (4 1 1 1) + 8 + 0.**  
Method (b) is disabled if you exit the program mode using \*98 instead of \*99. See "Exiting the Program Mode" paragraph later in this section.

Following entry into the program mode, data field \*20 will be displayed (this is the first field in the system). You can then proceed to program those fields that require programming (see the next paragraph, "Programming a Data Field").

## Programming a Data Field

1. Press [\*] plus **Field No.** (for example, \*91), then make the required entry.
2. When you have completely programmed a data field, the keypad will “beep” three times and then automatically display the next data field in sequence. To go to a different field, press [\*] plus the desired field No.
3. If the number of digits that you need to enter in a data field is less than the maximum digits available (for example, the phone number field), enter the desired data, then press [\*] and the next data field number to be programmed.
4. If you try to enter a non-existent field (e.g., \*44), a Custom English keypad will display **NOT USED** and **EE** (Entry Error). Simply key [\*] again plus a valid field number.

## Reviewing a Data Field/Erasing an Entry in a Data Field

Press [#] plus **Field No.** Data will be displayed for that field number. **No changes will be accepted in this mode.**

To delete an entry in a field, press [\*] plus **Field No.** plus [\*]. (Applies only to fields \*40 – \*42, and \*94.)

## Menu Mode Programming (\*56, \*80, \*81, \*82 and \*83)

Typical prompt displayed during menu mode programming

Enter Zn Num.	01
(00 = Quit)	

Zone Number ≠


Press [\*] plus **menu mode No.** (for example, \*56). The keypad will display the first of a series of prompts requesting entries.

A detailed procedure (with displays of prompts) is provided in those sections in the Installation Instructions where programming in the menu mode is to be performed.

Menu Mode	Used To Program
*56 Zone Programming	Zone characteristics, report codes, alpha descriptors and serial numbers for 5800 transmitters
*80 Relay Programming	4204 Relay modules
*81 Zone List Programming	Zone Lists for 4204 relay activation
*82 Alpha Programming	Zone alpha descriptors
*83 Sequential Mode	5800 series transmitter serial numbers

- \*96 Resets the Subscriber Account number and CSID in preparation for an initial download. **No data entry required.**
- \*97 Will reset all program fields to the Ademco default values shown in brackets next to the boxes in the Program Form.  
**DO NOT KEY \*97. This will change all factory-programmed Westec defaults to Ademco defaults.**

## Programming System Setup Fields

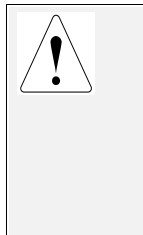

**The following program fields MUST be programmed (as required) before doing any programming.**

- \*22 **RF SYSTEM** (Default is 0).  
Enter “1” if 5700 RF system type is being used; enter “2” if a 5800 RF system type is being used; enter “0” if no RF is being used.
- \*25 **OUTPUT RELAY MODULE** (Default is 0).  
Enter “3” if a 4204 relay is being used, or “0” if a relay is not being used.

## Exiting the Programming Mode

- \*98 EXITS PROGRAMMING MODE and *prevents* re-entry by **Installer Code + [8] + [0]**. To enter the programming mode if \*98 was used to exit, you must first power the system down. Then power up again, and press [\*] and [#] both at once, within 50 seconds of powering up.
- \*99 EXITS PROGRAMMING MODE and *allows* re-entry by:  
**Installer Code + [8] + [0]** or by:  
Pressing [\*] and [#] at the same time, within 50 seconds of powering the system up.



## 5800 Series Transmitter Input Loop Identification














- All of the transmitters illustrated below have one or more unique factory assigned input (loop) ID codes. Each of the inputs requires its own programming zone (e.g., a 5804's four inputs require four programming zones).

- Transmitter inputs entered as:

**"RF" (Supervised RF) Type** send periodic check-in signals, as well as fault, restore and low battery signals. The transmitter must remain within the receiver's range.

**"UR" (Unsupervised RF) Type** send all the signals that the "RF" Type does, but the control does not supervise the check-in signals. The transmitter may, therefore, be carried off-premises.

**"BR" (Unsupervised Button RF) Type** only send fault signals. Restore or check-in signals are not sent, but low battery signals are sent when a button is pressed. The transmitter may be carried off-premises.

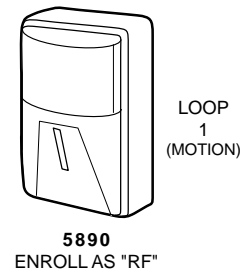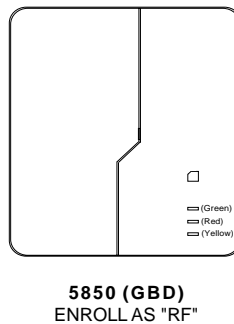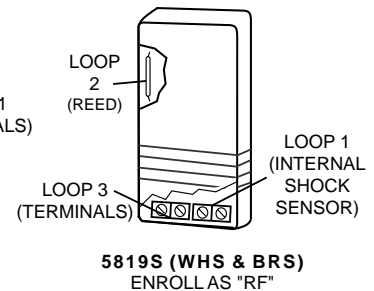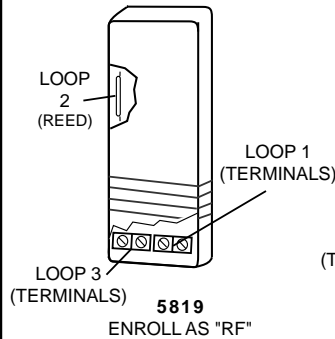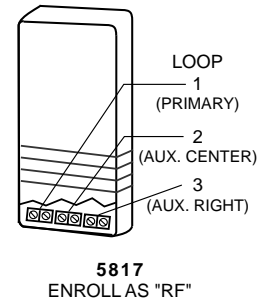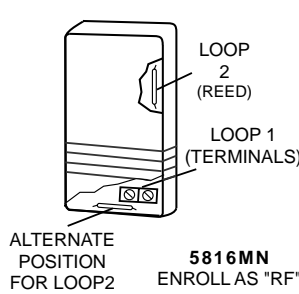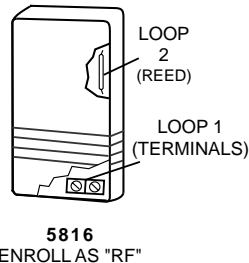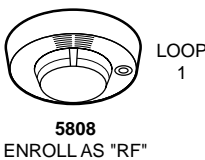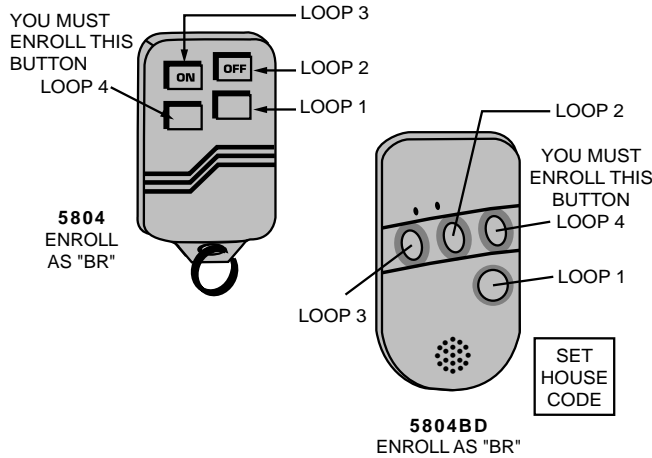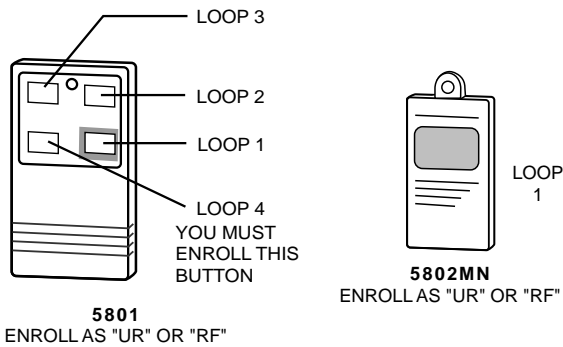

# ALPHA VOCABULARY LIST (For Entering Zone Descriptors)

**NOTE: Some words appearing in previously published lists have been deleted from the list below. Use only this list for selecting zone descriptors.**

000 (Word Space) • <b>001</b> AIR • <b>002</b> ALARM 004 ALLEY 005 AMBUSH • <b>006</b> AREA • <b>007</b> APARTMENT • <b>009</b> ATTIC 010 AUDIO  • <b>012</b> BABY • <b>013</b> BACK • <b>014</b> BAR • <b>016</b> BASEMENT • <b>017</b> BATHROOM • <b>018</b> BED • <b>019</b> BEDROOM 020 BELL • <b>021</b> BLOWER • <b>022</b> BOILER 023 BOTTOM 025 BREAK • <b>026</b> BUILDING  • <b>029</b> CALL 030 CAMERA 031 CAR 033 CASH 034 CCTV 035 CEILING 036 CELLAR • <b>037</b> CENTRAL 038 CIRCUIT • <b>040</b> CLOSED • <b>046</b> COMPUTER 047 CONTACT  • <b>048</b> DAUGHTERS 049 DELAYED • <b>050</b> DEN 051 DESK • <b>052</b> DETECTOR • <b>053</b> DINING 054 DISCRIMINATOR 055 DISPLAY	• <b>057</b> DOOR • <b>059</b> DOWN • <b>060</b> DOWNSTAIRS 061 DRAWER • <b>062</b> DRIVEWAY • <b>064</b> DUCT  E • <b>065</b> EAST 066 ELECTRIC 067 EMERGENCY 068 ENTRY • <b>069</b> EQUIPMENT • <b>071</b> EXIT 072 EXTERIOR  F • <b>073</b> FACTORY 075 FAMILY • <b>076</b> FATHERS • <b>077</b> FENCE • <b>079</b> FIRE • <b>080</b> FLOOR 081 FLOW 082 FOIL • <b>083</b> FOYER 084 FREEZER • <b>085</b> FRONT  G • <b>089</b> GARAGE • <b>090</b> GAS 091 GATE • <b>092</b> GLASS 093 GUEST 094 GUN  H • <b>095</b> HALL • <b>096</b> HEAT 098 HOLDUP 099 HOUSE 100 INFRARED • <b>101</b> INSIDE 102 INTERIOR 103 INTRUSION  J 104 JEWELRY  K • <b>105</b> KITCHEN	• <b>106</b> LAUNDRY • <b>107</b> LEFT 108 LEVEL • <b>109</b> LIBRARY • <b>110</b> LIGHT 111 LINE • <b>113</b> LIVING • <b>114</b> LOADING 115 LOCK 116 LOOP 117 LOW • <b>118</b> LOWER  M • <b>119</b> MACHINE 121 MAIDS 122 MAIN • <b>123</b> MASTER • <b>125</b> MEDICAL 126 MEDICINE 128 MONEY 129 MONITOR • <b>130</b> MOTHERS • <b>131</b> MOTION 132 MOTOR  N • <b>134</b> NORTH 135 NURSERY  O • <b>136</b> OFFICE • <b>138</b> OPEN 139 OPENING • <b>140</b> OUTSIDE 142 OVERHEAD  P 143 PAINTING • <b>144</b> PANIC 145 PASSIVE • <b>146</b> PATIO 147 PERIMETER • <b>148</b> PHONE 150 POINT 151 POLICE 152 POOL • <b>153</b> POWER  R 155 RADIO • <b>156</b> REAR	155 RADIO • <b>156</b> REAR 157 RECREATION 159 REFRIGERATION 160 RF • <b>161</b> RIGHT • <b>162</b> ROOM 163 ROOF  S 164 SAFE 165 SCREEN 166 SENSOR • <b>167</b> SERVICE • <b>168</b> SHED 169 SHOCK • <b>170</b> SHOP 171 SHORT • <b>173</b> SIDE 174 SKYLIGHT 175 SLIDING • <b>176</b> SMOKE • <b>178</b> SONS • <b>179</b> SOUTH 180 SPRINKLER • <b>182</b> STATION 184 STORE • <b>185</b> STORAGE 186 STORY 190 SUPERVISED 191 SUPERVISION 192 SWIMMING 193 SWITCH  T 194 TAMPER 196 TELCO 197 TELEPHONE • <b>199</b> TEMPERATURE 200 THERMOSTAT • <b>201</b> TOOL 202 TRANSMITTER  U • <b>205</b> UP • <b>206</b> UPPER • <b>207</b> UPSTAIRS • <b>208</b> UTILITY	V 209 VALVE 210 VAULT 212 VOLTAGE  W 213 WALL 214 WAREHOUSE • <b>216</b> WEST • <b>217</b> WINDOW • <b>219</b> WING 220 WIRELESS  X 222 XMITTER  Y 223 YARD  Z 224 ZONE (No.) • <b>225</b> ZONE • <b>226</b> 0 • <b>227</b> 1 • <b>228</b> 1ST • <b>229</b> 2 • <b>230</b> 2ND • <b>231</b> 3 • <b>232</b> 3RD • <b>233</b> 4 • <b>234</b> 4TH • <b>235</b> 5 • <b>236</b> 5TH • <b>237</b> 6 • <b>238</b> 6TH • <b>239</b> 7 • <b>240</b> 7TH • <b>241</b> 8 • <b>242</b> 8TH • <b>243</b> 9 • <b>244</b> 9TH  250 Custom Word #1 251 Custom Word #2 252 Custom Word #3 253 Custom Word #4 254 Custom Word #5
---	--	--	--	--

**Note:** Bulleted (•) words in **boldface type** are those that are also available for use by the 4285 Phone Module. If using a Phone module, and words other than these are selected for Alpha descriptors, the module will not provide annunciation of those words.

## CHARACTER (ASCII) CHART (For Adding Custom Words)

32 (space)	42 *	52 4	62 >	72 H	82 R
33 !	43 +	53 5	63 ?	73 I	83 S
34 "	44 ,	54 6	64 @	74 J	84 T
35 #	45 -	55 7	65 A	75 K	85 U
36 \$	46 .	56 8	66 B	76 L	86 V
37 %	47 /	57 9	67 C	77 M	87 W
38 &	48 0	58 :	68 D	78 N	88 X
39 '	49 1	59 ;	69 E	79 O	89 Y
40 (	50 2	60 <	70 F	80 P	90 Z
41 )	51 3	61 =	71 G	81 Q	

# ZONE RESPONSE TYPE DEFINITIONS

- Type 00** Program a zone with this zone type if the zone is not used.  
Zone Not Used
- Type 01** This zone type provides entry delay whenever the zone is faulted if the control is armed in the AWAY or STAY modes. When the panel is armed in the Instant or Maximum modes, no entry delay is provided. Exit delay begins whenever the control is armed, regardless of the arming mode selected. These delays are programmable. This zone type is usually assigned to sensors or contacts on doors through which primary entry and exit will take place.  
Entry/Exit Burglary
- Type 02** Not used in this system
- Type 03** This zone type gives an instant alarm if the zone is faulted when the panel is armed in the AWAY, STAY, INSTANT or MAXIMUM modes. This zone type is usually assigned to all sensors or contacts on exterior doors and windows.  
Perimeter Burglary
- Type 04** This zone type is active when the panel is armed in the AWAY or MAXIMUM modes. Entry delay (using the programmed entry time) results if the panel is armed in the AWAY mode and the entry/exit zone is faulted first. Otherwise this zone type gives an instant alarm. *Exit* delay is present for *any* arming mode. This zone type is usually assigned to a zone covering an area such as a foyer, lobby, or hallway through which one must pass (upon entry, after faulting the entry/exit zone) to reach the keypad to disarm the system. Since this zone type is designed to provide an instant alarm if the entry/exit zone is not violated first, it will protect an area in the event an intruder hides on the premises prior to the system being armed, or gains access to the premises through an unprotected area. **This zone type is bypassed automatically when the panel is armed STAY or INSTANT.**  
Interior, Follower
- Type 05** This zone type will give an instant alarm if faulted when armed in the AWAY, STAY, INSTANT or MAXIMUM (night) modes. During the disarmed state (day), the system will provide a latched trouble sounding from the keypad (and a central station report, if desired). This zone type is usually assigned to a zone which contains a foil-protected door or window (such as in a store), or to a zone covering a "sensitive" area such as a stock room, drug supply room, etc. This zone type can also be used on a sensor or contact in an area where immediate notification of an entry is desired.  
Trouble by Day/  
Alarm by Night
- Type 06** This zone type sends a report to the Central Station but provides no keypad display or sounding. This zone type is usually assigned to a zone containing an Emergency button.  
24-hour Silent  
Alarm
- Type 07** This zone type sends a report to the Central Station, and provides a rapid beeping sound at the keypad, and an audible external alarm. This zone type is usually assigned to a zone that has an Emergency button.  
24-hour Audible  
Alarm
- Type 08** This zone type sends a report to the Central Station and provides a rapid beeping sound at the keypad. **(No bell output is provided).** This zone type is usually assigned to a zone containing a button for use in personal emergencies, or to a zone containing monitoring devices such as water or temperature sensors, etc.  
24-hour  
Auxiliary Alarm
- Type 09** This zone type provides a fire alarm on short circuit and a trouble condition on open circuit. The bell output will pulse when this zone type is faulted. This zone type is always active and cannot be bypassed. This zone type can be assigned to control panel wired zone 5 and to certain wireless zones.  
Supervised Fire
- Type 10** This zone type gives *entry* delay (using the programmed entry time), if tripped when the panel is armed in the Away mode, regardless of whether or not an entry/exit delay zone was tripped first. This zone type is also active during MAXIMUM mode, but *no* entry delay is provided (an alarm occurs immediately if the zone is tripped). *Exit* delay is present for *any* arming mode. **This zone type is bypassed automatically when the panel is armed Stay or Instant .**  
Interior w/Delay

- Type 20** Arm-Stay This is a special-purpose zone type used with 5800 series wireless pushbutton units which will result in arming the system in the STAY mode when the zone is activated. Pushbutton units send zone number as a user number to central station when arming or disarming.
- Type 21** Arm-Away This is a special-purpose zone type used with 5800 series wireless pushbutton units which will result in arming the system in the AWAY mode when the zone is activated. Pushbutton units send zone number as a user number to central station when arming or disarming.
- Type 22** Disarm This is a special-purpose zone type used with 5800 series wireless pushbutton which will result in disarming the system when the zone is activated.
- Type 23** No Alarm Response This zone type can be used on a zone when an output relay action is desired, but with no accompanying alarm (e.g., lobby door access).

By using a 4281/5881 type RF Receiver and the appropriate 5700/5800 series transmitters, all of the zone types listed\* are available for the wireless portion of the system.

\* **Note:** Zone Types 20, 21, and 22 cannot be used in a 5700 RF system.

# DATA FIELD DESCRIPTIONS

Use the programming form in this manual to record the values programmed in those fields not already programmed with **Westec** defaults. Enter these values in the empty boxes on the programming form.

**Westec Defaults (where applicable) are shown in the Programming Form in this manual.**

The following is a list of all data fields in this control (presented in numerical order). This list provides an explanation of each data field, and will serve as a reference for all fields in the system.

- \*20 INSTALLER CODE** (4-Digit Entry)  
The Installer code is used to program the system, and to assign the 4-digit Master security code **in the normal operation mode**, via the keypad. See "Master Code" in the *SYSTEM OPERATION* section in the Installation Instructions for the procedure. Enter 4 digits, 0–9.
- \*21 QUICK ARM ENABLE** (1-Digit Entry)  
If enabled, the [#] key can be used instead of the security code when **arming** the system. Enter 0 for disabled or 1 for enabled. **This feature will function only if the Master Code is programmed.**
- \*22 RF SYSTEM** (1-Digit Entry)  
This option must be enabled if a wireless receiver is used. Enter "1" for 5700 RF systems, "2" for 5800\* RF systems. A "0" = no receiver is being used.  
\* 5882 series RF receivers in Canada.
- \*23 FORCED BYPASS FUNCTION** (1-Digit Entry)  
This feature allows all faulted zones to be bypassed automatically. All zones that are bypassed by this function will be displayed after the bypass is initiated:  
0 = No forced bypass; 1 = Allows automatic bypass of all open zones.
- \*24 RF HOUSE ID CODE** (2-Digit Entry)  
The House ID identifies receivers and wireless keypads in a 5700 RF system and must be assigned (01–31).  
If a 5827 or 5827BD Wireless keypad is to be used in a 5800 RF system, a House ID code **MUST** also be entered (01–31), and the keypad should be set to the same ID. Enter "00" if no 5827 or 5827BD wireless keypad is used, or if wireless is not used in the system.
- \*25 OUTPUT RELAY MODULE** (1-Digit Entry)  
Enter 3 if relay module is being used, or 0 if not.
- \*26 VOICE MODULE ACCESS CODE** (2-Digit Entry)  
The use of a 4285 Voice Module requires a 2-digit code.  
Enter a 2-digit phone access code as follows: For first digit, enter any digit from 1 to 9; for second digit, enter # +11 for "\*", or # +12 for "#".  
*Example:* If desired access code is 7\*, 7 is the first entry, and # + 11 (for \*) is the second entry.  
"00" = Voice Module disabled. **Note:** A "0" in *either* digit will disable the Phone Module.
- \*27 OUTPUT TO LONG RANGE RADIO** (1-Digit Entry)  
0= no, 1 = yes. If output to LRR is selected here (1), all messages that are programmed to go to the primary telephone line receiver will also be sent to the radio (e.g., 7720 PLUS or 7820). These messages will always be in Contact ID format (overriding the selection in field \*46). The data line is supervised, as well as certain functions in the radio.  
If communication is lost or a trouble develops, a message will be attempted to be sent via both radio and telephone to the central station. Normal trouble restore report (\*71) is sent on restore of the condition.  
**Note:** The Radio should be programmed for device address 3 on the keypad lines.

**ZONE SOUNDS AND  
TIMING  
(\*28 - \*39)**

- \*28 SINGLE ALARM SOUNDING PER ZONE** (1-Digit Entry)  
**(Per Armed Period)**  
This field limits external alarm sounding to once per arming period for

<b>UL</b>	For UL installations, enter 0 for unlimited Alarm Soundings
-----------	---

- \*29 FIRE SOUNDER TIMEOUT** (1-Digit Entry)  
This field determines whether the external sounder will shut off after time allotted, or continue until manually turned off. Enter 0 for sounder timeout, or 1 for no timeout. Default is **0**.
- \*30 ALARM BELL TIMEOUT** (1-Digit Entry)  
This field determines whether the external sounder will shut off after time allotted, or continue until manually turned off. Enter as follows: 0 = No timeout; 1 = 4 min (default); 2 = 8 min; 3 = 12 min; 4 = 16 min.
- \*38 ENTRY DELAY** (1-Digit Entry)  
System will wait the time allotted before sounding alarm upon entering. May be selected individually  
0 = 0 seconds; 1 = 20 seconds; 2 = 30 seconds; 3 = 45 seconds;  
4 = 60 seconds; 5 = 90 seconds.  
(EXIT delay = Entry delay plus 15 seconds).

<b>UL</b>	For UL installations, entry delay can be no greater than 45 seconds.
-----------	--

- \*39 AUDIBLE EXIT WARNING** (1-Digit Entry)  
If enabled, this field provides exit warning sound when armed AWAY or MAXIMUM.  
Warning sound consists of slow continuous beeps until last 5 seconds, when it changes to fast beeps. The warning sound will end at the termination of Exit time.  
0 = no; 1 = yes.

**DIALER  
PROGRAMMING  
(\*40 - \*50)**

**Fields \*40, \*41, \*42:**  
Enter up to the number of digits shown. Do not fill unused spaces.  
Enter 0-9,  
# + 11 for '\*'  
# + 12 for '#'  
# + 13 for a pause  
(2.5 secs)

- \*40 PABX ACCESS CODE** (See Box at Left)  
Enter up to 4 digits if PABX is needed to access an outside line. If fewer than 4 digits are needed to be entered, exit by pressing \* and next field number (e.g., 41). To clear entries from field, press \*40\*.
- \*41 PRIMARY PHONE No.** (See Box at Left)  
Enter up to 12 digits. If fewer than 12 digits entered, exit by pressing \* and next field number (e.g., 42). To clear entries from field, press \*41\*.  
**Note:** Back-up reporting (8 calls are made to the secondary phone number if no kiss-off is received after 8 attempts to primary number) is automatic only if there is a secondary phone number (field \*42).
- \*42 SECONDARY PHONE No.** (See Box at Left)  
Enter up to 12 digits. If fewer than 12 digits entered, exit by pressing \* and next field number (e.g., 43). To clear entries from field, press \*42\*. See *Note* in field \*41 also.  
**Note: If you wish to send a report to a pager, see field \*47 on next page .**
- \*43 SUBSCRIBER ACCOUNT. No.** (Enter up to 4 digits).  
Enter digits 0-9, #+11=B, #+12=C, #+13=D, #+14=E, or #+15=F. Enter \* as the fourth digit if a 3 digit account no. (for 3+1 dialer reporting format) is used. Enter 0 as the first digit of a 4-digit account no. for nos. 0000-0999. End field by pressing \* (and press next field) if only 3 digits are used.  
This field is also used as the Long Range Radio Subscriber Account #.
- \*45 PHONE SYSTEM SELECT** (1-Digit Entry)  
If Central Station Receiver *is not* on WATS line:  
0 = Pulse Dial 1 = Tone Dial  
If Central Station Receiver *is* on WATS line:  
2 = Pulse Dial 3 = Tone Dial

For an explanation of these formats, see the *SYSTEM COMMUNICATION* section in the Installation Instructions.

**\*46 REPORT FORMAT** (1-Digit Entry)  
 Determine which format is to be used to report to the central station. Enter 1 digit (0-9).  
 0 = 3+1; 4+1 ADEMCO Lo Speed Standard  
 1 = 3+1; 4+1 Radionics Standard  
 2 = 4+2 ADEMCO Lo Speed Standard  
 3 = 4+2 Radionics Standard  
 6 = 4+2 ADEMCO Express  
 7 = ADEMCO Contact ID Reporting  
 8 = 3+1; 4+1 ADEMCO Lo Speed Expanded  
 9 = 3+1; 4+1 Radionics Expanded  
 (Enter \* as the 4th digit of \*43 if 3+1 dialer reporting is to be used.)  
**Note:** The maximum number of alarm and alarm restore reports during one armed period is determined by field \*92.  
 See field \*27, which may override this field's selection.

**\*47 SPLIT/DUAL REPORTING** (1-Digit Entry)  
 Enter 0 to disable (Backup report only).  
 Entries 1 through 9 can be made, as indicated in the table below. Entries 6 through 9 will send a report to a pager (in addition to the selected primary phone number), but you must enter the pager number as the secondary phone number in field \*42.

	TO PRIMARY PHONE #	TO SECONDARY PHONE #
1 =	Alarms, Restore, Cancel	Other Reports
2 =	All except Open/Close, Test	Open/Close, Test
3 =	Alarms, Restore, Cancel	All reports
4 =	All except Open/Close, Test	All reports
5 =	All reports	All reports
	TO PRIMARY PHONE #	TO PAGING No. * (Secondary)
6 =	All reports except Open/Close	Alarms/Open/Close, Troubles
7 =	All reports	Alarms, Troubles
8 =	All reports	Alarms/Open/Close, Troubles
9 = 25‡	All reports except Open/Close	Alarms, Open/Close for Users #5- Troubles.

\* Can only be used if Primary reporting format is Ademco Contact ID.  
 If reporting to Pager, choose from 6, 7, 8, or 9, as desired.

‡ Will report only Users 5, 6, & 8. If using wireless button-type devices, the zone number of the arm or disarm button (10-25) will be sent as the user number.

Entries 6 through 9 will send a report to a pager (in addition to the selected primary phone number), but you must enter the pager number as the secondary phone number in field \*42.

A 10-digit code is sent to the pager which will take the following format:

† 4-digit Subscriber No.  $\overline{AE}$  SSSS-EEE-NNN 3-digit User or Zone No.  
 (as entered in field \*43)  $\neq$

3-Digit Event Code, as follows:

911 = Alarm (NNN = Zone No.)

001 = Open, System disarmed (NNN = User No.)

002 = Close, System armed (NNN = User No.)

811 = Trouble (NNN = Zone No.)

† The first digit of the Subscriber No. entered in field \*43 must be 1-9 (do not use 0); the last 3 digits can be 0-9. Failure to observe this requirement may interfere with paging services.

(Continued)

Example 1. Pager displays: 1 23 4-9 11-0 04

This indicates that Subscriber No. 1234's system is reporting an Alarm (911), due to zone 4 being faulted (004).

Example 2. Pager displays: 1 23 4-0 01-0 05

This indicates that Subscriber No. 1234's system is reporting an opening (001) by User 5 (005).

*Note that no restore reports are sent to the pager.*

**Important:** AAV should not be used when Paging or Alarm Reports are being sent to a Secondary number. If this is done, the call to the Secondary number by the communicator after the alarm report will prevent the AAV from taking control of the telephone line, and the AAV "Listen in" session cannot take place.

**\*48 15-SECOND DIALER DELAY (BURGLARY)**

*Single-digit entry.* If selected, will provide 15-second delay of burglary alarm report to the central station. Allows time for subscriber to avoid a false alarm transmission.

0 for no delay, or 1 for 15-second delay.

**\*49 PERIODIC TEST REPORT (1-Digit Entry)**

Select the desired test report interval.

0 = none; 1 = 24 hours; 2 = weekly; 3 = 30 days.

Test Report code entered in field \*64 is sent; reports with Subscriber No.

**UL** For UL installations, 24 hours (1) must be selected

**\*50 SESCOA/RADIONICS SELECT (1-Digit Entry)**

0 = Radionics (0-9, B-F reporting)

1 = SESCOA (0-9 only reporting)

Select 0 for all other formats.

**\*51 CONFIRMATION OF ARMING DING (1-Digit Entry)**

Enter 1 to enable 1/2 second external alarm sounding "ding" when closing report goes in, or at the end of exit delay. Enter 2 for alarm sounding ding with RF arming (this will work with either a button RF unit or a 5827).

**0** disables the "ding".

**\*52 ZONE 3 RESPONSE TIME TO OPEN (1-Digit Entry)**

0 = 400ms nominal; 1 = 10ms nominal.

**\*56 ZONE ASSIGNMENT/ALARM REPORT CODES  
(and entering RF Input IDs for the 5800 System)**

This is a menu mode that is used to program zone numbers, zone types, alarm and report codes, and to identify the type of loop input device. This mode can also be used for entering 5800 series transmitter ID codes and for entering Alpha descriptors for zones (Alpha descriptors can also be entered in menu mode \*82).

Refer to the *BASIC HARDWIRED ZONES 1-6* section in the Installation Instructions for detailed hardwired zone programming, and the *WIRELESS (RF) ZONE EXPANSION (5700 & 5800 RF SYSTEMS)* section for detailed wireless zone expansion programming.

*Refer also to the zone assignment table for \*56 in the programming form in this manual.*



**TO PROGRAM  
SYSTEM STATUS  
AND RESTORE  
REPORT CODES  
(\*60 - \*68,  
\*70 - \*75)**

**With a 3+1 or 4+1 Standard Format:** Enter a code in the *first digit* box: 1-9, 0, B, C, D, E, or F. Enter "# + 10" for 0, "# + 11" for B, "# + 12" for C, "# + 13" for D, "# + 14" for E, "# + 15" for F.

A "0" (*not* "# + 10") in the *first digit* box will disable a report.

A "0" (*not* "# + 10") in the *second digit* box (if any) will result in automatic advance to the next field when programming.

**With an Expanded or 4+2 Format:** Enter codes in *both* boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

A "0" (*not* "# + 10") in the *second* box will eliminate the expanded message for that report.

A "0" (*not* "# + 10") in *both* boxes will disable the report.

**With Ademco Contact ID Reporting:** Enter any digit (other than "0") in the *first* box, to enable zone to report. This is an "enabling" code only and is disregarded in the actual reporting to the central office. Entries in the *second* boxes will be ignored.

A "0" (*not* "# + 10") in the *first* box will disable the report.

**Examples:**

For Code **3** (Single Digit), enter:

For Code **32** (Two Digits), enter:

For Code **B2** (Hexadecimal) enter:

**SYSTEM STATUS  
REPORT CODES  
(\*60 - \*68)**

**\*60 TROUBLE REPORT CODE** (See box above.) (2-Digit Entry)

**\*61 BYPASS REPORT CODE** (See box above.) (2-Digit Entry)

**\*62 AC LOSS REPORT CODE** (See box above.) (2-Digit Entry)

Reports with Subscriber No. Timing of this report is random with up to a 48-minute delay. The Restore report has a random delay of up to about 12 minutes. If AC restores before the report goes out, there is no AC restore report.

**\*63 LOW BAT REPORT CODE** (See box above.) (2-Digit Entry)

Reports with Subscriber No.

**\*64 TEST REPORT CODE** (See box above.) (2-Digit Entry)

Periodic Reports with Subscriber No.

**\*65 OPEN/EXIT ALARM REPORT CODE, 1st DIGITS** (2-Digit Entry)

**Open Report Code :** To enable, enter a code (or 0 to disable) in the left-hand box (see box above).

*For expanded or 4+2 reporting, 2nd digit = User #.*

**Exit Alarm Report Code:** To enable, enter a code (or 0 to disable) in the right-hand box (see box above). If enabled, **any alarm from an exit or interior zone occurring within two minutes after the end of the exit delay** will send a special message indicating exit alarm to the central station, and a zone indication and "Exit Alarm" or "EA" is displayed on the keypad.

**If an exit or interior zone contains a fault as the exit delay ends,** the local bell and keypad sound continuously.

a) *If the subscriber then disarms the system before the ensuing ENTRY delay ends,* no message is transmitted to the central station, but a zone indication and "Canceled Alarm" or "CA" is displayed on the keypad.

b) *If the system is not disarmed before that entry delay ends,* a special message indicating Exit Alarm is sent to the central station and a zone indication and "Exit Alarm" or "EA" is displayed on the keypad.

*For expanded or 4+2 reporting, a 2nd digit is sent, and is the same as the 2nd digit of the zone alarm report code programmed in field \*56.*

*For Contact ID reporting, Event code 374 and the zone number is sent.*

There is no restore message for Exit Alarm report.

**RESTORE  
REPORT CODES  
(\*70 - \*75)**

- \*66 AWAY/STAY CLOSE REPORT CODE** (2-Digit Entry)  
(See box on previous page.)  
To enable, enter a code (or 0 to disable) in either or both boxes.  
For expanded or 4+2 reporting, 2nd digit for each = User # .
- \*67 RF XMTR. LOW BATTERY REPORT CODE** (2-Digit Entry)  
(See box on previous page).
- \*68 CANCEL REPORT CODE** (2-Digit Entry)  
(See box on previous page.)
- \*70 ALARM RESTORE REPORT CODE**  
(See box on previous page). For expanded or 4+2 reporting, a 2nd digit is automatically sent, and is the same as the 2nd digit of the zone alarm report code programmed in field \*56.
- \*71 TROUBLE RESTORE REPORT CODE** (2-Digit Entry)  
(See box on previous page). This is sent when a trouble in a zone is restored.
- \*72 BYPASS RESTORE REPORT CODE** (2-Digit Entry)  
(See box on previous page) . This is sent when a zone that has been bypassed is un-bypassed.
- \*73 AC RESTORE REPORT CODE** (2-Digit Entry)  
(See box on previous page) . Reports with Subscriber No.
- \*74 LOW BAT RESTORE REPORT CODE** (2-Digit Entry)  
(See box on previous page). Reports with Subscriber No.
- \*75 RF XMTR. LOW BATTERY RESTORE CODE** (2-Digit Entry)  
(See box on previous page). This is sent when a transmitter that previously sent in a low battery message has sent a message indicating it no longer has a low battery condition.
- \*80 OUTPUT RELAYS**  
This is a menu mode that is applicable only if 4204 relays are to be used ("3" in field \*25). See the *RELAY OUTPUTS* section in the Installation Instructions for a detailed programming procedure. Also refer to the OUTPUT RELAY table for field \*80 in the Programming Form in this manual.
- \*81 ZONE LISTS FOR OUTPUT DEVICES**  
This is a menu mode that is applicable only if field \*25 is programmed for a 4204 relay. Refer to the *RELAY OUTPUTS* section in the Installation Instructions for a detailed programming procedure. Also refer to the ZONE LISTS FOR OUTPUT RELAYS table for \*81 in the Programming Form in this manual.
- \*82 CUSTOM ALPHA EDITING**  
See the *ALPHA DESCRIPTION PROGRAMMING* section in the Installation Instructions for procedure.
- \*83 SEQUENTIAL MODE**  
Used for enrolling transmitters in a 5800 RF system after all other zone information has been programmed.
- \*91 OPTION SELECTION** (1-Digit Entry)  
Enter "4" if an Audio Alarm Verification (AAV) unit is connected in the system (1-3 not used); enter "0" if an AAV unit is not being used.  
**Important:** AAV should not be used when Paging or Alarm Reports are being sent to a Secondary number. If this is done, the call to the Secondary number by the communicator after the alarm report will prevent the AAV from taking control of the telephone line, and the AAV "Listen in" session cannot take place.

**\*92 NUMBER OF REPORTS IN ARMED PERIOD**

(1-Digit Entry). This option can be used to limit the number of messages (alarm & alarm restore reports) sent to the central station in an armed period. "0" limits reports to a total of 10; "1" allows an unlimited number of reports.

**UL** "1" must be selected for UL installations

**DOWNLOAD INFORMATION**  
(\*94, \*95)

**\*94 DOWNLOAD PHONE NUMBER**

Enter up to 12 digits; 0-9, # +11 for "\*", # + 12 for "#", # + 13 for a pause. Do not fill unused spaces. End field by entering \*. To clear entries from field, press \*94\*.

**\*95 RING DETECTION COUNT FOR DOWNLOADING**

Enter number of rings before control picks up phone line (or 0 or 15). Refer to the chart below and program this field accordingly.

Phone Module	Answering Machine	Downloading	Field *95
Yes	No	No	Set for value other than "0" (1-14). This will enable the control panel to answer the phone call. Otherwise, it will not be possible to access the Phone Module
Yes	Yes	No	Set for a value higher than the number of rings for which the answering machine is set. Example: if machine is set for 4 rings, use a value of 5 or higher. This is recommended so that the Phone Module can still be accessed if the answering machine is turned off and does not answer the phone call.
Yes	No	Yes	Set for value other than "0" (1-14).
Yes	Yes	Yes	Enter "15" to bypass answering machine.
No	No	No	Enter "0".
No	Yes	No	Enter "0".
No	No	Yes	Enter 1-14.
No	Yes	Yes	Enter 15. See Important Note below.

**Important Note:** If "15" is entered in field \*95 to bypass an answering machine, and a 4285 Phone Module is included in the installation, you should note the following:

When calling in from an off-premises phone (to receive a status report or execute a command), the user should make the initial call, allow 1 to 3 rings only, and hang up. Then call in again – the Phone Module will now seize the line, and 2 long tones will be heard, followed by the usual voice prompt for the 2-digit phone access code. If this procedure is not followed, Phone Module operation will not be possible.

**\*96 INITIALIZE DOWNLOAD ID AND SUBSCRIBER ACCT. No. FOR DOWNLOADING.** No data entry required.

**\*97 SETS PROGRAM FIELDS TO ADEMCO DEFAULT VALUES**

DO NOT USE. Pressing \*97 will load all Ademco defaults in place of Westec defaults.

**TO EXIT PROGRAMMING MODE**  
(\*98 or \*99)

**\*98 EXITS PROGRAMMING MODE** and prevents re-entry by :  
INSTALLER Code + 8 + 0 .

To enter the programming mode if \*98 was used to exit, you must first power the system down. Then power up again, and depress [\*] and [#] both at once, within 50 seconds of powering up.

**\*99 EXITS PROGRAMMING MODE** and allows re-entry by:

INSTALLER Code + 8 + 0 or by method described in paragraph above (power down, power up and depress [\*] and [#] both at once, within 50 seconds of powering up).

# REMOTE PROGRAMMING AND CONTROL (DOWNLOADING)

## General Information

The Control can be remotely programmed from an IBM compatible Personal Computer (PC), a HAYES Modem, and either Ademco's V-Link® downloading software (Rev. 4 or higher), or Ademco's *Compass* Windows downloading software (as specified below).

Programming the control from a remote location is protected against compromise by someone attempting to defeat the system, using multi-levels of security protection:

- 1. Security Code Handshake:** An 8-digit download ID code must be matched between the control and the downloader .
- 2. Site-Initiated Remote Programming:** The Telco Hand-off feature allows the technician at the site to call the downloading facility from the control panel phone line, initiate a site download (Installer or Master Code + # + 1), and the control will immediately be on-line with the modem at the downloading facility. Also, if a local computer has a modem, the telephone line terminals of the control can be connected to the modem, and a direct download connection can be established with the new downloader program.
- 3. Station-Initiated Remote Programming:** The operator calls the site from your office to initiate the download call. The control hangs up and then calls back the PC via the preprogrammed telephone number. The unit can then be uploaded, downloaded, or controlled from your office.  
The control can also be set for no callback by the downloader.
- 4. Data Encryption:** Data passed between the PC and the control is encrypted for security so that it is very difficult for a foreign device tapped into the phone line to take over communication and substitute system compromising information.

**UL**

Downloading is not permissible for UL installations unless an installer is present at the installation site.

## Equipment Required

### At the premises:

Σ Westec VISTA-10SE Control and keypad.

### At the installer's office/home:

Σ An IBM PC compatible computer.

Σ *Either* a HAYES brand SMARTMODEM 1200 [Level 1.2 or higher external or Level 1.1 or higher (with 4 position DIP switch) internal style], *or* a HAYES brand Optima 24 Plus FAX96 Modem.

Σ Ademco's V-Link® downloading software (Rev. 4 or higher) or Ademco's *Compass* Windows downloading software.

Σ Appropriate interconnecting cables.

## Remote Programming Information

The downloading system can perform many functions when in communication with the control unit. Besides uploading and downloading, the status of the system can be observed and various commands can be initiated, as follows:

Σ Arm the System in the Away Mode; Disarm the System.

Σ Bypass a Zone.

Σ Shut Down Communication (dialer) Functions (non-payment of monitoring fees in an owned system).

- Σ Shut Down all Security System Functions (non-payment for a leased system).
- Σ Inhibit Local Keypad Programming (prevents account takeover).
- Σ Read: Arming Status, AC Power Status, Lists of Faulted Zones, Bypassed Zones, Zones Currently in Alarm, Zones Currently in Trouble, and RF Sensors with Low Battery Conditions.

**Notes:** After the control and the PC have established valid communication, each keypad on the system will become inactive and will display "CC" or "MODEM COMM.". The control, however, will still be scanning its zones and looking for alarms. If an alarm does occur, after communication is broken off, alarms are sounded and the proper dialer reports are sent to the central station. The keypads will become active after the download communication is terminated. The detailed operation of the download functions is covered in the installation instructions for the Downloading Software .


#### Remote Programming Advisory Notes

Alarm and trouble reporting may be delayed during the time that the system and the Downloader are linked to each other following a valid exchange of codes, but the proper message will get through to the Central Station after the link is broken.

- Σ Keypad entries are ignored during the time interval stated above.
- Σ A copy of the program downloaded may be produced from the IBM PC compatible computer, using the product's internal report generator, when an optional printer is connected (consult your PC manual for proper printer and connections).
- Σ Program Upload or Download Time—Approximately one minute fifteen seconds for a complete program.



**WESTEC FirstGuard (VISTA-10SE) SUMMARY OF CONNECTIONS**

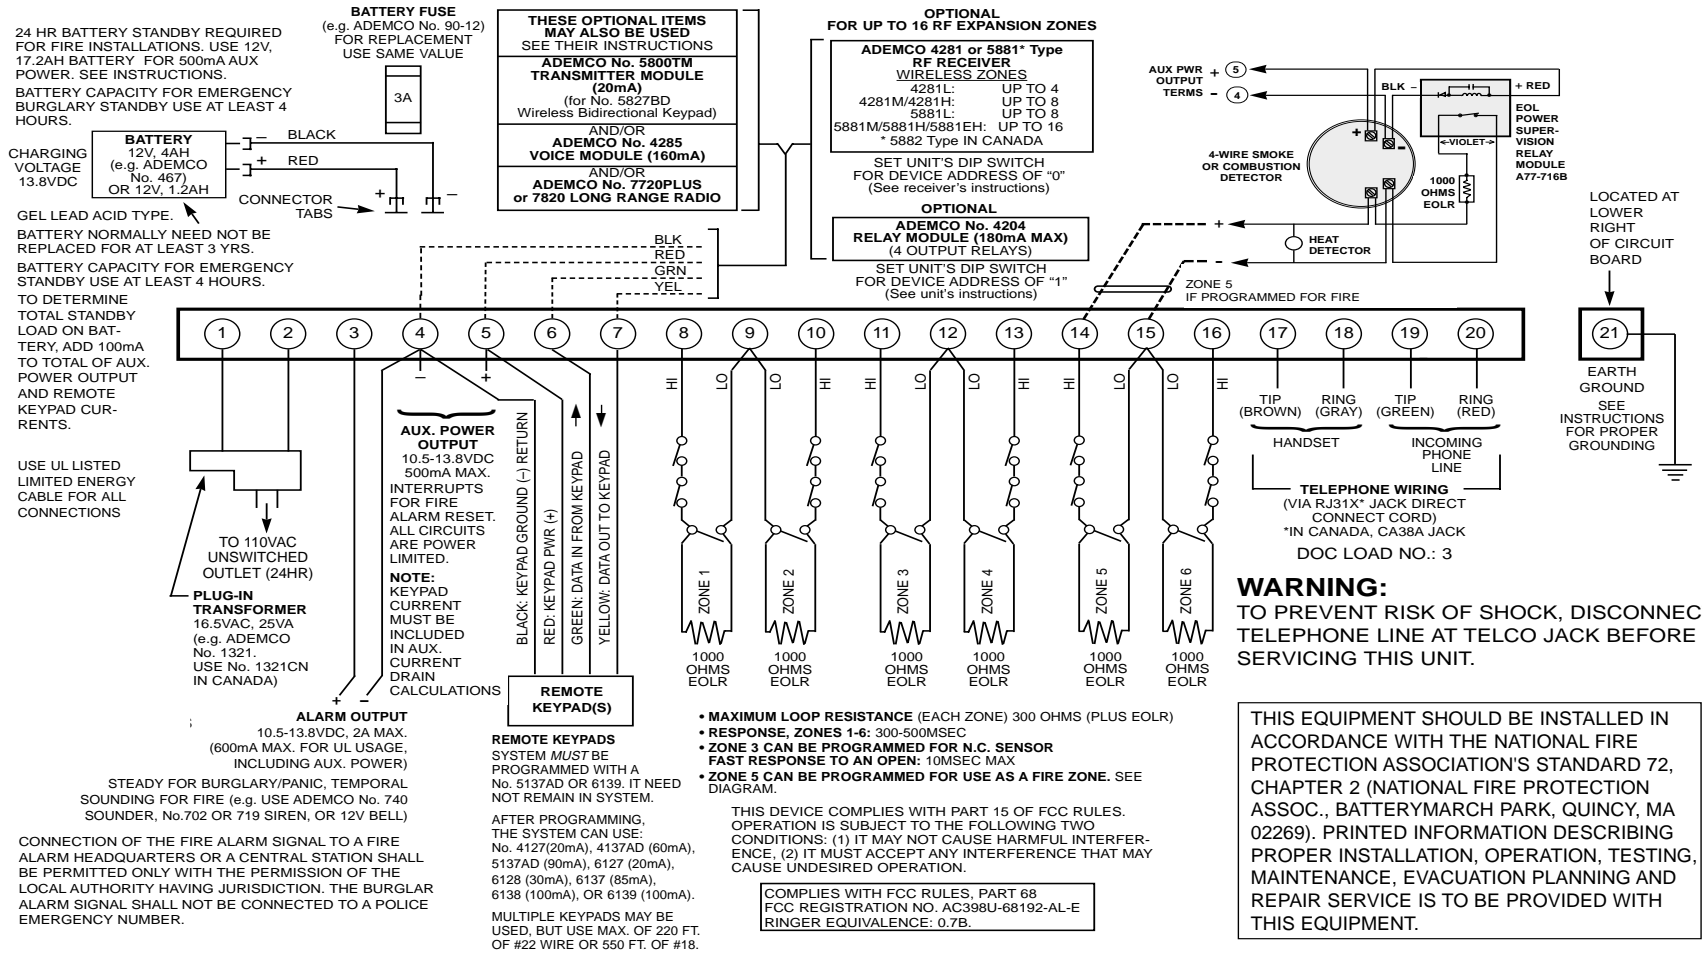

**WARNING:** OWNER'S INSTRUCTION NOTICE NOT TO BE REMOVED. WEEKLY TESTING IS REQUIRED TO ENSURE PROPER OPERATION OF THIS SYSTEM.



---

Home Security

---

**100 Bayview Circle  
Suite 1000  
Newport Beach, CA 92660**

Copyright © 1998



N7227PRWEV1 Rev B 4/99