


VISTA-20P Series

VISTA-15P Series

Programming Guide

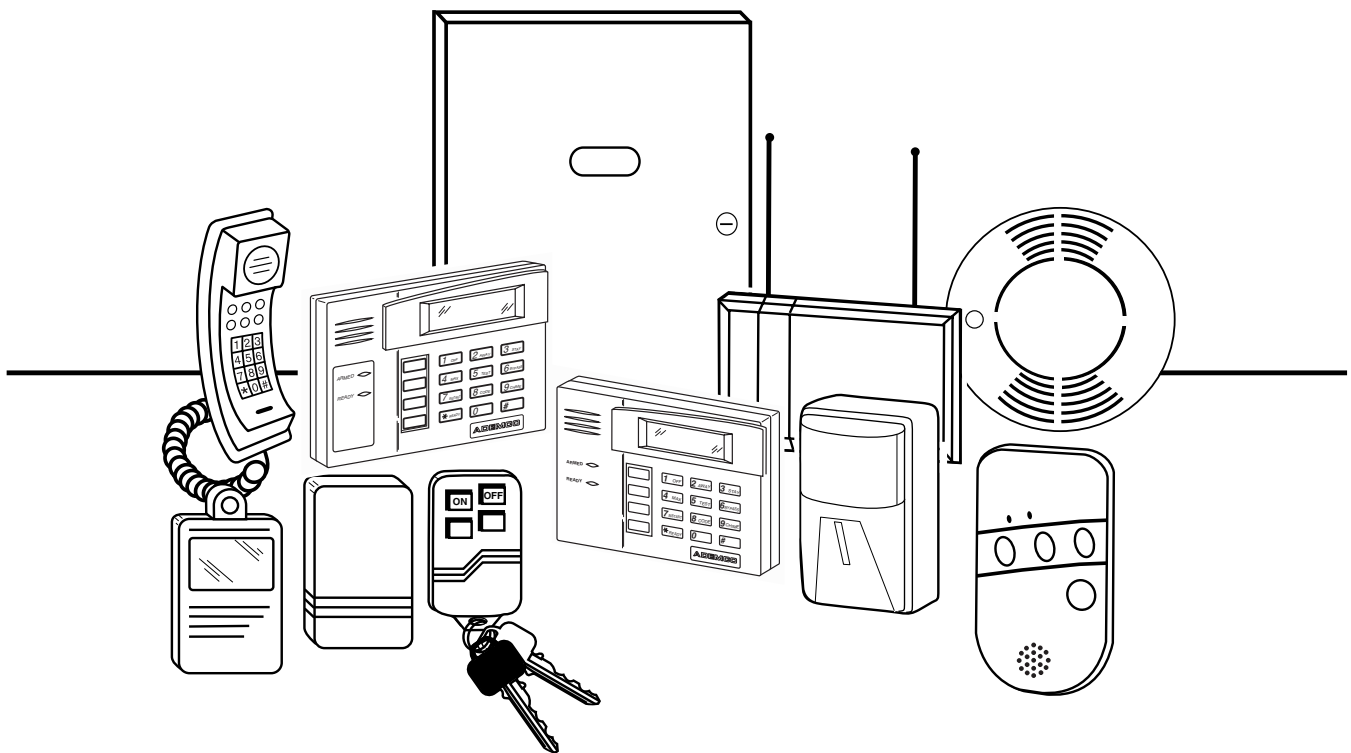

This version has been reformatted and now contains both Data Field and Menu Mode programming information.

ADEMCO
A Honeywell Company

TO ENTER PROGRAMMING MODE (using an alpha keypad connected to the control):

- A. POWER UP, then press [*] and [#] at the same time, within 50 seconds of powering up (this method must be used if *98 was used to exit program mode). **OR**
 B. Initially, key: Installer Code (4 + 1 + 1 + 2) plus 8 + 0 + 0.

PROGRAMMING MODE COMMANDS

| Task | Command/Explanation |
|--|---|
| Go to a Data Field | Press [*] + [Field Number], followed by the required entry. |
| Entering Data | When the desired field number appears, simply make the required entry. When the last entry for a field is entered, the keypad beeps three times and automatically displays the next data field in sequence. If the number of digits that you need to enter in a data field is less than the maximum digits available (for example, the phone number fields *41, *42), enter the desired data, then press [*] to end the entry. The next data field number is displayed. |
| Review a Data Field | Press [#] + [Field Number]. Data will be displayed for that field number. No changes will be accepted in this mode. |
| Deleting an Entry | Press [*] + [Field Number] + [*]. (Applies only to fields *40 thru *46, *94, and pager fields) |
| Initialize Download ID | Press *96. Initializes download ID and subscriber account number. |
| Reset Factory Defaults | Press *97. Sets all data fields to original factory default values. |
| Zone Programming | Press *56. Zone characteristics, report codes, alpha descriptors, and serial numbers for 5800 RF transmitters. |
| Function Key Programming | Press *57. Unlabeled keypad keys (known as ABCD keys) for special functions |
| Zone Programming (Expert Mode) | Press *58. Same options as *56 mode, but with fewer prompts. Intended for those familiar with this type of programming, otherwise *56 mode is recommended. |
| Output Device Mapping | Press *79. Assign module addresses and map individual relays/powerline carrier devices |
| Output Programming | Press *80. 4229 or 4204 Relay modules, Powerline Carrier devices, or on-board triggers |
| Zone List Programming | Press *81. Zone Lists for relay/powerline carrier activation, chime zones, pager zones, etc. |
| Alpha Programming | Press *82. Zone alpha descriptors |
| Exit Program Mode with installer code lockout | Press *98. Exits programming mode and <i>prevents</i> re-entry by: Installer Code + 8 + 0 + 0. To reenter programming mode, the system must be powered down, then powered up. Then use method A above. See field *88 for other *98 Program mode lockout options. |
| Exit Program Mode | Press *99. Exits programming mode and <i>allows</i> re-entry by: Installer Code + 8 + 0 + 0 or method A above. |

SPECIAL MESSAGES

OC = OPEN CIRCUIT (no communication between Keypad and Control).

EE or **ENTRY ERROR** = ERROR (invalid field number entered; re-enter valid field number).

After powering up, **AC**, **dl** (disabled) or **Busy Standby** and **NOT READY** will be displayed after approximately 4 seconds. This will revert to a **"Ready"** message in approximately 1 minute, which allows PIRS, etc. to stabilize. You can bypass this delay by pressing [#] + [0].

If **E4** or **E8** appears, more zones than the expansion units can handle have been programmed. The display will clear after you correct the programming.

TABLE OF DEVICE ADDRESSES

| This Device | Uses Address | Reports as †† | Enabled By... |
|------------------------------|--------------|---------------|--|
| RF Receiver | 00 | 100 | *56 zone programming: input device type entry |
| Long Range Radio | 03 | 103 | automatic if output to long range radio field *29 enabled |
| 4286 Voice Module | 04 | 104 | automatic if phone module access code field *28 enabled |
| Zone Expanders (4219/4229): | | | *56 zone programming: input device type entry, then: |
| module 1 (for zones 09 - 16) | 07 | 107 | automatic if zone no. 9-16 entered as AW type or relay assigned |
| module 2 (for zones 17 - 24) | 08 | 108 | automatic if zone no. 17-24 entered as AW type or relay assigned |
| module 3 (for zones 25 - 32) | 09** | 109 | automatic if zone no. 25-32 entered as AW type or relay assigned |
| module 4 zones 33 - 40 | 10** | 110 | automatic if zone no. 33-40 entered as AW type or relay assigned |
| module 5 zones 41 - 48 | 11** | 111 | automatic if zone no. 41-48 entered as AW type or relay assigned |
| Relay Modules (4204): | | | *79 output device programming: device address prompt: |
| module 1 | 12 | 112 | entered at device address prompt |
| module 2 | 13 | 113 | entered at device address prompt |
| module 3 | 14** | 114 | entered at device address prompt |
| module 4 | 15** | 115 | entered at device address prompt |
| Keypads: | | | data field programming as listed below: |
| keypad 1 | 16 | n/a | always enabled, all sounds enabled. |
| keypad 2 | 17 | n/a | data field *190 |
| keypad 3 | 18 | n/a | data field *191 |
| keypad 4 | 19 | n/a | data field *192 |
| keypad 5 | 20 | n/a | data field *193 |
| keypad 6 | 21 | n/a | data field *194 |
| keypad 7 | 22 | n/a | data field *195 |
| keypad 8 | 23 | n/a | data field *196 |
| 5800TM Module | 28 | n/a | automatic |

** These module addresses apply to VISTA-20P only.

†† Addressable devices are identified by "1" plus the device address when reporting. Enter report code for zone 91 to enable addressable device reporting (default = reports enabled). See field *199 for addressable device (ECP) 3-digit/2-digit identification keypad display options.

***49 Split/Dual Reporting** [0]

0 = Standard/backup reporting only (all to primary)

| Primary Phone No. | 2nd Phone No. |
|---------------------------------|------------------|
| 1 = Alarms, Restore, Cancel | Others |
| 2 = All except Open/Close, Test | Open/Close, Test |
| 3 = Alarms, Restore, Cancel | All |
| 4 = All except Open/Close, Test | All |
| 5 = All | All |

***50 Burglary Dialer Delay** [2]

0 = no delay UL: must be "0"

1 = 15 seconds SIA Installations: delay must be minimum of 30 seconds

2 = 30 seconds

3 = 45 seconds

***53 SESCOA/Radionics Select** [0]

0 = Radionics (0-9, B-F); enter "0" for all non-SESCOA formats

1 = SESCOA (0-9 only reporting)

***54 Dynamic Signaling Delay** [0]

Select delay from 0 to 225 secs, in 15-sec increments.

0 = no delay (both signals sent); 1 = 15 secs; 2 = 30 secs, etc.

UL: Grade AA must be "0;" Grade A must be "15" max

***55 Dynamic Signaling Priority** [0]

0 = Primary Dialer first; 1 = Long Range Radio first.

For UL Commercial Burglary installations that use a DACT and LRR, this field must be "0".

***56, *57, *58 Menu Modes**

These are Menu Mode commands, not data fields, for Zone Programming, Function Key Programming, and Expert Mode Zone Programming respectively. See page 2 and their respective sections in the Installation and Setup Guide for procedures.

TO PROGRAM SYSTEM STATUS, & RESTORE REPORT CODES (*59 thru *68, *70 thru *76, and *89):

For 3+1 or 4+1 Standard Format: Enter a code in the *first* box: 1-9, #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F.

A 0 (*not* #+10) in the *first* box will disable a report. A 0 (*not* #+10) in the *second* box will result in automatic advance to the next field.

For Expanded or 4+2 Format: Enter codes in *both* boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

A 0 (*not* #+10) in the *second* box will eliminate the expanded message for that report. A 0 (*not* #+10) in *both* boxes will disable the report.

For Ademco Contact ID® Reporting: Enter any digit (other than 0) in the *first* box, to enable zone to report (entries in the *second* boxes are ignored).

A 0 (*not* #+10) in the *first* box disables the report.

UL: see installation instructions for requirements

SYSTEM STATUS REPORT CODES (*59-* 68)

***59 Exit Error Report Code** [0]

***60 Trouble Report Code** [00]

***61 Bypass Report Code** [00]

***62 AC Loss Report Code** [00]

***63 Low Bat Report Code** [00]

***64 Test Report Code** [00]

Use Scheduling mode to set periodic test reports, or use the following key commands:

installer code +[#] + [0] + 0 = test report sent every 24 hours

installer code +[#] + [0] + 1 = test report sent once per week

installer code +[#] + [0] + 2 = test report sent every 28 day

Each mode sets schedule 32 (VISTA-20P) or schedule 08 (VISTA-15P) to the stated repeat option; first test report sent 12 hours after command.

***65 Open Report Code** [0,0,0]

Part. 1 Part. 2 Common

***66 Arm Away/Stay Rpt Code**

[0,0,0,0,0,0]

Away Stay Away Stay Away Stay

Part. 1 Part. 2 Common

***67 RF Trans. Low Bat Report Code** [00]

UL: must be enabled if wireless devices are used

***68 Cancel Report Code** [00]

RESTORE REPORT CODES (*70 – *76)

***70 Alarm Restore Rpt Code** [0]

***71 Trouble Restore Rpt Code** [00]

***72 Bypass Restore Rpt Code** [00]

***73 AC Restore Rpt Code** [00]

***74 Low Bat Restore Rpt Code** [00]

***75 RF Trans. Lo Bat Rst Rpt Code** [00]

UL: must be enabled if wireless devices are used

***76 Test Restore Rpt Code** [00]

OUTPUT AND SYSTEM SETUP (*77 – *93)

***77 Daylight Savings Time** [4][10]

Start\End Month

0 = Disabled

1-12 = January-September (1 = Jan, 2 = Feb, etc)

#+10 = October; #+11 = November; #+12 = December

***78 Daylight Savings Time** [1][5]

Start\End Weekend

0 = disabled; 1 = first; 2 = second; 3 = third; 4 = fourth;

5 = last; 6 = next to last; 7 = third to last

***79, *80, *81, *82 Menu Modes**

These are Menu Mode commands, not data fields, for Output Device Mapping, Output Programming, Zone List Programming, and Alpha Programming respectively. See page 2 and their respective sections in the Installation and Setup Guide for procedures.

***84 Auto Stay Arm** [3]

0 = no; 1 = partition 1 only; 2 = partition 2 only; 3 = both partitions

***85 Cross Zone Timer** [0]

This option not for use in UL installations.

(assign cross zones on zone list 4, using *81 Menu mode)

| | | |
|----------------|---------------|---------------|
| 0 = 15 seconds | 6 = 2-1/2 min | #+12 = 8 min |
| 1 = 30 seconds | 7 = 3 min | #+13 = 10 min |
| 2 = 45 seconds | 8 = 4 min | #+14 = 12 min |
| 3 = 60 seconds | 9 = 5 min | #+15 = 15 min |
| 4 = 90 seconds | #+10 = 6 min | |
| 5 = 2 minutes | #+11 = 7 min | |

***86 Cancel Verify Keypad Display** [1]

0 = no; 1 = yes

***87 Misc. Fault Delay Time** [0]

(used with Configurable Zone Types "digit 6")

| | | |
|----------------|---------------|---------------|
| 0 = 15 seconds | 6 = 2-1/2 min | #+12 = 8 min |
| 1 = 30 seconds | 7 = 3 min | #+13 = 10 min |
| 2 = 45 seconds | 8 = 4 min | #+14 = 12 min |
| 3 = 60 seconds | 9 = 5 min | #+15 = 15 min |
| 4 = 90 seconds | #+10 = 6 min | |
| 5 = 2 minutes | #+11 = 7 min | |

UL: may only be used on non-burglar alarm/ non-fire alarm zones when used in fire and/or UL burglar alarm installation

***88 Program Mode Lockout Options** [0]

0 = standard *98 installer code lockout (reentry only by [*] + [#] within 50 seconds after power up)

1 = lockout [*] + [#] reentry after *98 exit (reenter via installer code or downloader only)

2 = not used

3 = lockout all local programming after *98 exit (reentry via downloader only)

***89 Event Log Full Report Code** [00]

See box above field *59 for report code entries.

***90 Event Log Enables** [3]

NOTE: System messages are logged when any non-zero selection is made.
0 = None; 1 = Alarm/Alarm Restore
2 = Trouble/Trouble Restore;
4 = Bypass/Bypass Restore;
8 = Open/Close. *Example:* To select "Alarm/Alarm Restore", and "Open/Close", enter 9 (1 + 8); To select all, enter #15.

***91 Option Selection** [8]

0 = None
4 = AAV UL: must use ADEMCU UVCM module
8 = Exit Delay Restart/Reset UL: must be disabled
+12 = AAV and Exit Delay Restart/Reset
SIA Installations: Exit Delay should be enabled.

***92 Phone Line Monitor Enable** [0,0]

UL: see Inst. Instructions for requirements 1 2
NOTE: Output Device must either be programmed to be STOPPED in field *80 or STOPPED by Code + # + 8 + output number.
Entry 1: 0 = disabled, 1-15 = 1 min - 15 min
(# +10 = 10 min; # +11 = 11 min; # +12 = 12 min; # +13 = 13 min; # +14 = 14 min; # +15 = 15 min)
Entry 2:
0 = Keypad display when line is faulted
1 = Keypad display plus keypad trouble sound
2 = Same as "1", plus programmed output device STARTS. If either partition is armed, external sounder activates also.

***93 No. Of Reports In Armed Period** [1]

Per Zone (Swinger Suppression)
0 = Unlimited Reports UL: must be "0"
1 = 1 report pair SIA Installations: Must be set for option 1 or 2.
2 = 2 report pairs

DOWNLOAD INFORMATION (*94, *95)

***94 Download Phone No.**

Enter up to 20 digits, 0-9; # +11 for '*'; # +12 for '#'; # +13 for a 2-second pause. Do not fill unused spaces. If fewer than 20 digits, exit field by pressing *. To clear entries from field, press *94*.

UL: downloading may be performed only if a technician is at the site.

***95 Ring Count For Downloading** [15]

NOTE: Do not enter "0" if using 4285/4286 Phone Module.
0 = Disable Station Initiated Download;
1-14 = number of rings (1-9, # +10 =10, # +11 =11, # +12 =12, # +13 =13, # +14 =14);
15 = answering machine defeat (# +15 =15).

***96, *97 Initialize/Reset Defaults**
This is a command, not a data field. See page 2.

***98, *99 Exit Commands**
This is a command, not a data field. See page 2.

PAGER OPTIONS (*160- *172)

***160 Pager 1 Phone No.**

Enter up to 20 digits. 0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***161 Pager 1 Characters**

Enter the optional prefix characters, up to 16 digits.
0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***162 Pager 1 Report Options**

[0,0,0]
Part. 1 Part. 2 common
For each partition, select from the following options:
0 = no reports sent
1 = Opens/closes all users
4 = All alarms and troubles
5 = All alarms / troubles, and opens/closes for all users
12 = Alarms / troubles for zones entered in zone list 9
13 = Alarms / troubles for zones entered in zone list 9, and opens/closes for all users

***163 Pager 2 Phone No.**

Enter up to 20 digits. 0-9; # +11 = 'Q'; # +12 = '#'; # +13 = 2-second pause.

***164 Pager 2 Characters**

Enter the optional prefix characters, up to 16 digits.
0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***165 Pager 2 Report Options**

[0,0,0]
Part. 1 Part. 2 common
See field *162 for reporting options. Select for each partition (use zone list 10 if using options 12 or 13).

***166 Pager 3 Phone No.**

Enter up to 20 digits. 0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***167 Pager 3 Characters**

Enter the optional prefix characters, up to 16 digits.
0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***168 Pager 3 Report Options**

[0,0,0]
Part. 1 Part. 2 common
See field *162 for reporting options. Select for each partition (use zone list 11 if using options 12 or 13).

***169 Pager 4 Phone No.**

Enter up to 20 digits. 0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***170 Pager 4 Characters**

Enter the optional prefix characters, up to 16 digits.
0-9; # +11 = '*'; # +12 = '#'; # +13 = 2-second pause.

***171 Pager 4 Report Options**

[0,0,0]
Part. 1 Part. 2 common
See field *162 for reporting options. Select for each partition (use zone list 12 if using options 12 or 13).

***172 Pager Delay Option For Alarms** [3]

0 = none; 1 = 1 minute; 2 = 2 minutes; 3 = 3 minutes
This delay is for ALL pagers in the system.

MISCELLANEOUS SYSTEM FIELDS (*174-*181)

***174 Clean Me Reporting Options** [0]

(for ESL smoke detectors)
0 = disable; 1 = Clean Me signal reports;
NOTE: If Clean Me is enabled, you must enter "3" in field *56 programming for zone 1 response time.

***177 Device Duration 1, 2** [0] [0]

(used in *80 Menu mode-Device Actions 5/6) 1 2
0 = 15 seconds 6 = 2-1/2 min # +11 = 7 min
1 = 30 seconds 7 = 3 min # +12 = 8 min
2 = 45 seconds 8 = 4 min # +13 = 10 min
3 = 60 seconds 9 = 5 min # +14 = 12 min
4 = 90 seconds # +10 = 6 min # +15 = 15 min
5 = 2 minutes

***181 50/60 Hertz AC Operation** [0]

0 = 60 Hz; 1 = 50 Hz

CONFIGURABLE ZONE TYPE OPTIONS (*182-*185)

(see Configurable Zone Type Worksheet on page 7)

*182 Configurable Zone Type 90

| | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options

(0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

UL: Do not configure zones as a fire alarm or UL burglar alarm zone.

*183 Zone Type 90 Report Codes

IMPORTANT: Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

90 ALARM ID: XXX
TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [*] moves forward. Press [*] when done to continue.

*184 Configurable Zone Type 91

| | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options

(0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

UL: Do not configure zones as a fire alarm or UL burglar alarm zone.

*185 Zone Type 91 Report Codes

IMPORTANT: Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

91 ALARM ID: XXX
TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [*] moves forward. Press [*] when done to continue.

*189 AUI Device 1 and 2 Enable [1][1]

(for Touch Screen Style Keypads) AUI 1 AUI 2
System supports up to two touch screen style keypads (e.g., Symphony Advanced User Interface, and 6270 Touch Screen Keypad).

Touch Screen (AUI) device 1: Must set AUI device address to 1

Touch Screen (AUI) device 2: Must set AUI device address to 2

Enter each touch screen keypad's home partition.

0 = disabled

1 = partition 1

2 = partition 2

3 = partition 3 (common)

NOTE: A minimum of one standard keypad must also be installed when a touch screen type keypad (AUI) device is used. Use of touch screen style keypads does not affect the number of standard keypads supported.

KEYPAD OPTIONS *190-*196

NOTES: 1. Options for keypad address 16 are set by the factory and cannot be changed.)

2. Each keypad must be assigned a unique address. Keypads programmed with the same address will give unpredictable results.

*190 Keypad 2 Device Address 17 [0][0]

†VISTA-20P: enter partition

VISTA-15P: 1 = enable; 0 = disable

Partition/ Sound
Enable†

Partition: 0 = keypad disabled; 1-3 = part. no. (3 = com)

Sound: 0 = no suppression

1 = suppress arm/disarm and E/E beeps

2 = Suppress chime beeps only

3 = suppress arm/disarm, E/E, and chime beeps

*191 Keypad 3 Device Address 18 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*192 Keypad 4 Device Address 19 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*193 Keypad 5 Device Address 20 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*194 Keypad 6 Device Address 21 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*195 Keypad 7 Device Address 22 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*196 Keypad 8 Device Address 23 [0][0]

See field *190 for entries.

Partition/ Sound
Enable

*197 Exit Time Display Interval [0]

0 = no display; 1-5 = seconds between display refresh

NOTE: If enabled and using only 2-digit fixed-word keypads (e.g., 6150RF), do not set exit delay time greater than 96 seconds. See Inst. Instr. for explanation.

*198 Display Partition Number [0]

(VISTA-20P; for Alpha Display Keypads)

0 = no; 1 = yes (partition no. appears on Alpha Display)

*199 ECP Fail Display [0]

0 = 3-digit display ("1" + device address)

1 = 2-digit fixed-display as "91"

Configurable Zone Types Worksheets

Configurable zone types 90 and 91 can be programmed via downloader software or from a keypad using data fields *182- *185. Configurable zone types 92 and 93 (VISTA-20P only) can only be programmed using the downloader software.

Programming Configurable Zone Type options involves making 10 entries in data field *182 for zone type 90 and field *184 for zone type 91, where each entry represents the sum of the values of the various options shown in the tables below. Use fields *183 and *185 to program Contact ID report codes for these zone types.

| ENTRY 1 (See note 5 for RF zones) | | ENTRY 2 (See note 5 for RF zones) | | |
|---|--|---|-------------------|-------------------|
| Response when system disarmed and zone is: | | | | |
| Intact EOL <i>RF zone normal</i> | Open <i>RF zone N/A</i> | Shorted <i>RF zn off-normal</i> | Auto Restore | Vent Zone |
| 0 = normal 1 = alarm 2 = trouble 3 = fault | 0 = normal 4 = alarm 8 = trouble 12 = fault | 0 = normal 1 = alarm 2 = trouble 3 = fault see note 6 | 0 = no 4 = yes | 0 = no 8 = yes |
| Entry 1 = EOL + Open | | Entry 2 = Short + auto restore + vent zone | | |

| ENTRY 3 (See note 5 for RF zones) | | ENTRY 4 (See note 5 for RF zones) | | |
|---|--|---|--------------------|-------------------|
| Response when armed STAY and zone is: | | | | |
| Intact EOL <i>RF zone normal</i> | Open <i>RF zone N/A</i> | Shorted <i>RF zn off-normal</i> | Byp. when disarmed | Byp. when armed |
| 0 = normal 1 = alarm 2 = trouble 3 = fault | 0 = normal 4 = alarm 8 = trouble 12 = fault | 0 = normal 1 = alarm 2 = trouble 3 = fault see note 6 | 0 = no 4 = yes | 0 = no 8 = yes |
| Entry 3 = EOL + Open | | Entry 4 = Short + byp. disarmed + byp. armed | | |


| ENTRY 5 (See note 5 for RF zones) | | ENTRY 6 (See note 5 for RF zones) | | |
|---|--|---|-------------------------------|---------------------------------------|
| Response when armed AWAY and zone is: | | | | |
| Intact EOL <i>RF zone normal</i> | Open <i>RF zone N/A</i> | Shorted <i>RF zn off-normal</i> | Dial Delay (see field *50) | Fault Delay (see field *87) |
| 0 = normal 1 = alarm 2 = trouble 3 = fault | 0 = normal 4 = alarm 8 = trouble 12 = fault | 0 = normal 1 = alarm 2 = trouble 3 = fault see note 6 | 0 = no 4 = use delay | 0 = no 8 = use delay see note 1 |
| Entry 5 = EOL + Open | | Entry 6 = Short + dial delay + fault delay | | |

| ENTRY 7 | | ENTRY 8 | | |
|--|---|---|------------------------------|---------------------------------|
| Display Faults | Power Reset/ Verification | Use Entry Delay 1/2 | Use Exit Delay | Respond as Interior Type |
| 0 = show alarms when armed & disarmed 1 = don't show alarms when armed (show alarms, trbles, faults when disarmed) 3 = never show any alarms, trbles, faults | 0 = no 4 = power reset after fault (by code + OFF) 12 = verification (see zone type 16) | 0 = no 1 = delay 1 2 = delay 2 | 0 = no 4 = use exit delay | 0 = no 8 = yes see note 2 |
| Entry 7 = fault display + power reset/verification | | Entry 8 = entry delay 1/entry delay 2 + exit delay + interior zone type | | |

| ENTRY 9 | | ENTRY 10 | | |
|--|--|---|--|--------------------------|
| Alarm Sounds | Use Bell Timeout | Respond as Fire Zone | Trouble Sounds | Chime when Chime Mode On |
| 0 = none 1 = steady keypad 2 = steady bell and keypad 3 = pulsing bell and keypad | 0 = no 4 = yes see fields *32, *33 | 0 = no 8 = yes see zone type 09; see note 4 | 0 = none 1 = periodic beep 2 = trouble beeps | 0 = no 4 = yes |
| Entry 9 = alarm sounds + bell timeout + fire zone | | Entry 10 = trouble sounds + chime | | |

| Entries for Fields *182 and *184 | | |
|----------------------------------|------------------------------|------------------------------|
| Entry | Zone Type 90 (field *182) | Zone Type 91 (field *184) |
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |
| 10 | | |

To calculate the value for each entry:
Simply add the values of the selected options in each of the entry's columns (one option per column). For example, to program Entry 2 for "alarm response to short," "auto restore on," but not a "vent zone," enter 5 ("1" for alarm short + "4" for auto restore yes + "0" for vent zone no).

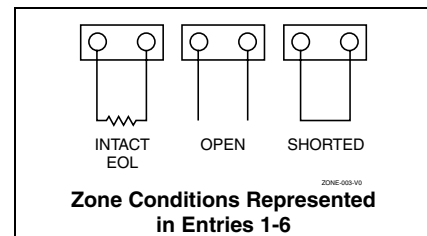

NOTES:

- Do not use the "fault delay" option with a configurable zone type if it is set for an entry or exit delay, otherwise unpredictable results may occur.
- To create an interior type zone, select "respond as interior zone type" (entry 8, interior type = yes), and set zone response to "fault" in entries 3-4 to ensure fault displays; do not set as "normal," "alarm," or "trouble."
- Do not set fire zones to respond as a "fault" (entries 1-6), otherwise faults will not display unless the [*] key is pressed.
- 4219/4229 modules must use EOLRs or unpredictable results may occur.
- RF Zones: The "open" option in entries 1, 3, and 5 is not applicable for RF zones. Use the "intact EOL" option for normal RF zone conditions and "shorted" for off-normal RF zone conditions.
- Zone-Doubling/Double-Balanced: A short on either zone of a zone-doubled pair or on a double-balanced zone causes a tamper condition.
 - For double-balanced zones, this entry must be "0."
 - For zone-doubled zones, **both** zones of the doubled pair must be assigned the same response to a short.

*56 Zone Programming Menu Mode

(press *56 while in Program mode)

The Zone Programming Worksheet is on page 13.

For each of the following prompts, make the desired entry, followed by the [*] key to accept the entry. Refer to the Installation and Setup Guide for detailed explanations for each prompt.

SET TO CONFIRM?

0 = no; 1 = yes (See XMIT TO CONFIRM prompt later in this section.) **We recommend that you confirm the programming of every transmitter.**

ENTER ZN NUM.

01-64, 91, 92, 95, 96, 99

To quit, enter 00 to quit (returns to data field mode).

SUMMARY SCREEN:

System displays a summary of the entered zone's current programming. Press [*] to continue.

ZONE TYPE

| | | |
|------------------------------|-----------------------|----------------------|
| 00 = Not used | 07 = 24-Hr Audible | 20 = Arm-STAY* |
| 01 = Entry/exit #1 | 08 = 24-Hr Aux | 21 = Arm-AWAY* |
| 02 = Entry/exit #2 | 09 = Fire | 22 = Disarm* |
| 03 = Perimeter | 10 = Interior w/Delay | 23 = No Alarm Resp |
| 04 = Interior Follower | 12 = Monitor Zone | 24 = Silent Burglary |
| 05 = Trouble Day/Alarm Night | 14 = Carbon Monoxide | 77 = Keypad |
| 06 = 24-Hr Silent | 16 = Fire w/Verify | 81 = AAV Monitor |
| | | Zone |
| | | 90-91 = Configurable |

*5800 button-type transmitters only

PARTITION

1, 2, or 3-common (VISTA-20P)

REPORT CODE

1-9, #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F
For Contact ID®, enter any non-zero entry as the first digit to enable reporting for this zone.

To disable the report code for this zone, enter 00.

HARDWARE TYPE

Appears only for zones 02-08. Zone 1 is automatically set for EOL operation. Enter the desired hardware type:

0 = EOL; 1 = NC; 2 = NO; 3 = zone doubling (ZD)†; 4 = double-balanced (DB)† († VISTA-20P)

RESPONSE TIME

For hardwired zones 01-08. Enter the desired response time for this zone:
0 = 10mSec; 1 = 350mSec; 2 = 700mSec; 3 = 1.2 secs (see field *174).

NOTE: If zone doubling is being used, the response time selected for zones 02-08 automatically applies to each zone's associated doubled zone.

INPUT TYPE

Skipped for zones 2-8, and for zones 10-16 if zone-doubling enabled. Enter the input type: 2 = AW (Aux wired zone); 3 = RF (supervised RF); 4 = UR (unsupervised RF); 5 = BR (unsupervised button type)

NOTE: To change the input type of a previously programmed wireless device to a wired zone, you must first delete the transmitter's serial number.

INPUT S/N

Enroll the transmitter's serial number and loop number as follows:

- a. Transmit two open/close sequences (for button-type transmitters, press and release the button twice, waiting about 4 seconds before pressing the button the second time).
OR
b. Manually enter the 7-digit serial number printed on the label of the transmitter. Press the [*] key to move to the "L" position, then enter the loop number.
Use the [A] (Advance) and [B] (Back) keys to move the cursor forward and back within the screen. Pressing the [C] (Copy) key will insert the previously enrolled serial number, if desired (used when programming a transmitter with several input loops).

To delete an existing serial number, enter 0 in the loop number field. The serial number will change to 0's. If 0 was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display.

2. Press [*] to continue. The system now checks for a duplicate serial/loop number.
If no duplicate is found, the display shows the serial number and loop number.
3. Press [*] to continue to confirmation screen.

(prompts continued in next column)

XMIT TO confirm

Appears if you answered "Yes" at the "Set to Confirm" prompt. Activate the loop input or button that corresponds to this zone. Press [*] to continue.

If the serial/loop number transmitted does not match the serial number entered, a display showing the entered and the received serial/loop numbers appears.

If so, activate the loop input or button on the transmitter once again. If a match is not obtained, press the [#] key twice and then enter (or transmit) the correct serial number.

Press [*] to continue

If the serial number transmitted matches the serial number entered, the keypad will beep 3 times and a summary display will appear, showing that zone's programming. An "s" indicates that a transmitter's serial number has been enrolled.

Press [*] to accept the zone information and continue.

PROGRAM ALPHA?

Press 1 if you want to program descriptors for the zone now, and refer to the *82 Descriptor Programming section for procedure. To program descriptors later, enter 0 (no).

Press [*] to return to the ENTER ZN NUM prompt.

*58 Expert Zone Programming Mode

(press *58 while in Data Programming mode)

SET TO CONFIRM?

Select whether you want confirmation of wireless device enrollment. (See "XMIT TO CONFIRM" prompt later in this section.) **We recommend that you confirm the programming of every transmitter.**

SUMMARY SCREEN

```
Zn ZT P RC HW: RT
01 09 1 10 EL 1
```

(Typical for Zone 1, initial summary screen)

```
Zn ZT P RC IN: L
10 00 1 10 RF: -
```

(Typical for entered zone number; zone 10 in this example)

System displays summary of zone 1's current programming.

Enter the zone number being programmed, then press [*]. A summary screen for that zone is displayed, along with any current programming values, and the cursor moves to the Zone Type location. The cursor then automatically moves to the next locations after each entry is made.

Special Function Keys:

- [A] (Advance) and [B] (Back) keys on the keypad move the cursor within the screen.
- [C] (Copy) key will insert the previous zone's attributes, if desired.
- [D] key starts the **Wireless Key Programming Templates** menu (see Wireless Key Programming Templates section that follows this section).

Sequentially enter Zone Type (ZT), Partition (P)†, and Report Code (RC), then Hardware Type (HW) and Response Time (RT) for basic wired zones 1-8 or Input Device Type (IN) for zones 9 and higher (Loop Number [L] is programmed at the INPUT S/N prompt).

See *56 Zone Programming Menu Mode section described earlier for entry values.

† applies to VISTA-20P

Press [*] to save the programming and continue. If needed, press the [#] key to back up without saving.

- For wireless devices (input types RF, UR, BR), continue to the INPUT S/N (serial number/loop number) and XMIT TO CONFIRM prompts described earlier in the ***56 Zone Programming Menu Mode** section. When done, the display returns to the initial summary screen prompt to let you program the next zone.

- For wired devices, the display returns to the initial summary screen prompt to let you program the next zone.

To Quit, enter 00 at the zone number location and press [*].

Wireless Key Programming Templates (press the [D] key from *58 Menu mode Summary Screen)

This procedure programs the wireless keys, but a key is not active for arming/disarming until it is assigned to a user number (see **System Operation** section, Assigning Attributes Command in the Installation Instructions).

TEMPLATE ?

Enter desired template number 1-6 (see chart below), then press [*] to continue.

To exit the Template screen, press [#]. The system returns to the *58 Menu mode Summary Screen.

TEMPLATE SUMMARY

| | | | | |
|---|----|----|----|----|
| L | 01 | 02 | 03 | 04 |
| T | 23 | 22 | 21 | 23 |

The selected template is displayed.

The top line represents loop numbers, the bottom line represents each loop's zone type.

Press [*] to accept template and continue.

PARTITION (VISTA-20P)

Enter the partition (1, 2, or 3-common) in which the key is to be active.

Press [*] to continue.

ENTER START ZONE

The system displays the lowest zone number of the highest available consecutive 4-zone group.

To start at a different zone number, enter the zone desired, and press [*]. If the system has four consecutive zones beginning with that zone, the zone number is displayed. If not, the system will again display a suggested zone that can be used.

If the required number of consecutive zones is not available at all, the system will display "00".

Press [*] to accept.

Continue to the INPUT S/N (serial number/loop number) and XMIT TO CONFIRM prompts described earlier in the *56 Menu Mode section.

IMPORTANT: When confirmed, the key is not active for arming/disarming until it is assigned to a user number (using the assigning attributes command, attribute "4"). See System Operation section in Installation Instructions.

When done, the keypad beeps three times and the display returns to the ENTER START ZONE prompt to let you enter the starting zone for the next wireless key.

Wireless Key Predefined Default Templates


| For 5804 | Loop | Function | Zone Type | For 5804BD | Loop | Function | Zone Type |
|------------|------|-----------------|-----------|------------|------|-----------------|-----------|
| TEMPLATE 1 | 1 | No Response | 23 | TEMPLATE 4 | 1 | No Response | 23 |
| | 2 | Disarm | 22 | | 2 | No Response | 23 |
| | 3 | Arm Away | 21 | | 3 | Arm Away | 21 |
| | 4 | No Response | 23 | | 4 | Disarm | 22 |
| TEMPLATE 2 | 1 | No Response | 23 | TEMPLATE 5 | 1 | No Response | 23 |
| | 2 | Disarm | 22 | | 2 | Arm Stay | 20 |
| | 3 | Arm Away | 21 | | 3 | Arm Away | 21 |
| | 4 | Arm Stay | 20 | | 4 | Disarm | 22 |
| TEMPLATE 3 | 1 | 24-hour audible | 7 | TEMPLATE 6 | 1 | 24-hour audible | 7 |
| | 2 | Disarm | 22 | | 2 | Arm Stay | 20 |
| | 3 | Arm Away | 21 | | 3 | Arm Away | 21 |
| | 4 | Arm Stay | 20 | | 4 | Disarm | 22 |

5800 Series Transmitter Input Loop Identification

All of the transmitters illustrated have one or more unique factory assigned input (loop) ID numbers. Each of the inputs requires its own programming zone (e.g., a 5804's four inputs require four programming zones).

For information on any transmitter not shown, refer to the instructions accompanying that transmitter for details regarding loop numbers, etc.

UL NOTE: The following transmitters are not intended for use in UL installations: 5802MN, 5802MN2, 5804, 5804BD, 5814, 5816TEMP, 5819, 5819WHS & BRS, and 5850. The 5827BD and 5800TM can be used in UL Listed Residential Burglar installations.

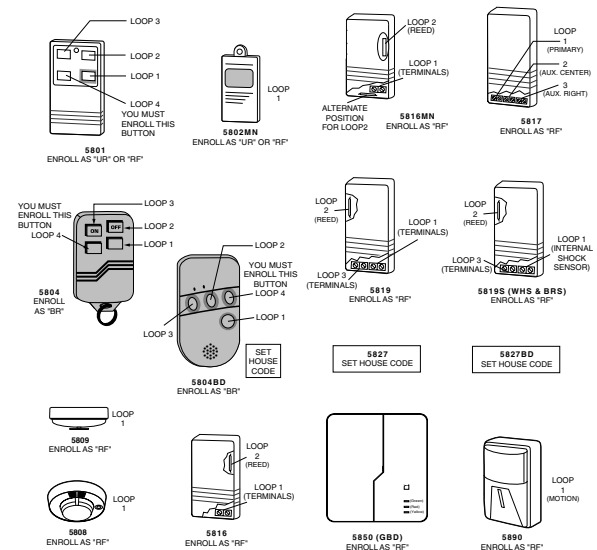

*57 Function Key Programming (press *57 while in Data Programming mode)

The Function Key Worksheet is on page 14.

PRESS KEY TO PGM

Press the desired function key to be programmed, A-D, then press [*] to continue.

When done, press 0 to exit this mode and return to data field mode.

NOTE: A key programmed as a function key is no longer available to be used as an end-user macro key or panic key.

PARTITION

Enter the partition (1-3) in which this function key will be active.

KEY "A" FUNC

Enter the desired function for this key:

- 00 = For the Function key selected, the function will be as follows (default):
 - If A selected = Zone 95 (emergency key, same as [1] [*] pair)
 - If B selected = Zone 99 (emergency key, same as [*] [#] pair)
 - If C selected = Zone 96 (emergency key, same as [3] [#] pair)
 - If D selected = Single-button paging (continued in next column)

KEY "A" FUNC (continued)

- 01 = Single-button paging (sends a 999-9999 message to pager)
- 02 = Display time
- 03 = Arm AWAY (reports as User 00 if closing reports are enabled)
- 04 = Arm STAY (reports as User 00 if closing reports are enabled)
- 05 = Arm NIGHT-STAY (reports as User 00 if closing reports are enabled)
- 06 = Step Arming (arms STAY, then NIGHT-STAY if enabled, then AWAY)
- 07 = Output Device Command (for device programmed as system operation type 66 in *80 Menu Mode)
- 08 = Communication Test (sends Contact ID code 601)
- 09 -12 = Macro Keys 1-4 respectively (defined by [#] [6] [6] command)

NOTE: Macros 11-12 apply to VISTA-20P only
Press [*] to continue; returns to key number prompt with the next function key letter displayed.

*79 Menu Mode

(press *79 while in Programming mode)

The *79 Device Mapping Worksheet is on page 14.

ENTER OUTPUT NO.

01-18 = VISTA-20P relays/X-10; 01-08, 17, 18 = VISTA-15P relays/X-10
[*] to continue

OUT NORM LOW (appears only for triggers 17/18)

0 = no (standard default); sets the output level normally high
1 = yes; sets the output normally low (can be used for resetting 4-wire smoke detectors)

Press [*] to return to Output Number prompt

OUTPUT TYPE

0 = delete; 1 = relay (skip to "B" prompt); 2 = Powerline Carrier device (skip to "A" prompt)

Press [*] to continue.

"A" (if X-10 was selected)

UNIT No.

Enter the unit code (01-16, set at the device).

Press [*] to return to the Output Number prompt continue

"B" (if relay was selected)

MODULE ADDR

Enter the predefined address for this module (07-15; see Table of Device Addresses on page 2).

Make sure the module's DIP switches are set to the selected address.

Press [*] to continue

REL POSITION (actual relay number on module)

For 4204 modules, relay numbers are 1-4. For 4229 modules, relay numbers are 1-2.

Press [*] to return to the Output Number prompt for programming the next device

*80 Menu Mode

(press *80 while in Programming mode)

The Output Definition Worksheet is on page 15.

OUTPUT FUNCT.

Enter the output function number to be defined (VISTA-20P: 01-48; VISTA-15P: 01-24). [*] to continue; 00 = exit

SUMMARY SCREEN

| | | | | |
|-----|---|---|---|-------|
| 01 | A | E | P | Trig |
| ?00 | 0 | 0 | - | ZL=00 |

This screen displays a summary of the current output programming
A = Output Action; E = Triggering event; P = Partition; Trig = Trigger type
Question mark indicates the device shown has not been mapped. Use *79 Menu mode to map the device.

Press [*] to continue

ACTIVATED BY

0 = delete (deletes the output function and any previous programming); a confirmation prompt appears.

To delete this output definition, press 1. If you do not want to delete this output, press 0.

1 = zone list (go to "A" prompt); 2 = zone type (go to "B" prompt); 3 = zone number (go to "C" prompt)

Press [*] to continue

"A" (if zone list was selected)

ZN LIST

Enter the desired zone list number (01-08). At the ENTER EVENT prompt, enter the zone list event that will activate this output (0 = restore; 1 = alarm; 2 = fault; 3 = trouble)

Press [*] to continue and skip to the "Output Action" prompt.

"B" (if zone type was selected)

ENTER ZN TYPE

Enter the desired zone type. See list below *80 Worksheet for zone types.

At the PARTITION prompt, enter the partition in which this zone type will occur (0 = any partition; 1 = partition 1; 2 = partition 2; 3 = partition 3).

Press [*] to continue and skip to the "Output Action" prompt.

"C" (if zone number was selected)

ENTER ZN NO.

Enter the desired zone number, then press [*] to continue. At the ENTER EVENT prompt, enter the zone event that will activate this output (0 = restore; 1 = alarm/fault/trouble).

Press [*] to continue to the OUTPUT ACTION prompt

OUTPUT ACTION

0 = off; 1 = Close for 2 seconds; 2 = Close and Stay Closed; 3 = Continuous Pulse 1 sec on and 1 sec off

4 = Change Device State; 5 = Duration 1 (see data field *177); 6 = Duration 2 (see data field *177)

Press [*] to continue.

*80 Menu Mode (continued)

ENTER OUTPUT NO.

Enter the device output number (programmed in *79 Menu Mode) you want associated with this output.

01-16 = VISTA-20P output no.; 01-08 = VISTA-15P output no.; 17-18 = on-board triggers

Press [*] to continue.

SUMMARY SCREEN

A summary screen appears showing the programmed settings.

Press [*] to return to OUTPUT FUNCTION NUMBER prompt.

*81 Menu Mode

(press *81 while in Programming mode)

The Zone List Worksheet is on page 14.

ZONE LIST NO.

Enter the zone list number (01-12) to program (or 00 to exit this mode).

Press [*] to continue.

ENTER ZN NUM.

Enter each zone number (01-64†) to add to the zone list, followed by pressing [*] (example, 01*, 02*, 03*).

Press 00 to continue.

† VISTA-20P = 01-64; VISTA-15P = 01-06, 09-34, 49-56.

IMPORTANT: Do not include fire zones in zone lists that are used to STOP device actions.

DEL ZN LIST?

0 = don't delete list; current zone list remains saved

1 = delete this zone list; All zones in the zone list will be deleted.

Press [*] to continue

DELETE ZONE?

0 = don't delete zones; save the entire zone list and return to the Zone List No. prompt

1 = go to next prompt to delete zones

Press [*] to continue

ZN TO DELETE?

Enter each zone (01-64†) to be deleted from the list, following each with [*]. 00 when done to return to the Zone List No. prompt.

† VISTA-20P = 01-64; VISTA-15P = 01-06, 09-34, 49-56.

*82 Alpha Descriptor Programming

PRE-DEFINED DESCRIPTORS

PROGRAM ALPHA

0 = no (quit Alpha mode)

1 = yes

Press [*] or [#] to continue.

CUSTOM WORDS

0 = no (continue to descriptor programming)

1 = yes (go to custom word programming)

Press 0 to program standard alpha descriptors. The system will then display the descriptor for zone 1.

To program custom words, press 1 (custom words are described later).

Press [*] to continue.

* ZN 01

Descriptor screen for zone 1 appears. To program a descriptor (up to 3 words) for a zone, do the following:

- Press [*] plus the desired zone number (existing descriptor, if any, is displayed), then press [*] plus the zone number again (flashing cursor appears).
- a. Press [#] plus the 3-digit number from the Alpha Vocabulary List on page 11 for the first word.
b. Press [6] to accept the word and move the cursor for the next word.
- Repeat steps 2a and 2b for the second and third words (if used).
- When all words have been entered, press [8] to save the descriptor for that zone. The flashing cursor disappears.
- Repeat steps 1-4 to assign a descriptor for the next zone.
- When all descriptors have been entered, press [*] + 0 + 0 (or simply press [#]) after the last descriptor has been saved to return to the PROGRAM ALPHA? prompt.
Enter 0 (no) at the prompt to exit this mode and return to Data Field mode.

*82 Alpha Descriptor Programming (continued)

ADDING CUSTOM WORDS (up to 10 words)

For custom words, the keys have the following functions:

- [4] moves cursor one space to the left.
- [6] moves cursor one space to the right.
- [8] saves the new word in the system's memory.

1. Select Custom Word mode (enter 1) when the prompt "CUSTOM WORD ?" is displayed.
2. Enter the number (01-10, or 11, 12, 13 for partition descriptors- see below) of the custom word or word string to be created, corresponding to index numbers 245 - 254 respectively. A cursor appears at the beginning of the second line.
NOTE: Custom words 8, 9, and 10 are "reminder words" that can be programmed to display using Scheduling Mode.
3. Refer to the Character (ASCII) Chart on the next page.
Press [#], followed by the two-digit entry for the first letter you would like to display (e.g., # 6 5 for "A"). The cursor moves to the right, in position for the next character.
To delete a character, simply enter the SPACE character (#32) at the unwanted character's location.

4. Repeat Step 3 to create the desired word(s). Each word can be a maximum of 10 characters (except custom message/partition descriptor word numbers 11, 12, and 13, which can be a maximum of 16 characters).
5. When the word is complete, press the [8] key to save the custom word(s) in the vocabulary list and return to the "CUSTOM WORD ?" display.
6. Repeat Steps 1-5 for other custom words to be entered. To change a custom word, just overwrite it. When all words have been programmed, enter 0 at the "CUSTOM WORD ?" prompt to return to the Program Alpha prompt. Enter 0 again to exit Descriptor mode.

To Assign Partition/Custom Message Descriptors, use Adding Custom Words procedure, but:

VISTA-15P: Use word number 11 in step 2. The custom message replaces the standard "DISARMED Ready to Arm" message.

VISTA-20P: Use the following word numbers in step 2:

11 = partition 1; 12 = partition 2; 13 = common lobby

ALPHA VOCABULARY LIST (For Entering Zone Descriptors)

| | | | | |
|-------------------|------------------|-----------------|-------------------|---------------------|
| 000 (Word Space) | • 057 DOOR * | - L - | - R - | - V - |
| - A - | • 059 DOWN | • 106 LAUNDRY * | 155 RADIO | 209 VALVE |
| • 001 AIR | • 060 DOWNSTAIRS | • 107 LEFT | • 156 REAR | 210 VAULT |
| • 002 ALARM * | 061 DRAWER | 108 LEVEL | 157 RECREATION | 212 VOLTAGE |
| 004 ALLEY | • 062 DRIVEWAY | • 109 LIBRARY * | 159 REFRIGERATION | - W - |
| 005 AMBUSH | • 064 DUCT | • 110 LIGHT | 160 RF | 213 WALL |
| • 006 AREA | - E - | 111 LINE | • 161 RIGHT | 214 WAREHOUSE |
| • 007 APARTMENT | • 065 EAST | • 113 LIVING * | • 162 ROOM * | • 216 WEST |
| • 009 ATTIC * | 066 ELECTRIC | • 114 LOADING | 163 ROOF | • 217 WINDOW * |
| 010 AUDIO | 067 EMERGENCY * | 115 LOCK | - S - | • 219 WING |
| - B - | 068 ENTRY | 116 LOOP | 164 SAFE | 220 WIRELESS |
| • 012 BABY * | • 069 EQUIPMENT | 117 LOW | 165 SCREEN | - X - |
| • 013 BACK * | • 071 EXIT * | • 118 LOWER | 166 SENSOR | 222 XMITTER |
| • 014 BAR | 072 EXTERIOR | - M - | • 167 SERVICE | - Y - |
| • 016 BASEMENT * | - F - | • 119 MACHINE | • 168 SHED * | 223 YARD |
| • 017 BATHROOM * | • 073 FACTORY | 121 MAIDS | 169 SHOCK | - Z - |
| • 018 BED | 075 FAMILY | 122 MAIN * | • 170 SHOP * | 224 ZONE (No.) |
| • 019 BEDROOM * | • 076 FATHERS | • 123 MASTER * | 171 SHORT | • 225 ZONE * |
| 020 BELL | • 077 FENCE | • 125 MEDICAL * | • 173 SIDE * | • 226 0 |
| • 021 BLOWER | • 079 FIRE * | 126 MEDICINE | 174 SKYLIGHT | • 227 1 |
| • 022 BOILER | • 080 FLOOR * | 128 MONEY | 175 SLIDING * | • 228 1ST * |
| 023 BOTTOM | 081 FLOW | 129 MONITOR | • 176 SMOKE * | • 229 2 |
| 025 BREAK | 082 FOIL | • 130 MOTHERS | • 178 SONS | • 230 2ND * |
| • 026 BUILDING | • 083 FOYER | • 131 MOTION * | • 179 SOUTH | • 231 3 |
| - C - | 084 FREEZER | 132 MOTOR | 180 SPRINKLER | • 232 3RD * |
| 028 CABINET | • 085 FRONT * | - N - | • 182 STATION | • 233 4 |
| • 029 CALL | - G - | • 134 NORTH | 184 STORE | • 234 4TH |
| 030 CAMERA | • 089 GARAGE * | 135 NURSERY | • 185 STORAGE * | • 235 5 |
| 031 CAR | • 090 GAS | - O - | 186 STORY | • 236 5TH |
| 033 CASH | 091 GATE | • 136 OFFICE * | 190 SUPERVISED * | • 237 6 |
| 034 CCTV | • 092 GLASS | • 138 OPEN * | 191 SUPERVISION | • 238 6TH |
| 035 CEILING | 093 GUEST | 139 OPENING | 192 SWIMMING | • 239 7 |
| 036 CELLAR | 094 GUN | • 140 OUTSIDE | 193 SWITCH | • 240 7TH |
| • 037 CENTRAL | - H - | 142 OVERHEAD | - T - | • 241 8 |
| 038 CIRCUIT | • 095 HALL * | - P - | 194 TAMPER | • 242 8TH |
| • 040 CLOSED * | • 096 HEAT | 143 PAINTING | 196 TELCO | • 243 9 |
| • 046 COMPUTER | 098 HOLDUP | • 144 PANIC * | 197 TELEPHONE | • 244 9TH |
| 047 CONTACT | 099 HOUSE | 145 PASSIVE | • 199 TEMPERATURE | 245 Custom Word #1 |
| - D - | 100 INFRARED | • 146 PATIO * | 200 THERMOSTAT | 246 Custom Word #2 |
| • 048 DAUGHTERS | • 101 INSIDE * | 147 PERIMETER | • 201 TOOL | 247 Custom Word #3 |
| 049 DELAYED | 102 INTERIOR | • 148 PHONE | 202 TRANSMITTER | 248 Custom Word #4 |
| • 050 DEN * | 103 INTRUSION | 150 POINT | - U - | 249 Custom Word #5 |
| 051 DESK | - J - | 151 POLICE * | • 205 UP | 250 Custom Word #6 |
| • 052 DETECTOR * | 104 JEWELRY | 152 POOL * | • 206 UPPER | 251 Custom Word #7 |
| • 053 DINING * | - K - | • 153 POWER | • 207 UPSTAIRS * | 252 Custom Word #8 |
| 054 DISCRIMINATOR | • 105 KITCHEN * | | • 208 UTILITY * | 253 Custom Word #9 |
| 055 DISPLAY | | | | 254 Custom Word #10 |

Note: Bulleted (•) words in **boldface type** are those that are also available for use by the 4285/4286 Phone Module. If using a Phone module, and words other than these are selected for Alpha descriptors, the module will not provide annunciation of those words. *Italicized words followed by an asterisk indicate those words supported by the 6160V/6150V Voice Keypads*

CHARACTER (ASCII) CHART (For Adding Custom Words)

| | | | | | | |
|------------|------|------|------|------|------|------|
| 32 (space) | 41) | 50 2 | 59 ; | 68 D | 77 M | 86 V |
| 33 ! | 42 * | 51 3 | 60 < | 69 E | 78 N | 87 W |
| 34 " | 43 + | 52 4 | 61 = | 70 F | 79 O | 88 X |
| 35 # | 44 , | 53 5 | 62 > | 71 G | 80 P | 89 Y |
| 36 \$ | 45 - | 54 6 | 63 ? | 72 H | 81 Q | 90 Z |
| 37 % | 46 . | 55 7 | 64 @ | 73 I | 82 R | |
| 38 & | 47 / | 56 8 | 65 A | 74 J | 83 S | |
| 39 ' | 48 0 | 57 9 | 66 B | 75 K | 84 T | |
| 40 (| 49 1 | 58 : | 67 C | 76 L | 85 U | |

Setting Schedules (Installer Code + [#] + [6] [4])

ENTER SCHED NO.

VISTA-20P: 01-16 = end-user schedules; 17-32 = installer-only schedules
 VISTA-15P: 01-04 = end-user schedules; 05-08 = installer-only schedules
 [*] to continue.
To Quit, enter 00.

ENTER EVENT

- 00 = clear event
 - 01 = Relay On/Off
 - 02 = User Access
 - 03 = Latch Key Report to Pager (sent to all pagers in the user's partition; message sent is 777-7777. User must be enabled for paging and system must be armed before reporting can occur.)
 - 04 = Forced Stay Arming (Forced bypass is automatically enabled regardless of setting in field *23)
 - 05 = Forced Away Arming (Forced bypass is automatically enabled regardless of setting in field *23)
 - 06 = Auto Disarm
 - 07 = Display "Reminder"
 - 10 = Display custom words (if selected, system displays custom words 8, 9, and 10 at defined time. Can be used as installer's reminder message to the end user); programmable by installer only
 - 11 = Periodic Test Report (see key commands in **Test Report Code**, data field *64, to quickly set periodic test reporting intervals); programmable by installer only
- [*] to continue.

DEVICE NUMBER (for event 1 relay on/off)

01-18; [*] to continue.

GROUP NUMBER (for event 2 user access)

1-8; [*] to continue.

PARTITION (for events 3-7,10,12)

0 = all partitions; 1 = partition 1; 2 = partition 2; 3 = common
 [*] to continue.

START

01-12 = hour; 00-59 = minute; 0 = AM; 1 = PM; to select days, position the cursor under the desired days using the [*] key to move forward, then press "1" to select the day.
 [*] to continue.

STOP (for events 1 relay on/off; 2 user access; 3 latch key report)

See START for entries. [*] to continue.

REPEAT

0 = do not repeat; 1 = repeat schedule weekly; 2 = repeat schedule biweekly (every other week); 3 = repeat schedule every third week; 4 = repeat schedule every fourth week
 [*] to continue

RANDOMIZE (for events 01 and 11)

0 = no; 1 = yes
 If selected, the scheduled start and stop times will vary within 60 minutes of the "hour" time. For example, if a schedule is set to start at 6:15pm, it will do so the first time 6:15pm arrives, but on subsequent days it will start anytime between 6:00 and 6:59 p.m.

NOTE: Do not use the random option if the start and stop times are within the same "hour" setting, otherwise unpredictable results may occur (e.g., the randomized stop time may occur before the start time).
 [*] to continue and return to ENTER SCHED NO. prompt to program the next schedule.

SCHEDULES WORKSHEET (installer code + [#] + [6] [4]; master code can only access schedules 01-16 for VISTA-20P, 01-04 for VISTA-15P, and events 00-07 for both controls; VISTA-15P supports up to 8 schedules, VISTA-20P supports up to 32 schedules)

| No. | Event (see list below) | Device No. for "01" events: enter 01-18 | Group No. for "02" events: enter 1-8 | Partition for "04-06" events: enter 1, 2, or 3 (VISTA-20P) | Start Time/ Days | Stop Time/ Days | Repeat (1-4) | Random (yes/no) |
|-----|---------------------------|---|--|---|---------------------|--------------------|-----------------|--------------------|
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| 09 | | | | | | | | |
| 10 | | | | | | | | |
| 11 | | | | | | | | |
| 12 | | | | | | | | |
| 13 | | | | | | | | |
| 14 | | | | | | | | |
| 15 | | | | | | | | |
| 16 | | | | | | | | |
| 17 | | | | | | | | |
| 18 | | | | | | | | |
| 19 | | | | | | | | |
| 20 | | | | | | | | |
| 21 | | | | | | | | |
| 22 | | | | | | | | |
| 23 | | | | | | | | |
| 24 | | | | | | | | |
| 25 | | | | | | | | |
| 26 | | | | | | | | |
| 27 | | | | | | | | |
| 28 | | | | | | | | |
| 29 | | | | | | | | |
| 30 | | | | | | | | |
| 31 | | | | | | | | |
| 32 | | | | | | | | |

- | | | | |
|---------|-------------------------|-------------------------|--------------------------------|
| Events: | Master/Installer | | Installer Only |
| | 00 = clear event | 04 = forced STAY arm | 10 = display custom words 8-10 |
| | 01 = device on/off | 05 = forced AWAY arm | 11 = periodic test report |
| | 02 = user access | 06 = auto disarm | |
| | 03 = latch key report | 07 = display "reminder" | |

Repeat Options: 0 = none; 1 = repeat weekly; 2 = repeat every other week; 3 = repeat every third week; 4 = repeat every fourth week

*56 ZONE PROGRAMMING WORKSHEET (VISTA-15P supports up to 32 zones: 1-6, 9-34, 49-56) [default shown in brackets]

| Zone | Zn Type | Part. | Report | Hardwire Type | Rsp. Time | Location | |
|------|---------|-------|--------|---------------|-----------|------------|------------------|
| 1 | [09] | [1] | | [EOL] | [1] | | |
| 2 | [01] | [1] | | [EOL] | [1] | | |
| 3 | [03] | [1] | | [EOL] | [1] | | |
| 4 | [03] | [1] | | [EOL] | [1] | | |
| 5 | [03] | [1] | | [EOL] | [1] | | |
| 6 | [03] | [1] | | [EOL] | [1] | | |
| 7 | [03] | [1] | | [EOL] | [1] | | |
| 8 | [03] | [1] | | [EOL] | [1] | | |
| Zone | Zn Type | Part. | Report | Input Type | Loop | Serial No. | Location |
| 9 | | | | | | | |
| 10 | | | | | | | |
| 11 | | | | | | | |
| 12 | | | | | | | |
| 13 | | | | | | | |
| 14 | | | | | | | |
| 15 | | | | | | | |
| 16 | | | | | | | |
| 17 | | | | | | | |
| 18 | | | | | | | |
| 19 | | | | | | | |
| 20 | | | | | | | |
| 21 | | | | | | | |
| 22 | | | | | | | |
| 23 | | | | | | | |
| 24 | | | | | | | |
| 25 | | | | | | | |
| 26 | | | | | | | |
| 27 | | | | | | | |
| 28 | | | | | | | |
| 29 | | | | | | | |
| 30 | | | | | | | |
| 31 | | | | | | | |
| 32 | | | | | | | |
| 33 | | | | | | | |
| 34 | | | | | | | |
| 35 | | | | | | | |
| 36 | | | | | | | |
| 37 | | | | | | | |
| 38 | | | | | | | |
| 39 | | | | | | | |
| 40 | | | | | | | |
| 41 | | | | | | | |
| 42 | | | | | | | |
| 43 | | | | | | | |
| 44 | | | | | | | |
| 45 | | | | | | | |
| 46 | | | | | | | |
| 47 | | | | | | | |
| 48 | | | | | | | |
| 49 | | [1] | | [BR] | | | |
| 50 | | [1] | | [BR] | | | |
| 51 | | [1] | | [BR] | | | |
| 52 | | [1] | | [BR] | | | |
| 53 | | [1] | | [BR] | | | |
| 54 | | [1] | | [BR] | | | |
| 55 | | [1] | | [BR] | | | |
| 56 | | [1] | | [BR] | | | |
| 57 | | [1] | | [BR] | | | |
| 58 | | [1] | | [BR] | | | |
| 59 | | [1] | | [BR] | | | |
| 60 | | [1] | | [BR] | | | |
| 61 | | [1] | | [BR] | | | |
| 62 | | [1] | | [BR] | | | |
| 63 | | [1] | | [BR] | | | |
| 64 | | [1] | | [BR] | | | |
| 95 | [00] | | | N/A | N/A | N/A | keypad [1] / [*] |
| 96 | [00] | | | N/A | N/A | N/A | keypad [3] / [#] |
| 99 | [06] | | | N/A | N/A | N/A | keypad [*] / [#] |

NOTES:
 Zone Type: see chart on page 12;
 Report Code: enabled if any digit entered as 1st digit;
 Hardwire Type (zns 1-8):
 0 = EOL 3 = ZD
 1 = NC 4 = DB
 2 = NO
 Input Type:
 2 = AW (zones 9-48)
 3 = RF (zones 9-48)
 4 = UR (zones 9-48)
 5 = BR (zones 49-64)
NOTE: Zones 9-16 not available if zone doubling enabled.
 Response Time:
 0 = 10msec
 1 = 350msec
 2 = 700msec
 3 = 1.2 sec
Reserved Zones
 91 = addressable device report enable/disable default zone type = [05].
 92 = Duress report enable/disable

***57 FUNCTION KEY WORKSHEET**

| Option | Function | A | | | B | | | C | | | D | | | Comments |
|--------|--------------------|----|----|---------|----|----|---------|----|----|---------|----|----|--------|---|
| | | P1 | P2 | com | P1 | P2 | com | P1 | P2 | com | P1 | P2 | com | |
| 01 | Paging | | | | | | | | | | | | | |
| 02 | Time Display | | | | | | | | | | | | | |
| 03 | Arm AWAY | | | | | | | | | | | | | |
| 04 | Arm STAY | | | | | | | | | | | | | |
| 05 | Arm NIGHT-STAY | | | | | | | | | | | | | |
| 06 | Step Arming | | | | | | | | | | | | | |
| 07 | Device Activation | | | | | | | | | | | | | Device: |
| 08 | Comm. Test | | | | | | | | | | | | | |
| 09 | Macro Key 1 | | | | | | | | | | | | | Assign each macro key to only a single partition. † |
| 10 | Macro Key 2 | | | | | | | | | | | | | Assign each macro key to only a single partition. † |
| 11 | Macro Key 3 | | | | | | | | | | | | | Assign each macro key to only a single partition. † |
| 12 | Macro Key 4 | | | | | | | | | | | | | Assign each macro key to only a single partition. † |
| 00 | Emergency Keys: | | | zone 95 | | | zone 99 | | | zone 96 | | | paging | |
| | Personal Emergency | | | | | | | | | | | | n/a | |
| | Silent Alarm | | | | | | | | | | | | n/a | |
| | Audible Alarm | | | | | | | | | | | | n/a | |
| | Fire | | | | | | | | | | | | n/a | |

Emergency Keys: A = paired keys [1] / [*] (zone 95); B = paired keys [*] / [#] (zone 99); C = paired keys [3] / [#] (zone 96)
 † There are only four macros system-wide.

OUTPUT RELAYS/POWERLINE CARRIER (X-10) DEVICES WORKSHEET FOR *79, *80 and *81.
 Applicable only if Relays and/or Powerline Carrier Devices are to be used.

***79 RELAY/POWERLINE CARRIER (X-10) DEVICE MAPPING (Must program before using *80)**

| Output No. | OUTPUT TYPE | | | | Description |
|------------|--------------|-----------------|--------------|--|-------------|
| | Module Addr. | Relay Pos (1-4) | X10 Unit No. | | |
| 01 | | | | | |
| 02 | | | | | |
| 03 | | | | | |
| 04 | | | | | |
| 05 | | | | | |
| 06 | | | | | |
| 07 | | | | | |
| 08 | | | | | |

| Output No. | OUTPUT TYPE (09-16 apply to VISTA-20P only) | | | | Description |
|------------|---|--------------------|--------------|--|---------------|
| | Module Addr. | Relay Pos (1-4) | X10 Unit No. | | |
| 09 | | | | | |
| 10 | | | | | |
| 11 | | | | | |
| 12 | | | | | |
| 13 | | | | | |
| 14 | | | | | |
| 15 | | | | | |
| 16 | | | | | |
| 17 | | On-Board Trigger 1 | | | norm output = |
| 18 | | On-Board Trigger 2 | | | norm output = |

***81 ZONE LISTS WORKSHEET**

Fill in the required data on the worksheet below and follow the procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

NOTE: Record desired zone numbers below, noting that a list may include *any* or *all* of system's zone numbers.

| List No. | Used For... | Contains These Zones... |
|----------|--------------------------|-------------------------|
| 01 | General Purpose (GP) | |
| 02 | General Purpose | |
| 03 | Chime-by-Zone or GP | |
| 04 | Cross Zones | |
| 05 | Night-Stay Zones or GP | |
| 06 | General Purpose | |
| 07 | General Purpose | |
| 08 | General Purpose | |
| 09 | Zones activating pager 1 | |
| 10 | Zones activating pager 2 | |
| 11 | Zones activating pager 3 | (VISTA-20P) |
| 12 | Zones activating pager 4 | (VISTA-20P) |

***80 OUTPUT DEFINITIONS**

Fill in the required data on the worksheet below and follow the programming procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

- Notes:** 1. For Relays, 4229 and 4204 devices are programmed in *79, *80, and *81 modes.
 2. For Powerline Carrier devices (plcd), field *27 must be programmed with a House Code.
 3. Tamperers of expansion units cannot be used to operate devices.

| Output Function Number (V20P=1-48) (V15P=1-24) | Activation Type and Detail | | | Partition Number (P) (if using ZT trig) 0 = any 1 = partition 1 2 = partition 2 3 = common | Event (for zone list/activated by) | | Action 0 = off 1 = close 2 secs 2 = stay closed 3 = pulse 4 = toggle 5 = duration 1†† 6 = duration 2†† | Output Number V20P=1-18 V15P=1-8, 17, 18 | Device Type R = relay T = trigger X = X10 |
|--|--|---------------------------|----------------------------------|--|---|--------------|--|--|---|
| | Activated by 0=delete 1=zn list 2=zn type 3=zn no. | Zone List (ZL) 1-8 = list | Zone Type (ZT) (see table below) | | Zone No. (ZN) 00=none V20P: 01-64 V15P: 01-06, 09-34, 49-56 | By Zone List | | | |
| 1 | | | | | | | | | |
| 2 | | | | | | | | | |
| 3 | | | | | | | | | |
| 4 | | | | | | | | | |
| 5 | | | | | | | | | |
| 6 | | | | | | | | | |
| 7 | | | | | | | | | |
| 8 | | | | | | | | | |
| 9 | | | | | | | | | |
| 10 | | | | | | | | | |
| 11 | | | | | | | | | |
| 12 | | | | | | | | | |
| 13 | | | | | | | | | |
| 14 | | | | | | | | | |
| 15 | | | | | | | | | |
| 16 | | | | | | | | | |
| 17 | | | | | | | | | |
| 18 | | | | | | | | | |
| 19 | | | | | | | | | |
| 20 | | | | | | | | | |
| 21 | | | | | | | | | |
| 22 | | | | | | | | | |
| 23 | | | | | | | | | |
| 24 | | | | | | | | | |
| 25 | | | | | | | | | |
| 26 | | | | | | | | | |
| 27 | | | | | | | | | |
| 28 | | | | | | | | | |
| 29 | | | | | | | | | |
| 30 | | | | | | | | | |
| 31 | | | | | | | | | |
| 32 | | | | | | | | | |
| 33 | | | | | | | | | |
| 34 | | | | | | | | | |
| 35 | | | | | | | | | |
| 36 | | | | | | | | | |
| 37 | | | | | | | | | |
| 38 | | | | | | | | | |
| 39 | | | | | | | | | |
| 40 | | | | | | | | | |
| 41 | | | | | | | | | |
| 42 | | | | | | | | | |
| 43 | | | | | | | | | |
| 44 | | | | | | | | | |
| 45 | | | | | | | | | |
| 46 | | | | | | | | | |
| 47 | | | | | | | | | |
| 48 | | | | | | | | | |

ZONE TYPE/SYSTEM OPERATION – Choices for Zone Types are:

- | | | | |
|------------------------|------------------------------|--------------------------|-----------------------|
| 00 = Not Used | 05 = Trouble Day/Alarm Night | 10 = Interior w/Delay | 24 = Silent Burglary |
| 01 = Entry/Exit#1 | 06 = 24 Hr Silent | 12 = Monitor Zone | 77 = Keypad |
| 02 = Entry/Exit#2 | 07 = 24 Hr Audible | 14 = Carbon Monoxide | 81 = AAV Monitor Zone |
| 03 = Perimeter | 08 = 24 Hr Aux | 16 = Fire w/Verification | 90-91 = Configurable |
| 04 = Interior Follower | 09 = Fire | 23 = No Alarm Response | |

Choices for System Operation are:

- | | | |
|-----------------------------|----------------------------|--------------------------|
| 20 = Arming–Stay | 38 = Chime | 52 = KISSOFF |
| 21 = Arming–Away | 39 = Any Fire Alarm | 54 = Fire Zone Reset |
| 22 = Disarming (Code + OFF) | 40 = Bypassing | 58 = Duress |
| 31 = End of Exit Time | 41 = **AC Power Failure | 60 = AAV Trigger |
| 32 = Start of Entry Time | 42 = **System Battery Low | 66 = Function key† |
| 33 = Any Burglary Alarm | 43 = Communication Failure | 67 = Bell Failure |
| 36 = **At Bell Timeout** | | 68 = TELCO Line Fault |
| | | 78 = Keypad red LED††† |
| | | 79 = Keypad green LED††† |

Note: In normal operation mode:
 Code + # + 7 + NN Key Entry **starts** Device
 Code + # + 8 + NN Key Entry **stops** Device

- ** Use 0 (any) for Partition No. (P) entry.
 *** Or at Disarming, whichever occurs earlier.
 † Use *57 Menu mode to assign the function key.
 †† Duration is set in program field *177.
 ††† Device action not used for these choices.

