

## LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defect in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

**WARNING:** Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

## TABLE OF CONTENTS

<i>SYSTEM INFORMATION</i>	3
<i>INTRODUCTION</i>	5
Test Your System Regularly .....	5
Important Notice .....	5
Glossary .....	5
<i>PC2550RK AND LED625 KEYPADS</i>	6
<i>BASIC OPERATION</i>	8
Arming Your System .....	8
Tamper Alarms .....	8
Smoke Detector and Fire Alarm Reset .....	8
Disarming Your System .....	9
Engineer Reset .....	9
Bypassing Zones .....	9
Keypad Alarms .....	10
Utility Output Command .....	10
<i>ARMING OPTIONS</i>	11
At-Home Arming .....	11
Home-Away Arming .....	11
Quick-Exit .....	11
Quick-Arm .....	11
<i>DISPLAYING SYSTEM INFORMATION</i>	12
Display Alarm Memory .....	12
Display Trouble Conditions .....	12
<i>CHANGING SYSTEM FEATURES</i>	13
Changing Access Codes .....	13
One Time Use Code .....	14
Door Chime On/Off .....	14
<i>TESTING AND MAINTENANCE</i>	15
Bell Test .....	15
Weekly Testing .....	15
Maintenance .....	15

<i>LCD600 MESSAGE DISPLAY KEYPAD</i>	16
<hr/>	
<i>USING THE LCD600 KEYPAD</i>	17
Arming the System with the LCD600 Keypad .....	17
Arming with Bypassed Zones or Trouble Conditions .....	17
Disarming the System with the LCD600 Keypad .....	18
If there is a Trouble Condition Present .....	18
If there was an Alarm .....	18
Resetting Smoke Detectors with the LCD600 Keypad .....	18
Bypassing Zones with the LCD600 Keypad .....	19
Turning Quick-Arm ON and OFF with the LCD600 Keypad .....	20
Displaying Alarm Memory with the LCD600 Keypad .....	20
Viewing Trouble Conditions with the LCD600 Keypad .....	20
Programming Access Codes with the LCD600 Keypad .....	21
Turning the Door Chime Feature ON and OFF with the LCD600 Keypad .....	21
Bell Test .....	22
Testing Your System with the LCD600 Keypad .....	22
<hr/>	
<i>FIRE SAFETY IN THE HOME</i>	23
<hr/>	
<i>LIMITED WARRANTY</i>	24

## *FIRE SAFETY IN THE HOME*

Most fires occur in the home, and to minimize this danger it is recommended that a household fire safety audit be conducted and a family escape plan be developed.

### *Household Fire Safety*

Check your home for the following potential hazards:

- Are all electrical appliances and outlets in a safe condition? Check for frayed cords, over-loaded lighting circuits, and so on. If you are uncertain about the condition of your electrical appliances or household electrical service, have a professional evaluation.
- Are all flammable liquids stored safely in closed containers in a well ventilated and cool area? Cleaning with flammable liquids, such as gasoline, should be avoided. Refer to product instructions, printed warnings and labels for information on using and storing hazardous materials safely.
- Are fire hazardous materials (such as matches) well out of the reach of children?
- Are furnaces and wood burning appliances properly installed, clean, and in good working order? If in doubt, have a professional evaluation.

### *Family Escape Planning*

There is often very little time between the detection of a fire and the time at which it becomes deadly. Because of this, it is very important that a family escape plan be developed, practised and followed.

- 1** Every family member should participate in developing the escape plan.
- 2** Study the possible escape routes from each location within the house. Since many fires occur at night, special attention should be given to the escape routes from sleeping quarters.
- 3** It is essential that escape from a bedroom be possible without opening the interior door. Consider the following when making your escape plans:
  - Make sure that doors and windows that open to the outside are easily opened. Ensure that they are not painted shut and that their locking mechanisms operate smoothly.
  - If opening an exit or using an exit is too difficult for children, the elderly or handicapped, plans for rescue should be developed. This includes making sure that those who are to perform the rescue can promptly hear the fire warning signal.
  - If the exit is above ground level, an approved fire ladder or rope should be provided, as well as training in its use.
  - Exits on the ground level should be kept clear. Be sure to remove snow from exterior patio doors in winter. Outdoor furniture or equipment should not block exits.
  - The family should have a predetermined assembly point where everyone can be accounted for; for example, across the street or at a neighbour's house.
  - Once everyone is out of the house, call the Fire Brigade.
  - A good plan emphasizes quick escape. Do not investigate first or attempt to fight the fire, and do not attempt to rescue belongings as this takes up valuable time. Once outside, do not re-enter the house. Wait for the Fire Brigade.
  - Write the plan down and rehearse frequently, so that should an emergency arise, everyone will know what they are to do. Revise the plan as conditions change; for example, when there are more or fewer family members in the home, or if there are physical changes to the house.
  - Make sure your alarm system is operational by conducting weekly tests as noted elsewhere in this manual. If you are unsure about system operation, contact your installer.
  - It is recommended that you contact your local Fire Brigade and request further information on home fire safety and escape planning. If available, have your local fire prevention officer conduct an in-house fire safety inspection.

*Bell Test*

Enter Code to Arm System

With the system disarmed, press the [\*] Key.

Select Option < > "User Functions"

Use the [<] and [>] Keys to scroll to this message. Press [6], then enter the Master Code.

Press (8) for.... Bell Test

Use the [<] and [>] Keys to scroll to this message. Press [8] to turn perform a Bell Test. When the Bell Test is selected, the bell or siren and the keypad sounder will sound for 2 seconds. When the test is complete, press the [#] Key to return to the "Ready" mode.

*Testing Your System with the LCD600 Keypad*

It is recommended that you test your system regularly. **NOTE:** Perform system tests in the off-peak hours, such as early morning or late evening.

1 Call to inform your monitoring station that you are testing your system.

2 Enter Code to Arm System

Disarm the system and ensure that this message is displayed.

3 Bell Test Initiated....

Perform a Bell Test by entering [\*][6][Master Code][8]; the message shown here will be displayed. If a trouble condition is indicated after the test, press [\*][2] to view the trouble condition. Press [#] when finished viewing trouble conditions.

4 Activate each sensor on your system one at a time. For example, open protected doors and windows, and walk in areas protected by motion detectors.

Secure System Before Arming < >

As each zone is activated, this message will be displayed. Use the [<] and [>] Keys to scroll through the list of open zones. If you are opening zones one at a time, only one zone should be displayed as being open.

System Open: "Zone Name" < >

When the [<] or [>] Key is pressed, a message similar to this will be displayed to indicate which zone has been activated.

Enter Code to Arm System

When the zone is closed, and if all zones are closed, this message will be displayed. Continue to activate the rest of the zones on your system and ensure that the keypad indicates when each zone is opened and closed.

5 If they are programmed for operation, press the [F], [A], and [P] keys in turn. The [F] Key will sound the bell or siren in a pulsed mode. Enter an Access Code to silence the alarm. The [A] Key is a silent alarm; the [P] Key may be programmed as silent or audible. If an alarm sounds, enter an Access Code to silence the alarm.

6 If your system has a Fire Zone, activating the Fire Zone will cause the bell or siren to sound with a pulsed tone. **CAUTION: Do not use an open flame or burning materials to test a smoke detector. Contact your installer for information on safe methods to activate a smoke detector.**

7 Should the system fail to operate properly, call your alarm dealer for service.

8 When testing is complete, call and advise the monitoring station.

**SYSTEM INFORMATION**

Installer \_\_\_\_\_

Phone \_\_\_\_\_ Installation Date \_\_\_\_\_

Monitoring Station: \_\_\_\_\_ Telephone Number: \_\_\_\_\_

Account Number \_\_\_\_\_

**CONTACTS**

Name \_\_\_\_\_ Phone \_\_\_\_\_

Name \_\_\_\_\_ Phone \_\_\_\_\_

Name \_\_\_\_\_ Phone \_\_\_\_\_

**ZONE INFORMATION**

Zone	Type	Protected Area
1	_____	_____
2	_____	_____
3	_____	_____
4	_____	_____
5	_____	_____
6	_____	_____
7	_____	_____
8	_____	_____

Entrance Delay \_\_\_\_\_ Exit Delay \_\_\_\_\_

Auxiliary Entrance Delay \_\_\_\_\_ Auxiliary Exit Delay \_\_\_\_\_

**SPECIAL FEATURES**

[F] Key  Enabled  Disabled

[A] Key  Enabled  Disabled

[P] Key  Enabled  Disabled

**KEYPADS**

The following keypads are installed on your system:

\_\_\_\_\_ PC2550RK Keypads

\_\_\_\_\_ LED625 Keypads

\_\_\_\_\_ LCD600 Message Display Keypads



### Turning Quick-Arm ON and OFF with the LCD600 Keypad

Enter Code to Arm System

With the system disarmed, press the [\*] Key. Use the [>] Key to scroll to the next message.

Select Option < >  
"User Functions"

With this message displayed, press [6] to enter the User Functions Menu. Enter the Master Code, then use the [>] Key to scroll to the next message.

Press (4) for....  
Quick-arm On/Off

Press [4] to turn the Quick-Arm feature ON or OFF. The keypad will sound several quick tones if the Quick-Arm feature is being turned ON, or the keypad will sound a single long tone if the Quick-Arm feature is being turned OFF. Press the [#] Key to return the keypad to the "Ready" Mode.

### Displaying Alarm Memory with the LCD600 Keypad

View Memory  
"Zone Name" < >

If there was an alarm while the system was armed, a message similar to this one will be displayed when the system is disarmed. Use the [<] and [>] Keys to scroll through the list of zones that went into alarm.

View Memory  
(#) to Exit... < >

When all zones that went into alarm have been displayed, this message will be displayed. Press the [#] Key to return to the "Ready" mode; the next message will be displayed.

Enter Code to Arm System

To re-enter the Display Alarm Memory mode, enter [\*][3]. When [\*][3] is entered, the keypad will again display the zones that went into alarm while the system was armed.

### Viewing Trouble Conditions with the LCD600 Keypad

The PC2580 constantly monitors itself to ensure proper operation. **If a trouble condition occurs while the system is armed**, the keypad will beep, the "Trouble" light will come ON, but the keypad will not display the trouble condition. Only a trouble on the Fire Zone will be indicated with a message while the system is armed.

\* Trouble \*  
Fire Zone

This message will be displayed, whether the system is armed or disarmed, when there is a trouble condition on the Fire Zone. **Call for service immediately if this message is displayed.**

Enter Code to Arm System... < >

This message will be displayed if a trouble condition occurs while the system is disarmed. Press any Key to silence the keypad sounder, then press the [<] or [>] Key to display the next message.

System Trouble  
(\*2) to View < >

Enter [\*][2] to display trouble conditions.

View Trouble < >  
"Trouble Message"

A message similar to the one shown here will be displayed. Use the [<] and [>] Keys to scroll through the list of trouble conditions. When finished viewing the trouble conditions, press the [#] Key to return the keypad to the "Ready" mode.

## INTRODUCTION

Read this manual carefully before operating your security system. Have your installer instruct you on system operation, and have your installer inform you of the features that have been enabled on your system. Everyone using the system should be instructed in its use. Complete the System Information page and store this manual in a safe place for future reference.

### Test Your System Regularly

To ensure that your system continues to function as intended, it is important that you test your system weekly. Refer to the "Testing Your System" section of this manual, and read and follow the instructions carefully. If your system does not function properly or if you have any questions about testing your system, call your installing company for service or assistance.

### Important Notice

**A security system cannot prevent emergencies. It is only intended to alert you and, if included, a monitoring station, of an emergency situation. Security systems are generally very reliable but they may not work under all conditions and they are not a substitute for prudent security practices or life and property insurance. Your security system should be installed and serviced by qualified security professionals who should inform you of the level of protection that has been provided, and instruct you on system operations.**

### Glossary

Your security system has been designed to offer advanced security features and simple, straight-forward operation. Described here are terms used throughout this manual to explain the operation of your system.

**Keypad:** Your system features one or more keypads. The keypad is used to enter commands to operate the system, and to view operating information about the system. Commands are entered on the keypad by pressing one Key at a time. Several different keypad models are available for your PC2580 alarm system:

- The PC2550RK and LED625 keypads display system information using Zone Lights and System Lights.
- The LCD600 Message Display Keypad displays system information and guides operation with easy-to-understand English-language messages.

All commands used to operate your system are the same for all keypads. For some functions, the LCD600 Keypad will display messages to guide you through operation or to advise you of certain conditions.



This symbol will appear in the manual to indicate that the LCD600 Keypad will display messages for the function described. Refer to the page number indicated for instructions on using a function with the LCD600 Keypad.

**Master Code:** The Master Code is a 4-digit code used to arm and disarm the system, to program Access Codes and to bypass zones. Normally only one person should know the Master Code.

**Access Codes:** Fifteen Access Codes are available to allow users to arm and disarm the system and to bypass zones. Each person should keep their 4-digit Access Code secret to ensure system security.


**Entry Delay:** The Entry Delay is the period of time allowed for someone to enter the premises and disarm the system.

**Exit Delay:** The Exit Delay is the period of time allowed for someone to leave the premises after they have entered an Access Code to arm the system.

**Entry-Exit Door or Zone:** The Entry-Exit Door or Zone is the door or zone designated by your installer to be used for entering and leaving the premises when the system is armed.

**Zone:** A Zone is an area that is protected by a security device. For example, a room protected by a motion detector may be "Zone 1", while a window protected by a magnetic contact may be "Zone 2". Your installer will inform you of where zones have been set up on your system.

**Important:**  
**Test your system regularly. Follow the guidelines for correcting system trouble conditions; have any system trouble conditions you cannot correct yourself attended to by your installer.**

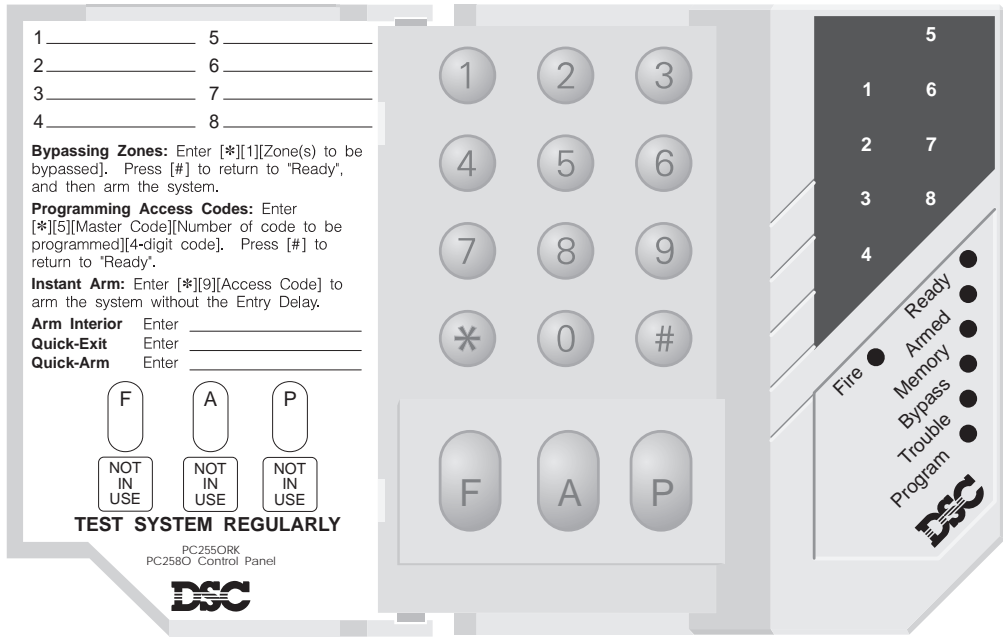

**Zone Lights 1 to 8** indicate zone activity. When a zone is secure, its Zone Light will be OFF; when a zone is open, its Zone Light will be ON.

The **"Fire"** light will come ON when a detector on the Fire Zone is in alarm. Refer to Smoke Detector and Fire Alarm Reset for information on Fire Zone operation and instructions for resetting smoke detectors.

The **"Ready"** light will come ON when the system is ready to be armed. If the "Ready" light is OFF, there is an open zone on the system. The zone must be closed or bypassed before the system can be armed.

The **"Armed"** light will come ON to indicate that the system is armed. The "Armed" light will FLASH to indicate that the system is armed and that there is no Entry Delay on any of the zones.

The **"Memory"** light will come ON to indicate that an alarm occurred while the system was armed. Enter [\*][3] to display the zones that went into alarm. When finished viewing the alarm memory, press the [#] key.

The **"Bypass"** light will come ON to indicate that zones have been bypassed. To view bypassed zones, enter [\*][1]. Press the [#] key when finished. **Ensure bypassed zones are bypassed intentionally.**

The **"Trouble"** light will come ON to indicate that a trouble condition is present. Press any key to silence the keypad sounder, then enter [\*][2] to view the troubles. Have trouble conditions corrected by your installer as soon as possible.

**Bypassing Zones with the LCD600 Keypad**

A bypassed zone will not cause an alarm. Zones may be bypassed to allow access to part of the protected area while other zones are armed. For example, bypassing the zone protecting your living room would allow you to remain in the room while other zones on your system are armed.

To bypass zones, the keypad must be displaying one of the following messages:

- Enter Code to Arm System** This message indicates that the system is ready to be armed; no zones are open, and no trouble conditions are present.
- Enter Code to Arm System < >** This message indicates that a trouble condition is present on the system. Refer to Displaying Trouble Conditions for instructions on viewing trouble conditions. It is suggested that you review and correct any trouble conditions on your system before bypassing zones and arming the system.
- Select Option < > Zone Bypass** Press the [\*] Key to display this message. Press the [>] Key to scroll to the next message.
- Press (1) for... Zone Bypass** Press [1] to enter the Bypass Mode.
- Enter Your Access Code...** If an Access Code is required to bypass zones, this message will be displayed. Enter your Access Code, if required.
- Select Zone "Zone Name" < >** Use the [<] and [>] keys to scroll through the list of zones to the zone to be bypassed. To recall the last set of bypassed zones, enter [9].
- (2) to Bypass "Zone Name"** When the desired zone is displayed, enter the number indicated to bypass the zone. In the example shown here, enter [2] to bypass Zone 2.
- (2) to Clear "Zone Name" BP** "BP" will appear to indicate that the displayed zone has been bypassed. To remove the bypass from the zone, enter the number indicated; in this example, enter [2] to remove the bypass from Zone 2. When a bypass is cleared, the "BP" indication will be removed.
- Select Zone < > "Zone Name" OP** If a zone is open when you are in the Bypass Mode, "OP" will appear to indicate that the zone is open. When the zone is secured, the "OP" indication will be removed. When the zone is bypassed, "BP" will be displayed to indicate that the zone has been bypassed.
- (#) to Exit... "Zone Name"** When finished bypassing zones, press the [#] Key to return the keypad to the "Ready" mode.

**Note that bypasses are automatically removed when the system is disarmed.**

### Disarming the System with the LCD600 Keypad

Enter Code to Disarm System

Enter the premises through the Entry-Exit Zone and go to the keypad. The message shown here will be displayed. Enter an Access Code before the Entry Delay expires.

System Disarmed No Alarm Memory

This message will be displayed to indicate that the system has been disarmed, and that there were no alarms or trouble conditions during the time the system was armed. This message will be displayed for 5 seconds.

Enter Code to Arm System

After 5 seconds, this message will be displayed.

#### If there is a Trouble Condition Present:

Enter Code to Arm System < >

This message will be displayed if there is a trouble condition present. Refer to Displaying Trouble Conditions for instructions on how to display and correct trouble conditions.

#### If there was an Alarm:

View Memory "Zone 2" < >

If a one or more zones went into alarm while the system was armed, a message similar to the one shown here will be displayed. Use the [<] and [>] Keys to scroll through the list of zones that went into alarm.

Secure System Before Arming < >

After viewing the zones that went into alarm, this message will be displayed if there are still unsecured zones on the system. Use the [<] and [>] Keys to scroll through the list of open zones.

### Resetting Smoke Detectors with the LCD600 Keypad


**If the Fire Alarm sounds at night, do not investigate the alarm: follow your evacuation plan immediately. Go to a neighbour and call the fire brigade.**

Smoke detectors installed on your system may be reset after a false alarm using the [\*][4] command. To reset smoke detectors to normal, first clear all products of combustion from the detectors.

Press (4) for... Reset Sensors

Press the [\*] Key to enter the User Functions List. Use the [>] Key to scroll to the message shown here.

Press and hold down the [4] Key for several seconds. If the detectors are clear of smoke, they will return to normal. If the detectors still have smoke in them, the alarm will sound again. If the alarm sounds again, first ensure that there is no threat of fire; you may then silence the alarm and reset the smoke detectors.

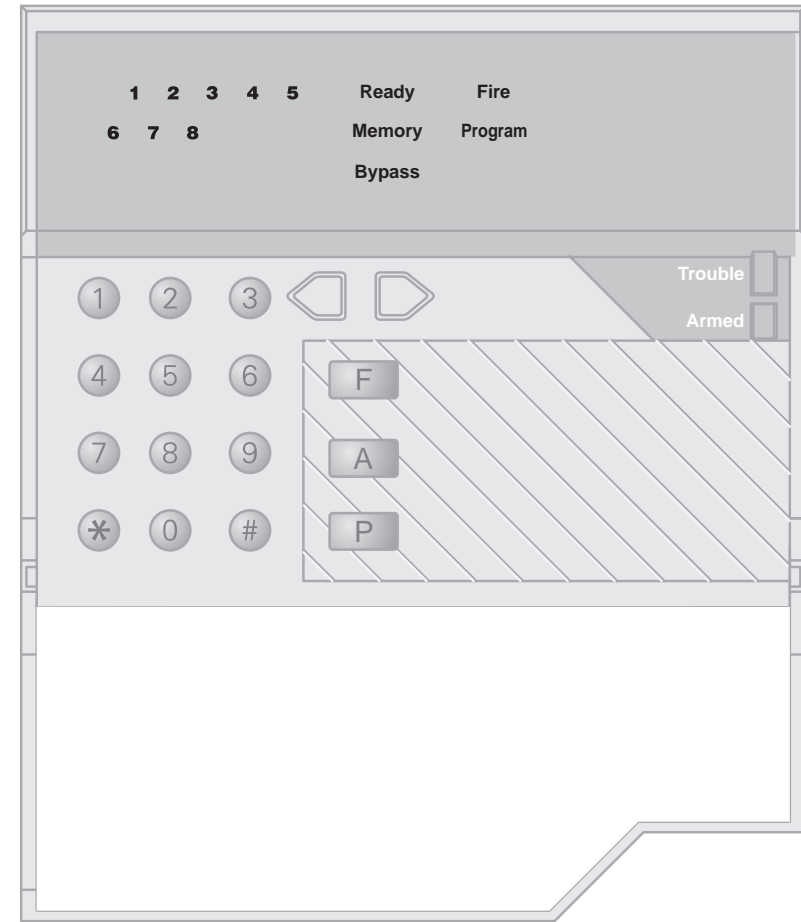

#### Trouble Conditions

Zone Light	Trouble
1	Low Battery
2	Mains AC Power
3	Keypad Tamper
4	Telephone Line
5	Unsuccessful Communication
6	Bell Circuit
7	Smoke Detector Circuit
8	Reset Clock

When finished viewing troubles, press the [#] key.

#### Press [#]:

- when an error is made in entering an Access Code, then enter the code again
- to return to "Ready" after using [\*] commands

**[F] Key:** Press and hold this key for 2 seconds to sound an [F] Key alarm

**[A] Key:** Press and hold this key for 2 seconds to generate an [A] Key alarm

**[P] Key:** Press and hold this key for 2 seconds to generate a [P] Key alarm.

**These keys must be enabled by your Installer before they become functional. Your Installer will tell you how these keys operate on your system.**

## BASIC OPERATION

### Arming Your System

Before arming the system, close all protected doors and windows, and stop movement in areas protected by motion detectors. When all zones are closed, all of the Zone Lights on the keypad will be OFF, and the "Ready" light will be ON. **The system cannot be armed unless the "Ready" light is ON. If the "Ready" light will not come ON even when all zones are closed, contact your installer for assistance.**

To arm the system, enter a 4-digit Access Code. As each digit is entered, the keypad sounder will beep. When the Access Code has been entered, the "Armed" light will come ON and the keypad will sound several beeps. If an incorrect Access Code is entered, the keypad will sound a single long tone. To correct a mistake when entering a code, press the [#] Key and enter the Access Code again.

When the "Armed" light comes ON, leave the premises through the designated Entry-Exit door before the Exit Delay expires. At the end of the Exit Delay, all lights on the keypad will be shut OFF except for the "Armed" light - your system is now armed.

If you require a longer or shorter Exit Delay time, your installer may change this time to suit your needs.

Refer to the "Arming Options" section of this manual for information on other arming functions.



**The LCD600 Keypad will display messages while you arm your system. Refer to Page 17 for instructions on arming your system with the LCD600 Keypad.**

### Tamper Alarms

If this feature is enabled on your system, keypad sounder or bell will sound when the wiring on any zone is tampered with. This alarm will sound whether the system is armed or disarmed. If any zone goes into alarm for no apparent reason, contact your installer for assistance.

### Smoke Detector and Fire Alarm Reset

If the Fire Alarm sounds at night, do not investigate the alarm: follow your evacuation plan immediately. Go to a neighbour and call the fire brigade.

When a Fire Alarm is generated, the bell or siren will sound with a pulsing tone. Transmission of the fire alarm to your monitoring station is delayed for 30 seconds to allow you to cancel possible false alarms. To silence the alarm, press the [#] Key. When the [#] Key is pressed, the system will delay transmission of the fire alarm for an additional 90 seconds. The 90-second delay is intended to allow you to reset the smoke detectors after a false alarm.

If the smoke detector is reset and remains reset after the 90-second delay, a fire alarm will not be transmitted to the monitoring station.

If the smoke detector is reset but goes into alarm again after the 90-second delay, the fire alarm will sound again and the process described above will repeat. A fire alarm will be transmitted to your monitoring station after 30 seconds if it is not silenced by pressing the [#] Key.

Smoke detectors installed on your system may be reset after a false alarm using the [\*][4] command. To reset smoke detectors to normal, first clear all products of combustion from the detectors. Press [\*] then hold down the [4] Key for several seconds. If the detectors are clear of smoke, they will return to normal. If the detectors still have smoke in them, the alarm will sound again. If the alarm sounds again, first ensure that there is no threat of fire; you may then silence the alarm and reset the smoke detectors.

An immediate fire alarm signal and transmission may be generated by holding down the [F] Key for 2 seconds.



**The LCD600 Keypad will display messages while you reset smoke detectors. Refer to Page 18 for instructions on resetting smoke detectors with the LCD600 Keypad.**

## USING THE LCD600 KEYPAD

### Arming the System with the LCD600 Keypad

Enter Code to  
Arm System

This message will be displayed when all zones are secure and the system is ready to be armed. To arm the system, enter an Access Code.

Enter Code to  
Arm System < >

This message will be if zones are bypassed or if there are trouble conditions present. The system may be armed with bypassed zones or with trouble conditions present, but protection of the premises will be affected. Refer to Bypassing Zones and Displaying Trouble Conditions for instructions on how to view bypassed zones and trouble conditions. To arm the system, enter an Access Code.

Secure System  
Before Arming < >

This message will be displayed if zones are open. Press the [<] or [>] Key to display a list of open zones. Secure or bypass any open zones before arming the system; refer to Bypassing Zones for instructions on bypassing zones.

Exit Delay in  
Progress

This message will be displayed when an Access Code is entered to arm the system. Leave the premises through the Entry-Exit Zone before the Exit Delay expires.

Enter Code to  
Disarm System

When the Exit Delay expires, this message will be displayed and the system will be armed.

### Arming with Bypassed Zones or Trouble Conditions

\* WARNING \*  
Bypass Active

This message will be displayed when you arm the system with bypassed zones. Refer to Bypassing Zones for instructions on bypassing zones. **Always ensure that bypassed zones are bypassed intentionally!**

\* WARNING \*  
System Trouble

This message will be displayed if the system is armed with one or more trouble conditions present. Refer to Displaying Trouble Conditions for instructions on how to display trouble conditions.


**Your system may be armed with trouble conditions present, but be aware that the protection provided by your system may be reduced!**



## LCD600 MESSAGE DISPLAY KEYPAD

### **Important:**

**Test your system regularly. Follow the guidelines for correcting system trouble conditions; have any system trouble conditions you cannot correct yourself attended to by your installer.**

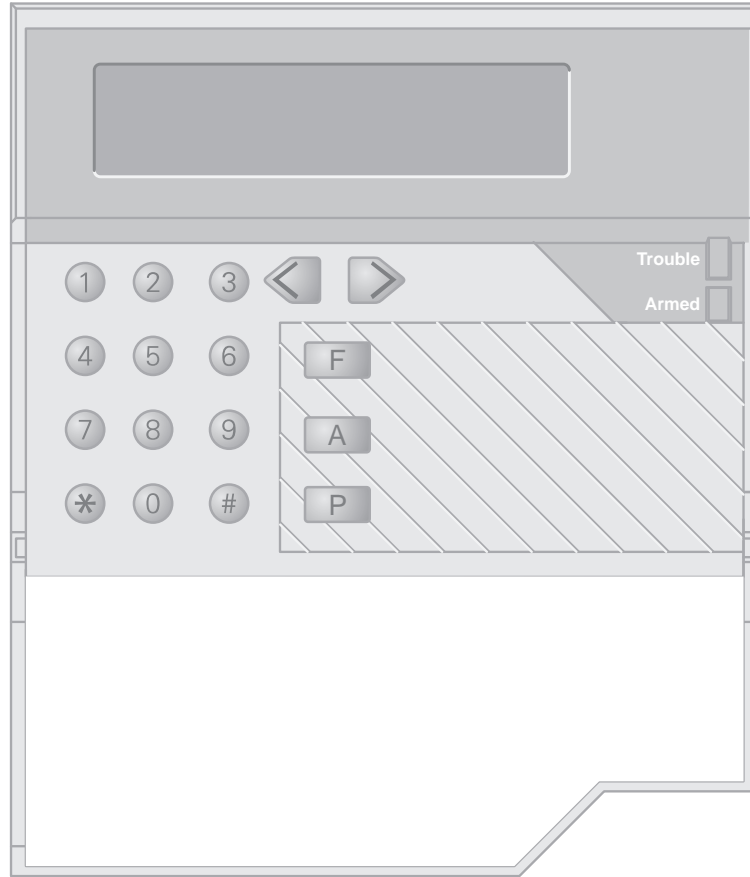

### **Press [\*]:**

- to select the displayed function

### **Press [#]:**

- when an error is made in entering an Access Code, then enter the code again
- to return to "Ready" after using [\*] commands

### **Press [<]:**

- to view the previous function or message

### **Press [>]:**

- to view the next function or message

**[F] Key:** Press and hold this key for 2 seconds to sound an [F] Key alarm

**[A] Key:** Press and hold this key for 2 seconds to generate an [A] Key alarm

**[P] Key:** Press and hold this key for 2 seconds to generate a [P] Key alarm.

**These keys must be enabled by your Installer before they become functional. Your Installer will tell you how these keys operate on your system.**

### **Disarming Your System**

Enter the premises through the designated Entry-Exit door. The keypad will sound a constant tone to indicate that the system must be disarmed.

Go to the keypad and enter an Access Code. If an error is made entering the code, press the [#] Key and enter the code again. When a correct Access Code is entered, the "Armed" light will be shut OFF, and the sounder will be silenced - your system is now disarmed.

An Access Code must be entered before the Entry Delay expires or an alarm will sound. If you require a longer or shorter Exit Delay time, your installer may change this time to suit your needs.

If an alarm occurred while the system was armed, the "Memory" light and the Zone Lights of the zones that went into alarm will FLASH for two minutes. Press the [#] Key to cancel the flashing display and return the keypad to the "Ready" mode. Refer to "Display Alarm Memory" for instructions on displaying the zones that went into alarm.

**IMPORTANT NOTE: If you return to the premises and find that an alarm is in progress or that there are alarms in memory, do not enter the premises as an intruder or fire condition may be present. Go to a neighbour and, if your system is monitored, contact the monitoring station. Your monitoring station will advise of what action has been taken as a result of the alarm and whether the premises are safe to enter. If your system is not monitored, call the local police to investigate.**



**The LCD600 Keypad will display messages while you disarm your system. Refer to Page 18 for instructions on disarming the system with the LCD600 Keypad.**

### **Engineer Reset**

If an alarm occurs and your system is set for Engineer Reset, you must call your alarm company to reset the system before it can be re-armed. In this instance, the "memory" light will remain ON until reset by the installer.

### **Bypassing Zones**

A bypassed zone will not cause an alarm. Zones may be bypassed to allow access to part of the protected area while other zones are armed. For example, bypassing the zone protecting your living room would allow you to remain in the room while other zones on your system are armed.

### **To Display Bypassed Zones:**

With the system disarmed, enter [\*][1] or [\*][1][Access Code] to display bypassed zones; your installer will inform you if an Access Code is required to bypass zones or to view bypassed zones. When the command is entered, the Zone Lights for any bypassed zones will come ON. Ensure that any zone displayed as being bypassed has been bypassed intentionally. Zone bypasses are automatically cancelled when the system is disarmed.

## TESTING AND MAINTENANCE

### To Bypass Zones:

Enter [\*][1] or [\*][1][Access Code]; the "Bypass" light will FLASH.

Enter the number of the zone to be bypassed; the Zone Light will come ON to indicate that the zone is bypassed. To remove a bypass, enter the zone number to shut its Zone Light OFF. When all desired zones are bypassed, press the [#] Key to return to "Ready".

When you arm your system, the zones you have selected will be bypassed. When arming the system with bypassed zones, it is always a good idea to enter the [\*][1][Access Code] command to review the list of bypassed zones before entering an Access Code to arm the system. After ensuring that the desired zones are bypassed, press the [#] Key, and then enter an Access Code to arm the system.



**The LCD600 Keypad will display messages while you bypass zones. Refer to Page 19 for instructions on bypassing zones with the LCD600 Keypad.**

### Keypad Alarms

Three types of alarms may be activated by pressing and holding a single Key on the keypad. Your installer will inform you of how the [F], [A] and [P] Keys will operate on your system.

- [F]** Press and hold the [F] Key for 2 seconds to sound an [F] Key alarm; the siren will sound with a pulsed tone. The keypad will sound a series of short beeps once the system has accepted the alarm and the "Fire" light will come ON.
- [A]** Press and hold the [A] Key for 2 seconds to generate an [A] Key alarm. The siren will not sound when this function is activated. Your installer will inform you of how this alarm will operate. The keypad will sound a series of short beeps once the system has accepted the alarm.
- [P]** Press and hold the [P] Key for 2 seconds to generate a [P] Key alarm. The alarm may be programmed as either silent or audible; your installer will inform you of how this alarm will operate. If your installer has programmed this alarm to be audible, the keypad will sound a series of short beeps once the system has accepted the alarm, and the siren will sound a steady tone.

### Utility Output Command

A special keypad command may be used to operate various devices connected to your security system. To operate the Utility Output, enter [\*][7]. Then enter [1] or [2] to select Output 1 or Output 2. After selecting Output 1 or 2, enter your Access Code.

When the command is entered, the keypad will sound a single tone for 5 seconds, and the Utility Output will be activated for 5 seconds.

This command may be used to operate devices such as special lighting or door strikes. Your installer will inform you of how the Utility Output function is set up on your system.

### Bell Test

Entering this command will sound the siren and turn ON all the keypad lights for 2 seconds. To perform a bell test, enter [\*][6][Master Code][8] on the keypad.



**The LCD600 Keypad will display messages when using the Bell Test command. Refer to Page 22 for instructions on performing a Bell Test with the LCD600 Keypad.**

### Weekly Testing

It is recommended that you test your system regularly.

**NOTE:** Perform system tests in the off-peak hours, such as early morning or late evening.

- 1 Call to inform your monitoring station that you are testing your system.
- 2 Disarm the system and ensure that the "Ready" light is ON.
- 3 Perform a Bell Test by entering [\*][6][Master Code][8]. The bell or siren will sound for 2 seconds and all of the lights on the keypad will come ON. If a trouble condition is indicated after the test, press [\*][2] to view the trouble condition. Press [#] when finished viewing trouble conditions.
- 4 Activate each sensor on your system one at a time. For example, open protected doors and windows, and walk in areas protected by motion detectors. Each Zone Light should come ON when each zone is activated. Each Zone Light will be shut OFF when the zone is restored to normal (when the door or window is shut, or when motion stops in areas protected by motion detectors).



**The LCD600 Keypad will display messages when zones are activated during the test. Refer to Page 22 for instructions on testing the system with the LCD600 Keypad.**

- 5 If they are programmed for operation, press the [F], [A], and [P] keys in turn. The [F] Key will sound the bell or siren in a pulsed mode. Enter an Access Code to silence the alarm. The [A] Key is a silent alarm; the [P] Key may be programmed as silent or audible. If an alarm sounds, enter an Access Code to silence the alarm.
- 6 If your system has a Fire Zone, activating the Fire Zone will cause the bell or siren to sound with a pulsed tone. **CAUTION: Do not use an open flame or burning materials to test a smoke detector. Contact your installer for information on safe methods to activate a smoke detector.**
- 7 Should the system fail to operate properly, call your alarm dealer for service.
- 8 When testing is complete, call and advise the monitoring station.

### Maintenance

With normal use, your system requires a minimum of maintenance. The following points should be observed:

- 1 Do not wash the keypad with a wet cloth, and do not use household cleaners, such as glass cleaners, on the keypad. Light dusting with a cloth slightly dampened with plain water should remove normal accumulations of dust.
- 2 The Bell Test is designed to test the condition of the back-up battery installed with your system. Even with frequent testing, it is recommended that the back-up battery be replaced every three years. Contact your installing company for information on replacing the battery.
- 3 For other system devices such as passive infrared, ultrasonic or microwave motion detectors, glassbreak detectors and other detection devices, consult the manufacturer's literature for testing, cleaning and maintenance instructions.

### One Time Use Code

Access Code 16 may be set up on your system to be a One Time Use Code. The One Time Use Code may be used to disarm and then arm the system only once; after the code is used to arm the system, it will be erased and may not be used again. This code is designed to be provided to someone such as a baby-sitter or home service person. Your installer will inform you if the One Time Use Code is enabled on your system. Program the One Time Use Code by entering [\*][5][Master Code][9][8] and then the 4-digit code.

### Door Chime On/Off

The Door Chime feature causes the keypad to beep whenever a Door Chime Zone is activated. Your installer will inform you of which zones on your system will activate the Door Chime feature. This feature is useful if certain zones are out of view, and you would like an indication of when the zones are opened and closed. Note that the Door Chime feature only functions when the system is disarmed.

To turn the Door Chime feature ON or OFF, enter [\*][6][Master Code][6]. If the feature is being turned ON, the keypad will sound several beeps. If the feature is being turned OFF, the sounder will emit a single long tone.



**The LCD600 Keypad will display messages while turning the Door Chime feature on and off. Refer to Page 21 for instructions on turning the Door Chime feature on and off with the LCD600 Keypad.**

## ARMING OPTIONS

### At-Home Arming

At-Home Arming automatically bypasses certain zones on your system, and also removes the Entry Delay from the Entry-Exit Zones. This feature allows you to arm the system and remain on the premises. In addition, if any of the Entry-Exit doors are opened, an alarm will sound instantly. Your installer will inform you of which zones will be automatically bypassed when At-Home Arming is used.

To use At-Home Arming, enter [\*][9][Access Code] on the keypad. The "Armed" light will FLASH to remind you that there is no Entry Delay on the Entry-Exit doors.

### Home-Away Arming

Home-Away arming automatically bypasses certain zones on your system, and applies the Entry Delay to the Entry-Exit zones. You could use this feature to arm the system and remain on the premises, and another household member would still be able to enter the premises through the Entry-Exit door without causing an alarm. When the Entry-Exit door is opened, an Access Code would have to be entered to disarm the system.

To arm the system with Home-Away Arming, enter an Access Code and do not open the Entry-Exit door. When the Exit Delay expires, the system will be armed with certain zones automatically bypassed. Your installer will inform you of which zones will be automatically bypassed when Home-Away Arming is used.

### Quick-Exit

When At-Home or Home-Away Arming is used, the Quick-Exit feature allows you to enter [\*][0] to leave the premises without having to disarm the system.

After entering [\*][0], you will have up to 2 minutes to leave the premises through the Entry-Exit Zone. When the Entry-Exit Zone is closed, the system will remain armed in either the At-Home or Home-Away modes. If the Entry-Exit Zone is opened after 2 minutes or if there is more than one exit through the zone, the Entry Delay will begin.

### Quick-Arm

The Quick-Arm feature allows you to enter [\*][0] to arm the system. This command is designed to allow someone to arm the system without that person having to be provided with an Access Code. When [\*][0] is entered, the Exit Delay will begin and the user may leave the premises through the Entry-Exit door. At the end of the Exit Delay, the "Armed" light will come ON and the system will be fully armed.

To turn the Quick-Arm feature ON and OFF, enter [\*][6][Master Code][4]. If Quick-Arm is being turned ON, the keypad will beep several times. If Quick-Arm is being turned OFF, the keypad will sound a single long tone. After turning Quick-Arm ON or OFF, press the [#] Key.



**The LCD600 Keypad will display messages while turning the Quick-Arm feature on and off. Refer to Page 20 for instructions on turning the Quick-Arm feature on and off with the LCD600 Keypad.**

## DISPLAYING SYSTEM INFORMATION

### Display Alarm Memory

Alarms generated while the system is armed are recorded in the system's memory. To display the zones that went into alarm, enter [\*][3]. The "Memory" light will FLASH, and the zones that went into alarm will be displayed on the Zone Lights. Note that the Alarm Memory will be cleared the next time the system is armed.



**The LCD600 Keypad will display messages while Alarm Memory is viewed. Refer to Page 20 for instructions on displaying Alarm Memory with the LCD600 Keypad.**

### Display Trouble Conditions

The PC2580 constantly monitors itself to ensure proper operation. When a condition occurs that could affect operation, the "Trouble" light will come ON and the keypad will sound two short beeps every 10 seconds to warn of the trouble condition.

To silence the sounder, press the [#] Key. The keypad will be silenced, but the "Trouble" light will remain ON until the trouble condition is cleared. To display the trouble conditions, enter [\*][2]. Trouble conditions are represented with the Zone Lights: if a Zone Light comes ON, then that trouble condition is present:



**The LCD600 Keypad will display messages while trouble conditions are displayed. Refer to Page 20 for instructions on displaying trouble conditions with the LCD600 Keypad.**

Zone Light	Trouble	Cause	What To Do
1	Battery Trouble	Battery is low or disconnected	Call for service
2	Mains AC Failure▼	Mains AC power is out	Check your fusebox or circuit breakers; call for service if the trouble condition cannot be corrected
3	Keypad Tamper	A keypad was removed from its mounting plate	Call for service
4	Telephone Line Trouble	Problem with the telephone line	Call for service if trouble does not correct itself
5	Unsuccessful Communication	The system cannot communicate with the monitoring station	Call for service if trouble does not correct itself
6	Bell Circuit Trouble	Problem with bell fuse or wiring	Call for service
7	Smoke Detector Trouble	Problem with smoke detector circuit	<b>Call for service immediately</b>
8	Loss of Time	System clock needs to be reset	Call for service

▼ Note that the keypad sounder will **not** beep for Mains AC Failure until there is also a Low Battery Trouble is present. For Mains AC Failure, the "Trouble" light will come ON as soon as the mains fails and will remain ON until power is restored.

## CHANGING SYSTEM FEATURES

### Changing Access Codes

The PC2580 features 16 programmable Access Codes. The first code is the Master Code, and the remaining 15 codes are normal Access Codes.

**Programming Access Codes:** Enter [\*][5][Master Code]; the "Program" light will FLASH. The Zone Lights will indicate which Access Codes from 1 to 8 have been programmed, and which Access Code is presently being programmed:

Zone Light is...	Access Code is...
OFF	not programmed
ON steady	programmed
Flashing	presently being programmed

When the [\*][5][Master Code] command is entered, Zone Light 1 will be ON to indicate that the Master Code is already programmed.

**Changing or Adding a Code:** To change the Master Code or Access Codes 1 through 8, enter the number of the code to be changed; the corresponding Zone Light will begin to FLASH. For example, enter [1] to change the Master Code, or enter [2] to change Access Code 2, and so on.

With the desired Zone Light flashing, enter a new 4-digit Access Code. Do not press [\*] or [#] when entering the code. If an existing code is being changed, the new code will replace the old one. After the code is entered, the keypad will beep 3 times and the Zone Light will stop flashing and remain ON.

If you want to program another code, press the number Key for the code to be programmed, and enter the new 4-digit code as described above.

To program Access Codes 9 through 16, press [9]; the "Ready", "Armed" and "Program" lights will FLASH to indicate that Access Codes 9 through 16 are being displayed on the Zone Lights. Select an Access Code by pressing a number from [1] to [8], and program the new code as described above.

When all desired changes are complete, press the [#] Key to return to "Ready".

**Erasing a Code:** To erase a code, enter [\*][5][Master Code] (and press [9] to select a code from 9 through 16). Enter the number of the code to be erased; the Zone Light for the code will FLASH. Enter [\*\*\*\*] to erase the Access Code. When all desired changes are complete, press the [#] Key to return to "Ready".

**IMPORTANT:** Do not erase the Master Code. If the Master Code is accidentally erased, contact your installing company for assistance.



**The LCD600 Keypad will display messages while programming Access Codes. Refer to Page 21 for instructions on programming Access Codes with the LCD600 Keypad.**

### Important Information

The REN number of this apparatus is 1.5.

The REN indicates how many telephones or other types of equipment may be connected to your telephone line simultaneously. This may be calculated by adding up all the REN values of the equipment connected to the line. A standard telephone can operate correctly if the total is 4 or less. If you exceed this number some or all of the bells or ringers may fail to operate correctly.

This apparatus has been approved for use with the following facilities:

- Auto Dialling
- Auto Answering
- Repeat Attempt Dialling
- Tone Detection
- Series Connection Facility
- Modem Facility
- Alarm Dialling and Signalling Facility

Any other usage will invalidate the approval of the apparatus if as a result it then ceases to comply with the standards against which approval was granted.

This apparatus has been approved for connection to the Public Switched Telephone Network (PSTN), including BT, Kingston Upon Hull and Mercury.

This apparatus is not suitable for use as an extension to a payphone.

Only the network operator or a person authorised by the network operator is allowed to make the connection from this apparatus to the PSTN.

Due to the lack of echo suppression tone, this apparatus may not be suitable for dialling international calls.

The definition of a Relevant Branch System (RBS) can be found in BS 6789 Section 6.1:1986 Clause 2.4

<b>APPROVED</b> for connection to telecommunication systems specified in the instructions for use subject to the conditions set out in them.	
<b>S/4188/3/R/503183</b>	
DSC PC2580	REN = 1.5

# INSTRUCTION MANUAL