

Intelligent Control Panel
S L C
Wiring Manual

Fire Alarm System Limitations

An automatic fire alarm system—typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control with remote notification capability—can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire.

The Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in the Guide for Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off in as many as 35% of all fires. While fire alarm systems are designed to provide early warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons:

Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in or behind walls, on roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level or floor of a building. A second-floor detector, for example, may not sense a first-floor or basement fire.

Particles of combustion or "smoke" from a developing fire may not reach the sensing chambers of smoke detectors because:

- Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow.
- Smoke particles may become "cold," stratify, and not reach the ceiling or upper walls where detectors are located.
- Smoke particles may be blown away from detectors by air outlets.
- Smoke particles may be drawn into air returns before reaching the detector.

The amount of "smoke" present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.

Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast-flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.

Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially in bedrooms), smoking in bed, and violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).

While a fire alarm system may lower insurance rates, it is not a substitute for fire insurance!

Heat detectors do not sense particles of combustion and alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Rate-of-rise heat detectors may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. *Heat detectors are designed to protect property, not life.*

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, crippling its ability to report a fire.

Audible warning devices such as bells may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. Any warning device may fail to alert people with a disability or those who have recently consumed drugs, alcohol or medication. Please note that:

- Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
- Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercise to make people aware of fire alarm signals and instruct them on the proper reaction to alarm signals.
- In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

A fire alarm system will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time and only if the batteries have been properly maintained and replaced regularly.

Equipment used in the system may not be technically compatible with the control. It is essential to use only equipment listed for service with your control panel.

Telephone lines needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. For added protection against telephone line failure, backup radio transmission systems are recommended.

The most common cause of fire alarm malfunction is inadequate maintenance. To keep the entire fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations, and UL and NFPA standards. At a minimum, the requirements of Chapter 7 of NFPA 72 shall be followed. Environments with large amounts of dust, dirt or high air velocity require more frequent maintenance. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be scheduled monthly or as required by National and/or local fire codes and should be performed by authorized professional fire alarm installers only. Adequate written records of all inspections should be kept.

Installation Precautions

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until this manual is read and understood.

CAUTION - *System Reacceptance Test after Software Changes*. To ensure proper system operation, this product must be tested in accordance with NFPA 72 Chapter 7 after any programming operation or change in site-specific software. Reacceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring.

All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified.

This system meets NFPA requirements for operation at 0-49° C/32-120° F and at a relative humidity of 85% RH (non-condensing) at 30° C/86° F. However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and all peripherals be installed in an environment with a nominal room temperature of 15-27° C/60-80° F.

Verify that wire sizes are adequate for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage.

Adherence to the following will aid in problem-free installation with long-term reliability:

Like all solid state electronic devices, this system may operate erratically or can be damaged when subjected to lightning-induced transients. Although no system is completely immune from lightning transients and interferences, proper grounding will reduce susceptibility. *Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes.* Consult with the Technical Services Department if any problems are anticipated or encountered.

Disconnect AC power and batteries prior to removing or inserting circuit boards. Failure to do so can damage circuits.

Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, and printed circuit board location.

Do not tighten screw terminals more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal.

Though designed to last many years, system components can fail at any time. This system contains static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static-suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. FACP operation and reliability depend upon proper installation by authorized personnel.

FCC Warning

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for class A computing device pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his own expense.

Canadian Requirements

This digital apparatus does not exceed the Class A limits for radiation noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

This Page Intentionally Left Blank

Table of Contents

Introduction

Scope	8
Overview	8
Devices	8
Isolator Module	8
Monitor Modules	8
Control Modules	8
Relay Modules	8
Intelligent Detectors	9
Manual Pull Station	9
300 Series Addressable Devices	9
Reference Documentation	10
SLC Performance	11
Surge Suppression	11

Wiring Requirements

Wire Sizing	12
Measuring Resistance & Length	13
Two-Wire SLC - Style 4 (Class B)	13
Loop Resistance	13
Total Wire Length	13
Four-Wire SLC Style 6 & 7 (Class A)	14
Loop Resistance	14
Total Wire Length	14
Shield Wire Termination	15
Control Panel Terminal Blocks	16
MS-9200	16
MS-9600	16
MS-9200UD	17

Non-Isolated Circuits

Overview	18
NFPA Style 4 SLC	18
NFPA Style 6 SLC	19

SLC Circuits with Isolators

Fault Isolator Module - I300	20
Isolating an SLC Branch	20
Wiring an Isolator Module	20
NFPA Style 4 SLC Using an I300 Module	21
NFPA Style 6 SLC Using an I300 Module	22
NFPA Style 7 SLC Using an I300 Module	23

Monitor Modules

Descriptions	24
MMF-300 Monitor Module	24
MMF-302 Monitor Module	24
MDF-300 Dual Monitor Module	24
MMF-301 Monitor Module	24
MMF-300-10	25
MMF-302-6	26
Installation	27
Setting an SLC address for a Single Point Module	27

Setting an SLC address for a Multi-Point Module	27
MMF-300 Wiring Diagrams	28
Wiring a NFPA Style B IDC with an MMF-300	28
Wiring a NFPA Style D IDC with an MMF-300	29
MMF-300-10 Wiring Diagrams.....	30
Wiring a NFPA Style B IDC with an MMF-300-10.....	30
Wiring a NFPA Style D IDC with an MMF-300-10.....	31
MDF-300 Wiring Diagrams.....	32
Wiring a NFPA Style B IDC with an MDF-300	32
MMF-302 Wiring Diagrams	33
Wiring a NFPA Style B IDC with an MMF-302	33
Wiring a NFPA Style D IDC with an MMF-302	34
MMF-302-6 Wiring Diagrams.....	35
Wiring a NFPA Style B IDC with an MMF-302-6.....	35
Wiring a NFPA Style D IDC with an MMF-302-6.....	36
 Control Modules	
Description	37
CMF-300 Installation	37
Setting an SLC address for an CMF-300 Module.....	37
Wiring a Notification Appliance Circuit (NAC) with an CMF-300	37
Wiring an CMF-300 Module	38
Wiring a Style Y NAC (Two-Wire).....	38
Wiring a Style Z NAC (Four-Wire).....	39
CMF-300-6 Installation.....	40
Cabinet Installation	40
Setting an SLC address for an CMF-300-6 Module	40
Setting NACs as Style Y or Style Z	40
Disabling Unused Module Addresses	40
Short Circuit Protection.....	40
Features Not Supported.....	41
Circuit Board Information	41
Wiring an CMF-300-6 Module.....	42
Wiring a Style Y NAC (Two-Wire).....	42
Wiring a Style Z NAC (Four-Wire).....	43
 Relay Modules	
Description	44
CRF-300 Installation & Wiring	44
Setting an SLC address for a CRF-300 Module.....	44
Wiring a CRF-300 Module (Form-C Relay).....	44
CRF-300-6 Circuit Board Information	45
CRF-300-6 Installation & Wiring	46
Cabinet Installation	46
Setting an SLC address for a CRF-300-6 Module	46
Disabling Unused Module Addresses	46
Wiring a CRF-300-6 Module (Form-C Relay)	46
 Intelligent Detector Bases	
Description	47
Installation.....	47
Setting the Detector Address.....	47
Wiring a Detector Base	47
 Addressable Manual Pull Station	
Description	48

Installation	48
Setting an SLC address	48
Wiring a Manual Pull Station.....	48
Appendix A: Power Considerations	
Supplying Power to 24 VDC Detectors	49
Resistance and Size	49
Supervising 24 VDC Power	50
Supervising 24 VDC Power to Notification Appliances.....	51
Style Y NAC Power Wiring.....	51
Style Z NAC Power Wiring	52
Appendix B: Surge Suppression	
Introduction	53
Installation	53
Wiring Diagram for MS-9200.....	54
DTK-2LVLP-F Connections	54
PLP-42N Connections	54
SLCP-030 Connections	54
Wiring Diagram for MS-9600 and MS-9200UD	55
DTK-2LVLP-F Connections	55
PLP-42N Connections	55
SLCP-030 Connections	55

Introduction

Scope

This document describes the operation, installation and wiring of various Signaling Line Circuit (SLC) devices when used with the Fire•Lite MS-9200/MS-9200E, the Fire•Lite MS-9600/MS-9600E, and the Fire•Lite MS-9200UD/MS-9200UDE control panels. It also provides basic information that applies to Fire•Lite SLC loops in general, such as the branch resistance measurements.

Note: Any reference in this manual to the MS-9200, MS-9200UD or MS-9600 includes the MS-9200E, MS-9200UDE or MS-9600E, respectively.

Additional information about the specific control panel and the modules and detectors referenced in this document can be found in the respective installation manual as listed in Table 1, “Reference Documentation,” on page 10.

Overview

Communication between the control panel and intelligent addressable monitor and control devices takes place through a Signaling Line Circuit (SLC), which can be wired to meet the requirements of NFPA Style 4, Style 6, or Style 7.

Devices

Isolator Module

The **I300** Isolator Module permits a zone of detectors and modules to be fault isolated from the remainder of the SLC loop, allowing critical components to function in the event of a circuit fault. Isolator modules are required to meet the requirements of an NFPA Style 7 circuit.

Monitor Modules

Addressable modules that allow the control panel to monitor entire circuits of conventional alarm initiating devices, such as manual pull stations, smoke detectors, heat detectors, waterflow and supervisory devices.

MMF-300 - Monitors a Style B (Class B) or Style D (Class A) circuit of dry-contact input devices.

MMF-300-10 - Monitors ten (10) Style B (Class B) or five (5) Style D (Class A) normally open contact device circuits.

MMF-301 - Same as the MMF-300 except offered in a smaller package for mounting with Style B wired devices. This module does not have an LED.

MMF-302 - Monitors a single IDC of two-wire smoke detectors.

MMF-302-6 - An addressable module that provides an interface between the control panel and six (6) Style B (Class B) or three (3) Style D (Class A) IDCs of two-wire smoke detectors.

MDF-300 - Similar to MMF-300, but provides for two independent Style B IDCs.

Control Modules

Through the **CMF-300** addressable control module, the control panel can selectively activate a Notification Appliance Circuit (NAC).

CMF-300-6 - Similar in operation to the CMF-300, except it can activate six (6) Style Y (Class B) or three (3) Style Z (Class A) NACs.

Relay Modules

The **CRF-300** addressable relay module provides the control panel with a dry-contact output for activating a variety of auxiliary devices.

CRF-300-6 - Similar in operation to the CRF-300, except it provides six (6) Form-C relays.

Intelligent Detectors

AD350 - A multicriteria smoke sensor that combines a photoelectric sensing chamber and 135°F (57.2°C) fixed temperature heat detection. The sensor uses addressable communication to transmit smoke density and other information to the control panel. It adjusts its detection parameters and alarm threshold depending on the ambient conditions it samples in its environment.

AD355 - A multicriteria smoke sensor that combines a photoelectric sensing chamber and 135°F (57.2°C) fixed temperature heat detection. The sensor uses addressable communication to transmit smoke density and other information to the control panel. It adjusts its detection parameters and alarm threshold depending on the ambient conditions it samples in its environment.

CP350 - An addressable ionization smoke detector which measures the level of combustion products in its chamber using the 'ionization principle.'

CP355 - An addressable ionization smoke detector which measures the level of combustion products in its chamber using the 'ionization principle.'

D350P - An addressable photoelectric duct detector. The **D350RP** includes an alarm relay.

D350PL -An addressable low flow photoelectric duct detector (**D350PLA** for Canada). The **D350RPL** includes an alarm relay (**D350RPLA** for Canada).

H350¹ - An addressable detector using a thermistor sensing circuit for fast response. **H350R** incorporates a thermal rate of rise of 15°F (9.4°C)/minute.

H355¹ - An addressable 135° fixed temperature heat detector using a thermistor sensing circuit for fast response. **H355R** incorporates a thermal rate of rise of 15° F (9.4° C)/minute.

H355HT¹ - An addressable 190° fixed temperature heat detector using a thermistor sensing circuit for fast response.

SD350 - An addressable photoelectric smoke detector which provides smoke sensing utilizing optical sense technology. The **SD350T** includes a 135° F fixed thermal sensor.

SD355 - An addressable photoelectric smoke detector which provides smoke sensing utilizing optical sense technology. The **SD355T** includes a 135° F fixed thermal sensor.

¹Addressable Heat Detectors are not compatible with the MS-9200(E).

Manual Pull Station

The **BG-12LX** is a dual-action pull station that, when activated, provides an addressable identification and its location to the control panel. An addressable monitor module is mounted inside the pull station to facilitate servicing and replacement.

300 Series Addressable Devices

Fire•Lite's 300 series of addressable devices are fully compatible with the MS-9200, MS-9200UD and MS-9600 FACPs. The devices must be configured for CLIP (Classic Loop Interface Protocol) Mode operation. The address of 300 series devices cannot be set above 99. Compatible devices include:

- SD300 Photo
- SD300T Photo w/Thermal
- CP300 Ionization
- BG-10LX Pull Station
- M300 Monitor Module
- M301 Mini Monitor Module
- M302 2-wire Monitor Module
- C304 Control/Relay Module

Reference Documentation

The table below accommodates a list of document sources containing additional information regarding the devices used on a Signaling Line Circuit:

For information on...	Refer to...	Part Number
MS-9200/MS-9200E	Instruction Manual	51003
MS-9600/MS-9600E	Instruction Manual	51335
MS-9200UD/MS-9200UDE	Instruction Manual	51906
Compatible Devices	Device Compatibility Document	15384
BG-12LX Pull Station	Installation Instructions	51094
MMF-300 Monitor Module	Installation Instructions	F300-02-00
MMF-300-10 Monitor Module	Installation Instructions	F300-20-00
MMF-301 Mini Monitor Module	Installation Instructions	F300-05-00
MMF-302 Monitor Module	Installation Instructions	F300-03-00
MMF-302-6 Interface Module	Installation Instructions	F300-22-00
MDF-300 Dual Monitor Module	Installation Instructions	F300-09-00
CMF-300 Control Module	Installation Instructions	F300-07-00
CMF-300-6 Control Module	Installation Instructions	F300-21-00
CRF-300 Relay Module	Installation Instructions	F300-04-00
CRF-300-6 Relay Module	Installation Instructions	F300-19-00
I300 Isolator Module	Installation Instructions	F300-06-00
AD350 Multicriteria Detector	Installation Instructions	F300-17-00
AD355 Multicriteria Detector	Installation Instructions	F300-24-00
SD350 & SD350T Photo Detector	Installation Instructions	F300-14-00
SD355 & SD355T Photo Detector	Installation Instructions	F300-24-00
CP350 Ionization Detector	Installation Instructions	F300-15-00
CP355 Ionization Detector	Installation Instructions	F300-23-00
H350 Heat Detector	Installation Instructions	F300-12-00
H350R Heat Detector w/ROR	Installation Instructions	F300-13-00
H355 Heat Detector (135°)	Installation Instructions	F300-25-00
H355R Heat Detector w/ROR	Installation Instructions	F300-25-00
H355HT Heat Detector (190°)	Installation Instructions	F300-25-00
D350P Duct Detector	Installation Instructions	F300-10-00
D350PL(A) Duct Detector - low flow	Installation Instructions	F300-27-00
D350RP Duct Detector w/Relay	Installation Instructions	F300-11-00
D350RPL(A) Duct Detector w/Relay - low flow	Installation Instructions	F300-28-00
B350LP Plug-in Detector Base	Installation Instructions	F400-21-00
B501BH Sounder Detector Base	Installation Instructions	D650-03-00
B224RB Relay Detector Base	Installation Instructions	D450-16-01
B224BI Isolator Detector Base	Installation Instructions	D450-15-00

Table 1 Reference Documentation

SLC Performance

SLC performance depends on the type of circuit: Style 4, Style 6, or Style 7.

Note: SLC operation meeting Style 7 requirements isolates each device on the SLC from faults that may occur within other areas of the SLC.

Wiring style requirements are determined by national and local codes. Consult with the Authority Having Jurisdiction before wiring the SLC. The table below (derived from NFPA 72-1999) lists the trouble conditions that result when a fault exists on an SLC.

Type of Fault	Style 4	Style 6	Style 7
Single Open	Trouble	Alarm, Trouble	Alarm, Trouble
Single Ground	Alarm, Trouble (ground)	Alarm, Trouble (ground)	Alarm, Trouble (ground)
Short	Trouble	Trouble	Alarm, Trouble
Short and open	Trouble	Trouble	Trouble
Short and ground	Trouble	Trouble	Alarm, Trouble
Open and ground	Trouble	Alarm, Trouble	Alarm, Trouble
Communications loss	Trouble	Trouble	Trouble
<ul style="list-style-type: none"> • Trouble - The control panel will indicate a trouble condition for this type of fault. • Alarm - The control panel must be able to process an alarm input signal in the presence of this type of fault. 			

Table 2 SLC Performance

Surge Suppression

One primary surge protector must be used with each SLC wiring pair whenever SLC wiring runs outside the building. For detailed information refer to "Appendix B: Surge Suppression" on page 53.

Wiring Requirements

Wire Sizing

The SLC requires use of a specific wire type to ensure proper circuit operation. It is recommended that all SLC wiring be twisted-pair shielded to minimize the effects of electrical interference. Wire size should be no smaller than 18 AWG (0.75 mm²) and no larger than 12 AWG (3.25 mm²) wire.

The wire size depends on the length of the SLC circuit. Use the table below to determine the specific wiring requirements for the SLC.

Wire Requirements	Distance in feet (meters)	Typical Wire Type ¹
Twisted-pair shielded	10,000 (3048)	12 AWG - Belden 9583, Genesis 4410, Signal 98230, WPW D999
	8,000 (2438)	14 AWG - Belden 9581, Genesis 4408, Signal 98430, WPW D995
	4,875 (1486)	16 AWG - Belden 9575, Genesis 4406 & 4606, Signal 98630, WPW D991
	3,225 (983)	18 AWG - Belden 9574, Genesis 4402 & 4602, Signal 98300, WPW D975
Untwisted, unshielded wire, inside conduit or not in conduit.	MS-9200= 1,000 (305) MS-9600= 3,000 (914) MS-9200UD= 3,000 (914)	12 to 18 AWG

1. AWG wire size conversion to metric size: 12 AWG = 3.25mm²; 14 AWG = 2.00mm²; 16 AWG = 1.30mm²; 18 AWG = 0.75mm²

Table 3 Wire Requirements

Measuring Resistance & Length

Two-Wire SLC - Style 4 (Class B)

Loop Resistance

T-tapping of the SLC wiring is permitted for 2-wire Style 4 configurations. The total DC resistance from the control panel to each branch end cannot exceed 40 ohms. Measure DC resistance as detailed and shown below:

1. With power removed, short the termination point of one branch at a time and measure the DC resistance from the beginning of the SLC to the end of that particular branch.
2. Repeat this procedure for all remaining branches in the SLC.

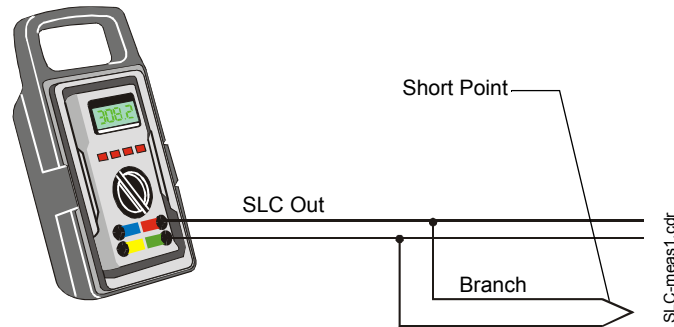


Figure 1 Measuring DC Resistance of a Two-Wire SLC

Total Wire Length

The total wire length of all combined branches of one SLC cannot exceed the limits set forth in each system's instruction manual. Determine the total length in each SLC by summing the wire lengths of all branches of one SLC.

In the following figure, the total length of the SLC is determined by adding the lengths of Branch A plus Branch B plus Branch C.

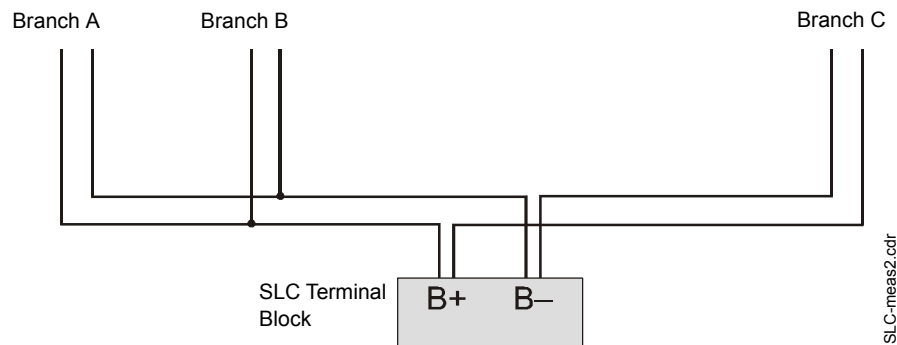


Figure 2 Measuring the Total Wire Length - Two-Wire SLC

Four-Wire SLC Style 6 & 7 (Class A)

Loop Resistance

The total DC resistance of the SLC pair cannot exceed 40 ohms. Measure DC resistance as detailed and shown below.

1. Disconnect the SLC channel B (Out) and SLC channel A (Return) at the control panel.
2. Short the two leads of SLC channel A (Return).
3. Measure the resistance across the SLC channel B (Out) leads.

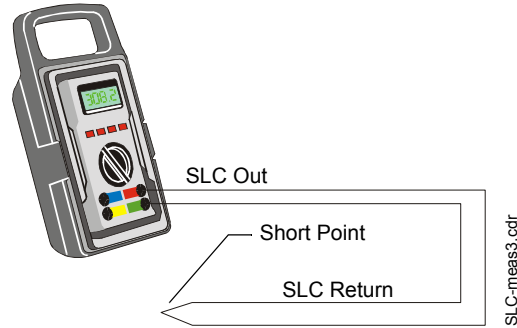


Figure 3 Measuring DC Resistance of a Four-Wire SLC

Total Wire Length

The total wire length in a four-wire SLC cannot exceed the limits set forth in each system’s instruction manual. The figure below identifies the output and return loops from SLC terminal on the control panel:

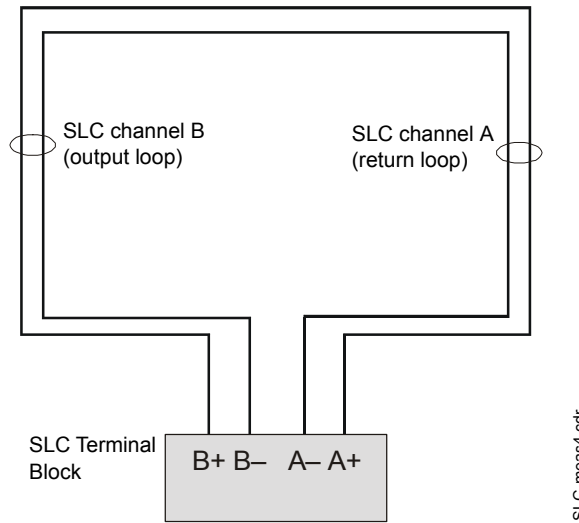


Figure 4 Measuring the Wire Length – Four-Wire SLC

Shield Wire Termination

The drawing below shows the method of proper termination of the shield.

Connect the metal conduit to the cabinet by using the proper connector. Feed the shielded wire through the conduit, into the control box. The shield drain wire must be connected to the “shield” terminal on the SLC terminal block.

Note: Use of good wiring practice consistent with local electrical codes is expected.

CAUTION: Do not let the shield drain wire or the shield foil touch the system cabinet or be connected to earth ground at any point.

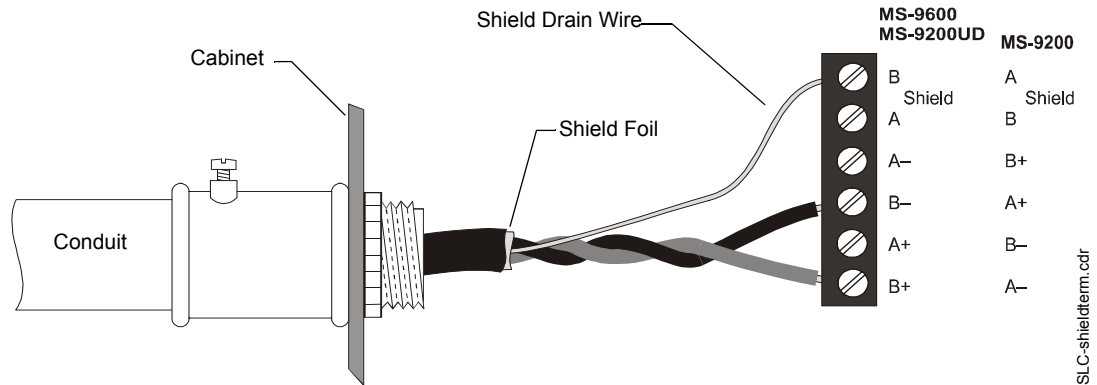


Figure 5 Shield Termination

Control Panel Terminal Blocks

The terminal blocks on the control panel circuit board that concern the SLC circuit are described below. For more information on this subject refer to the control panel's Instruction Manual.

MS-9200

TB4 provides three types of 24 VDC power; Unregulated, Nonresettable and Resettable.

TB6 provides connections for the SLC wiring.

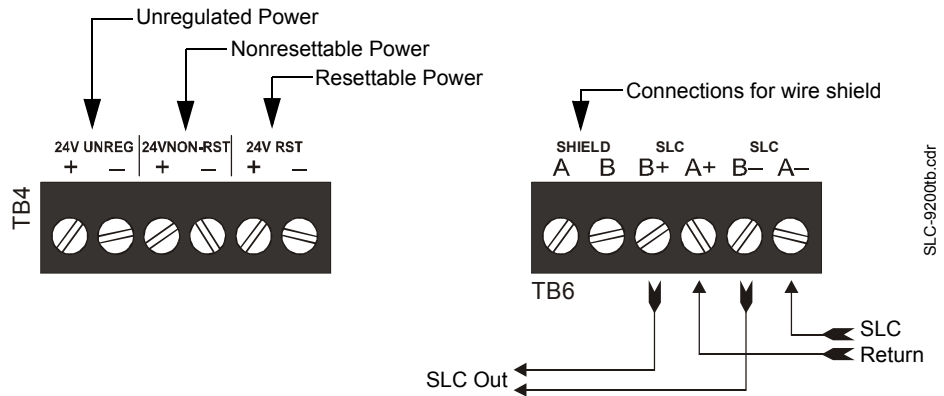


Figure 6 MS-9200 Terminal Blocks

MS-9600

TB3 provides two types of 24 VDC power; Nonresettable and Resettable.

TB8 provides connections for the SLC wiring.

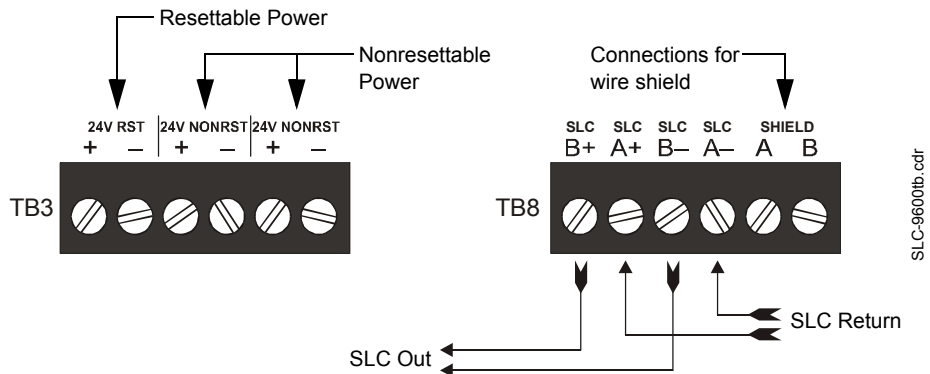


Figure 7 MS-9600 Terminal Blocks

MS-9200UD

TB1 provides two types of 24 VDC power; Nonresettable and Resettable.

TB10 provides connections for the SLC wiring.

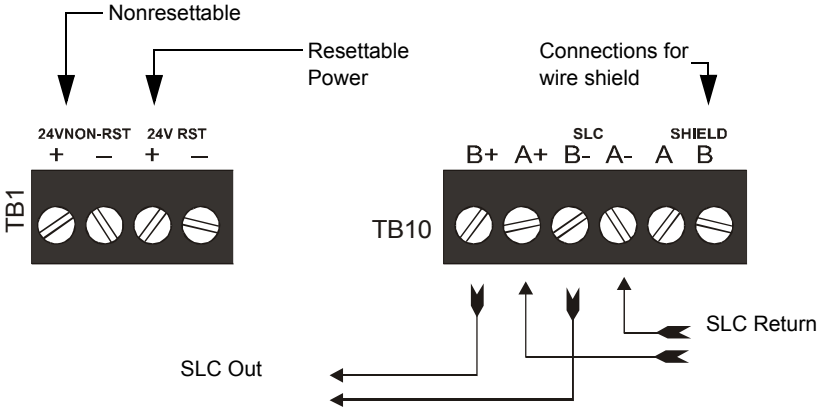


Figure 8 MS-9200UD Terminal Blocks

Non-Isolated Circuits

Overview

This chapter concerns itself with the two styles of circuits that do not require isolation devices:

- NFPA Style 4
- NFPA Style 6

NFPA Style 4 SLC

NFPA Style 4 requirements can be met by using the diagram below.

- T-tapping of the SLC wiring is allowed for Style 4 configuration.

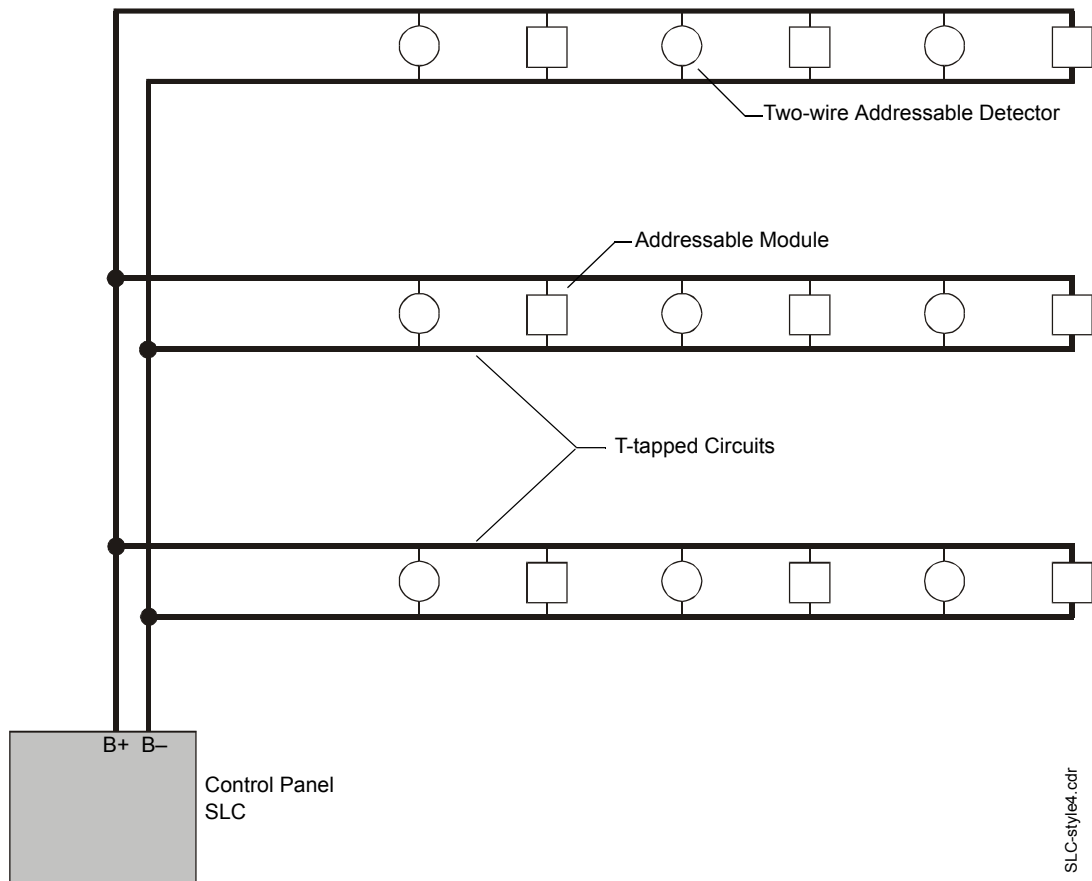


Figure 9 Basic NFPA Style 4 SLC

NFPA Style 6 SLC

NFPA Style 6 requirements can be met by using the diagram below.

- T-tapping of the SLC wiring is NOT allowed for Style 6 configuration.

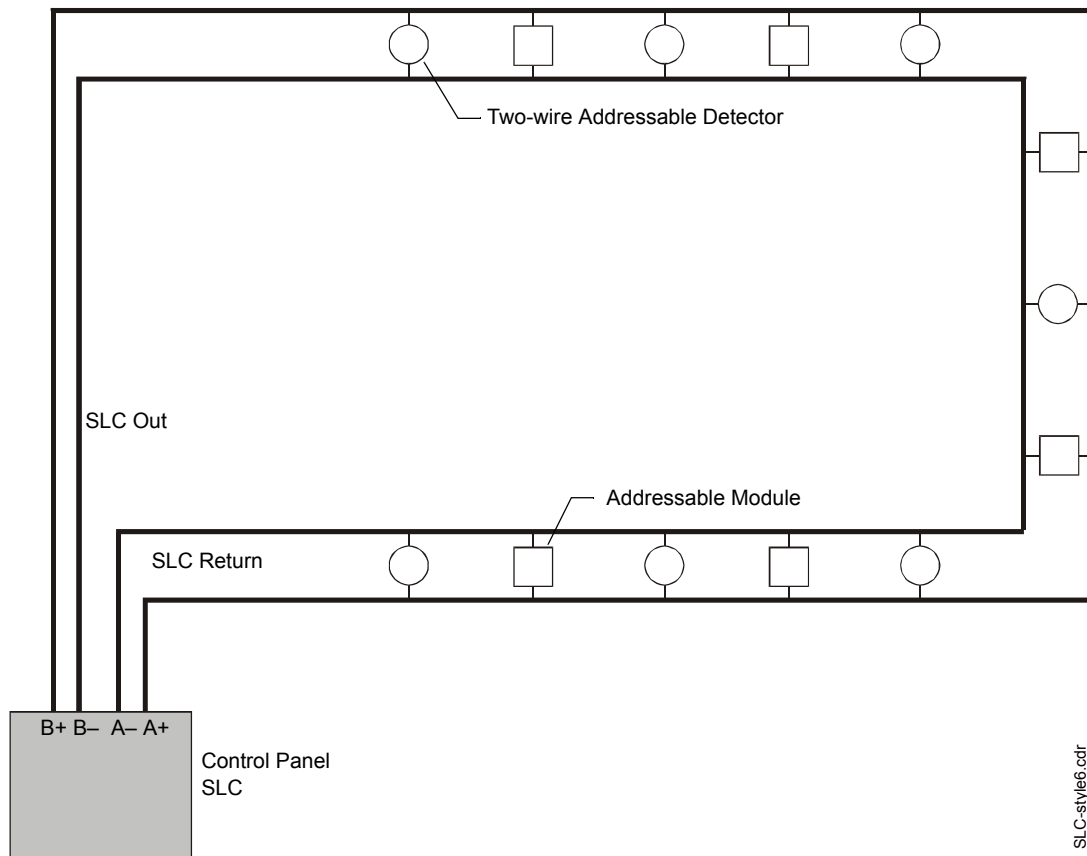


Figure 10 Basic NFPA Style 6 SLC

SLC Circuits with Isolators

Fault Isolator Module - I300

The I300 is used to protect critical elements of the SLC from faults on other SLC branches or segments. A Fault Isolator Module on both sides of a device is required to comply with NFPA Style 7 requirements. A maximum of 25 addressable devices can be connected between isolator Modules.

When more than 100 Isolator Modules are connected to an SLC loop, the address capacity of the loop is reduced by two (2) addresses for every isolator device in excess of 100.

Isolating an SLC Branch

The module continuously monitors the circuit connected to terminals 3(-) and 4(+). Upon power-up, an integral relay is latched on. The module periodically pulses the coil of this relay. A short circuit on the SLC resets the relay. The module detects the short and disconnects the faulted SLC branch or segment by opening the positive side of the SLC (terminal 4). This isolates the faulty branch from the remainder of the loop preventing a communication problem with all other addressable devices on the remaining branches (labeled "Continuation of the SLC" in the figure below). During a fault condition, the control panel registers a trouble condition for each addressable device which is isolated on the SLC segment or branch. Once the fault is removed, the module automatically reapplies power to the SLC branch or segment.

Wiring an Isolator Module

The figure below shows typical wiring of an Isolator Module:


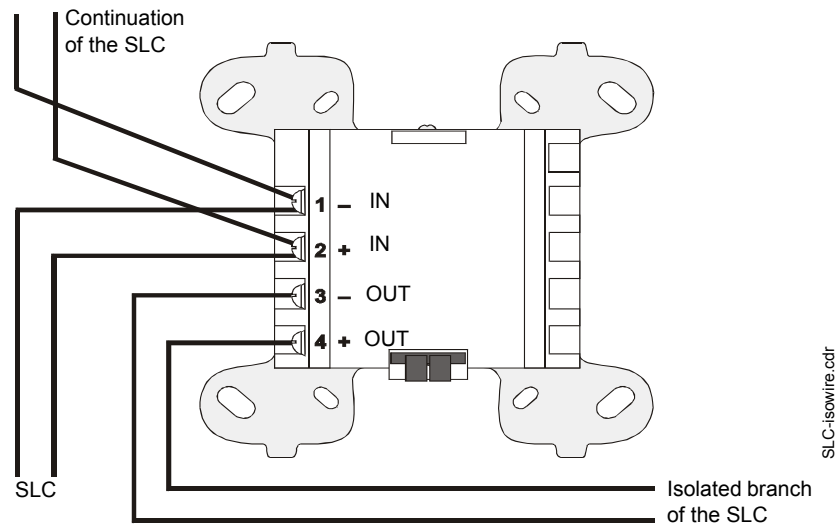


Figure 11 Wiring an I300 Module

NFPA Style 4 SLC Using an I300 Module

A variation of a Style 4 operation using isolator modules to protect each branch of the SLC. Refer to Figure 11 on page 20 for I300 wiring.

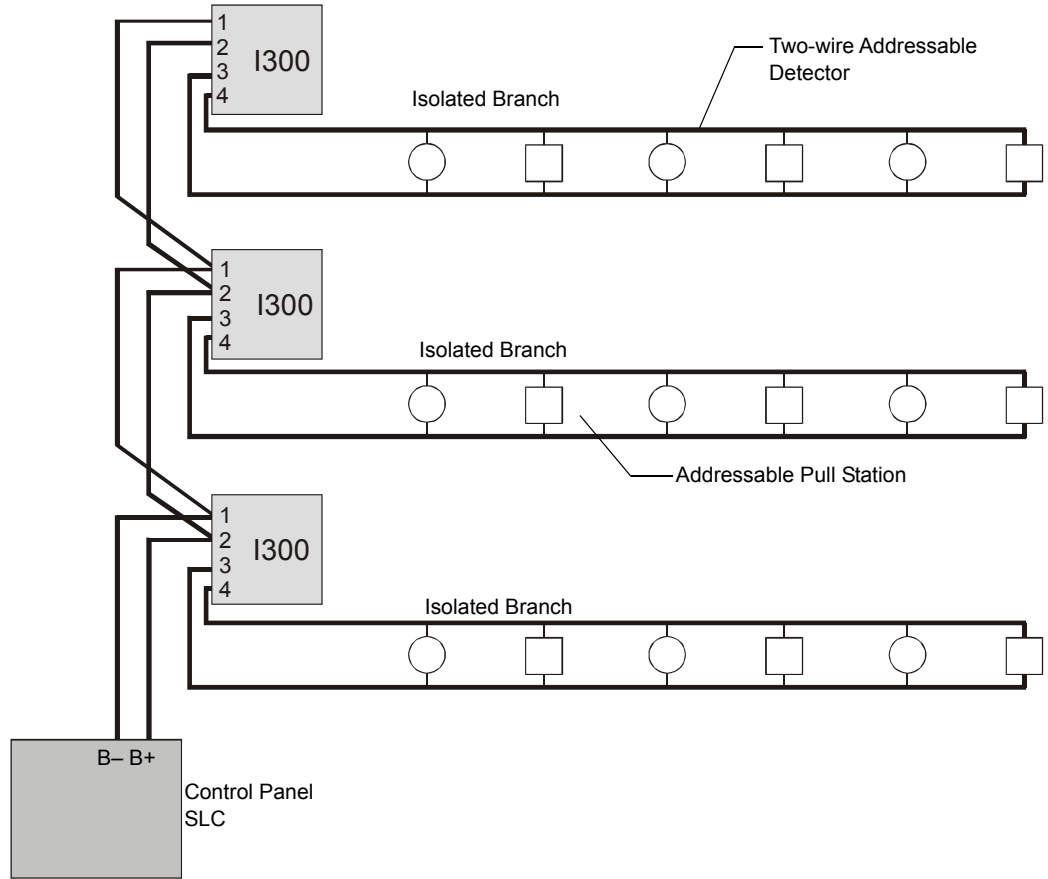

SLC-style4i300.cdr

Figure 12 NFPA Style 4 SLC using I300 modules

NFPA Style 6 SLC Using an I300 Module

A variation of Style 6 operation using isolator modules to protect a section of the SLC. By flanking each group of devices with an I300 fault isolator module each group is protected from faults that may occur in the other groups. For example, a fault in Section B will not effect Sections A & C. The isolator modules on either side of Section B will open the loop. Section A will still operate from power on the SLC Out side and Section C will operate from the SLC Return side.

- A combination of isolator modules and isolator bases may be used.
- T-tapping is NOT allowed within the Style 6 configuration.
- I300 modules shall be within 20 feet (6.1 meters) of device and use metal conduit.

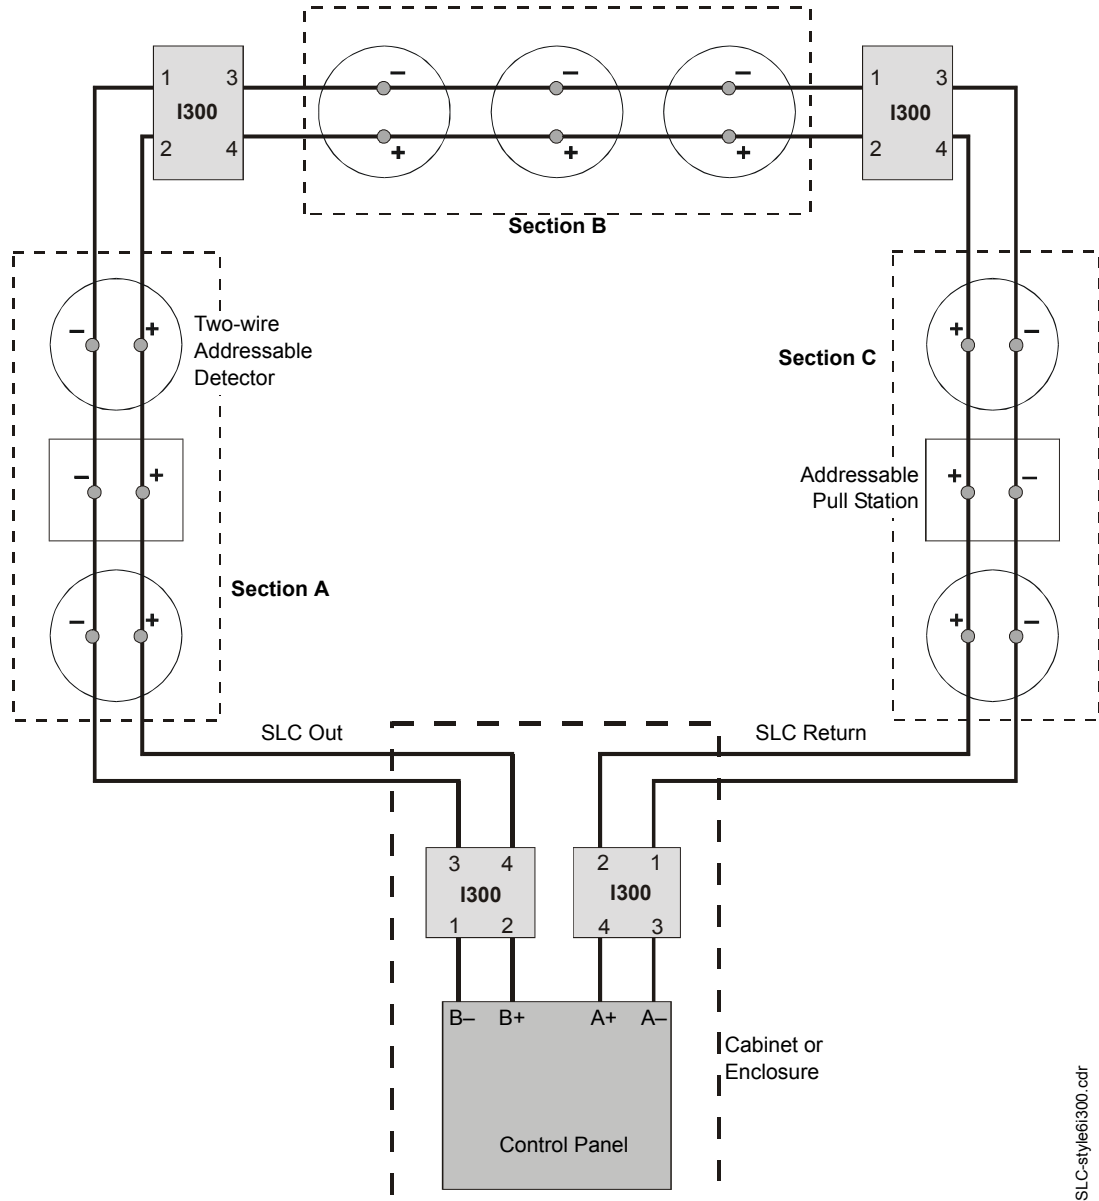


Figure 13 NFPA Style 6 SLC using I300 modules

SLC-style6i300.cdr

NFPA Style 7 SLC Using an I300 Module

Style 7 operation requires using isolator modules before and after each device. Flanking each device with an isolator provides fault protection to all other devices on the loop.

- T-tapping is NOT allowed within the Style 7 wiring configuration.
- When a detector base or pull station is used, install I300 modules on both sides of the device.
- Connections between isolator modules and the device they isolate must be “close nipped” conduit, within 3 feet (91.44 cm).

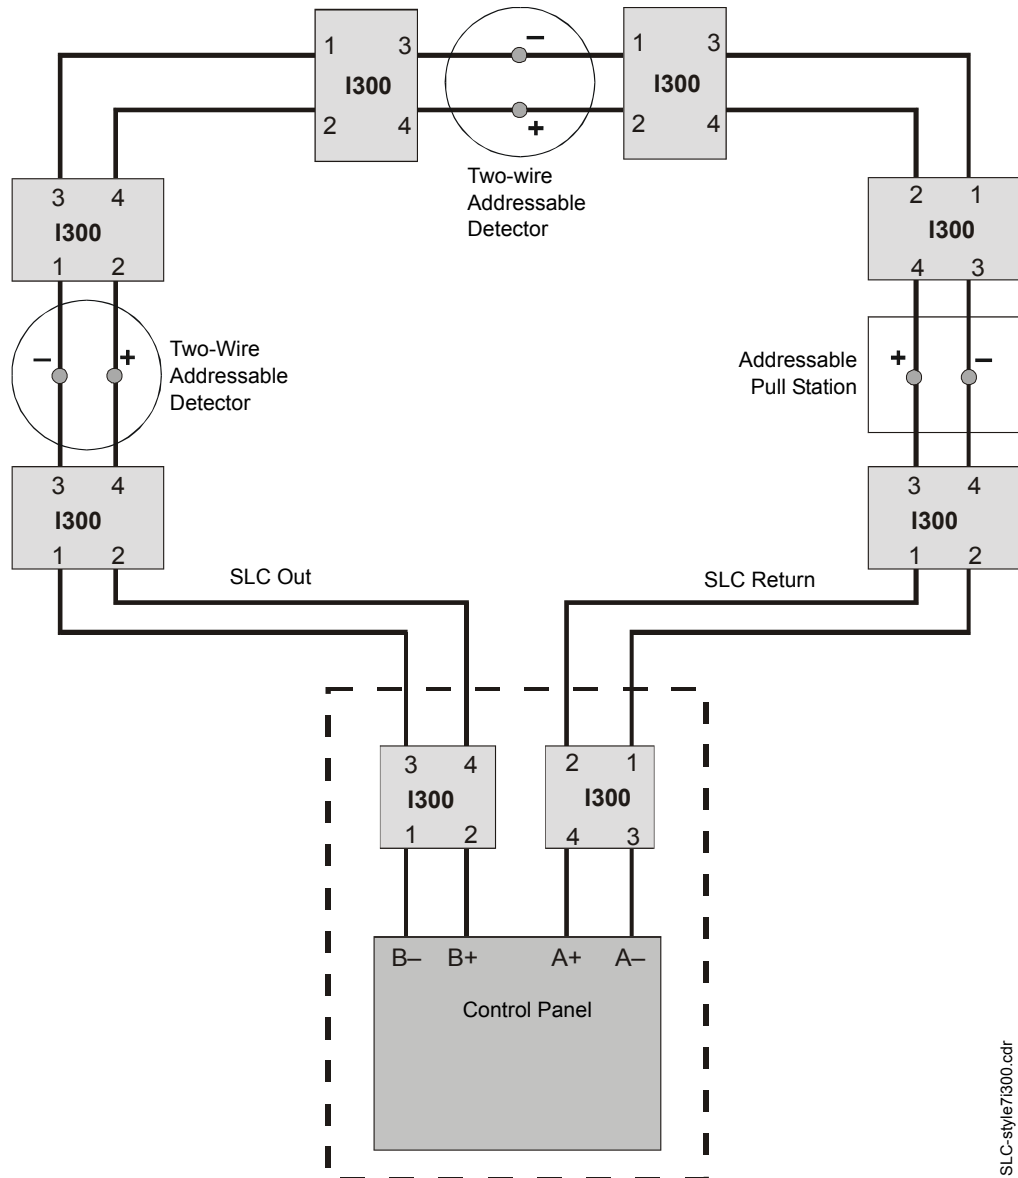


Figure 14 NFPA Style 7 SLC

SLC-style7I300.cdr

Monitor Modules

Descriptions

These addressable modules monitor conventional contact-type alarm initiating devices. You can configure module circuits as an NFPA Style B (Class B) or Style D (Class A) Initiating Device Circuits (IDC). There is no limit to the number of contact-type devices installed on a monitor module circuit.

Note: For more information on the individual module specifications refer to the *Installation Instructions* that are provided with these devices.

MMF-300 Monitor Module

An addressable module that monitors either a Style B (Class B) or Style D (Class A) circuit of dry-contact input devices.

MMF-302 Monitor Module

Similar to the MMF-300, except it is used to monitor a single IDC of UL listed compatible two-wire smoke detectors. Refer to the *Device Compatibility Document*.

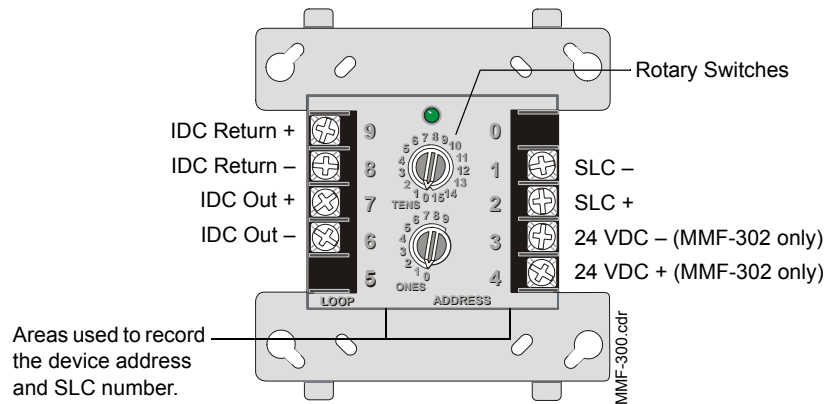


Figure 15 MMF-300 / MMF-302 Modules

MDF-300 Dual Monitor Module

Similar to the MMF-300 but provides for two independent 2-wire IDCs at two separate, consecutive addresses.

MMF-301 Monitor Module

Functionally and electrically identical to an MMF-300, but offered in a smaller package for mounting directly in the electrical box of the Style B (Class B) device being monitored.

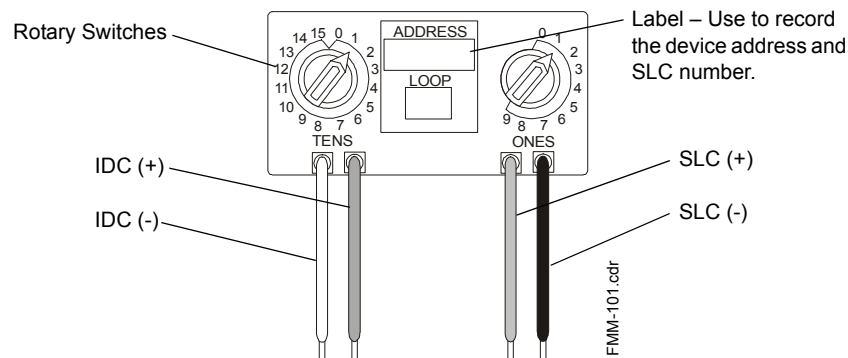


Figure 16 MMF-301 Module

MMF-300-10

A monitor module intended to interface between the FACP and up to ten (10) Style B (Class B) or five (5) Style D (Class A) IDCs containing normally open contact devices.

This type of module is contained in either a BB-2 or BB-6 cabinet. The BB-2 can accommodate up to 2 modules and the BB-6, which requires the CH-6 chassis, can accommodate up to 6 modules.

See the *Installation Instructions* provided with module for proper installation into cabinet.

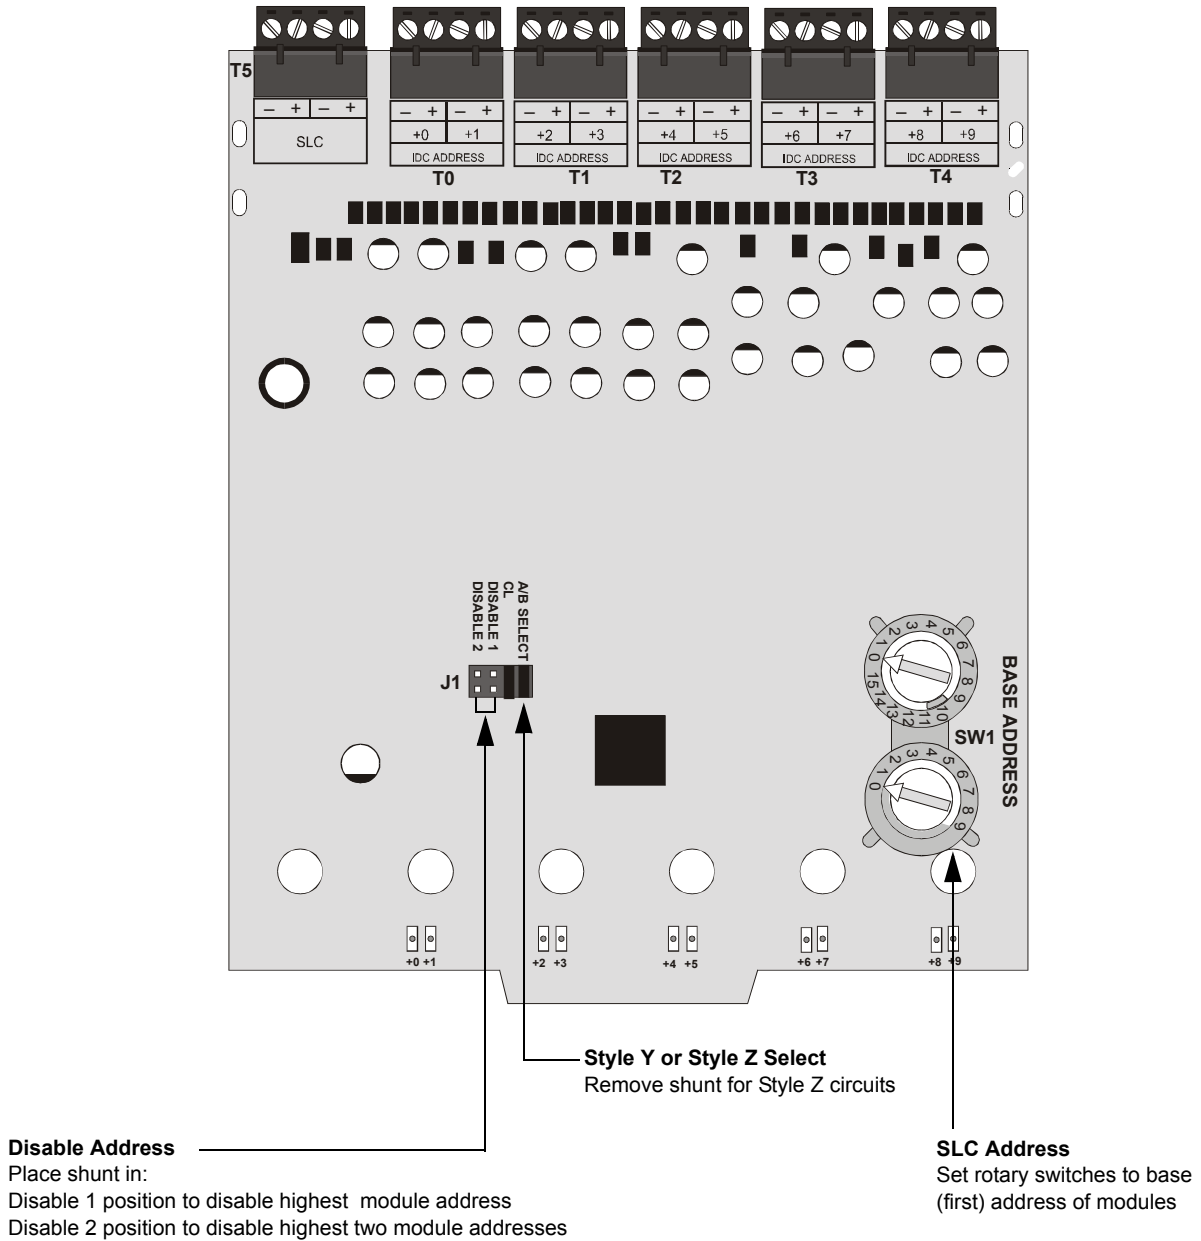


Figure 17 MMF-300-10 Module

MMF-302-6

A monitor module intended to interface between the FACP and a conventional alarm system with up to six (6) Style B (Class B) or three (3) Style D (Class A) IDCs containing normally open contact devices.

This type of module is contained in either a BB-2 or BB-6 cabinet. The BB-2 can accommodate up to 2 modules and the BB-6, which requires the CH-6 chassis, can accommodate up to 6 modules.

See the *Installation Instructions* provided with module for proper installation into cabinet.

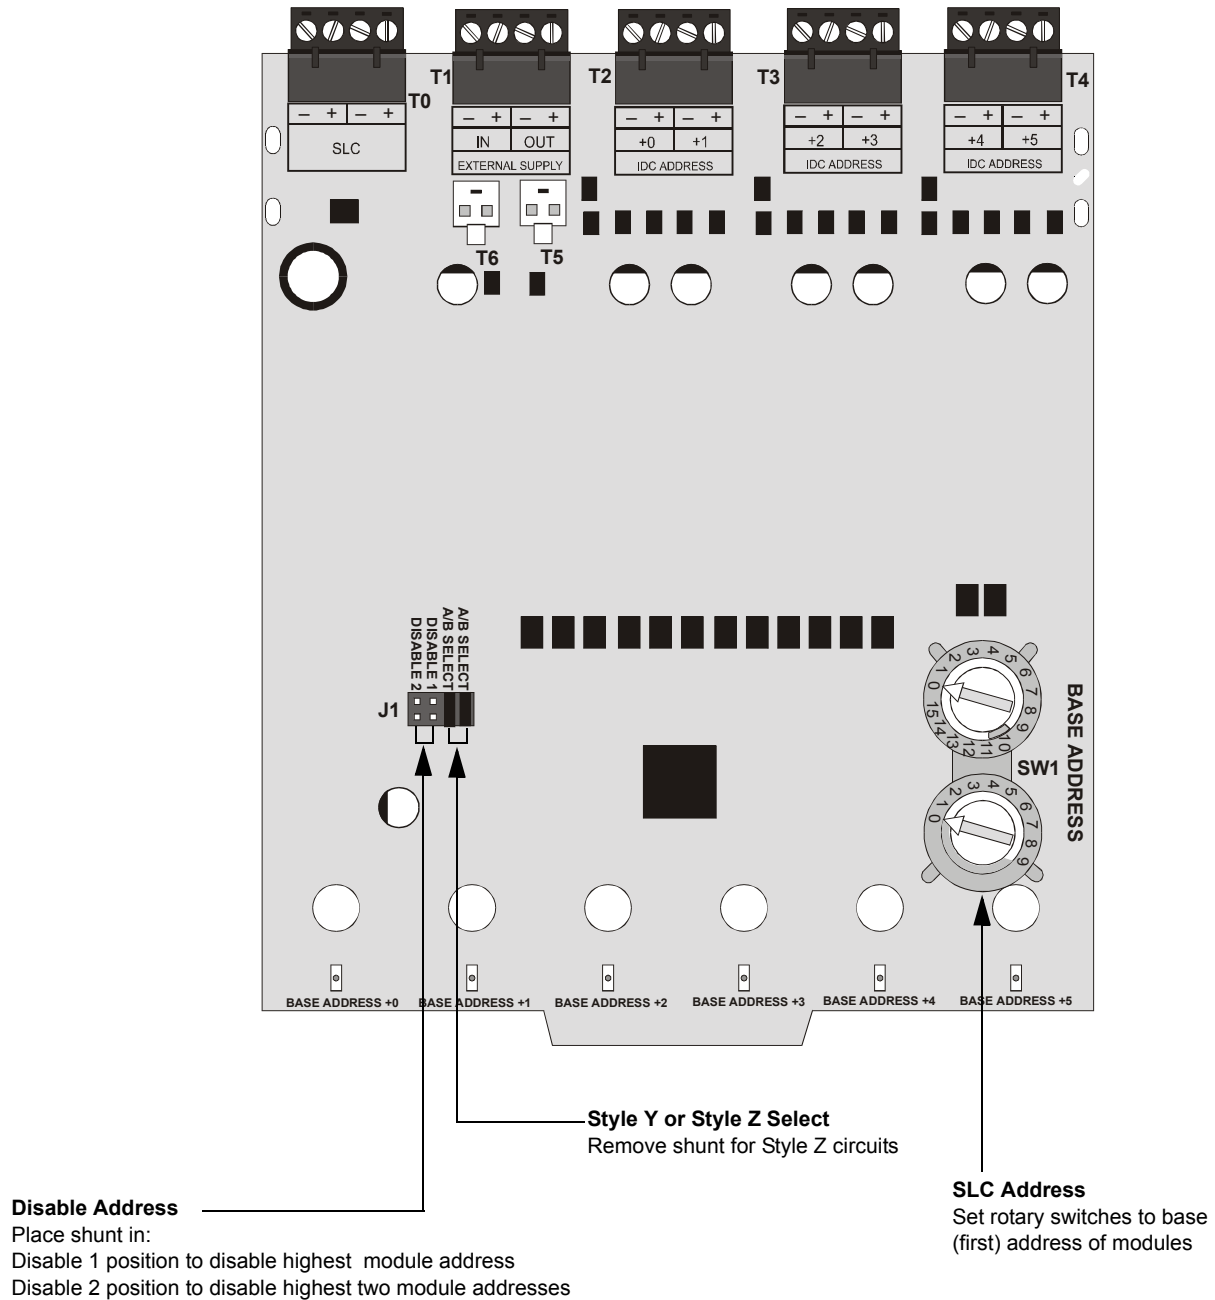


Figure 18 MMF-302-6 Module

Installation

When installing any of these modules DO NOT mix the following services that the IDC provides:

- Fire alarm service
- Automatic and manual waterflow alarm service with normally open contact devices
- Sprinkler supervision with normally open contact devices

Setting an SLC address for a Single Point Module

Each module can be set to one of 159 addresses (01-159) and is factory preset with an address of “00”.

Note: The MS-9200 and MS-9200UD can support module addresses of 01 - 99. The MS-9600 can support module addresses 01 - 159.

To set an SLC address, use a screwdriver to adjust the rotary switches on the module to the desired address. The module below is set at “35”. When finished, mark the address on the module face in the place provided.

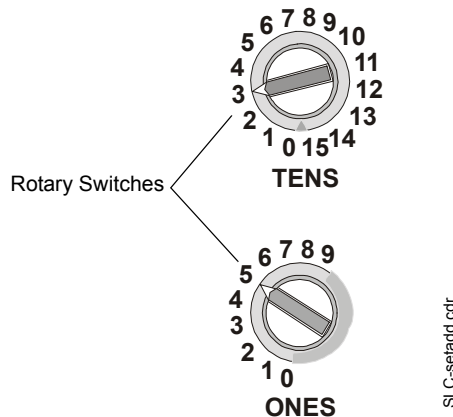


Figure 19 Setting SLC Address on a Single Point Module

Setting an SLC address for a Multi-Point Module

In Class B operation, each MMF-300-10, MMF-302-6, CMF-300-6 and CRF-300-6 module is set to a base address. The remaining module points are automatically assigned to the next higher SLC addresses. For example, if the base address of a MMF-300-10 is set to 28, the next module points will be addressed to 29, 30, 31, 32, 33, 34, 35, 36 and 37.

In Class A operation, alternate module points are paired together, resulting in a total of five module points. For example, if the base address of a MMF-300-10 is set to 28, then 30, 32, 34 and 36 will be automatically assigned to the remaining module points and 29, 31, 33, 35 and 37 are available for use by other modules.

Note: The MS-9200 and MS-9200UD can support module addresses of 01 - 99. The MS-9600 can support module addresses 01 - 159 (the plastic stop located on the Tens switch must be removed to set addresses above 99).

To set an SLC address, use a common screwdriver to adjust the rotary switches on the module to the desired address. The module below is set at “28”.

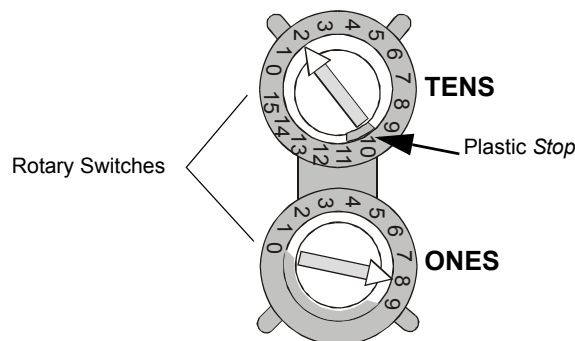


Figure 20 Setting SLC Address on a Multi-Point Module

MMF-300 Wiring Diagrams

Following are wiring diagrams that depict NFPA Style B (Class B) and D (Class A) Initiating Device Circuits (IDCs) using MMF-300 monitor modules.

The Initiating Device Circuit (IDC) is supervised and current-limited to 210 microamperes @ 24 VDC (nominal).

Wiring a NFPA Style B IDC with an MMF-300

Connect the SLC wiring to the module terminals 1 (-) and 2 (+).

Each module takes one address on the SLC. Use the rotary switches on the module to set it to the required SLC address. Refer to "Setting an SLC address for a Single Point Module" on page 27.

The figure below shows typical wiring for a supervised and power-limited NFPA Style B IDC using an MMF-300 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- See "Appendix A: Power Considerations" on page 49 for information on supervising 24 VDC power.

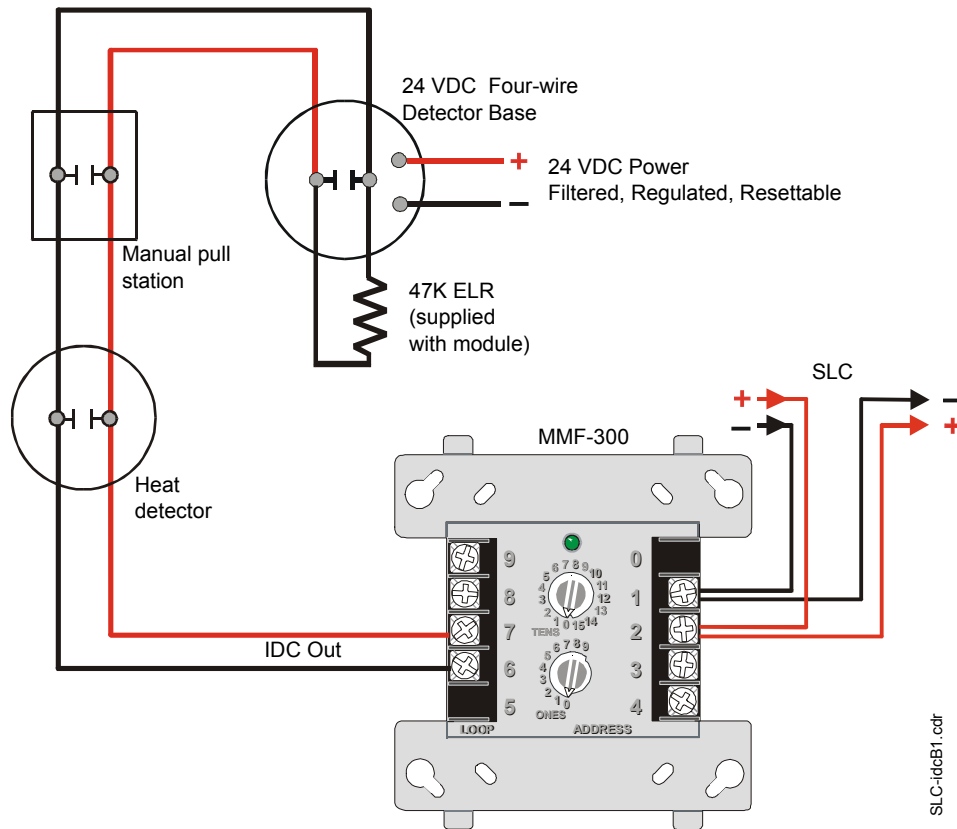


Figure 21 Typical Style B IDC Wiring with MMF-300

SLC-tdcB1.cdr

Wiring a NFPA Style D IDC with an MMF-300

Connect the SLC wiring to the module terminals 1 (-) and 2 (+).

Each module takes one address on the SLC. Use the rotary switches on the module to set it to the required SLC address. Refer to "Setting an SLC address for a Single Point Module" on page 27.

The figure below shows typical wiring for a supervised and power-limited NFPA Style D (Class A) IDC using an MMF-300 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- See "Appendix A: Power Considerations" on page 49 for information on supervising 24 VDC power.

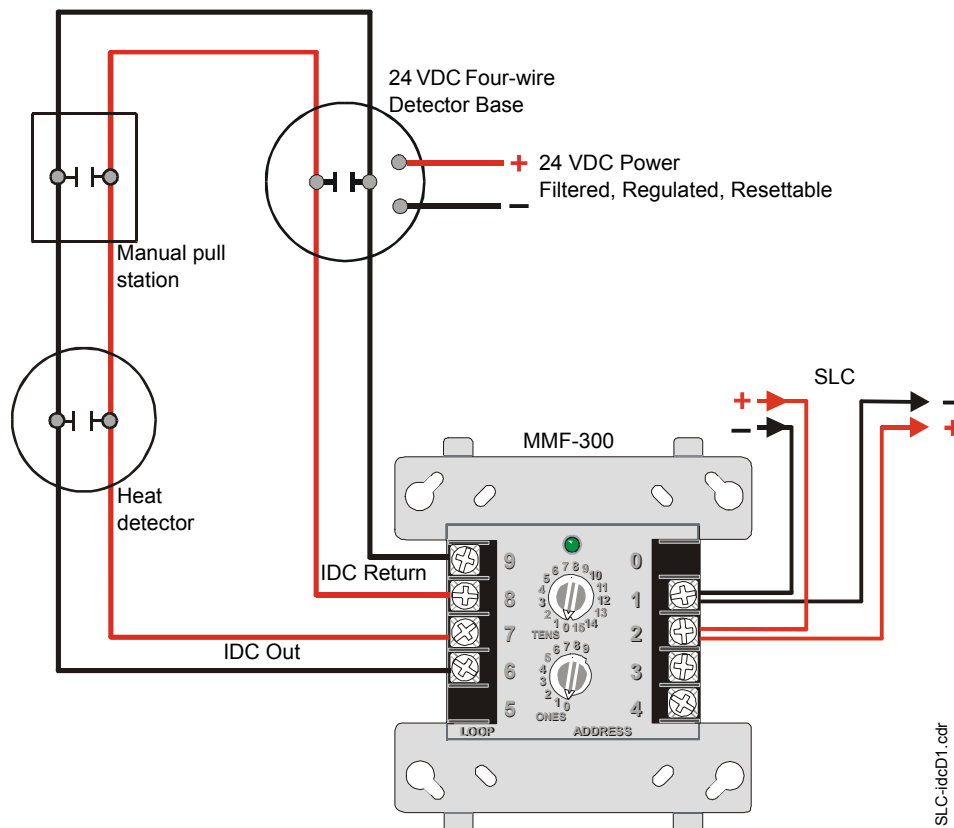


Figure 22 Typical Style D IDC Wiring with MMF-300

SLC-idxD1.cdr

MMF-300-10 Wiring Diagrams

Following are wiring diagrams that depict NFPA Style B (Class B) and D (Class A) Initiating Device Circuits (IDCs) using MMF-300-10 monitor modules.

The Initiating Device Circuit (IDC) is supervised and current-limited to 1.0 milliampere @ 24 VDC (nominal).

Wiring a NFPA Style B IDC with an MMF-300-10

Connect the SLC wiring to the module terminals T5 as shown below.

Use the rotary switches on the module to set the base SLC address. Each module takes ten addresses on the SLC. The remaining module points are automatically assigned to the next nine higher addresses. Refer to "Setting an SLC address for a Multi-Point Module" on page 27.

DO NOT set the lowest address above 150 (90 for the MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.

The figure below shows typical wiring for a supervised and power-limited NFPA Style B IDC using an MMF-300-10 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- See "Appendix A: Power Considerations" on page 49 for information on supervising 24 VDC power.

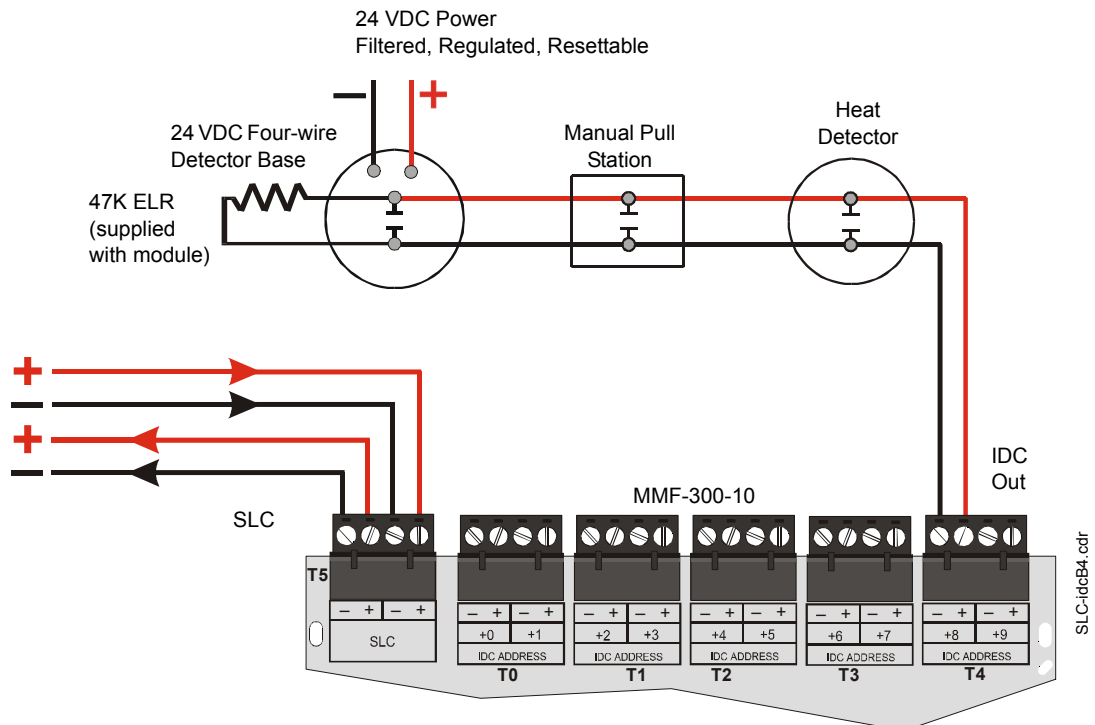


Figure 23 Typical Style B IDC Wiring with MMF-300-10

Wiring a NFPA Style D IDC with an MMF-300-10

Connect the SLC wiring to the module terminals T5 as shown below.

Use the rotary switches on the module to set the base SLC address. Each module takes five alternating addresses on the SLC. The remaining module points are automatically assigned to the next four higher addresses. (Example: 28, 30, 32, 34 and 36). Refer to “Setting an SLC address for a Multi-Point Module” on page 27.

DO NOT set the lowest address above 150 (90 for the MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.

The figure below shows typical wiring for a supervised and power-limited NFPA Style D (Class A) IDC using an MMF-300-10 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- See "Appendix A: Power Considerations" on page 49 for information on supervising 24 VDC power.

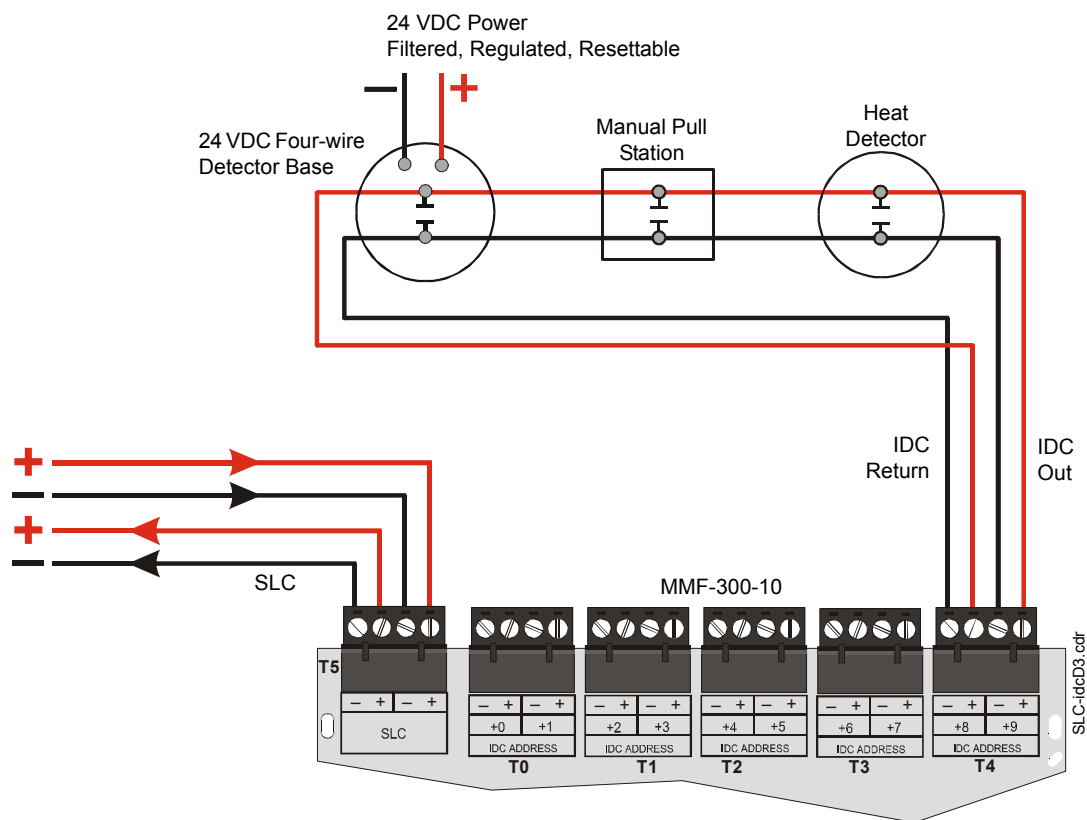


Figure 24 Typical Style D IDC Wiring with MMF-300-10

MDF-300 Wiring Diagrams

Following is a wiring diagrams that depict NFPA Style B (Class B) Initiating Device Circuits (IDCs) using MDF-300 dual monitor module.

Wiring a NFPA Style B IDC with an MDF-300

Connect the SLC wiring to the module terminals 1 (-) and 2 (+).

Use the rotary switches on the module to set it to the SLC address. Each dual module takes two addresses on the SLC. Circuit 'L' corresponds to the address set on the rotary switches, which will be an even number. Circuit 'H' will automatically respond to the next higher address, which will be an odd number. Use caution to avoid duplicate addressing of modules on the system. Refer to "Setting an SLC address for a Single Point Module" on page 27.

Each IDC (H & L) is power limited to 230 microamperes @ 24 VDC.

The figure below shows typical wiring for a supervised and power-limited NFPA Style B IDC using an MDF-300 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- See "Appendix A: Power Considerations" on page 49 for information on supervising 24 VDC power.

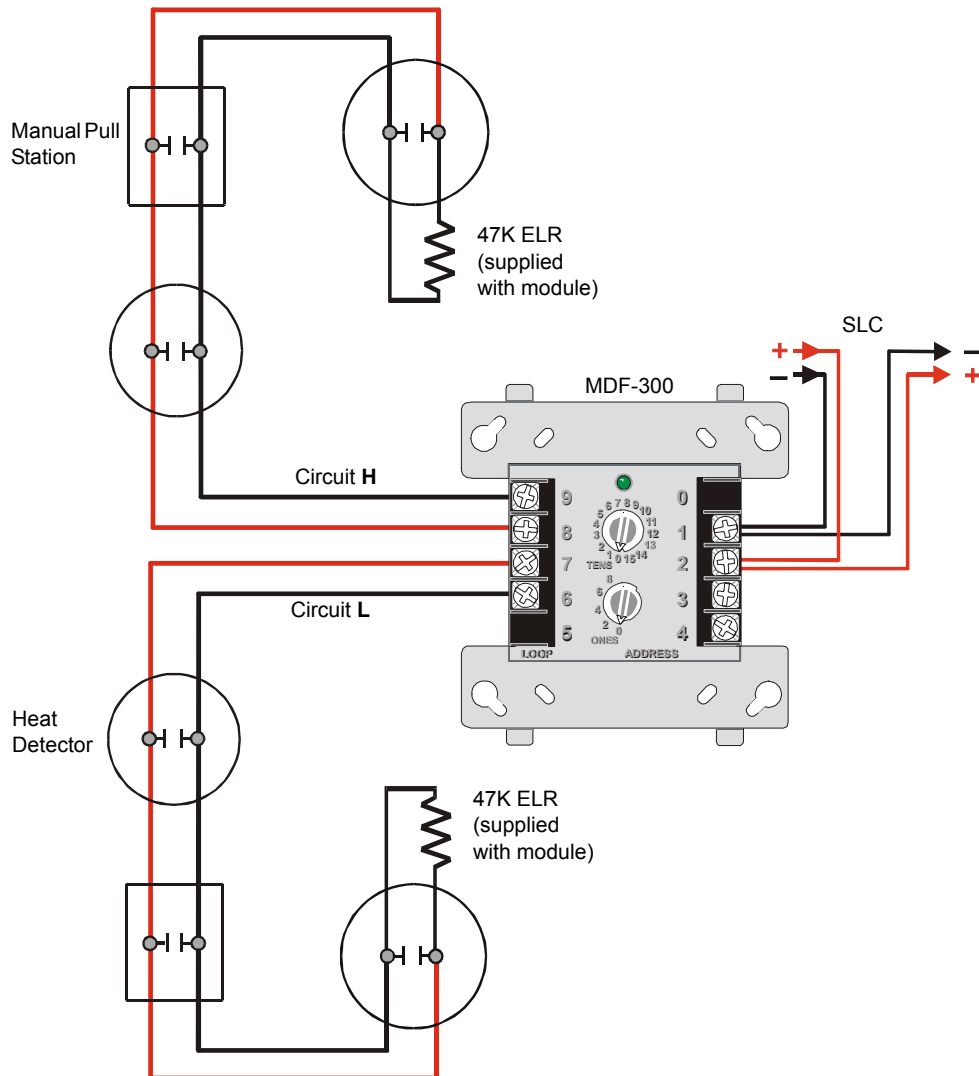


Figure 25 Typical Style B IDC Wiring with MDF-300

SLC-idxB3.cdr

MMF-302 Wiring Diagrams

Following are wiring diagrams that concern NFPA Style B (Class B) and D (Class A) Initiating Device Circuits (IDCs) using MMF-302 monitor modules.

Wiring a NFPA Style B IDC with an MMF-302

Connect the SLC wiring to the module terminals 1 (-) and 2 (+).

Each module takes one address on the SLC. Use the rotary switches on the module to set it to the required SLC address. Refer to “Setting an SLC address for a Single Point Module” on page 27.

The figure below shows typical wiring for a supervised and power-limited NFPA Style B IDC using an MMF-302 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- 24 VDC power must be provided from a UL listed power supply for fire protection use. This power is inherently supervised by the module.
- See "Appendix A: Power Considerations" on page 49 for information on 24 VDC power.

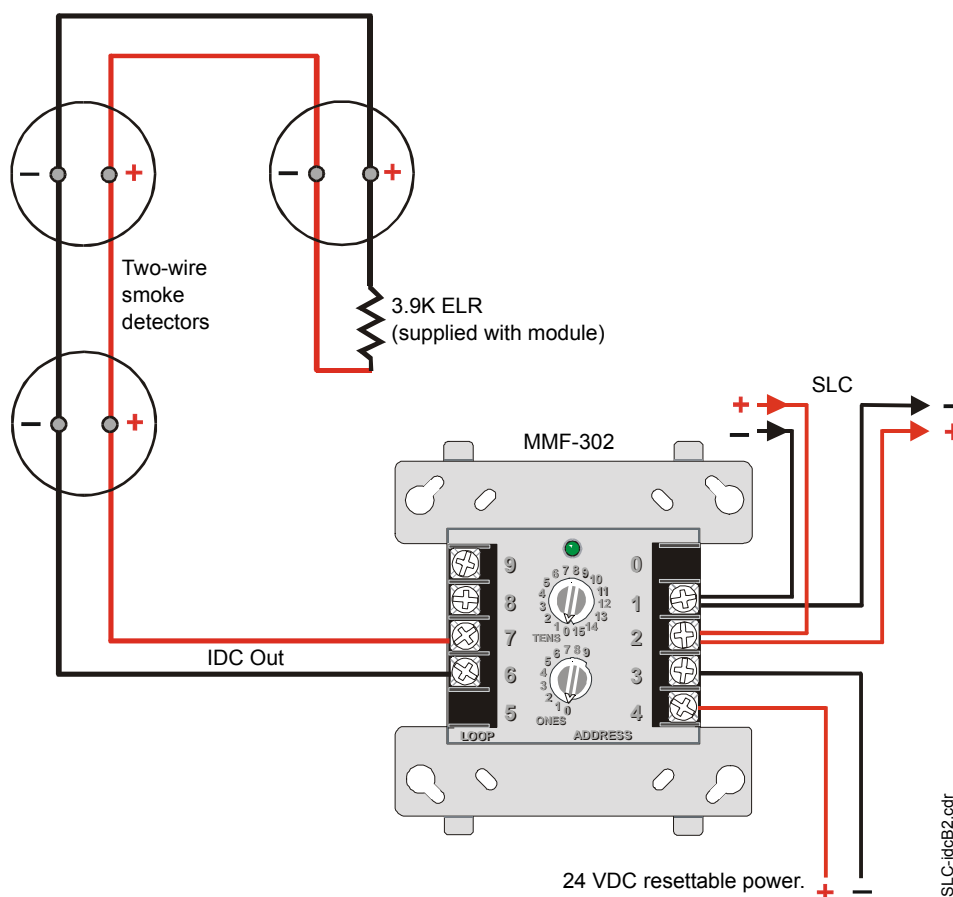


Figure 26 Typical Style B IDC Wiring with MMF-302

SLC-tdcB2.cdr

Wiring a NFPA Style D IDC with an MMF-302

Connect the SLC wiring to the module terminals 1 (-) and 2 (+).

Each module takes one address on the SLC. Use the rotary switches on the module to set it to the required SLC address. Refer to “Setting an SLC address for a Single Point Module” on page 27.

The figure below shows typical wiring for a supervised and power-limited NFPA Style D (Class A) IDC using an MMF-302 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- 24 VDC power must be provided from a UL listed power supply for fire protection use. This power is inherently supervised by the module.
- See "Appendix A: Power Considerations" on page 49 for information on 24 VDC power.

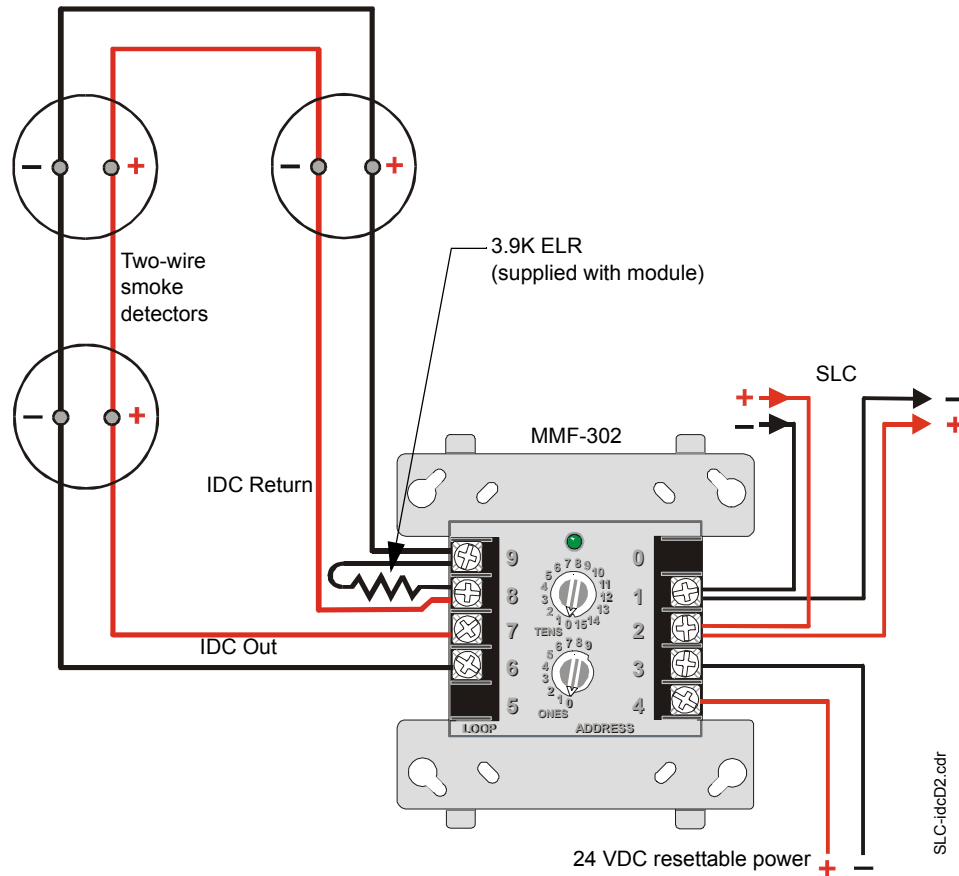


Figure 27 Typical Style D IDC Wiring with MMF-302

MMF-302-6 Wiring Diagrams

Following are wiring diagrams that concern NFPA Style B (Class B) and D (Class A) Initiating Device Circuits (IDCs) using MMF-302-6 monitor modules.

Wiring a NFPA Style B IDC with an MMF-302-6

Connect the SLC wiring to the module terminals T0 as shown below.

Use the rotary switches on the module to set the base SLC address. Each module takes six addresses on the SLC. The remaining module points are automatically assigned to the next five higher addresses. Refer to "Setting an SLC address for a Multi-Point Module" on page 27.

DO NOT set the lowest address above 154 (94 for the MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.

The figure below shows typical wiring for a supervised and power-limited NFPA Style B IDC using an MMF-302-6 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- 24 VDC power must be provided from a UL listed power supply for fire protection use. This power is inherently supervised by the module.
- See "Appendix A: Power Considerations" on page 49 for information on 24 VDC power.

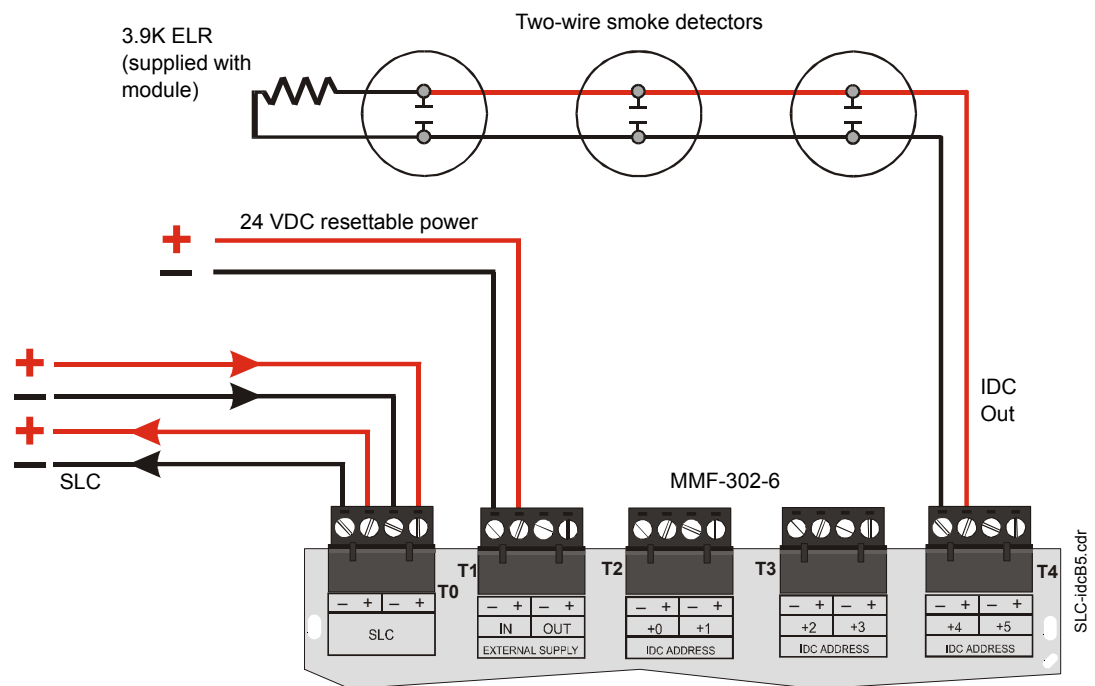


Figure 28 Typical Style B IDC Wiring with MMF-302-6

Wiring a NFPA Style D IDC with an MMF-302-6

Connect the SLC wiring to the module terminals T0 as shown below.

Use the rotary switches on the module to set it to the SLC addresses. Each module takes three alternating addresses on the SLC. The remaining module points are automatically assigned to the next two higher addresses. (Example: 28, 30 and 32). Refer to “Setting an SLC address for a Multi-Point Module” on page 27.

DO NOT set the lowest address above 154 (94 for the MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.

The figure below shows typical wiring for a supervised and power-limited NFPA Style D (Class A) IDC using an MMF-302-6 module.

- Refer to the *Device Compatibility Document* for compatible smoke detectors.
- 24 VDC power must be provided from a UL listed power supply for fire protection use. This power is inherently supervised by the module.
- See "Appendix A: Power Considerations" on page 49 for information on 24 VDC power.

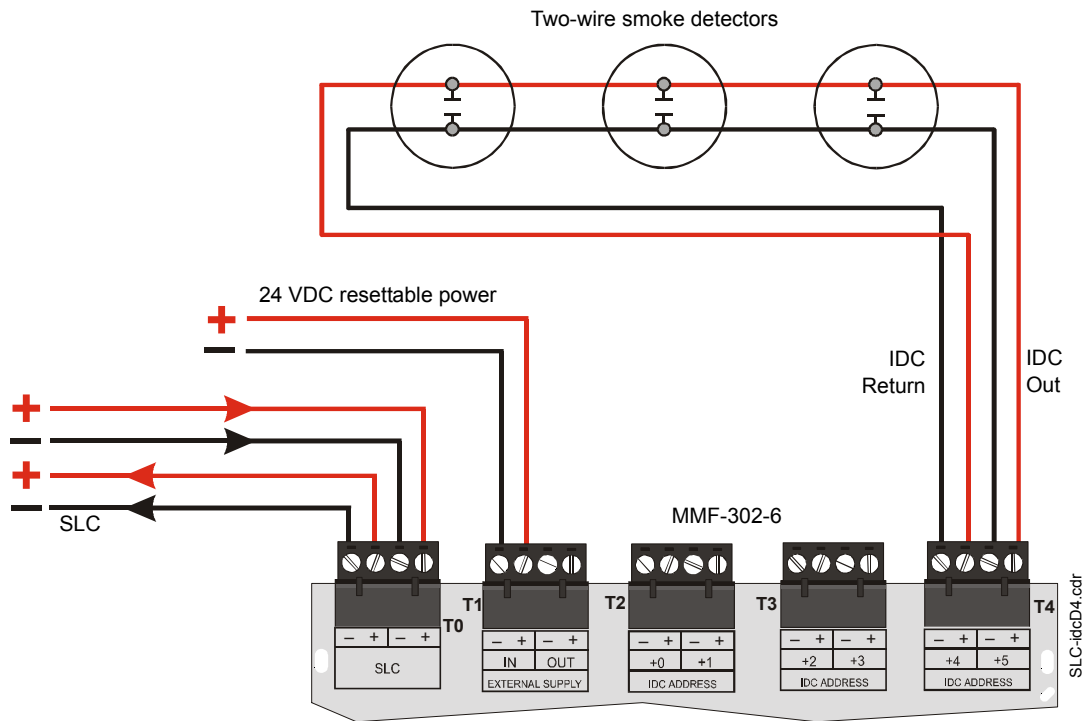


Figure 29 Typical Style D IDC Wiring with MMF-302-6

Control Modules

Description

The CMF-300 and CMF-300-6 modules are addressable modules that can be used for monitoring and switching 24 VDC Notification Appliance Circuit (NAC) power for NFPA Style Y (Class B) and NFPA Style Z (Class A) circuits.

Ratings for the relay contacts on the module are:

Load Description	Application	Maximum Voltage	Current Rating
Resistive	Non-Coded	30 VDC	3.0 A
Resistive	Coded	30 VDC	2.0 A
Resistive	Non-Coded	110 VDC	0.9 A
Resistive	Non-Coded	125 VAC (CMF-300) 70.7 VAC (CMF-300-6)	0.9 A
Inductive (L/R = 5ms)	Coded	30 VDC	0.5 A
Inductive (L/R = 2ms)	Coded	30 VDC	1.0 A
Inductive (PF = 0.35)	Non-Coded	125 VAC (CMF-300) 70.7 VAC (CMF-300-6)	0.5 A

Note: For more information on the module specifications refer to the *Installation Instructions* provided with these devices.

CMF-300 Installation

Setting an SLC address for an CMF-300 Module

Each module is factory preset with an address of "00". To set an SLC address refer to "Setting an SLC address for a Single Point Module" on page 27.

Wiring a Notification Appliance Circuit (NAC) with an CMF-300

The figure below shows the connections to wire a module for powering a 24 VDC NAC:

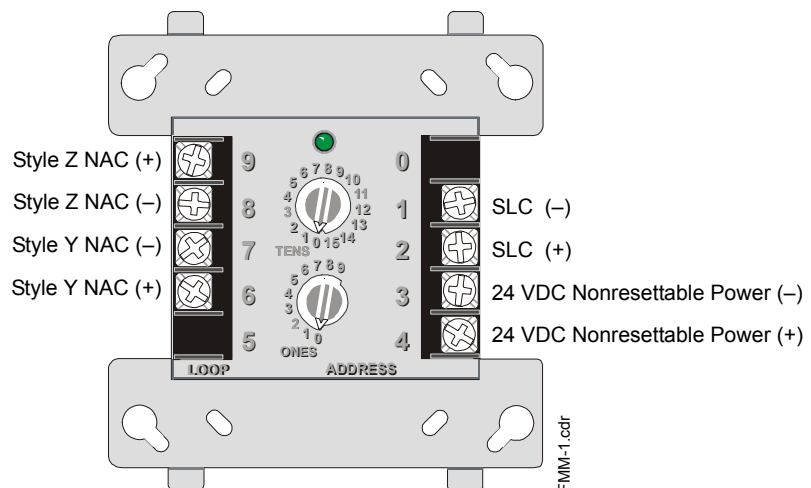


Figure 30 CMF-300 Wiring Connections

Wiring an CMF-300 Module

This section contains instructions and diagrams for wiring a Signaling Line Circuit with an CMF-300 as a Notification Appliance Circuit (NAC).

Wiring a Style Y NAC (Two-Wire)

A supervised and power-limited NFPA Style Y (Class B) NAC using a CMF-300 module. Polarized alarm notification appliances are shown connected to the module in a two-wire configuration.

Note: Refer to *Device Compatibility Document* for compatible notification appliances and relays.

- See "Appendix A: Power Considerations" on page 49 for information on monitoring 24 VDC power.
- Each module can control 2 amps of resistive load (on electronic devices) or 1 amp of inductive load (on mechanical bells and horns).
- 24 VDC power must be provided from a UL listed power supply for fire protection use.
- A power supervision relay is required only on the last module of the power run.
- Do not T-tap or branch a Style Y circuit.
- Terminate the circuit across the last device using an End-of-Line Resistor 47K, 1/2-watt, P/N SSD A2143-00 (ELR-47K in Canada).
- Do not loop wiring under the screw terminals of any notification appliance. To maintain supervision, break the wire run at each device.

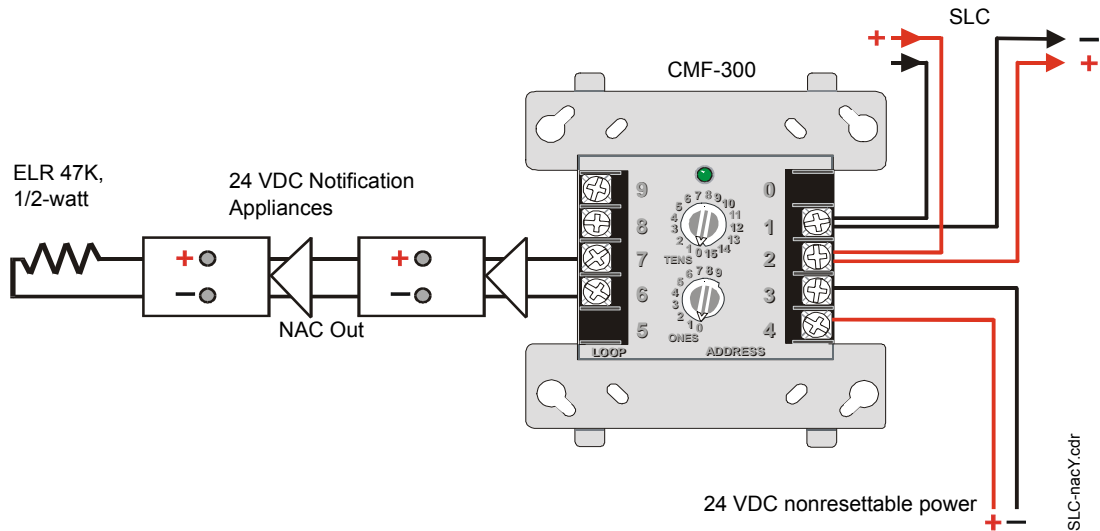


Figure 31 NFPA Style Y Notification Appliance Circuit

Wiring a Style Z NAC (Four-Wire)

A supervised and power-limited NFPA Style Z (Class A) NAC using a CMF-300 module. Polarized alarm notification appliances are shown connected to the module in a four-wire configuration.

Note: Refer to the *Device Compatibility Document* for compatible notification appliances and relays.

- See "Appendix A: Power Considerations" on page 49 for information on monitoring 24 VDC power.
- Each module can control 2 amps of resistive load (on electronic devices) or 1 amp of inductive load (on mechanical bells and horns).
- 24 VDC power must be provided from a UL listed power supply for fire protection use.
- A power supervision relay is required only on the last module of the power run.
- Do not T-tap or branch a Style Z circuit.
- Do not loop wiring under the screw terminals of any notification appliance. To maintain supervision, break the wire run at each device.

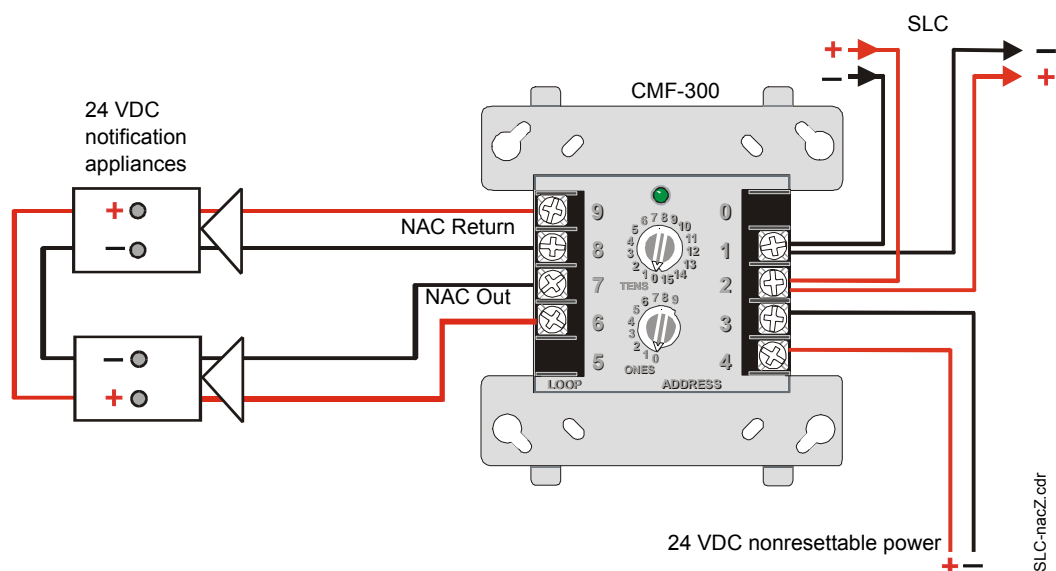


Figure 32 NFPA Style Z Notification Appliance Circuit

CMF-300-6 Installation

Cabinet Installation

This type of module is contained in either a BB-2 or BB-6 cabinet. The BB-2 can accommodate up to 2 modules and the BB-6, which requires the CH-6 chassis, can accommodate up to 6 modules.

See the *Installation Instructions* provided with module for proper installation into cabinet.

Setting an SLC address for an CMF-300-6 Module

In “Style Y” operation each CMF-300-6 module can be set to one of 154 base addresses (01-154). The remaining module points are automatically assigned to the next five higher SLC addresses. For example, if the base address is set to 28, the next five module points will be addressed to 29, 30, 31, 32 and 33.

In “Style Z” operation alternate module points are paired together, resulting in a total of three module points. For example, if the base address is set to 28, then 30 and 32 will be automatically assigned to the remaining module points and 29, 31 and 33 are available to be used for other modules on the SLC.

DO NOT set the lowest address above 154 (94 for MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.

Note: The MS-9200 and MS-9200UD can support module addresses of 01 - 99. The MS-9600 can support module addresses 01 - 159.

To set an SLC address, use a common screwdriver to adjust the rotary switches on the module to the desired address. See Figure 33 on page 41.

Note: For use with a MS-9600, remove the stop on the upper rotary switch.

Setting NACs as Style Y or Style Z

To use this module for Style Y (Class B) operation ascertain that a small shunt is installed on the “A/B SELECT” set of pins. (As shipped).


To use this module for Style Z (Class A) operation remove the small shunt from the “A/B SELECT” set of pins. See drawing below and Figure 33 on page 41.

Disabling Unused Module Addresses

A shunt is used, in conjunction with a pin block, to disable a maximum of three (3) unused module addresses. If two module addresses are disabled, the lowest four addresses will be functional, while the highest two will be disabled. For example, if the shunt is placed on ‘DISABLE 2’ and the base address is set to 28, the module addresses will be assigned to 28, 29, 30 and 31.

In Style Z operation, placing a small shunt on ‘DISABLE 3’ will disable all three addresses. Placing it on ‘DISABLE 2’ will disable two out of three addresses.

To disable addresses, securely place one of the supplied small shunts onto the desired set of pins. See drawing and Figure 33 on page 41.

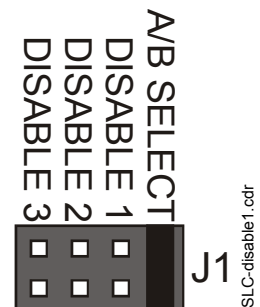

Short Circuit Protection

Protection is disabled for each module address when there is a large shunt installed on the corresponding pins of the pin block (as shipped, all six addresses are disabled).

When enabled, the module will not switch power supply if a short circuit condition exists on a NAC.

To enable “Short Circuit Protection” for an address, remove the large shunt from the corresponding pins of the pin block. See Figure 33 on page 41. Place unused shunts on single pin to store on board for future use.

Features Not Supported

The “Synchronization” and “Power Supply Monitoring” features are not supported at this time.

Circuit Board Information

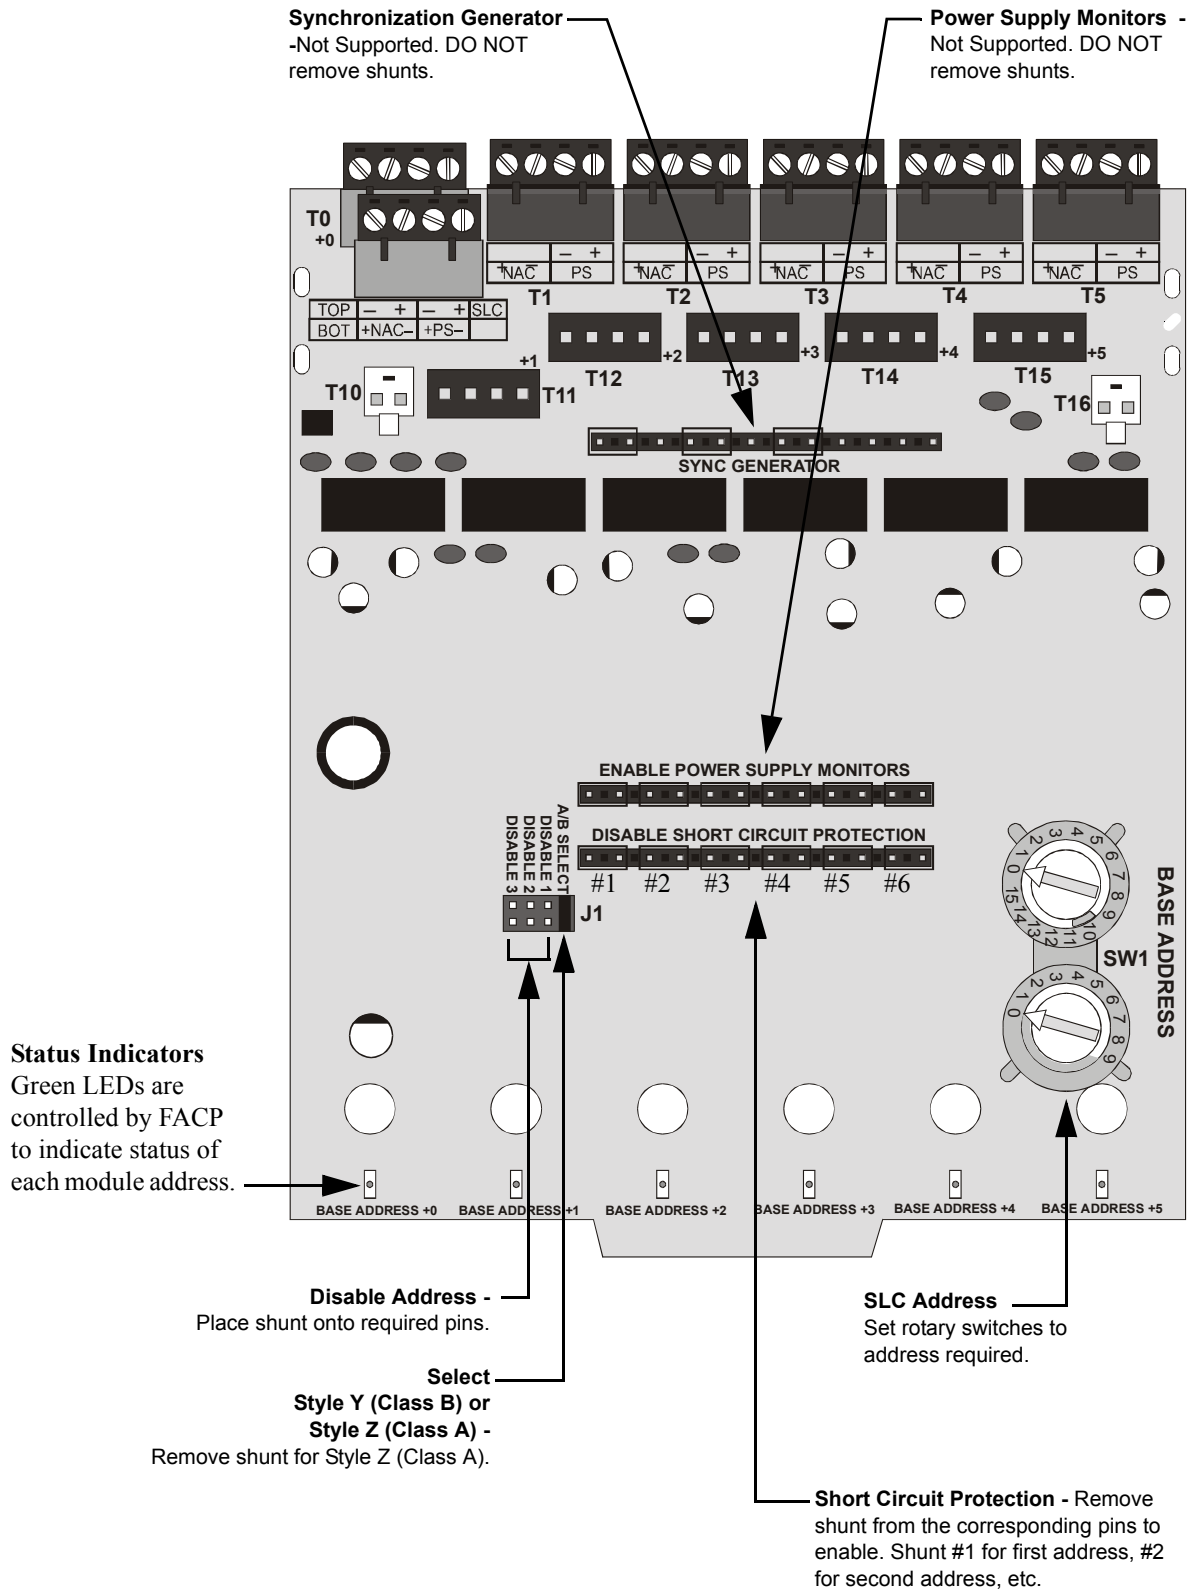


Figure 33 CMF-300-6 Control Module Settings

Wiring an CMF-300-6 Module

This section contains basic instructions and diagrams for wiring a Signaling Line Circuit with an CMF-300-6 as a Notification Appliance Circuit (NAC).

For more detailed information on wiring a CMF-300-6 Control Module refer to the Installation Instructions provided with the module. Included in these instructions are wiring diagrams concerning a single power supply being shared by multiple NACs and audio NAC configurations.

Wiring a Style Y NAC (Two-Wire)

A supervised and power-limited NFPA Style Y (Class B) NAC with a single power supply dedicated to a single NAC using a CMF-300-6 module. Polarized alarm notification appliances are shown connected to the module in a two-wire configuration.

Note: Refer to *Device Compatibility Document* for compatible notification appliances and relays.

- See "Appendix A: Power Considerations" on page 49 for information on monitoring 24 VDC power.
- Each module can control 2 amps of resistive load (on electronic devices) or 1 amp of inductive load (on mechanical bells and horns).
- 24 VDC power must be provided from a UL listed power supply for fire protection use.
- A power supervision relay is required only on the last module of the power run.
- Do not T-tap or branch a Style Y circuit.
- Terminate the circuit across the last device using an End-of-Line Resistor 47K, 1/2-watt, P/N SSD A2143-00 (ELR-47K in Canada).
- Do not loop wiring under the screw terminals of any notification appliance. To maintain supervision, break the wire run at each device.

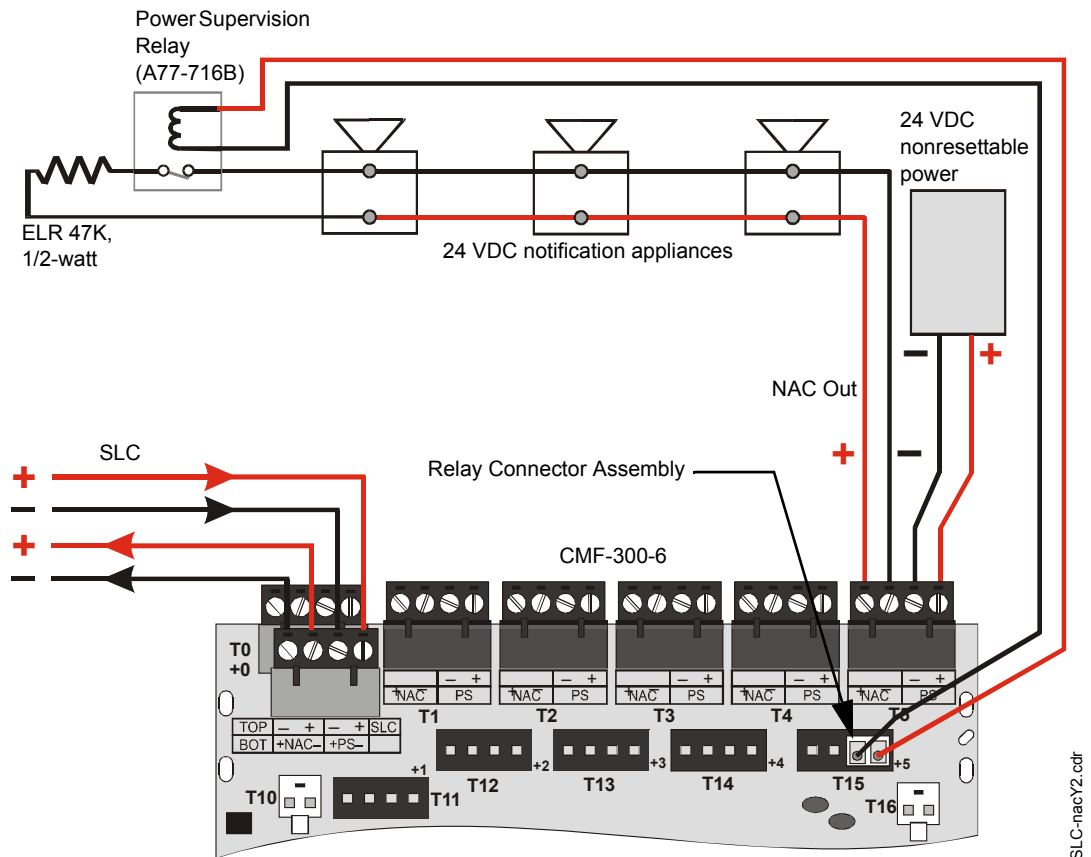


Figure 34 NFPA Style Y Notification Appliance Circuit

Wiring a Style Z NAC (Four-Wire)

A supervised and power-limited NFPA Style Z (Class A) NAC with a single power supply dedicated to a single NAC using a CMF-300-6 module. Polarized alarm notification appliances are shown connected to the module in a four-wire configuration.

Note: Refer to the *Device Compatibility Document* for compatible notification appliances and relays.

- See "Appendix A: Power Considerations" on page 49 for information on monitoring 24 VDC power.
- Each module can control 2 amps of resistive load (on electronic devices) or 1 amp of inductive load (on mechanical bells and horns).
- 24 VDC power must be provided from a UL listed power supply for fire protection use.
- A power supervision relay is required only on the last module of the power run.
- Do not T-tap or branch a Style Z circuit.
- Do not loop wiring under the screw terminals of any notification appliance. To maintain supervision, break the wire run at each device.

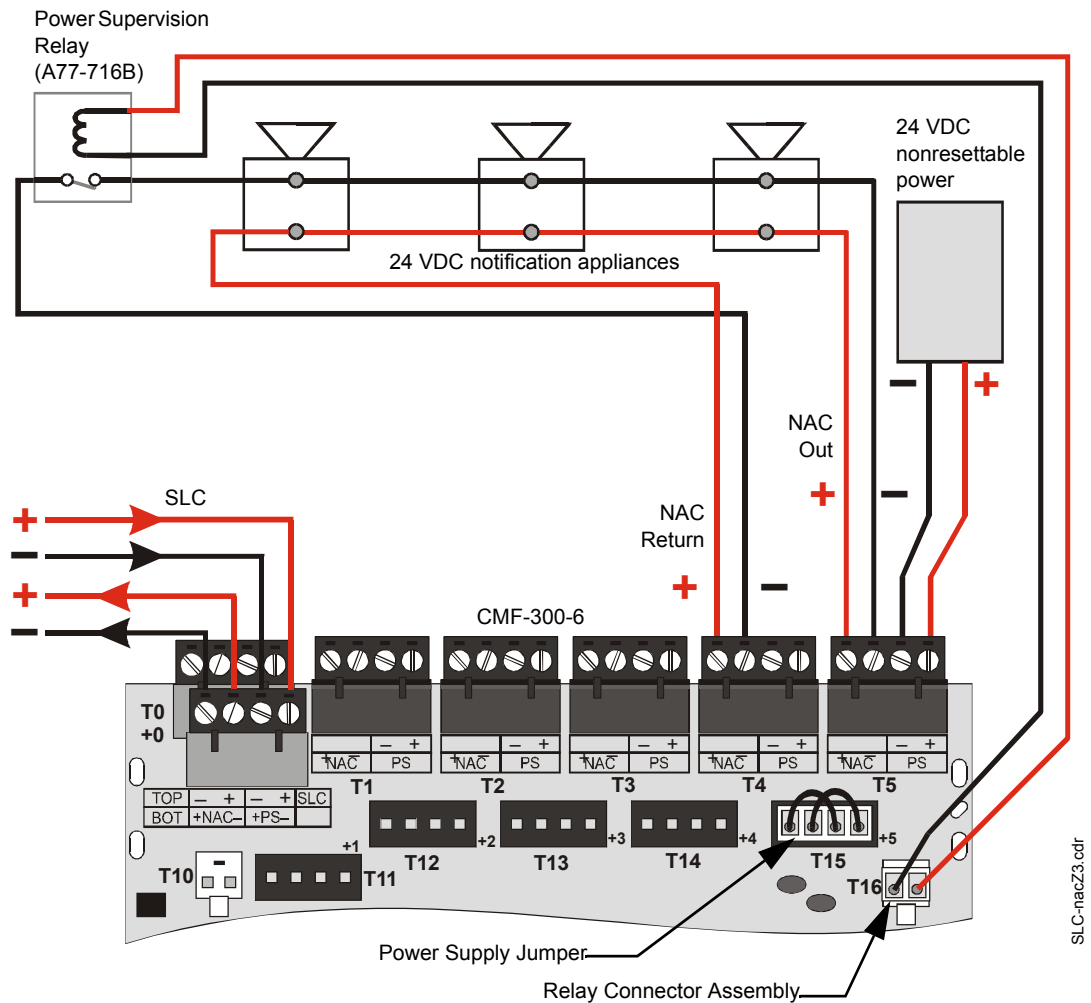


Figure 35 NFPA Style Z Notification Appliance Circuit

Relay Modules

Description

The CRF-300 and the CRF-300-6 modules are addressable modules that provides Form-C relay contacts. Ratings for the relay contacts on the module are:

Load Description	Application	Maximum Voltage	Current Rating
Resistive	Non-Coded	30 VDC	3.0 A
Resistive	Coded	30 VDC	2.0 A
Resistive	Non-Coded	110 VDC	0.9 A
Resistive	Non-Coded	125 VAC	0.9 A
Inductive (L/R = 5ms)	Coded	30 VDC	0.5 A
Inductive (L/R = 2ms)	Coded	30 VDC	1.0 A
Inductive (PF = 0.35)	Non-Coded	70.7 VAC	0.7 A
Inductive (PF = 0.35)	Non-Coded	125 VAC	0.5 A

Note: For more information on the module specifications refer to the *Installation Instructions* provided with these devices.

CRF-300 Installation & Wiring

Setting an SLC address for a CRF-300 Module

Each module is factory preset with an address of "00." To set an SLC address refer to "Setting an SLC address for a Single Point Module" on page 27.

Wiring a CRF-300 Module (Form-C Relay)

The figure below shows a CRF-300 module wired to the Control Panel:

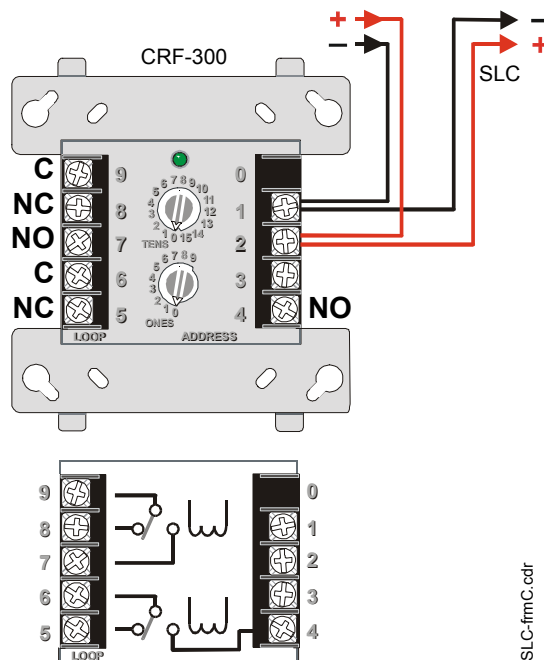


Figure 36 CRF-300 Wiring Connections

CRF-300-6 Circuit Board Information

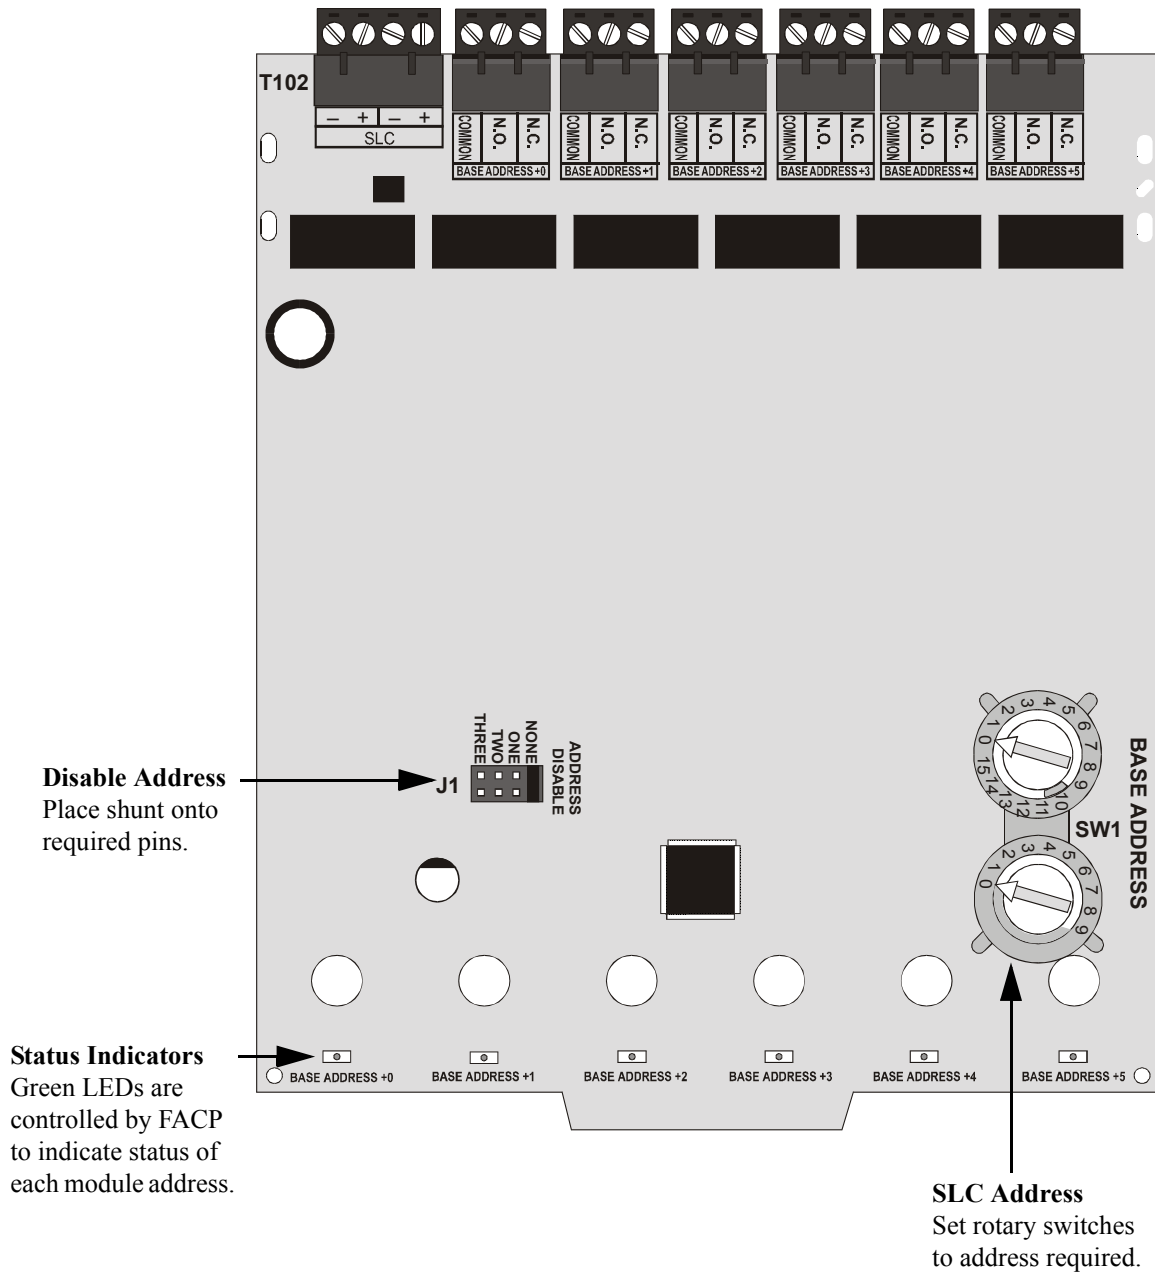


Figure 37 CRF-300-6 Control Relay Module

CRF-300-6 Installation & Wiring

Cabinet Installation

This type of module is contained in either a BB-2 or BB-6 cabinet. The BB-2 can accommodate up to 2 modules and the BB-6, which requires the CH-6 chassis, can accommodate up to 6 modules.

See the *Installation Instructions* provided with module for proper installation into cabinet.

Setting an SLC address for a CRF-300-6 Module

Each CRF-300-6 module can be set to one of 154 base addresses (01-154). The remaining module points are automatically assigned to the next five higher SLC addresses. For example, if the base address is set to 28, the next five module points will be addressed to 29, 30, 31, 32 and 33.

DO NOT set the lowest address above 154 (94 for MS-9200 and MS-9200UD), as the other module points will be assigned to nonexistent addresses.


Note: The MS-9200 and MS-9200UD can support module addresses of 01 - 99. The MS-9600 can support module addresses 01 - 159. To set an SLC address, use a common screwdriver to adjust the rotary switches on the module to the desired address. See Figure 33 on page 41.

Note: For use with a MS-9600, remove the stop on the upper rotary switch.

Disabling Unused Module Addresses

A shunt is provided on the circuit board to disable a maximum of three (3) unused module addresses. If two module addresses are disabled, the lowest four addresses will be functional, while the highest two will be disabled. For example, if the shunt is placed on 'TWO' and the base address is set to 28, the module addresses will be assigned to 28, 29, 30 and 31.

To disable addresses, remove the shunt from its storage location and securely place it onto the desired set of pins.

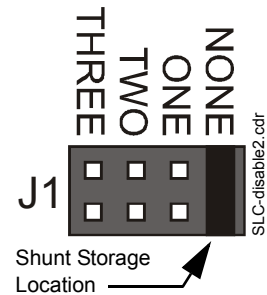

Wiring a CRF-300-6 Module (Form-C Relay)

The figure below shows a CRF-300-6 module wired to the Control Panel.

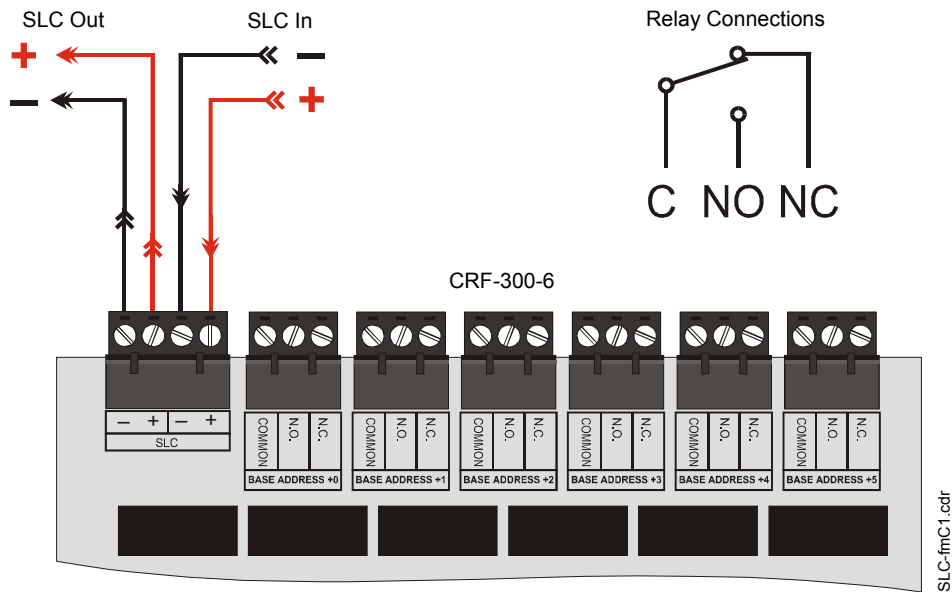


Figure 38 CRF-300-6 Wiring Connections

Intelligent Detector Bases

Description

The following bases provide connection between the SLC and these detector heads:

- AD350 and AD355 Multicriteria Photoelectric Smoke Detector
- CP350 and CP355 Ionization Smoke Detector
- H350, H350R, H355, H355R and H355HT Thermal Detector
- SD350, SD350T, SD355 and SD355T Photoelectric Smoke Detector

The **B350LP** Detector Base is a standard plug-in base provided with each detector head.

The **B501BH** Sounder Detector Base includes a horn that will sound when the sensor's visible LEDs are latched on for approximately 10 seconds.

On the MS-9200 control panel, the sounder will activate when the sensor's visible LEDs are latched on for approximately 10 seconds (Alarm Verification does not delay sounder).

If the MS-9600 and MS-9200UD control panel is set with Alarm Verification ON, the sounder will activate at the end of the verification cycle, providing an alarm is verified, approximately 10 seconds after the sensor's LEDs are latched on. If Alarm Verification is OFF, the sounder will activate when the sensor's visible LEDs are latched on for approximately 10 seconds.

The **B224RB** Relay Detector Base includes Form-C latching relay contacts for the control of an auxiliary function. The relay operates 12 seconds (nominally) after activation of the sensor head remote annunciator output.

The **B224RI** Isolator Detector Base prevents an entire communications loop from being disabled when a short circuit occurs.

Note: For more information refer to the *Installation Instructions* document provided with these devices.

Installation

Setting the Detector Address

Each intelligent detector is factory preset with an address of "00." To set an SLC address, use a common screwdriver to adjust the rotary switches on the detector to the desired address (see "Setting an SLC address for a Single Point Module" on page 27). When finished, mark the address in the place provided on the base and the detector.

Wiring a Detector Base

Typical wiring of a detector base (B350LP shown) connected to an SLC is shown in the figure below. An optional **RA400Z** Remote LED Annunciator is shown connected to the detector.

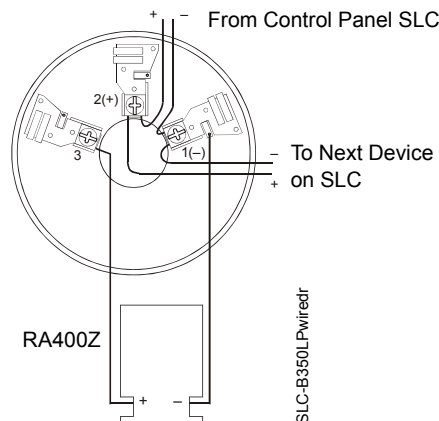


Figure 39 Detector Terminal Block Wiring

Addressable Manual Pull Station

Description

The **BG-12LX** is an addressable manual pull station with a key-lock reset feature.

Note: For more information refer to the *Installation Instructions* document provided with this device.

Installation

Setting an SLC address

Each unit is factory preset with an address of "00." To set an SLC address refer to "Setting an SLC address for a Single Point Module" on page 27.

Wiring a Manual Pull Station

Typical wiring for a BG-12LX Manual Pull Station to an SLC:

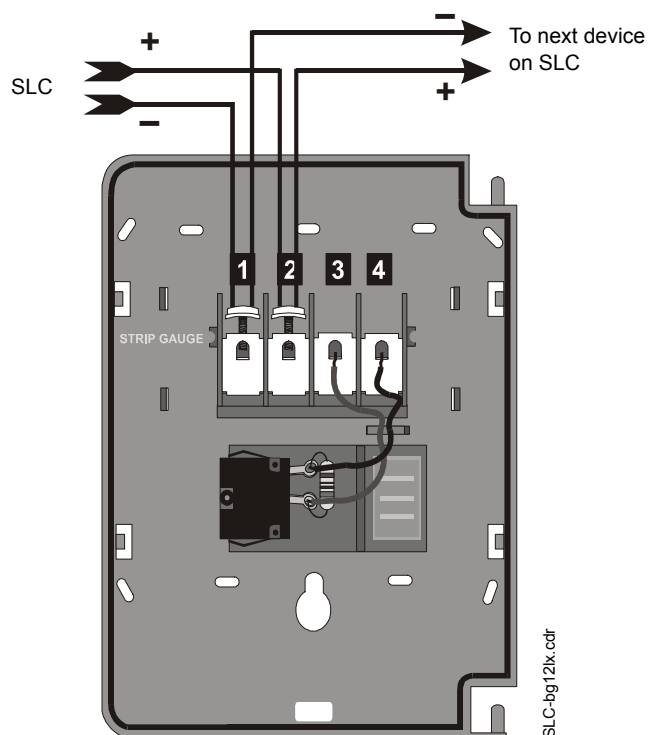


Figure 40 Wiring of an BG-12LX Pull Station to an SLC

Appendix A: Power Considerations

Supplying Power to 24 VDC Detectors

Resistance and Size

To determine the minimum resistance that can be tolerated in supplying power to 24 VDC 4-wire detectors, use the calculation below. Use this resistance to select the proper gauge wire for the power run from the manufacturers specifications for the desired wire.

$$R_{\max} = \frac{(18.1 - V_{om})}{(N)(I_s) + (N_a)(I_a) + (I_r)}$$

Where:

R_{max} = maximum resistance of the 24 VDC wires

V_{om} = minimum operating voltage of the detector or end-of-line relay, whichever is greater, in volts

N = total number of detectors on the 24 VDC supply circuit

I_s = detector current in standby

N_a = number of detectors on the 24 VDC power circuit which must function at the same time in alarm

I_a = detector current in alarm

I_r = end-of-line relay current

Supervising 24 VDC Power

Power used to supply 24 VDC notification appliances (using the CMF-300) can be supervised with a power supervision relay. This relay, energized by the 24 VDC power itself, is installed at the end of each respective power run and wired in-line with the supervised circuit of any intelligent module.

- 24 VDC power must be provided from a UL listed power supply for fire protection use.

When power is removed from the relay, the normally closed contacts open the supervised circuit, generating a trouble condition. Therefore, the relay needs to be installed at the end of the supervised circuit, so as to not disrupt the operating capability of all the devices on that circuit. The relay can be installed in-line with any leg (+ or -) of the supervised NAC circuit, either a Style B (Class B) or a Style D (Class A) circuit.

The drawing below illustrates this concept.

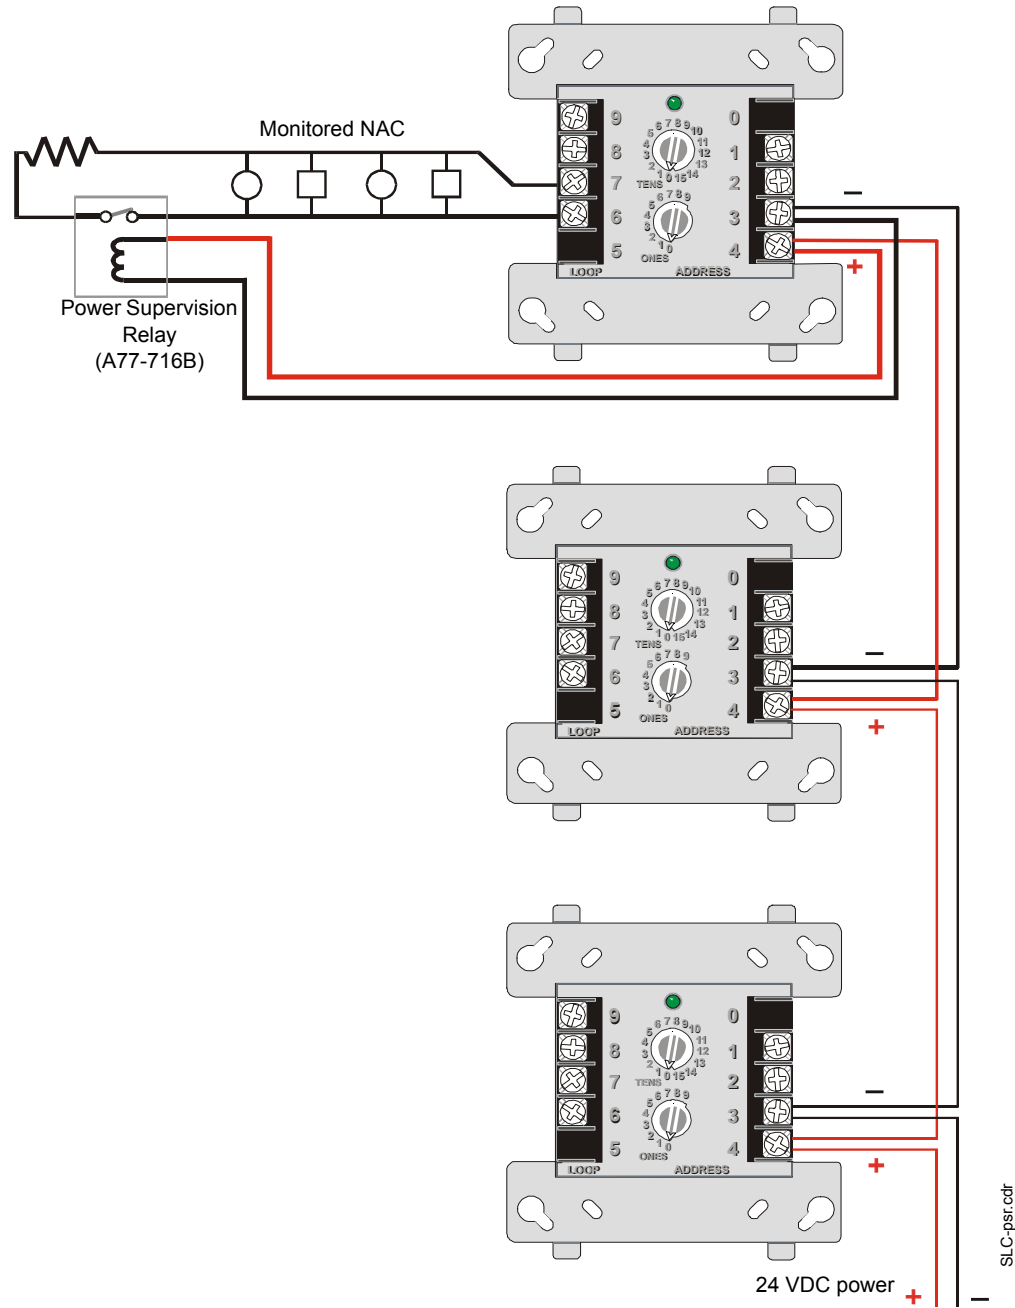


Figure 41 Supervised 24 VDC Circuit

Supervising 24 VDC Power to Notification Appliances

An alternate method of supervising 24 VDC power fed to the Notification Appliance Circuit of the CMF-300 module eliminates the need for a power supervision relay. This method uses a Notification Appliance Circuit from the control panel or power supply to supply power to the CMF-300 modules. The control panel supervises this circuit, which can be either a Style Y or Style Z.

Style Y NAC Power Wiring

Program the NAC from the control panel for general alarm. (Refer to the programming manual or programming section of your FACP documentation for instructions.) Note that if the NAC is a coded output, the CMF-300 module will be coded as well.

Note: Refer to the *Device Compatibility Document* for compatible notification appliances.

- The circuit is supervised and power-limited.
- In this circuit, an external ELR is required at end of the NAC circuit.
- Refer to the respective control panel installation manual for NAC terminal block connection information and ELR value.

Connect the NAC power as follows:.

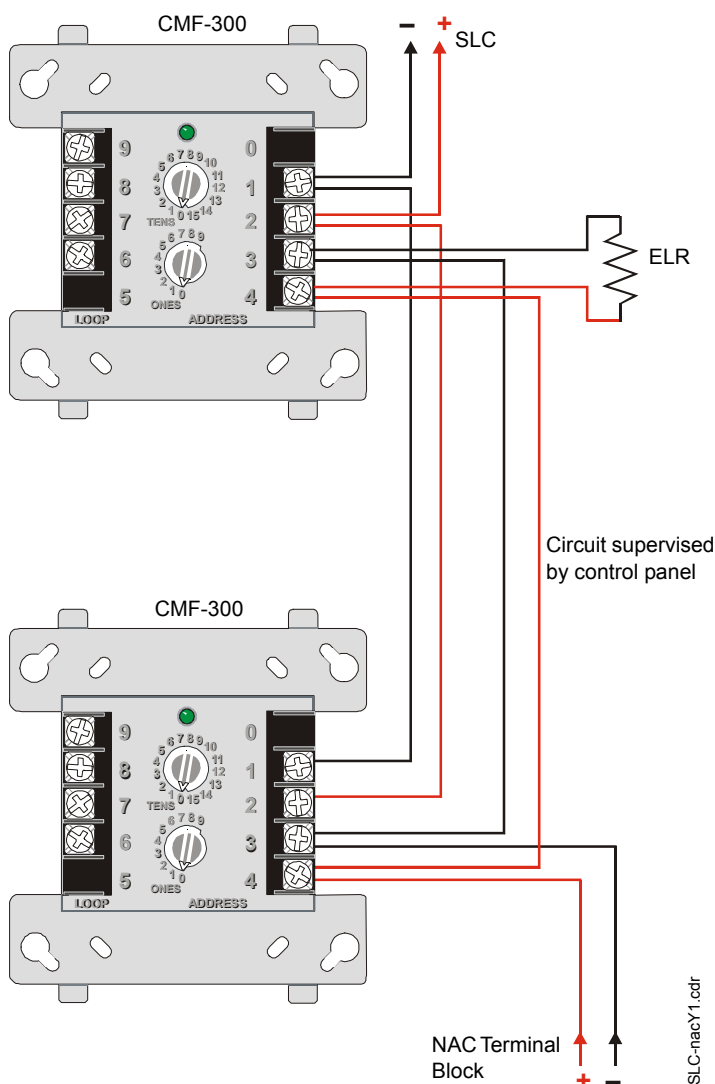


Figure 42 NFPA Style Y NAC Power (Alternate)

Style Z NAC Power Wiring

Program the NAC from the control panel for general alarm. (Refer to the programming manual or programming section of your FACP documentation for instructions.) Note that if the NAC is a coded output, the CMF-300 module will be coded as well.

Note: Refer to the *Device Compatibility Document* for compatible notification appliances.

- The circuit is supervised and power-limited.
- In this circuit, an external ELR is **not** required at end of the NAC circuit.
- Refer to the respective control panel installation manual for NAC terminal block connection information.

Connect the NAC power as follows:

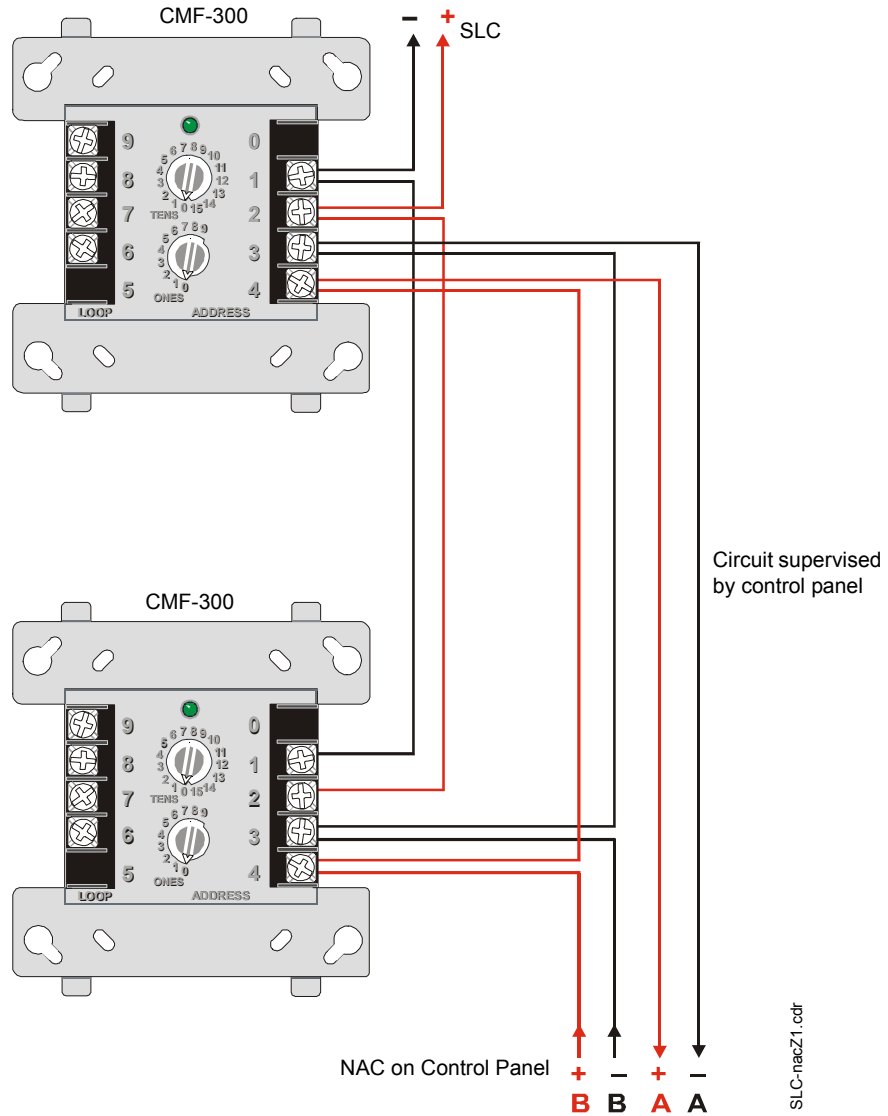


Figure 43 NFPA Style Z NAC Power (Alternate)

Appendix B: Surge Suppression

Introduction

There are three (3) primary surge protectors that are approved for use with the MS-9200, MS-9200UD and MS-9600.

- **DTK-2LVLP-F** Diversified Technology Group, Inc. 1720 Starkey Rd. Largo, FL 33771 (727) 812-5000
- **SLCP-030** EDCO 1805 N.E. 19th Ave. Ocala, FL 34470 (352) 732-3029
- **PLP-42N** Northern Technologies, Inc. 23123 E. Madison Ave. Liberty Lake, WA 99019 (800) 727-9119


Note: For detailed information refer to the installation documentation supplied with the unit.

One primary surge protector must be used with each SLC wiring pair whenever SLC wiring runs outside the building.

- Install primary protection only as shown in this document.
- Refer to NEC Article 800 and local building code requirements.

Additional primary surge suppressors may be added as required by the NEC. Add these additional suppressors in series with the SLC wiring at the building entry/exit.

Wiring connected to the surge suppressor output must remain within the building while wiring connected to the surge suppressor input may be routed outside the building as shown below.

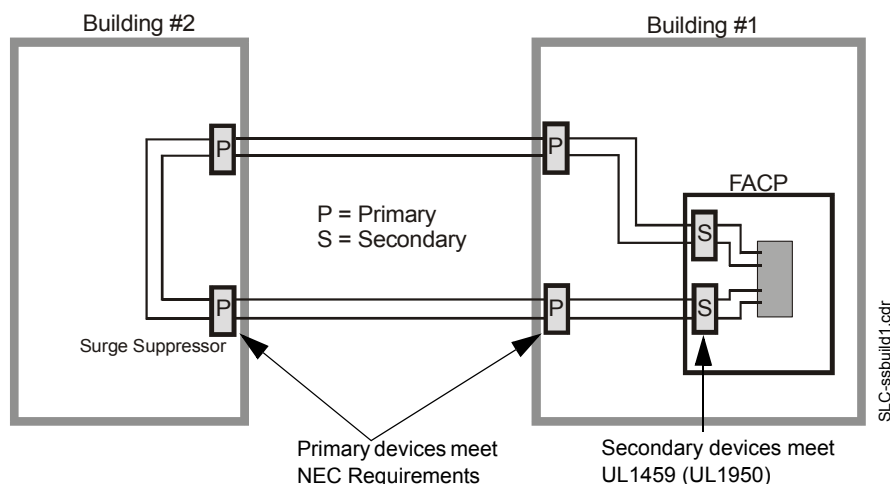


Installation

Mounting of the surge suppressor must be inside the FACP enclosure or in a separate enclosure listed for fire protective signaling use.


- Locate on an available stud and secure with nut.
- Unit is connected in series with the SLC Loop to protect the Control Panel.
- Provide a common ground to eliminate the possibility of a differential in ground potentials.

Wiring Diagram for MS-9200

DTK-2LVLP-F Connections

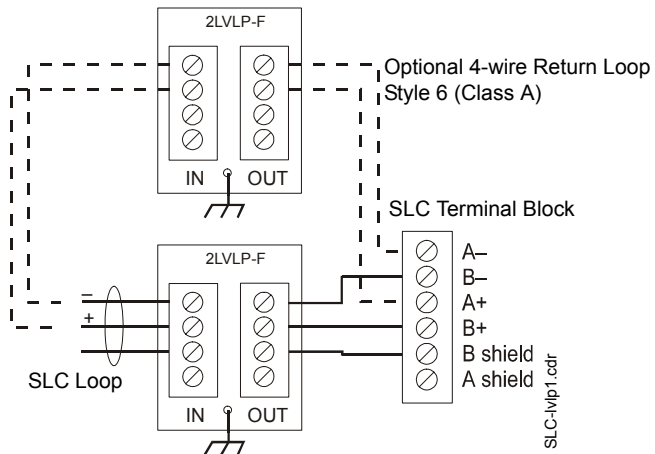


PLP-42N Connections

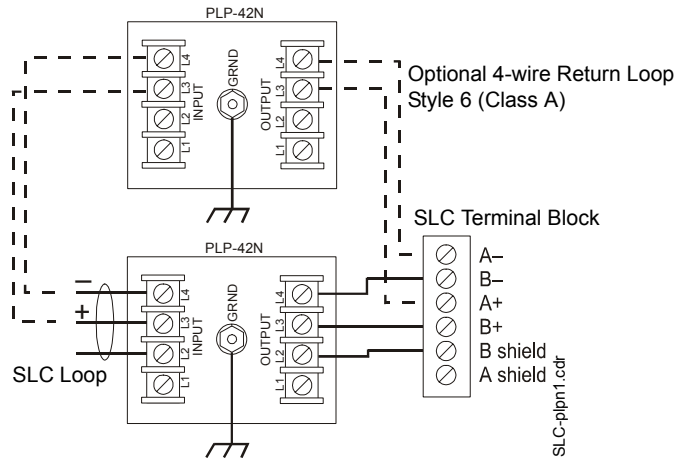


Note: Use 12AWG (3.25mm²) to 18AWG (0.75mm²) wire with crimp-on connectors to connect the unit's ground terminal to equipment ground. Wire length must be minimized to provide best protection.

SLCP-030 Connections

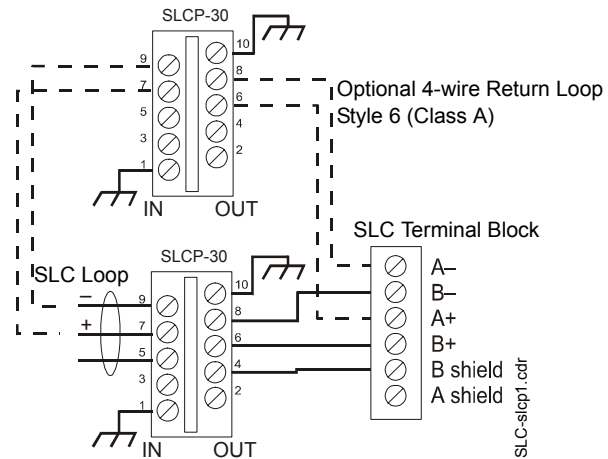


Wiring Diagram for MS-9600 and MS-9200UD

DTK-2LVLP-F Connections

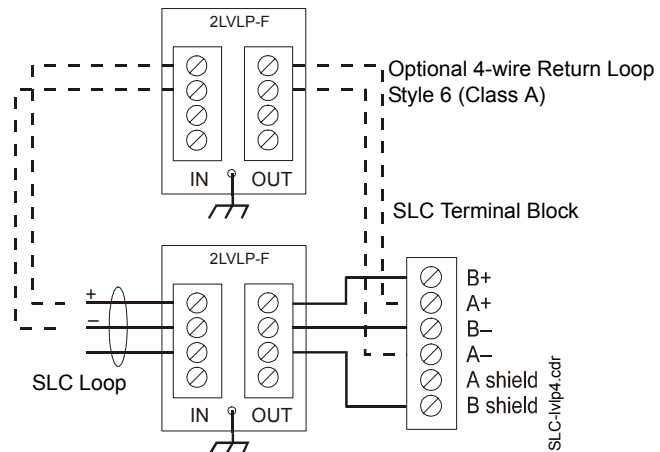


PLP-42N Connections

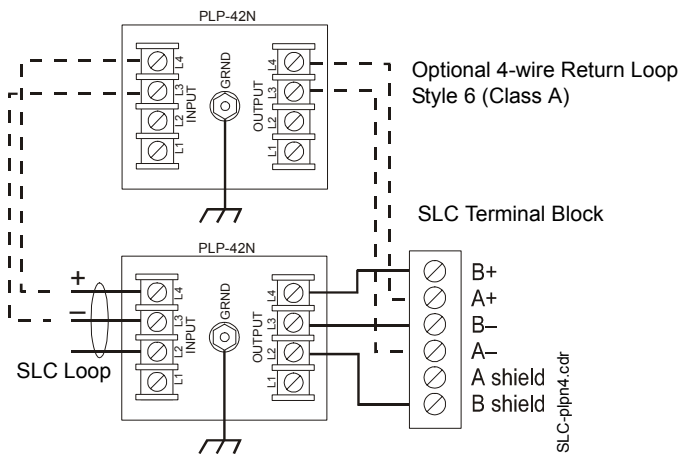

Note: Use 12AWG (3.25mm²) to 18AWG (0.75mm²) wire with crimp-on connectors to connect the unit's ground terminal to equipment ground. Wire length must be minimized to provide best protection.

SLCP-030 Connections

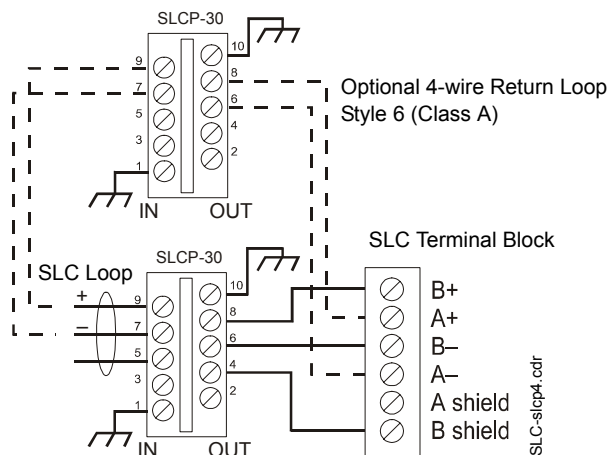

Index

Numerics

- 24 VDC detectors 49
- 24 VDC NAC power 37
- 24 VDC power
 - alternate method of supervising 51
 - MS-9200, MS-9600 16

A

- AD350 Detector 9, 47
- AD355 9
- address capacity 20
- addressable
 - devices 20
 - modules 8, 24
- Alarm Verification 47
- Authority Having Jurisdiction 11
- auxiliary devices 8

B

- B224 RB Relay Detector Base 47
- B224 RI Isolator Detector Base 47
- B350LP Detector Base 47
- B501BH Sounder Detector Base 47
- Bases, detector 47
- BG-12LX 9, 48
- building entry/exit 53

C

- circuit fault 8
- CLIP Mode 9
- close nipped conduit 23
- CMF-300 Control Module 8
- CMF-300 module 37, 38, 39, 51, 52
 - installation 37
 - wiring 38
- CMF-300-6
 - address disabling 40
- CMF-300-6 Control Module 8
- CMF-300-6 module 37, 42, 43
 - address setting 40
 - circuit board 41
 - installation 40
 - short circuit protection 40
 - Style selection 40
 - wiring 42
- coded output 51, 52
- common ground 53
- conduit, close nipped 23
- connectors, crimp-on 54, 55
- Control Modules 8
- control panel 8
- CP350 Detector 9, 47

CP355 9

- CRF-300 module, wiring of 44
- CRF-300 Relay Module 8
- CRF-300-6 module
 - address disabling 46
 - address setting 46
 - circuit board 45
 - wiring 46
- CRF-300-6 module, wiring of 44
- CRF-300-6 Relay Module 8

D

- D350P Detector 9
- D350RP Detector 9
- DC resistance 13, 14
- detector base, wiring of 47
- Detector Bases 47
- detector bases 47
- detectors 47
 - listing 9
- devices
 - addressable 20
 - auxiliary 8
 - supervised 50
- document sources 10
- drain wire 15
- dry-contact 8
- DTK-2LVLP-F 53

E

- electrical interference 12
- ELR, external 51
- End-of-Line Resistor 38, 42

F

- fault 11, 22
- fault condition 20
- Fault Isolator Module 20
- Fire alarm service 27
- foil 15
- Form C relay 47
- Form-C contacts 44
- Form-C relays 8
- four-wire configuration 39, 43

G

- general alarm 51, 52
- ground terminal 54, 55

H

- H350 Detector 9, 47
- H350R Detector 9
- H355 9
- H355HT 9

H355R 9

Heat Detector 47

I

- I300 20
- I300 Isolator Module 8
- Initiating Device Circuits 24, 28, 30, 32
- integral relay 20
- Ionization Detector 47
- Isolator Module 8
 - how it works 20
 - wiring of 20
- isolator modules 22, 23

K

key-lock reset 48

L

- LEDs 47
- local building code 53
- loop resistance 13, 14
- loops 14

M

- MDF-300 Dual module 8, 24, 32
- MDF-300 module
 - wiring 32
- metal conduit 15, 22
- minimum resistance 49
- MMF-300 module 8, 24, 28, 29
- MMF-300-10 Module 8
- MMF-300-10 module 25, 30, 31
 - wiring 30, 31
- MMF-301 module 8, 24
- MMF-302 module 8, 24, 33, 34
 - wiring 33
- MMF-302-6 Interface Module 8
- MMF-302-6 module 26, 35, 36
 - wiring 35
- module circuits 24
- modules
 - addressable 8
 - control 8
 - isolator 8
 - monitor 8
 - relay 8
- Monitor Modules 8, 24
- Multicriteria Detector 47
- Multi-Point Module 27

N

- NAC power 37, 52
 - wiring of 51

- NAC terminal block 51
- NAC wiring 37
- NEC Article 800 53
- NFPA Style 4
 - wiring of 18
 - with I300 21
- NFPA Style 6
 - wiring of 19
 - with I300 22
- NFPA Style 7 20
 - with isolator modules 23
- NFPA Style B
 - IDC wiring 28, 30, 32, 33, 35
- NFPA Style D
 - IDC wiring 29, 31, 34, 36
- NFPA Style Y 37
 - wiring of 38, 42
- NFPA Style Z 37
 - wiring of 39, 43
- Nonresettable power 16
- normally closed contacts 50
- Notification Appliance Circuit 8, 51
- notification appliances 50

- P**
- performance 11
- Photoelectric Detector 47
- PLP-42N 53
- power run 49, 50
- power supervision relay 38, 39, 42, 43, 50
- power-limited 51
- proper gauge wire 49
- Pull Station 9
- pull station 23
 - wiring of 48

- R**
- RA400Z 47
- rate of rise 9
- ratings, relay contact 37, 44
- relay contact ratings 37, 44
- Relay Module 8
- relays
 - Form-C 8
- Remote LED Annunciator 47
- Resettable power 16
- resistance 13, 14
- rotary switches 27, 31, 32, 33, 34, 35, 36, 47

- S**
- SD350 Detector 9, 47
- SD350T Detector 9
- SD355 9
- SD355T 9
- sensing circuit, thermistor 9
- short circuit 20
- Signaling Line Circuit 8
- Single Point Module 27
- SLC address, setting of 27, 47
- SLC connections 16
- SLC terminal block 15
- SLC wiring 28, 29, 30, 31, 32, 33, 34, 35, 36
- SLCP-030 53
- Smoke Detectors 47
- Sprinkler supervision 27
- supervised 51
 - circuit 50
 - devices 50
- supplying power 49
- suppressors, surge 53
- surge protector 11, 53
- switching 37

- T**
- terminal block, NAC 52
- terminal blocks 16
- termination of shield 15
- Thermal Detector 47
- thermistor sensing circuit 9
- trouble conditions 11, 20
- T-tapping 13, 18, 19, 22, 23
- twisted-pair shielded wiring 12
- two-wire configuration 38, 42

- U**
- Unregulated power 16

- V**
- verification cycle 47

- W**
- Waterflow alarm service, automatic and manual 27
- wire length 13, 14
- wire size 12
- wiring
 - NACs 37
 - of an isolator module 20
- wiring pair 53
- wiring requirements 12
- wiring style requirements 11

Notes

Limited Warranty

The manufacturer warrants its products to be free from defects in materials and workmanship for eighteen (18) months from the date of manufacture, under normal use and service. Products are date-stamped at time of manufacture. The sole and exclusive obligation of the manufacturer is to repair or replace, at its option, free of charge for parts and labor, any part which is defective in materials or workmanship under normal use and service. For products not under the manufacturer's date-stamp control, the warranty is eighteen (18) months from date of original purchase by the manufacturer's distributor unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. This warranty is void if the product is altered, repaired, or serviced by anyone other than the manufacturer or its authorized distributors, or if there is a failure to maintain the products and systems in which they operate in a proper and workable manner. In case of defect, secure a Return Material Authorization form from our customer service department. Return product, transportation prepaid, to the manufacturer.

This writing constitutes the only warranty made by this manufacturer with respect to its products. The manufacturer does not represent that its products will prevent any loss by fire or otherwise, or that its products will in all cases provide the protection for which they are installed or intended. Buyer acknowledges that the manufacturer is not an insurer and assumes no risk for loss or damages or the cost of any inconvenience, transportation, damage, misuse, abuse, accident, or similar incident.

THE MANUFACTURER GIVES NO WARRANTY, EXPRESSED OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR OTHERWISE WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. UNDER NO CIRCUMSTANCES SHALL THE MANUFACTURER BE LIABLE FOR ANY LOSS OF OR DAMAGE TO PROPERTY, DIRECT, INCIDENTAL, OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE THE MANUFACTURER'S PRODUCTS. FURTHERMORE, THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL, OR INDUSTRIAL USE OF ITS PRODUCTS.

This warranty replaces all previous warranties and is the only warranty made by the manufacturer. No increase or alteration, written or verbal, of the obligation of this warranty is authorized.



World Headquarters

One Fire-Lite Place, Northford, CT 06472-1653 USA

203-484-7161 • Fax 203-484-7118

www.firelite.com

ISO 9001
CERTIFIED
ENGINEERING & MANUFACTURING
QUALITY SYSTEMS