




PROGRAMMING INSTRUCTIONS




LIBRA-P432EX Series CONTROL PANEL/COMMUNICATOR


Programming the LIBRA LIB-P432EX, LIB-P432EXT, LIB-P432EXT-230 control panels with the GEM-DXRP2, GEM-DXRP3, GEM-DXK2, GEM-DXK3 and GEM-DXK4RF Series Keypads

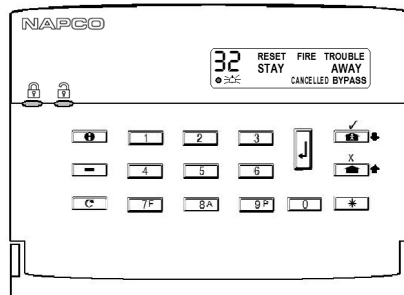

DXK4RF-319 Keypad
DXK4RF-433 Keypad

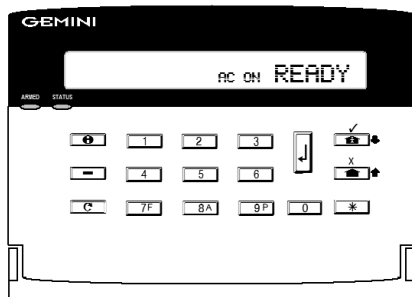

GEM-DXK2

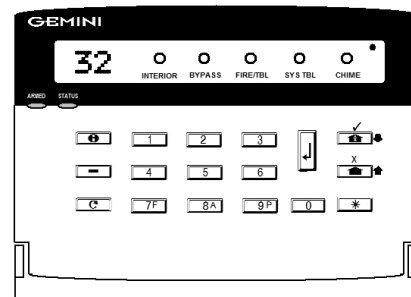


GEM-DXK3

Quick Start (for GEM-DXK2):

1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth Ground, Zone and Telephone Wiring. NOTE: See Installation Instructions (WI1691).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 55).
4. Access the Easy Menu Driven (Dealer Program) Mode:

Press



Dealer Code


Press NO ("X" or ) until "TURNON PROG Y/N" appears on the keypad.

Press YES ("✓" or ) to enter Dealer Program Mode. See page 5.


Quick Start (for GEM-DXK3):

1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth Ground, Zone and Telephone Wiring. NOTE: See Installation Instructions (WI1691).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 55).
4. Access the Easy Menu Driven (Dealer Program) Mode:

Press






Dealer Code

Press NO ("X" or ) until "17" appears on the keypad.







Press YES ("✓" or ) to enter Dealer Program Mode. See page 5.


THIS MANUAL INCLUDES FEATURES WHICH ARE ONLY AVAILABLE IN CONTROL PANEL FIRMWARE VERSION 30K OR LATER.

IMPORTANT NOTE

This manual supports the keypad programming of the LIB-P432EX series control panels with the NAPCO **GEM-DXRP2**, **GEM-DXRP3**, **GEM-DXK2**, **GEM-DXK3** and **GEM-DXK4RF** Series Keypads. Compared with the "DXRP" models, the "DXK Series" models offer simplified functionality with STAY () and AWAY () buttons, and a different icon printed on the ENTER () button.

While the programming instructions in this manual are depicted using the "DXK Series" models, this manual also applies to the "DXRP" models because keypad **Program Mode** is identical for both types of keypads--**only the button icons are different**, as follows:

- The  button and the  button operate identically (in Program Mode) for both keypads.
- The "Interior" () button and the "STAY" () button operate identically (in Program Mode) for both keypads. These buttons are also used to answer "YES" or "NEXT" to questions that appear on the keypad display; on occasion, a checkmark "✓" or a down arrow "↓" may be used in this manual as well.
- The "Instant" () button and the "AWAY" () button operate identically (in Program Mode) for both keypads. These buttons are also used to answer "NO" or "PRIOR" to questions that appear on the keypad display; on occasion, an "X" symbol or an up arrow "↑" may be used as well.

 For consistency, it is recommended that all keypads used in one alarm system either be all type "DXRP" or all "DXK Series" -- both keypad types should not be used in one alarm system.

The following applies to the LIB-P432EXT and LIB-P432EXT-230 control panels only:

Telephone Connection

The **LIB-P432EXT** and **LIB-P432EXT-230** products under the R&TTE Directive 99/5/EC complies with the CTR21 regulation and may be used on the PUBLIC network with the following restrictions:

- Do NOT use the ROTARY Dialing feature as this is not evaluated in CTR21.

Special Programming

- Pulse dialing is NOT to be used. Programming location **0788 CS SYSTEM REPORT OPTIONS** shall have the right digit entry always a 2 (= Touch-Tone Dialing only). If using the option of "Disable Dial Tone Detect" in location 0788 then a 3 second pause must precede the "CS receiver telephone number" by entering a D before the telephone number.
- **Note:** Address 1424, "Disable Code Required for EZ Bypass", the default panel configuration is "OFF".

WARNING: If using the EZ Driven Program Mode, be aware that all EN501 defaults will be deleted. Refer to page 56 of the Installation Instructions (WI1691) for setting the EN50131-1 features.



NAPCO Security Systems, Inc.
333 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs, call toll free: (800) 645-9445
For direct line to Technical Service, call toll free: (800) 645-9440
Internet: <http://www.napcosecurity.com>

TABLE OF CONTENTS

SYSTEM PROGRAMMING OPTIONS	4	<i>Central Station Receiver 1 Tel. Number</i>	16
<i>Introduction</i>	4	<i>Central Station Receiver 1 Account Number</i>	16
<i>Downloading From a Computer</i>	4	<i>Central Station Receiver 1 Format</i>	16
EASY MENU DRIVEN PROGRAM MODE	5	<i>Enter User Codes</i>	16
<i>Dealer Program - Preliminary Information</i>	5	<i>RF Transmitter Points</i>	17
<i>Accessing Dealer Program Mode</i>	5	<i>Key Fob Transmitters</i>	18
<i>Customizing a Default Program</i>	5	<i>Dealer Code</i>	19
<i>GEM-DXRP2 / GEM-DXK2 Keypad Easy Program Menu</i>	6	<i>Clear Program</i>	19
<i>Total Number of Zones in Area 1</i>	6	DIRECT ADDRESS PROGRAM MODE	20
<i>Panel Zone Doubling</i>	6	<i>Keypad Programming Overview</i>	20
<i>Fire Zones in Area 1</i>	6	<i>Accessing Direct Address Program Mode</i>	20
<i>2-Wire Fire Zones in Area 1</i>	6	<i>Keypad Address Program Mode Display</i>	21
<i>Local or Central Station Reporting System</i>	6	<i>Direct Address Program Mode Keypad Commands</i>	21
<i>Exit/Entry Zones in Area 1</i>	6	<i>Direct Address Programming Example</i>	22
<i>Interior (Stay) Bypass Zones in Area 1</i>	7	<i>Conventions Used in this Manual</i>	23
<i>24 Hour Zones in Area 1</i>	7	SYSTEM DELAYS & TIMEOUTS	24
<i>Chime Zones in Area 1</i>	7	SYSTEM OUTPUT TIMEOUTS	25
<i>Chime 2 Zones in Area 1</i>	7	DOWNLOAD/CALLBACK OPTIONS	25
<i>Exit/Entry2 Zones in Area 1</i>	7	PAGER FORMAT OPTIONS	25
<i>50 mS Loop Response Zones</i>	7	SYSTEM OPTIONS	26
<i>Aux Output Activated on Alarm Zones</i>	7	GLOBAL AMBUSH CODE	26
<i>Sensor Watch Zones</i>	7	SYSTEM OPTIONS	27
<i>Keypad Sounder On Alarm Zones</i>	7	SYSTEM OPTIONS	28
<i>Auto Bypass Re-entry Zones</i>	8	CS RECEIVER OPTIONS	30
<i>Enable No EOLR Zones</i>	8	CS SUBSCRIBER ID OPTIONS	31
<i>Enable Telco Line Fault Test?</i>	8	CS SYSTEM REPORTING OPTIONS	32
<i>Enable Burg Output Chirp on KeyFob?</i>	8	CS AREA & SYSTEM REPORTING OPTIONS	32
<i>Enable CP1?</i>	8	ZONE ANDING TIME WINDOW	33
<i>Number of Keypads in Area 1</i>	8	KEYPAD UNBLANKING TIME WINDOW	33
<i>Central Station Receiver 1 Tel. Number</i>	8	CLOCK ADJUSTMENTS	33
<i>Central Station Receiver 1 Account Number</i>	9	CS ZONE REPORTING OPTIONS	34
<i>Central Station Receiver 1 Format</i>	9	PULSE EVENT CODE	34
<i>Enter User Codes</i>	9	CS USER REPORTING OPTIONS	35
<i>RF Transmitter Points</i>	10	AREA BELL CONTROL OPTIONS	38
<i>Key Fob Transmitters</i>	11	KEYPAD OPTIONS	42
<i>Dealer Code</i>	11	AREA ARMING OPTIONS	44
<i>Clear Program</i>	12	ZONE INTEGRATION TIME	44
<i>Cold Start</i>	12	ZONE OPTIONS - ZONES 1 TO 16	45
<i>GEM-DXRP3 / GEM-DXK3 and GEM-DXK4RF KEYPAD Easy</i>		ZONE OPTIONS - ZONES 17 TO 32	46
<i>Program Menu</i>	13	EXTERNAL RELAY CONTROL	49
<i>Total Number of Zones</i>	13	RF RECEIVER & SUPERVISORY TIMER OPTIONS	52
<i>Panel Zone Doubling</i>	13	CLEAR PROGRAM OPTIONS	53
<i>Fire Zones</i>	13	USER PROGRAM MODE	53
<i>2-Wire Fire Zones</i>	13	<i>Preliminary Information</i>	53
<i>Local or Central Station Reporting System</i>	13	<i>Accessing User Program Mode</i>	53
<i>Exit/Entry Zones</i>	13	<i>User Codes</i>	54
<i>Interior Zones</i>	14	KEYPAD CONFIGURATION MODE	55
<i>24 Hour Zones in Area 1</i>	14	<i>Keypad Installation</i>	55
<i>Chime Zones in Area 1</i>	14	<i>Configuring the Keypads</i>	55
<i>Chime 2 Zones in Area 1</i>	14	ALPHABETICAL INDEX	56
<i>Exit/Entry2 Zones in Area 1</i>	14	ADDRESS NUMBER LOCATION INDEX	61
<i>50 mS Loop Response Zones</i>	14	WIRING DIAGRAMS	64-66
<i>Aux Output Activated on Alarm Zones</i>	14		
<i>Sensor Watch Zones</i>	15		
<i>Keypad Sounder On Alarm Zones</i>	15		
<i>Auto Bypass Re-entry Zones</i>	15		
<i>Enable No EOLR Zones</i>	15		
<i>Enable Telco Line Fault Test?</i>	15		
<i>Enable Burg Output Chirp on KeyFob?</i>	15		
<i>Enable CP-01?</i>	15		
<i>Number of Keypads</i>	16		


Refer to accompanying LIB-P432EX Installation Instructions (W11691) for installation information.

NOTE: THESE PROGRAMMING INSTRUCTIONS ARE INTENDED AND WRITTEN FOR THE PROFESSIONAL INSTALLER HAVING SUITABLE EXPERIENCE AND INSTALLATION EQUIPMENT. THE UNIT IS DESIGNED TO BE PROGRAMMED USING AN IBM-COMPATIBLE COMPUTER WITH NAPCO PCD-WINDOWS SOFTWARE. AFTER PROGRAMMING, BE SURE TO RUN THE PCD-WINDOWS ERROR-CHECK UTILITY TO GUARD AGAINST PROGRAMMING CONFLICTS FOR THE TYPE OF SERVICE SELECTED FOR THE INSTALLATION.

SYSTEM PROGRAMMING OPTIONS

INTRODUCTION

The LIB-P432EX control panel may be programmed by various means, each of which will be covered in detail in the sections that follow. Keypad displays shown are for a GEM-DXK2, GEM-DXRP2, GEM-DXK3, GEM-DXRP3 and GEM-DXK4RF series keypads. With the GEM-DXK2 and GEM-DXRP2 keypads, because of their reduced display capabilities, messages are abbreviated and will scroll through two or more screens. Zone descriptions cannot be programmed using the GEM-DXK2 or GEM-DXRP2 keypads, therefore a GEM-DXRP1 / GEM-DXK1 must be used (see WI1690).

- ✓ **Downloading From a Computer.** This is the preferred method of programming. The panel may be downloaded from (or uploaded to) an IBM PC-compatible computer, either locally or remotely. Napco's PCD-Windows Quickloader software features context-sensitive help screens as well as an error-checking utility that prevents programming of incompatible or conflicting data to ensure proper panel operation.
- ✓ **Easy Menu-Driven Program (Dealer Program) Mode - Keypad Programming.** The Easy Menu-Driven Program Mode allows keypad programming of number of zones in area 1, panel zone doubling, number of fire zones (both 4-wire and 2-wire), local or Central Station reporting, number of exit/entry zones, number of interior zones, number of 24 hour zones, number of chime zones, Chime 2 zones, Exit/Entry2 zones, 50ms loop response zones, aux output activated on alarm zones, sensor watch zones, keypad sounder on alarm zones, auto bypass re-entry zones, EOLR zones, number of keypads in area 1, Central Station telephone number, Central Station account number, Central Station receiver format, User Codes, RF transmitter points, RF keyfob transmitters, zone descriptions, dealer code, Telco line fault test, Burg output chirp on keyfob, enable CP-01, and clear dealer program/cold start. For new panels, a custom default program may be created at the keypad. A menu-driven utility prompts the installer to configure the system. Further detailed customization is accomplished in the Direct Address Program Mode.
- ✓ **Direct Address (Dealer Program) Program Mode - Keypad Programming.** The Direct Address Program Mode is an extension of the Dealer Program Mode wherein data is entered at the keypad by specific location. This mode is accessed from the Easy Menu Driven Program Mode by pressing the  button at any time.
- ✓ **User Program Mode - Keypad programming.** The User Program Mode is intended for authorized users and is limited to keypad programming of User Codes.

DOWNLOADING FROM A COMPUTER

The control-panel program may be downloaded from the computer by any of the following methods.

Local Downloading

(Note: This procedure should be used after installation, after peripheral devices are connected).



For direct high-speed data transfer to the control panel from a desktop computer, connect the download jack (JP2) on the panel to the LOCAL jack (J3) on the Napco PCI2000/3000 computer interface using the supplied 6-conductor cable. (Refer to PCI2000/3000 Installation Instructions WI443 for wiring diagram and procedures).

Similarly, a high-speed local download may be made in the field using a notebook or laptop computer. Connect JP2 on the control panel to a Napco PCI-MINI computer interface using the 6-conductor cable supplied. (Refer to PCI-MINI Installation Instructions WI767).

Remote Downloading

(Also see PCI2000/3000 Installation Instructions WI443).

Function Mode.

Start by establishing a Telco connection between the computer operator and the installer. During this procedure, voice contact will be lost, therefore both the installer and the computer operator should be familiar with the operation. When a steady high-pitched tone is heard at the site phone, access the "ACTIVATE DOWNLOAD" Function (see Keypad Programming Modes), then press the  button or the YES ("✓" or ) button; the site phone will go dead. Hang up the phone and wait for a call from the central station confirming a successful download.

Callback Method.

An installed, unattended panel may be programmed or reprogrammed remotely using the Callback-Method Download feature of the PCD Windows software. Remote downloading requires a modem compatible with the PCI2000/3000. Upon answering the call from the computer, the panel will verify the Download Security Code and, if confirmed, will establish a connection. If a Callback Number is programmed into the panel, the panel will automatically disconnect and call the computer at this number before establishing a connection.

EASY MENU DRIVEN PROGRAM MODE

DEALER PROGRAM - PRELIMINARY INFORMATION

- ☞ The Default Dealer Code is . Use this code to enter the Dealer Program Mode to program a custom Dealer Code, which replaces the Default Dealer Code. If you clear your Dealer Code, use the Default Dealer Code once again to enter programming.
- ☞ After entering codes or data, press the save button. **Data will not be stored into memory unless is pressed.**
- ☞ If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.
- ☞ Silence the sounder by the button to continue, or by pressing the button to exit.
- ☞ A panel that has been COLD STARTED (Address Location 2286) performs identically to a new panel.
- ☞ When programming a Multiple Area System, Direct Address Programming Mode must be used to complete the program.

ACCESSING DEALER PROGRAM MODE

1. Press .

↖ Dealer Code (Default = 456789) ↗
2. Press PRIOR ("X" or) until "TURNON PROG Y/N" (GEM-DXRP2 / GEM-DXK2) or "17" (GEM-DXRP3 / GEM-DXK3 or GEM-DXK4RF) appears on the LCD screen.
3. Press YES ("✓" or) to Enter Dealer Program Mode.
4. Press to exit Dealer Program Mode when finished.

CUSTOMIZING A DEFAULT PROGRAM


For new panels, you can design a default program that will best suit your application. Using this procedure, you will configure the panel for:

- Number of Zones in Area 1
- Panel Zone Doubling
- Fire Zones in Area 1
- 2-Wire Fire Zones in Area 1
- Local or Central Station Reporting System
- Exit/Entry Zones in Area 1
- Interior Zones in Area 1
- 24 Hour Zones in Area 1
- Chime Zones in Area 1
- Chime 2 Zones in Area 1
- Exit/Entry2 Zones in Area 1
- 50mS Loop Response Zones
- Aux Output Activated on Alarm Zones
- Sensor Watch Zones
- Keypad Sounder on Alarm Zones
- Auto Bypass re-entry Zones
- Enable no EOLR Zones
- Enable Telco Line Fault Test
- Enable Burg Output Chirp on Keyfob
- Enable CP-01
- Number of Keypads in Area 1
- Central Station Receiver 1 Tel. Number
- Central Station Receiver 1 Account Number
- Central Station Receiver 1 Format
- Enter User Codes
- RF Transmitter Points
 - *Quick Enroll Method*
- Key Fob Transmitters
- Enter Zone Descriptions
- Dealer Code
- Test Timer


This procedure will automatically set up system keypads, wireless transmitters, etc. After your basic default program has been loaded, you may alter it as necessary in the Direct Address Program Mode.

NEW PANELS: The custom default program may be created for new panels only. Once the panel has been programmed by any means, the number zones will be suppressed and cannot be changed. Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press the button to enter the Direct Address Program Mode; (b) access Location 2285 (Clear Program); (c) press the button and start over.

GEM-DXRP2 / GEM-DXK2 Keypad Easy Program Menu

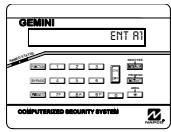


Enter the Dealer Security Code (default = 456789) for a new panel or enter your custom Dealer Program Code if programmed. Press the PRIOR/NO button repeatedly until "TURNON/PROG" is displayed. **NOTE:** If you pass "TURNON/PROG", you can scroll back by pressing . Press NEXT ("✓" or) to enter the Dealer Program Mode. In each of the following steps, press to jump to the next screen, NEXT ("✓" or) to go forwards, PRIOR ("X" or) to go backwards, to save and twice to exit at any time.

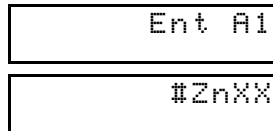

(Direct Entry)

Total Number of Zones in Area 1 (Appears for New Panel Only)


Directly enter the total number of zones to be programmed for Area 1. Valid entries are from 01 to 32. Directly enter the total number of zones, including leading zeros. Use number buttons through . **NOTE:** Press for a zero. The system is based on groups of 4 zones each (after the first 8 zones), and will automatically round up to the next group of 4. For example, if you enter 18, it will automatically convert this to 20 zones. Press to save. Press NEXT ("✓" or) to proceed.

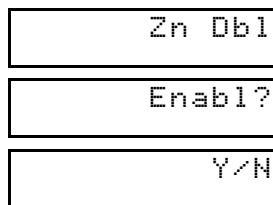

(Press YES "✓" or NO "X")

Panel Zone Doubling (Appears for New Panel Only)

If the total number of zones in Area 1 entered was 16 or greater, press NEXT ("✓" or) to effectively double the capacity of the control panel's hard wired zones from 8 to 16. The 16 zones will remain EOL terminated zones, but will be designated for Normally Closed devices only. The terminal for Zone 1 will now support Zones 1 and 9 with the use of the supplied EZ Zone Doubling™ resistors, E & Z supplied. (Refer to Wiring Diagram and Installation Instructions). If Panel Zone doubling is not desired, press PRIOR ("X" or) .

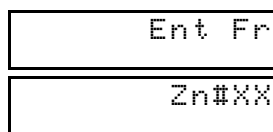


(Direct Entry)

Fire Zones in Area 1 (Appears for New Panel Only)

Enter the zone number of any zones which are to be used as Fire Zones (both 2-wire, 4-wire or wireless). Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros, and press to save, and then repeat for any additional zone(s). Press NEXT ("✓" or) to proceed.


NOTE: If you are programming a multiple Area system, enter all the zone numbers required for Areas 1 through 4. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in the other areas. See Zone Options.

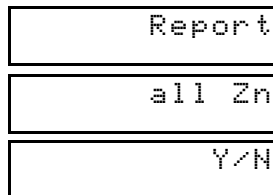

(Press YES "✓" or NO "X")

Local or Central Station Reporting System (Appears for New Panel Only)

Press NEXT ("✓" or) for all zones to report; press PRIOR ("X" or) for no zones to report (LOCAL SYSTEM).

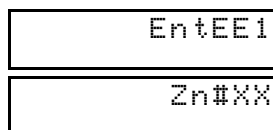

(Direct Entry)

Exit/Entry Zones in Area 1 (Appears for New Panel Only)







Directly enter the zone number of any zones which are to be used as Exit/Entry zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons through . **NOTE:** Press the button for a zero. Press to save and then repeat for any additional zone(s). Press NEXT ("✓" or) to proceed.

NOTE: Chime will automatically be programmed for all E/E zones. If you are programming a multiple area system, enter all exit/entry zone numbers required for Areas 1-4. The Direct Address Program Mode can then be used to remove zone from Area 1 and place them in Areas 2, 3 or 4. See Zone Options.

EntFol
Zn#XX

(Direct Entry)




Interior (Stay) Bypass Zones in Area 1 *(Appears for New Panel Only)*

Directly enter the zone number of any zones which are to be used as Interior Follower Zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons  through . **NOTE:** Press  for a zero. Press  to save and then repeat for any additional zone(s). Press NEXT ("" or ) to proceed. **NOTE:** All Interior Follower zones will also be automatically programmed as "Exit/Entry Follower" and "Power Up Delay" zones. If you are programming a multiple Area system, enter the total number of zones required for Areas 1-4. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Areas 2, 3 or 4. See Zone Options.

Ent24H
Zn#XX

(Direct Entry)




24 Hour Zones in Area 1 *(New Program Only)*

- Enter the zone numbers of zones to be used as 24 Hour zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and repeat for any additional zone(s); press NEXT ("" or ) to proceed.

EntCZ1
Zn#XX

(Direct Entry)

Chime Zones in Area 1 *(New Program Only)*




- Enter the zone numbers which are to be used as Chime Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press NEXT ("" or ) to proceed.

NOTE: A chime time of 2 seconds will be automatically programmed.

EntCZ2
Zn#XX

(Direct Entry)

Chime 2 Zones in Area 1 *(New Program Only)*




- Enter the zone numbers which are to be used as Chime 2 Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press NEXT ("" or ) to proceed.

NOTE: A chime time of 2 seconds will be automatically programmed. Chime 2 zones give a distinct pulsating tone when zone is faulted.

EntEE2
Zn#XX

(Direct Entry)

Exit/Entry2 Zones in Area 1 *(New Program Only)*




- Enter the zone numbers of zones to be used as Exit/Entry 2 zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and repeat for any additional zone(s); press NEXT ("" or ) to proceed.

NOTE: An Exit/Entry 2 Entry Time of 30 sec. will automatically be programmed.

Ent50m
Zn#XX

(Direct Entry)




50 mS Loop Response Zones *(New Program Only)*

- Enter the zone numbers of zones to be have a 50mS loop response. **Note:** Time can also be adjusted via address 2280.
- Valid entries are from 01 to 08. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press NEXT ("" or ) to proceed.

EntAux
Zn#XX

(Direct Entry)

AUX Output Activated on Alarm Zones *(New Program Only)*




- Enter the zone numbers of zones to activate the PGM2 output upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press NEXT ("" or ) to proceed.

NOTE: An Aux Output Timeout of 15 Minutes will automatically be programmed.

Ent SW
Zn#XX

(Direct Entry)

Sensor Watch Zones *(New Program Only)*




- Enter the zone numbers of zones to be Sensor Watch zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), Press NEXT ("" or ) to proceed.

NOTE: A Sensor Watch Time of 24 hours will automatically be programmed.

EntKPS
Zn#XX

(Direct Entry)

Keypad Sounder On Alarm Zones *(New Program Only)*



- Enter the zone numbers of all zones to activate the Keypad Sounder upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press NEXT ("" or ) to proceed.

EntAUB

Zn#XX

(Direct Entry)

Auto Bypass Re-entry Zones (New Program Only)



- Enter the zone numbers of zones to be Auto Bypass Re-entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press  to save and then repeat for any additional zone(s), press NEXT ("✓" or ) to proceed.
- Auto Bypass Re-entry Zones allow the system to be armed with the zone faulted but come back into the system (armed) when the zone is subsequently secured.

EnNEOL

Y/N

(Press YES "✓" or NO "X")

Enable No EOLR Zones (New Program Only)

- Press NEXT ("✓" or ) to program all zones except 24 Hr & fire zones for No End Of Line Resistor. Press PRIOR ("X" or ) to continue.



Telco

Ln Fit

Y/N

(Press YES "✓" or NO "X")

Enable Telco Line Fault Test? (New Program Only)

- Press NEXT ("✓" or ) to enable Telco Line Fault Test.
- Press PRIOR ("X" or ) to continue.

NOTE: If enabled, a Telco Line Fault Test Delay of 60 seconds will automatically be programmed.



KF Out

Chirp

Y/N

(Press YES "✓" or NO "X")

Enable Burg Output Chirp on KeyFob? (New Program Only)

- Press NEXT ("✓" or ) to enable Burg Output Chirp on KeyFob Arm / Disarm.
- Press PRIOR ("X" or ) to continue.

NOTE: The Burg Output will chirp once on Keyfob Arm and twice on Keyfob Disarm.



Enable

CP01?

Y/N

(Press YES "✓" or NO "X")

Enable SIA CP01? (New Program Only)

- Press NEXT ("✓" or ) to enable.
- Press PRIOR ("X" or ) to continue.






The SIA CP-01 Features are designed to reduce the incidence of false alarms. See WI1691, "Installer Programming Quick Reference Chart SIA False Alarm Reduction" and "LIB-P432EX Factory Default Description" for more information. **NOTE:** Do not enable unless reporting, otherwise system trouble *Fail to Communicate* may occur.

Ent A1

#KP 01

(Direct Entry)












Number of Keypads in Area 1

Directly enter the total number of Keypads to be installed in Area 1. Valid entries are from 01 to 07. Directly enter the number of keypads, including leading zeros. Use number buttons  through . **NOTE:** Press  for a zero. Press  to save. Press NEXT ("✓" or ) to proceed. **NOTE:** Area 2, 3 or 4 keypads can only be assigned in Direct Address Programming. See Keypad Options.

Phone#

(Direct Entry)

Central Station Receiver 1 Telephone Number

Using number buttons, enter telephone number of up to 16 digits including prefix letters, if necessary, for receiver 1. Use number buttons  through  for digits 1-9; press the   buttons for a zero and   through   for letters B-F, respectively. **NOTE:** Pre-Dial Delay = "D"; Dial-Tone Detection = "E". Pressing  will produce a blank space (•). Press  to save. Press NEXT ("✓" or ) to proceed.

NOTE: Central Station Receiver 2 and 3 Telephone Numbers can only be entered in Direct Address Programming. See CS Receiver Options.

Acc #
[_ _ _]

(Direct Entry)

Central Station Receiver 1 Account Number

Enter an account number of up to four digits. Use number buttons [1] through [9P] for digits 1–9.

NOTE: Press the [*] [0] buttons for a zero and press [0] for a blank space (•). Press [↓] to save. Press YES ("✓" or [Home]) to proceed.

NOTE: Central Station Receiver 2-4 Account Numbers can only be entered in Direct Address Programming. See CS Reporting Options.

RecFmt
()

(Direct Entry)

Central Station Receiver 1 Format

From the table below, enter the central station's receiver format. Use number buttons [1] through [9P].

NOTE: Press the [*] [0] buttons for a zero and press [0] for a blank space (•). Press [*] [1] through [*] [4] for letters B–E, respectively. Press [↓] to save. Press YES ("✓" or [Home]) to proceed.

NOTE: Central Station Receiver 2 and 3 Formats can only be entered in Direct Address Programming. See CS Receiver Options.

DATA ENTRY	CS RECEIVER 1 FORMAT
•(blank)	Ademco Slow, Silent Knight Slow
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow

DATA ENTRY	CS RECEIVER 1 FORMAT
5	Universal High Speed
B	SIA
C	Ademco Point ID
E	Pager

User01

(Direct Entry)

OPT_--

(Direct Entry)

ACC_--

(Direct Entry)

Enter User Codes (Press the [←] button to set cursor.)

For default program, enter up to 64 User Codes, with Area 1-4 Options.

Press [←] once to set the cursor to the User Code. Use the number buttons [1] through [9P] to enter a code from 3 to 6 digits. Enter up to 6 digits (4 digits is recommended) in the first six boxes from left to right for each user code. Valid entries are: 0-9. **NOTE:** Press [0] for a zero and press [*] [0] for a blank space (•). No blank spaces in between; leave blank (•) any trailing boxes. If "Enable Global Ambush Code" (Address 0720) is enabled and "Global Ambush Code" (Address 1054) is **not** left blank(•), *do not* program the first two digits of ANY User Code the same as the "Global Ambush Code". **Note:** If the programmed code was less than 6 digits, press [←] to set the cursor to the Area 1 Options Level (OPT). Refer to the table on the next page for the available area options. **Note:** Duplicate User Codes are not allowed; therefore a duplicate Code entered in the LCD Window will erase when [↓] is pressed.

USER OPTIONS				
USER CODE (UP TO 6 DIGITS)	AREA 1 OPTIONS	AREA 2 OPTIONS	AREA 3 OPTIONS	AREA 4 OPTIONS

USER AREA OPTIONS		
DATA ENTRIES		OPTION ENABLED
L	R	
blank(+)	blank(+)	Disabled
blank(+)	1	Arm/Disarm
blank(+)	2	Arm Only
blank(+)	3	Service
blank(+)	4	Access
blank(+)	5	Ambush
blank(+)	Add 8	* User Program
4	blank(+)	Bypass Enable

AREA OPTIONS: Area 1-4 Options may be programmed for all 64 users.

Select the desired Area Options (Area 1-4) from the table shown and enter in the remaining four boxes for each user code.

Example: Program a code of "2222" for user 02, with area 1 options of "Arm/Disarm" and "User Program". Enter "2222" for a user code, "(blank) 9" for area 1 options and "(blank) (blank)" for area 2 options.

AREA OPTIONS	EXPLANATION
Disabled	User Code not active in this area.
Arm/Disarm	Allows User Code to arm/disarm this area.
Arm Only	Prevents User Code from disarming this area.
Service	A Service Code has restricted arm/disarm rights; if an area is armed with a Service Code, a "MONITOR ON" appears on the GEM-DXRP2 keypad and the area can be disarmed with any valid User Code, including a Service Code. If the area is armed with OTHER than a Service Code, it CANNOT be disarmed with a Service Code. This is typically used to allow tradesmen access to premises under control of the owner.
Access	This is normally used to activate a door strike while an area is disarmed. Also program "Access Control on PGM2 Output" (Address 0719) and "PGM2 Output Access Control Timeout" (Address 0711).
Ambush	There are two types of Ambush Codes: (1) A 2-digit code (prefix) that is entered immediately prior to (and as part of) the regular User Code and (2) A separate and unique User Code. Disarming with an Ambush Code will cause a silent report to be sent to a central station. Thus, should a user be forced to disarm, he can silently signal an emergency while appearing to be merely disarming the system.
* User Program	User Program Option is enabled for Keypad 1 only, wherever it is connected (Area 1 or Area 2). To enable User Program Option for any user add 8 to the data entry for Area 1 Option (see example). Then, User Programming can be performed only at Keypad 1 by a user code with user program enabled.
Bypass Enable	Security Bypass--Bypass is enabled only with a security code.

For Area 2-4 Options (ACC), press again. Refer to the table above for available options. **NOTE:** Press for blank space (+).

Press to save. To proceed to the next User Code, press to set the cursor to the User Number and change it using the number buttons.

Program a new User Code as previously described. Remember to record your user codes in the *Easy Menu Programming Worksheet* at the back of this manual.

Related User Options: "Enable Global Ambush Code" (Address 1422), "Global Ambush Code" (Address 2045) & "Enable Manager's Mode" (Address 1421).

CHANGING OR CANCELING A CODE: To change any code, merely program over the existing code as described above and press to save. Similarly, to cancel a code, blank out each number of the code press to save.

Zn# 01

RF Transmitter Points (Press the button to set cursor.)

(For wireless systems only. Also see Quick Method, which follows)

000000

For each transmitter (key fob transmitters also), enter the **zone number** (01-32) to which the transmitter will be mapped, the **6-digit RF ID #:1-digit checksum number** printed on the transmitter and box, the **point number** (1-2); enter "9" for unsupervised (all points). **NOTE:** When programming the ID Code number, "0" through "9" = through ; "A" = ; "B" = ; "C" =

(Direct Entry)

; "D" = ; "E" = and "F" = . Press to save. Press

:0 Pt.

NEXT (" or) button to proceed.

(Direct Entry)

Quick Enroll Method.

If a receiver is already installed in the panel, Napco transmitter wireless points can be programmed automatically ("enrolled") using the following procedure. **NOTE:** The transmitter point will be enrolled only if the signal strength is 3 or greater.

1. Enter the zone number to which the transmitter point will be mapped.
2. Press the button to enter the Enroll Mode. The red and green LEDs on the keypad will flash.
3. Open the loop of the point that is to be programmed (GEM-TRANS2 only).
4. Install the transmitter battery. The keypad will beep to indicate that the point has been successfully enrolled. Multi-point transmitters can be mapped to successive zones simultaneously (see example).

Example. A 2-point transmitter has the RF ID number 287613:1. Map point 1 to Zone 6 and point 2 to Zone 9.

1. Enter the Enroll mode as described above.
2. Enter Zone "06".
3. Open point-1 loop.
4. Install the battery. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 1 will be mapped to Zone 6).
5. Enter Zone "09".
6. Close point-1 loop and open point-2 loop.
7. Remove the transmitter battery, then re-install it. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 2 is mapped to Zone 9).

KEY FOB ZONE ASSIGNMENT: Key fobs can also be assigned to zones to allow multiple wireless panic buttons on one alarm system, each reporting to a central station, a pager or having a description on the keypad that describes the person holding the key fob, the location where the person holding the key fob is stationed, or the special purpose of the key fob button being depressed. See *Key Fob Transmitters as Zone Input Devices* .

KFob01

Key Fob Transmitters as Arm/Disarm & Control Devices
(Press to set cursor).

Area

Keyfobs can be programmed as "Arm/Disarm" devices using their On/Off buttons (refer to WI752). For each Key Fob Transmitter, enter:

(Direct Entry)

The **Key Fob Transmitter number** (01–08). Press through for 01-08.

000000

Area number to which transmitter is assigned (0 to disable keyfob, 1 - 4). Press , and for 0, 1 and 2, respectively.

(Direct Entry)

The **6-digit RF ID #** printed on the transmitter (enter all numbers and/or letters, including leading "0"s, if any): "0" through "9" = through ; "A" = ; "B" = ; "C" = ; "D" = ; "E" = and "F" = .

: 0 0 0

1-digit checksum number printed on the transmitter.

(Direct Entry)

Aux 1 Option (see key fob aux 1 & aux 2 options).

Aux 2 Option (see key fob aux 1 & aux 2 options).

DATA ENTRY	AUX 1/AUX 2 OPTIONS
0	None
1	Relay Group 1 Toggle
2	Relay Group 2 Toggle
9	Keypad Panic
A	Keypad Aux.
B	Instant
C	PGM2 Output Toggle
D	Access on PGM2 Output
E	Arm Stay
F	Interior Button

For Aux 1/Aux 2 Options: "0", "1", "2" and "9" = , , and , respectively; "A" = ; "B" = ; "C" = and "D" = .

If the Key Fob is converted for Two Button "Emergency Use" (by cutting an internal jumper), both top or bottom buttons must be depressed to activate an alarm. In this case, the Aux-1 and Aux-2 cannot be programmed. Press to save. Press NEXT (" or ") to proceed.

Key Fob Transmitters as Zone Input Devices

(refer to display as shown above: press the PRIOR/NO button to go backwards).

Each of the 4 key fob buttons can be assigned to a zone. For example, On button = point 1; Off button = point 2; A1 = point 3; A2 = point 4. Up to 64 key fobs (using 1 button) or 32 key fobs (using 2 buttons) or 16 key fobs (using all 4 buttons) or any combination up to a maximum of 64 controlled zones can be assigned, providing multiple wireless panic buttons on a system, each reporting to a Central Station or a pager and/or annunciating on a keypad the key fob zone number with description/location. *To assign a key fob to a zone:* program the keyfob as you would a transmitter, entering the keyfob's ID code, check sum and point number at the appropriate zone. The "Quick Method" is not allowed. The zone may be hardwired to an electrical sensor as well as assigned to a key fob (either one will activate the zone alarm output). **NOTE:** If assigning a key fob to a zone, the "ON/OFF" buttons on the key fob will no longer arm/disarm the system. The key fob is converted to a "panic only" device.

ZONE DESCRIPTIONS: GEM-DXRP2 cannot be used to enter Zone Descriptions. To enter Zone Descriptions, you must use the *GEM-DXRP1 Keypad / GEM-DXK1 Keypad (See WI1690) or the Napco PCD-Windows Quickloader Software.*

D Code

Dealer Code

(Direct Entry)



Directly enter the Dealer Code (default = 456789), including leading zeros. Use the through buttons. **NOTE:** Press for a zero. Press to save. Re-enter the Dealer Code to verify the previous code. Press to save. Press NEXT (" or ") to proceed.





456789

(Direct Entry)

RE-ENT

(Direct Entry)

EXIT DEALER PROGRAM MODE: This completes the custom default program. Press the  button to enter the Direct Address Program Mode for further programming or press  once again to end all programming and resume normal keypad operation.


CLEAR PROGRAM: Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press  to enter the Address Program Mode; (b) access Location 2285 (Clear Program) or 2286 (Cold Start); (c) press  and then (d) press  to exit the Dealer Program Mode. A "SYSTEM TROUBLE/E09-00 SERVICE" will occur. Press  to silence the keypad.

2285 XX

(Direct Entry)

Clear Dealer Program (Erases Dealer Program)

This *erases the dealer program*. Use this feature to start a customized default program. Program Data and System Status Memory is erased where Scheduled Data and Zone Descriptions are maintained.


Access address 2285, then press the  button. Data entry is not allowed. **NOTE:** Enter Easy Menu Driven Program Mode to program system again.

2286 XX


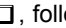

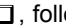









(Direct Entry)



Cold Start (Erases Entire Program)

This erases the entire program including Dealer Program by erasing Program Data, Zone Description Data and System Status Data (similar to a new panel).

Access address 2286, then press the  button. Data entry is not allowed. **NOTE:** Some features (schedules) can only be programmed again with the Downloading Software.






GEM-DXRP3 / GEM-DXK3 and GEM-DXK4RF Keypad Easy Program Menu

Enter the Default Dealer Program Code ("456789") for a new panel or enter your custom Dealer Program Code if programmed. Press , followed by PRIOR ("X" or ) repeatedly until "17" is displayed (you can scroll back by pressing ). Press NEXT ("✓" or ) to enter Dealer Program Mode. For the GEM-DXRP3 / GEM-DXK3 and GEM-DXK4RF, questions are in the form of a 2-digit number flashing in the display. Press  to set the cursor into the next field to answer the question, press  again to scroll through each segment, and press NEXT ("✓" or ) to go to the next question. To review your Easy Program Mode responses (before pressing  to save), press  until the 2-digit question number flashes in the display again. If the data is correct, press  to save. If the data is incorrect, press  to set the cursor into the next field and again enter your data. **Note:** Review your Easy Program Mode responses after the initial programming of the control, except for questions marked "For New Panel Only". These questions set up the basic structure of the panel program ("Number of Zones in an Area", etc.) and cannot be viewed or altered once set. To exit the Dealer Program Mode, press RESET () twice to resume normal keypad operation. To return the panel to the factory default, enter the Direct Address Program Mode, go to location 2286 and press .



(Direct Entry)



Total Number of Zones *(Appears for New Panel Only)*

Directly enter the total number of zones to be programmed. Valid entries are from 01 to 32. Directly enter the total number of zones, including leading zeros. Use number buttons  through . **NOTE:** Press the  button for a zero. The system is based on groups of 4 zones each (after the first 8 zones), and will automatically round up to the next group of 4. For example, if you enter 18, it will automatically convert this to 20 zones. Press  to save. Press NEXT ("✓" or ) to proceed.



(Press YES "✓" or NO "X")



Panel Zone Doubling *(New Program Only)*

- To double the number of hardwired panel zones from 8 to 16, press NEXT ("✓" or ).
- If Panel Zone doubling is not desired, press PRIOR ("X" or ).
- The 16 zones will remain EOL terminated zones, requiring Normally Closed devices only.
- Refer to Wiring Diagram and Installation Instructions for wiring instructions




(Direct Entry)

Fire Zones *(Appears for New Panel Only)*



Enter the zone number of any Fire Zones (both 2-wire, 4-wire or wireless). Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros, and press  to save, and then repeat for any additional zone(s). Press NEXT ("✓" or ) to proceed.


NOTE: If you are programming a multiple Area system, enter the zone number of zones required for Areas 1-4. The Direct Address Program Mode can then be used to remove zones from Area 1 and place them in Areas 2-4. See Zone Options.



(Press YES "✓" or NO "X")






Local System or C.S. Reporting System *(Appears for New Panel Only)*

Press NEXT ("✓" or ) for all zones to report; press PRIOR ("X" or ) for no zones to report (LOCAL SYSTEM).



(Direct Entry)

Exit/Entry Zones *(Appears for New Panel Only)*

Directly enter the zone numbers which are to be used as Exit/Entry zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons  through . **NOTE:** Press the  button for a zero. Press  to save and then repeat for any additional zone(s). Press NEXT ("✓" or ) to proceed.

NOTE: Exit/Entry Zones will have an entry delay of 30 seconds and an exit delay of 60 seconds.



(Direct Entry)

Interior Zones *(Appears for New Panel Only)*

Directly enter the zone numbers which are to be used as Interior Zones. Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros. Use number buttons through

. **NOTE:** Press the button for a zero. Press to save and then repeat for any additional zone(s). Press NEXT ("" or) to proceed.

NOTE: All Interior zones will also be automatically programmed as "Exit/Entry Follower" and "Power Up Delay" zones.



(Direct Entry)

24 Hour Zones in Area 1 *(New Program Only)*

- Enter the zone numbers of zones to be used as 24 Hour zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and repeat for any additional zone(s); press NEXT ("" or) to proceed.



(Direct Entry)

Chime Zones in Area 1 *(New Program Only)*

- Enter the zone numbers which are to be used as Chime Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press NEXT ("" or) to proceed.

NOTE: A chime time of 2 seconds will be automatically programmed.



(Direct Entry)

Chime 2 Zones in Area 1 *(New Program Only)*

- Enter the zone numbers which are to be used as Chime 2 Zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), Press NEXT ("" or) to proceed.

NOTE: A chime time of 2 seconds will be automatically programmed. Chime 2 zones give a distinct pulsating tone when zone is faulted.




(Direct Entry)

Exit/Entry2 Zones in Area 1 *(New Program Only)*

- Enter the zone numbers of zones to be used as Exit/Entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and repeat for any additional zone(s); press NEXT ("" or) to proceed.

NOTE: An Exit/Entry 2 Entry Time of 30 sec. will automatically be programmed.



(Direct Entry)

50 mS Loop Response Zones *(New Program Only)*

- Enter the zone numbers of zones to be have a 50mS loop response.
- Valid entries are from 01 to 8. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press NEXT ("" or) to proceed. **Note:** Time can also be adjusted via address 2280.



(Direct Entry)

Aux Output Activated on Alarm Zones *(New Program Only)*

- Enter the zone numbers of zones to activate the PGM2 Output upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), Press NEXT ("" or) to proceed.

NOTE: A PGM2 Output Timeout of 15 Minutes will automatically be programmed.



(Direct Entry)

Sensor Watch Zones (New Program Only)


- Enter the zone numbers of zones to be Sensor Watch zones.
 - Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
 - Press to save and then repeat for any additional zone(s), press NEXT ("" or) to proceed.
- NOTE:** A Sensor Watch Time of 24 hours will automatically be programmed.



(Direct Entry)

Keypad Sounder On Alarm Zones (New Program Only)


- Enter the zone numbers of all zones to activate the Keypad Sounder upon alarm.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press NEXT ("" or) to proceed.



(Direct Entry)

Auto Bypass Re-entry Zones (New Program Only)


- Enter the zone numbers of zones to be Auto Bypass Re-entry zones.
- Valid entries are from 01 to 32. Directly enter each zone number, including leading zeros.
- Press to save and then repeat for any additional zone(s), press NEXT ("" or) to proceed.
- Auto Bypass Re-entry Zones allow the system to be armed with the zone faulted but come back into the system (armed) when the zone is subsequently closed.



(Press YES "" or NO "")

Enable No EOLR Zones (New Program Only)

- Press NEXT ("" or) to program all zones except 24 Hr & fire zones for No End Of Line Resistor. Press the PRIOR/NO button to continue.



(Press YES "" or NO "")

Enable Telco Line Fault Test?


- Press NEXT ("" or) to enable Telco Line Fault Test.
 - Press the PRIOR/NO button to continue.
- NOTE:** There is a preset 60 second Telco Line Fault Test Delay.



(Press YES "" or NO "")

Enable Burg Output Chirp on KeyFob?


- Press NEXT ("" or) to enable Burg Output Chirp on KeyFob Arm / Disarm.
 - Press the PRIOR/NO button to continue.
- NOTE:** The Burg Output will chirp once on Keyfob Arm and twice on Keyfob Disarm.




(Press YES "" or NO "")

Enable SIA CP-01?


- Press NEXT ("" or) to enable.
 - Press the PRIOR/NO button to continue.
- The SIA CP-01 Features are designed to reduce the incidence of false alarms. **NOTE:** Do not enable unless reporting, otherwise system trouble *Fail to Communicate* may occur.

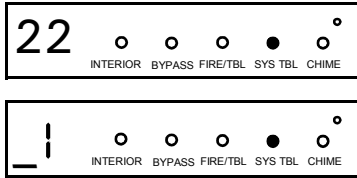


(Direct Entry)

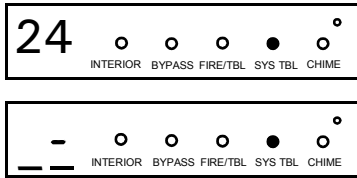

(Direct Entry)

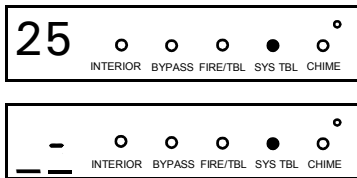

(Direct Entry)

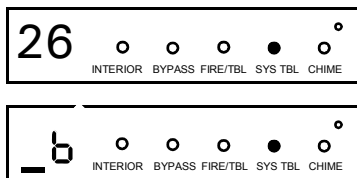

(Direct Entry)

Number of Keypads

Directly enter the total number of Keypads to be installed. Valid entries are from 01 to 07. Directly enter the number of keypads, including leading zeros. Use number buttons [1] through [9P].

NOTE: Press [0] for a zero. Press [↓] to save. Press NEXT ("✓" or [🏠]) to proceed.

Central Station Receiver 1 Telephone Number

Using number buttons, enter telephone number of up to 16 digits including prefix letters, if necessary, for receiver 1. Use number buttons [1] through [9P] for digits 1–9; press [*][0] for a zero and [*][1] through [*][5] for letters B–F, respectively. **NOTE:** Pre-Dial Delay = "D"; Dial-Tone Detection = "E". Pressing [0] will produce a blank space (•). Press [↓] to save. Press NEXT ("✓" or [🏠]) to proceed. **NOTE:** Central Station Receiver 2 and 3 Telephone Numbers can only be entered in Direct Address Programming. See CS Receiver Options.

Central Station Receiver 1 Account Number

Enter an account number of up to four digits. Use number buttons [1] through [9P] for digits 1–9. **NOTE:** Press the [0] button for a zero and press the [*][0] buttons for a blank space (•). Press [↓] to save. Press NEXT ("✓" or [🏠]) to proceed. **NOTE:** Central Station Receiver 2 and 3 Account Numbers can only be entered in Direct Address Programming. See CS Reporting Options.


Central Station Receiver 1 Format

From the table below, enter the central station's receiver format. Use number buttons [1] through [9P]. **NOTE:** Press the [0] button for a zero and press [*][0] for a blank space (•). Press [*][1] through [*][4] for letters B–E, respectively. Press [↓] to save. Press NEXT ("✓" or [🏠]) to proceed.

DATA ENTRY	CS RECEIVER 1 FORMAT
blank(•)	Ademco Slow, Silent Knight Slow
1	Sescoa, Vertex, DCI, Franklin Fast
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow
5	Universal High Speed
8	Radionics BFSK

DATA ENTRY	CS RECEIVER 1 FORMAT
9	FBI 4/3/1
0	Radionics Modem 2
B	SIA
C	Ademco Point ID
D	Ademco Express
E	Pager

NOTE: Modem IIe is available only in Direct Address Programming. Central Station Receiver 2 and 3 Formats can only be entered in Direct Address Programming. See CS Receiver Options.

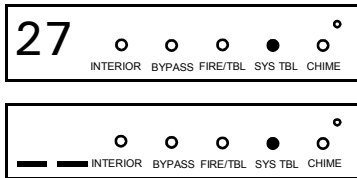

(Direct Entry)

Enter User Codes (Press the [👁] button to set cursor)

Enter up to 64 User Codes with User Options for each code. Refer to the tables below for available data entries for User Options.

👁 Press [👁] once to set cursor to the User Number and enter the desired User Number. Press [👁] once again to set the cursor to the User Code. Use the number buttons [1] through [9P] to enter a code from 3 to 6 digits. Enter up to 6 digits (4 digits are recommended) in the first six boxes from left to right for each user code. Valid entries are: 0-9. **Note:** Press [0] for a zero. No blank spaces in between; leave blank (•) any trailing boxes. If an "Ambush Prefix" (Address 0495) is entered, *do not* program the first two digits of ANY User Code as the same digits entered for the "Ambush Prefix".

👁 If the programmed code is less than 6 digits, press [👁] to set the cursor to USER OPTIONS.

👁 Refer to the tables on the next page for the available User Option data entries.

USER OPTIONS				
USER CODE (UP TO 6 DIGITS)	AREA 1 OPTIONS	AREA 2 OPTIONS	AREA 3 OPTIONS	AREA 4 OPTIONS

USER AREA OPTIONS		
DATA ENTRIES		OPTION ENABLED
L	R	
blank(+)	blank(+)	Disabled
blank(+)	1	Arm/Disarm
blank(+)	2	Arm Only
blank(+)	3	Service
blank(+)	4	Access
blank(+)	5	Ambush
blank(+)	Add 8	* User Program
4	blank(+)	Bypass Enable

USER OPTIONS: Area 1-4 options for 64 Users:

Select the desired options from the table shown and enter in the remaining boxes for each user code.

Example: Program a code of "1234" for user 02, with Area 1 options of "Arm/Disarm" and "User Program":

With "27" displayed in keypad window, press , (User 2), , (User Code), (User Area 1 options), (User Area 2 Options), and (save).

Notes: (1) For User Code, press for Blank Space; (2) For User Options, press for Blank Space.

CODE TYPE	EXPLANATION
Disabled	User Code not active.
Arm/Disarm	Allows User Code to arm/disarm.
Arm Only	Prevents User Code from disarming.
Service	A Service Code has restricted arm/disarm rights; if an area is armed with a Service Code, a "SERVICE ON" appears on the GEM-DXRP2 keypad and the area can be disarmed with any valid User Code, including a Service Code. If the area is armed with OTHER than a Service Code, it CANNOT be disarmed with a Service Code. This is typically used to allow tradesmen access to premises under control of the owner.
Access	This is normally used to activate a door strike. Also program "Access Control on PGM2 Output" (Address 0719) and "PGM2 Output Access Control Timeout" (Address 0711).
Ambush	There are two types of Ambush Codes: (1) A 2-digit code (prefix) that is entered immediately prior to (and as part of) the regular User Code and (2) A separate and unique User Code. Disarming with an Ambush Code will cause a silent report to be sent to a central station. Thus, should a user be forced to disarm, he can silently signal an emergency while appearing to be merely disarming the system.
* User Program	User Program Option is enabled for Keypad 1 only, wherever it is connected. To enable User Program Option for any user add 8 to the data entry Option (see example). Then, User Programming can be performed only at Keypad 1 by a user code with user program enabled.
Bypass Enable	Security Bypass--Bypass is enabled only with a security code.

Related User Options: "Enable Global Ambush Code" (Address 1422) & "Global Ambush Code" (Address 2045).

CHANGING OR CANCELING A CODE: To change any code, merely program over the existing code as described above and press to save. Similarly, to cancel a code, blank out each number of the code and press to save. **Note:** Duplicate User Codes are not allowed; therefore a duplicate Code entered in the LCD Window will erase when is pressed.



RF Transmitter Points (Press the button to set cursor)

(For wireless systems only. Also see Quick Method, which follows).

For each transmitter (key fob transmitters also), enter the zone number (01-64) to which the transmitter will be mapped, the 6-digit RF ID#: 1-digit checksum number printed on the transmitter and box, the point number (1-4); enter "9" for unsupervised (all points). **NOTE:** When programming the ID Code number, "A" = ; "B" = ; "C" = ; "D" = ; "E" = ; "F" = . Press to save. Press NEXT (" or) to proceed.

Quick Enroll Method

If a receiver is already installed in the panel, Napco transmitter wireless points can be programmed automatically ("enrolled") using the following procedure. **NOTE:** The transmitter point will be enrolled only if the signal strength is 3 or greater.

1. Enter the zone number to which the transmitter point will be mapped.
2. Press the button to enter the Enroll Mode. The red and green LEDs on the keypad will flash and the window will display as shown at left.
3. Open the loop of the point that is to be programmed (GEM-TRANS2 or GEM-TRANS4 only).
4. Install the transmitter battery. The keypad will beep to indicate that the point has been successfully enrolled. Multi-point transmitters can be mapped to successive zones simultaneously (Example 1) or to selected zones point by point (Example 2).

Example 1. A 4-point transmitter has the RF ID number 410078:1. Map the first three points to Zones 11-13, respectively.

1. Enter the Enroll mode as described in step 2 above.
2. Enter Zone "11".

3. Open the loops of points 1, 2 and 3.
4. Install the transmitter battery. The keypad will beep 3 times to indicate that three points have been programmed.
- Transmitter 410078:1, point 1 will be mapped to Zone 11.
- Transmitter 410078:1, point 2 will be mapped to Zone 12.
- Transmitter 410078:1, point 3 will be mapped to Zone 13. The keypad will now display Zone 13, the last zone enrolled.

Example 2. A 2-point transmitter has the RF ID number 287613:1. Map point 1 to Zone 6 and point 2 to Zone 9.

1. Enter the Enroll mode as described above.
2. Enter Zone "06".
3. Open point-1 loop.
4. Install the battery. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 1 will be mapped to Zone 6).
5. Enter Zone "09".
6. Close point-1 loop and open point-2 loop.
7. Remove the transmitter battery, then re-install it. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 2 is mapped to Zone 9).

KEY FOB ZONE ASSIGNMENT: Key fobs can also be assigned to zones to allow multiple wireless panic buttons on one alarm system, each reporting to a central station, a pager or having a description on the keypad that describes the person holding the key fob, the location where the person holding the key fob is stationed, or the special purpose of the key fob button being depressed. *See the next page on key fob Zone Assignment.*



Key Fob Transmitters (Press to set cursor).

Keyfobs can be programmed as "Arm/Disarm" devices (refer to WI752).

For each Key Fob Transmitter, enter:

- The Key Fob Transmitter number (01–08).
- Area number to which transmitter is assigned (1 - 4); enter 0 to disable keyfob.
- The 6-digit RF ID # printed on the transmitter (enter all numbers and/or letters, including leading "0"s, if any).

1-digit checksum number printed on the transmitter (enter all numbers and/or letters, including leading "0"s, if any).

Aux-1 Option (see key fob aux 1 & aux 2 options).

Aux-2 Option (see key fob aux 1 & aux 2 options).

Press to save. Press NEXT (" or ") to proceed.

DATA ENTRY	AUX 1/AUX 2 OPTIONS
0	None
1	Relay Group 1 Toggle
2	Relay Group 2 Toggle
9	Panic
A	Auxiliary
B	Instant
C	PGM2 Output Toggle
D	Access on PGM2 Output
E	Arm Stay
F	Interior Button

NOTE: Key fobs 1-8 report openings and closings as Users 57-64.

Note: If the Key Fob is converted for Two Button "Emergency Use" (by cutting an internal jumper), both top or bottom buttons must be depressed to activate an alarm. In this case, the Aux-1 and Aux-2 cannot be programmed.

Key Fob Transmitters as Zone Input Devices (refer to display above: press PRIOR (" or ") to go backwards).

Each of the 4 key fob buttons can be assigned to a zone. For example, On button = point 1; Off button = point 2; A1 = point 3; A2 = point 4. Up to 64 key fobs (using 1 button) or 32 key fobs (using 2 buttons) or 16 key fobs (using all 4 buttons) or any combination up to a maximum of 64 controlled zones can be assigned, providing multiple wireless panic buttons on a system, each reporting to the Central Station or a pager and/or annunciating on a keypad the key fob zone number with description/location. *To assign a key fob to a zone:* program the key fob as you would a transmitter, entering the key fob's ID code, check sum and point number at the appropriate zone. The "Quick Method" is not allowed. The zone may be hardwired to a sensor as well as assigned to a key fob (either one will activate the zone alarm output). **NOTE:** If assigning a key fob to a zone, the "ON/OFF" buttons on the key fob will no longer arm/disarm the system. The key fob is converted to a "panic only" device.

ZONE DESCRIPTIONS: GEM-DXK3 or GEM-DXRP3 cannot be used to enter Zone Descriptions. To enter Zone Descriptions, you must use the GEM-DXK1 or GEM-DXRP1 keypad or the Napco Quickloader Software.

DATE ENTRY: GEM-DXK3 or GEM-DXRP3 cannot be used to enter the date. To enter Date, you must use the GEM-DXK1 or GEM-DXRP1 keypad (Version 5 or later) or the Napco Quickloader Software.

TIME ENTRY: GEM-DXK3 or GEM-DXRP3 cannot be used to enter the time. To enter Time, you must use the GEM-DXK1 or GEM-DXRP1 keypad (Version 5 or later) or the Napco Quickloader Software.



Dealer Code

Directly enter the Dealer Code, including leading zeros. Use the through buttons.

NOTE: Press for a zero. Press to save.



(Direct Entry)


Re-enter the Dealer Code to verify the previous code. Press to save. Press NEXT ("") or to proceed. **NOTE:** The Dealer Code can be two or more digits (up to 6 digits).

EXIT DEALER PROGRAM MODE: This completes the custom default program. Press to enter the Direct Address Program Mode for further programming or press once again to end all programming and resume normal keypad operation.

CLEAR PROGRAM: Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press to enter the Address Program Mode; (b) access Location 2285 (Clear Program) or 2286 (Cold Start); (c) press and then (d) press to exit the Dealer Program Mode. A System Trouble Condition will occur. Press to silence the keypad.

DIRECT ADDRESS PROGRAM MODE


This is an extension of the Dealer Program Mode. This method of programming is used in conjunction with the Keypad Programming Worksheets that follow. Refer to these worksheets to identify the 4-digit location (address) of the feature to be programmed. An illustrative example is provided on the next page.

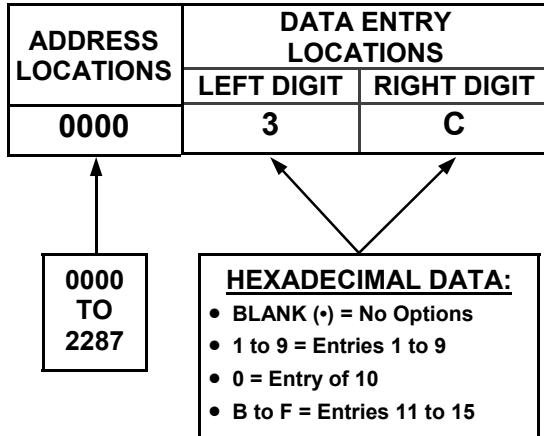




KEYPAD PROGRAMMING OVERVIEW


Direct Address Programming allows you to go directly to the address locations and change the data entries to customize your control panel options. Whereas the Easy Menu Program Mode is a simple quick start guide with limited options, the Direct Address Program Mode is more flexible allowing you to change all the options. It consists of multiple address locations with two data entry locations each (left and right) as shown in the adjacent diagram.

ACCESSING DIRECT ADDRESS PROGRAM MODE


1. Press 

Dealer Security Code
(Default is 456789)
2. Press PRIOR ("X" or ) until "TURNON PROG Y/N" (GEM-DXRP2 / GEM-DXK2) or "1?" (GEM-DXRP3 / GEM-DXK3 or GEM-DXK4RF) appears on the LCD screen.
3. Press YES ("✓" or ) to Enter Dealer Program Mode. (The panel and keypad version appears briefly on the keypad display).
4. Press  to exit Easy Menu Driven Program Mode & enter Direct Address Program Mode. (For keypad display examples when in Program Mode, see next page).

KEYPAD ADDRESS PROGRAM MODE DISPLAY

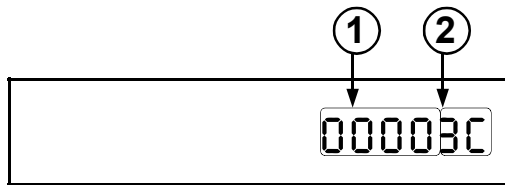


GEM-DXRP2 / GEM-DXK2 Keypads

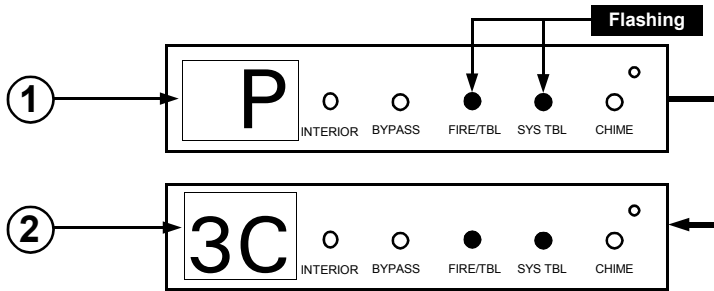

GEM-DXRP3 / GEM-DXK3 Keypads

Press followed by (1) the 4 digit address location, and (2) the corresponding data shown.

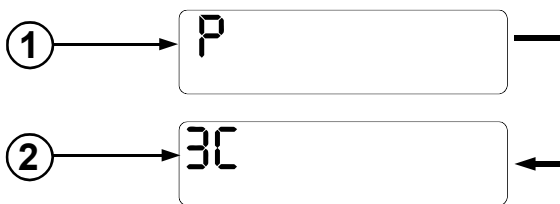

GEM-DXK4RF Series Keypads

Press followed by (1) the 4 digit address location, and (2) the corresponding data location. **Note:** A long beep sounds when in Address Program Mode.

① = ADDRESS LOCATION ② = DATA ENTRY LOCATION (Left and Right Digits)

DIRECT ADDRESS PROGRAM MODE KEYPAD COMMANDS

A. GEM-DXK2 (and GEM-DXRP2) Keypad

To access, press in Dealer Program Mode.

1. Toggle Cursor to 4-digit address field using the button.
2. Enter address Number directly using number buttons (0-9).
3. Enter Data directly using number buttons.*
4. Press the button to save.

To exit, press .


NOTE: Press button to clear character at cursor. Select NEXT/PRIOR Address.




Press to jump to next programming block.


* Press through for 10-15, respectively.

GEM-DXK2

B. GEM-DXK3 / GEM-DXRP3 Keypads

To access Direct Address Program Mode, press RESET () in the Easy Menu Mode.

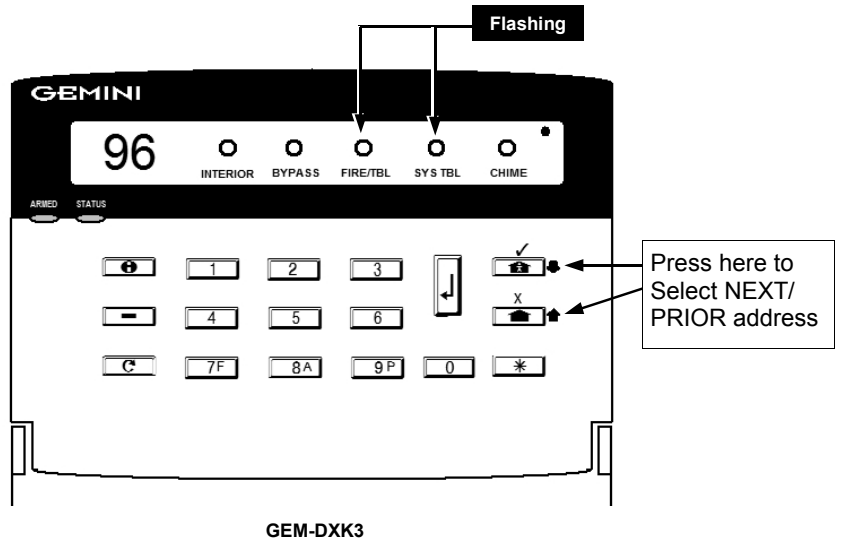

1. Press .
 2. Enter the 4 digit Address location directly using number buttons (0-9).
 3. Enter the 2 digit data directly using number buttons (0-9).
 4. Press  to save.
- To exit, press RESET ().





Example: Direct Address Programming

Program Zones 6, 7 and 8 as Exit/Entry Follower Zones.
















DETERMINE THE DATA ENTRIES

1. Referring to ZONE FEATURES in the Programming Worksheets that follow, Exit/Entry Follower for Zones 6 through 8 are located at address 0916, left digit. With a pencil, circle the data values for Zones 6–8.
2. Add the data values for Zones 6, 7 and 8: $2+4+8=14$. From Tables 1 and 2, "14" (E) is entered as press  . The right digit (for Zones 1 through 4, none of which are Exit/Entry Follower Zones) is entered as a blank (•).



ZONE OPTION	ZONES LEFT DATA VALUES SUM = 14 (CIRCLE )				ADDRESS 0916			ZONES RIGHT DATA VALUES SUM = 0 (CIRCLE )			
	ZN08	ZN07	ZN06	ZN05	L	ADDR	R	ZN04	ZN03	ZN02	ZN01
EXIT/ENTRY FOLLOWER	8	4	2	1	E	0916	BLANK (•)	8	4	2	1

↑ ENTER THIS DATA ↓


PROGRAM THE DATA ENTRIES



1. Enter the panel's Dealer Security Code, then press .
2. Answer NO ("X" or ) to all questions until "ACTIVATE PROGRAM Y/N" is displayed; then press NEXT (" or ). **NOTE:** If you pass "ACTIVATE PROGRAM", scroll backward using .
3. Press  to enter the Address Program Mode. Address "0000" will display.
4. Press     to access Address 0916. *The data for both digits will display and the cursor will advance to the data field.*
5. Press   to enter an "E" in the left digit and press  to enter a blank (•) in the right digit.
6. Press  to save. Address 0916 is now programmed with "E •".
7. Enter another 4-digit address to continue programming or press  to exit and resume normal keypad operation.


The displays shown on the previous pages will appear after a brief delay.

Use  Use  to toggle the cursor between the 4-digit address field and the data entry locations.

 Enter the address directly using the number buttons.

 The contents of the address will be read automatically, along with the feature name and programming information. The cursor will advance to the data field. Enter the required data directly using the number buttons.

 Press  to save the contents of each address.

EXIT DIRECT ADDRESS PROGRAM MODE: When done, press RESET () to exit and resume normal keypad operation.






CONVENTIONS USED IN THIS MANUAL

The Keypad Programming Worksheets in the back are provided as an address-programming reference to help the installer modify his custom default program or to make minor field alterations to an existing panel program. It is recommended that the panel be uploaded to NAPCO's PCD-Windows software following any keypad programming and that the PCD-Windows error-check feature be utilized to reduce the possibility of programming omissions or conflicts.

Note: Most of the addresses shown comprise two data entry locations, left and right digits. Program the left digits on the left data-display segment, and the right digit on the right segment. For those addresses having only one programmable nibble, program the right segment only; the left segment should display a blank (*).

Keep the Keypad Programming Worksheets on file for future reference.

General Programming Steps

- Contact the central station to ascertain receiver format, data format, event codes, subscriber numbers and telephone number(s).
- Select the desired features by circling  the respective "address" boxes. Refer to the Programming Options and Worksheets for guidance in selecting the "data" (1,2,4,8) to be entered into those boxes.
- Program the data entered in the boxes on the worksheets into the respective addresses. The display will show the entry numerically, but will display "0" for the number 10, and letters "B", "C", "D", "E", and "F" for the numbers 11 through 15, respectively. To program a 10, press *. To program 11 through 15, press * through *5, respectively.

























DATA ENTRY SELECTIONS (BINARY VALUE CIRCLED) 				ENTRY TOTAL	PRESS 	KEYPAD DISPLAYS
8	4	2	1	blank	 0	•
8	4	2	①	1	 1	1
8	4	②	1	2	 2	2
8	4	②	①	3	 3	3
8	④	2	1	4	 4	4
8	④	2	①	5	 5	5
8	④	②	1	6	 6	6
8	④	②	①	7	 7F	7
⑧	4	2	1	8	 8A	8
⑧	4	2	①	9	 9P	9
⑧	4	②	1	10	 *  0	0
⑧	4	②	①	11	 *  1	B
⑧	④	2	1	12	 *  2	C
⑧	④	2	①	13	 *  3	D
⑧	④	②	1	14	 *  4	E
⑧	④	②	①	15	 *  5	F

Table 1 (above). Determining data entry for a location (each "nibble"). Numbers in parentheses indicate data for selected zones or features. (See Programming Worksheets that follow).

NOTE: See the Direct Address Programming Example on the previous page.

SYSTEM DELAYS & TIMEOUTS (ADDRESS 0000-0002, 1413, 1417, 2050 & 2055)

EXIT DELAY (sec.)	ADDRESS 0000	
	LEFT	RIGHT

[Default = 3 C]

ENTRY DELAY 1 (sec.)	ADDRESS 0001	
	LEFT	RIGHT

[Default = 1 E]

ENTRY DELAY 2 (sec.)	ADDRESS 0002	
	LEFT	RIGHT

[Default = 1 E]

PGM2 Output Access Cntrl Timeout (sec.)	ADDRESS 1413	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

ABORT DELAY (sec.)	ADDRESS 1417	
	LEFT	RIGHT

[Default = 1 E]

DATA ENTRIES		DELAY/ TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 sec.
blank (*)	F	15 sec.
1	E	30 sec.
2	D	45 sec.
3	C	60 sec.
5	0	90 sec.
7	8	120 sec.
↓	↓	↓
F	F	255 min.

1. Select delay/timeout (0-255 sec.) from the table shown.

2. Enter in corresponding address locations above (left and right digits).

3. For a desired delay/timeout not listed do the following:
 A. Choose a desired delay/timeout, ex: 20 sec.
 B. Divide it by 16

4. Press or to save.

16	20	1	Quotient	→	Left Digit
	-16				
	4				4
					Remainder → Right Digit

EXIT/ENTRY DELAYS: Apply only to zones programmed with the following options "Exit/Entry 1, Exit/Entry 2, Exit/Entry Follower". **NOTE:** Sensor Watch Time Options are similar to above table, except in hours.

Sensor Watch Time (Hrs.)	ADDRESS 2050	
	LEFT	RIGHT

[Default = 24 HRS = 1 8]

Report Cancel Window (min.)	ADDRESS 2055	
	LEFT	RIGHT

[Default = zero minutes = blank (*) blank (*)]

PROGRAMMING TIMEOUTS: Either use the tables provided or calculate your own timeout using the steps indicated. **WARNING:** Timers have uncertainty of +/-1sec, so a "time" of 1 second may actually timeout IMMEDIATELY.

SYSTEM DELAYS & TIMEOUTS (ADDRESS 1418 & 1419)

CHIME TIME (1/4sec.)	ADDRESS 1418	
	LEFT	RIGHT

[Default = 2 sec. = blank (*) 8]

AC Fail Report Delay (min.)	ADDRESS 1419	
	LEFT	RIGHT

[Default = 60 mins. = 3 C]

DEFAULTS: The defaults shown on this page and on the following pages are automatically set after exiting the Easy Menu Driven Mode.

CHIME TIMEOUT OPTIONS		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	(0) 1/4sec. = 0 sec.
blank (*)	2	(2) 1/4sec. = 1/2 sec.
blank (*)	3	(3) 1/4sec. = 3/4 sec.
blank (*)	4	(4) 1/4sec. = 1 sec.
blank (*)	5	(5) 1/4sec. = 1.25 sec.
blank (*)	6	(6) 1/4sec. = 1.5 sec.
blank (*)	7	(7) 1/4sec. = 1.75 sec.
blank (*)	8	(8) 1/4sec. = 2 sec.
↓	↓	↓
F	F	(255) 1/4sec. = 63.25

AC FAIL REPORT DELAY OPTIONS		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	blank (*)
blank (*)	1	1
blank (*)	2	2
blank (*)	3	3
blank (*)	4	4
blank (*)	5	5
blank (*)	6	6
blank (*)	7	7
↓	↓	↓
F	F	255 min. = 4 Hr., 30 min.

PROGRAMMING STEPS:

1. Lookup desired Programming Option by Address Location (highlighted in black).
2. Select the programming option data entry from the tables shown.
3. Enter the selected data entry in the boxes shown.
4. For more information on a programming option refer to the Glossary at the end of this manual.

1. Select delay/timeout from the table shown.

2. Enter in corresponding address locations above (left and right digits).

3. For a desired delay/timeout not listed do the following:
 A. Choose a desired delay/timeout, ex: 20
 B. Divide it by 16

4. Press to save.

16	20	1	Quotient	→	Left Digit
	-16				
	4				4
					Remainder → Right Digit

SYSTEM OUTPUT TIMEOUTS (ADDRESS 1412 & 1414-1416)

PGM2 Output	ADDRESS 1412	
	LEFT	RIGHT
Timeout (min.)		

[Default = blank (*) blank (*)]

Alarm Output	ADDRESS 1414	
	LEFT	RIGHT
Timeout (min.)		

[Default = 15 mins. = (blank) F]

Pulse Alarm Output	ADDRESS 1415	
	LEFT	RIGHT
Timeout (min.)		

[Default = 15 mins. = (blank) F]


PGM1 Output	ADDRESS 1416	
	LEFT	RIGHT
Timeout (min.)		

[Default = blank (*) blank (*)]

DATA ENTRIES		DELAY/ TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 min.
blank (*)	1	1 min.
blank (*)	2	2 min.
blank (*)	3	3 min.
blank (*)	4	4 min.
blank (*)	5	5 min.
blank (*)	6	6 min.
1	blank (*)	16 min.
↓	↓	↓
F	F	255 min.

1. Select delay/timeout (0-255 min.) from the table shown.
2. Enter in corresponding address locations above (left and right digits).
3. For a desired delay/timeout not listed do the following:
 - A. Choose a desired delay/timeout, ex: 20 min.
 - B. Divide it by 16

4. Press to save.



OUTPUT TIMEOUTS: If a timeout of "0 min." is selected, then the output will remain active (ON) until the system is reset or disarmed.

DOWNLOAD/CALLBACK OPTIONS (ADDRESS 2059 & 0526-0545)

No. Rings Before Pickup	ADDRESS 2059	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

NUMBER OF RINGS BEFORE PICKUP: Enter the number of rings before automatic pickup by the control panel when downloading from a computer (see installation instructions WI1691 for more information).

1. Enter in right digit only (left digit is not used).
2. Valid entries are: 3-9, 0 = 10, B = 11, C = 12, D = 13, E = 14, F = 15

NOTE: Default is 15 Rings. Dark shaded data shows option not available.

3. Press to save.

CALLBACK Telephone Number (Digits 1-20)	ADDRESS 0526-0545 (RIGHT DIGITS 1-20)																			
	0526	0527	0528	0529	0530	0531	0532	0533	0534	0535	0536	0537	0538	0539	0540	0541	0542	0543	0544	0545
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

[Default = blank (*) for all digits 1-20]

CALLBACK TELEPHONE NUMBER: Enter telephone number to be used when downloading from a computer (see installation instructions WI1691 for more information).

1. Enter in right digit only (left digit is not used).
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (*). For a zero, press .
3. Valid entries are: 1-9, B = , C = , D = 3 sec. pause, E = Wait for dial tone, F = ignore location.
4. Press to save.

PAGER FORMAT OPTIONS (ADDRESS 0546 & 0547)

Leading Digits for Pager Format (1st Digit)	ADDRESS 0546	
	LEFT	RIGHT
	blank (*)	

Leading Digits for Pager Format (2nd Digit)	ADDRESS 0547	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

LEADING DIGITS FOR PAGER FORMAT: In Pager Format reporting, the message typically begins with "00". However, for some pager services, this will cause the Pager's Voice Mail feature to activate. This option allows you to program these digits to any number desired. A typical Pager report is "003 22 1234", where 3 is the Event, 22 is the zone, and 1234 is the Subscriber ID number. For example, if the Leading Digits are programmed as "98", the Pager report will now appear as "983 22 1234". **NOTE:** See CS Receiver Options to select Pager Format.

1. Enter in 1st and 2nd Leading Digits in right digit only (left digit is not used) as shown.
2. Valid entries are: 0-9.
3. Press to save.

SYSTEM OPTIONS (ADDRESS 0836-0871 & 2045)

SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE	GLOBAL SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE)				ADDRESS 0836-0843			GLOBAL SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE)			
	Bell Superv.	EZM TAMPER	AC FAIL	LOW BATTERY	LEFT	ADDR	RIGHT	MEMORY FAILURE	RF RCVR. TROUBLE	TELCO FAILURE	TEST TIMER
Alarm Output	8	4	2	1		0836		8	4	2	1
Pulsed Alarm Output	8	4	2	1		0837		8	4	2	1
PGM1 Output	8	4	2	1		0838		8	4	2	1
PGM2 Output	8	4	2	1		0839		8	4	2	1
Report Event Telco 1	8	4	2	1		0840		8	4	2	1
Report Restore Telco 1	8	4	2	1		0841		8	4	2	1
Report Event Telco 3	8	4	2	1		0842		8	4	2	1
Report Restore Telco 3	8	4	2	1		0843		8	4	2	1

[Default = blank (*) blank (*) from address 0836-0843] **Note:** If *Test Timer* is enabled (above), *Digital Dialer Test* is also enabled.

SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE	AREA 1 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE)				ADDRESS 0856-0863			AREA 1 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE)			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	LEFT	ADDR	RIGHT	KEYPAD AUX.	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
Pulsed Alarm Output	8	4	2	1		0856		8	4	2	1
Alarm Output	8	4	2	1		0857		8	4	2	1
PGM1 Output	8	4	2	1		0858		8	4	2	1
PGM2 Output	8	4	2	1		0860		8	4	2	1
Report Event Telco 1	8	4	2	1		0861		8	4	2	1
Report Event Telco 3	8	4	2	1		0863		8	4	2	1

[Default = blank (*) blank (*) from address 0856-0863]

SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE	AREA 2 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE)				ADDRESS 0864-0871			AREA 2 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE)			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	LEFT	ADDR	RIGHT	KEYPAD AUX.	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
Pulsed Alarm Output	8	4	2	1		0864		8	4	2	1
Alarm Output	8	4	2	1		0865		8	4	2	1
PGM1 Output	8	4	2	1		0866		8	4	2	1
PGM2 Output	8	4	2	1		0868		8	4	2	1
Report Event Telco 1	8	4	2	1		0869		8	4	2	1
Report Event Telco 3	8	4	2	1		0871		8	4	2	1

[Default = blank (*) blank (*) from address 0864-0871]

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.



Global Ambush Code	ADDRESS 2045	
	LEFT	RIGHT

[Default = blank (*) blank (*)]



GLOBAL AMBUSH CODE: It is the 2-digits entered immediately prior to the regular disarm code. If "Enable Global Ambush Code" (Address 1422) is selected and Address 2045 is left blank (*), then the 2-digit Global Ambush Code is "99". If "Enable Global Ambush Code" is selected and Address 2045 is **not** left blank (*), then the 2-digit Global Ambush Code is the two digits entered in address 2045.

1. Enter in address location (both left and right digits) ; valid entries are 1-9.
2. Press to save.



SYSTEM OPTIONS (ADDRESS 0872-0887)

SYSTEM RESPONSE ACTIVATED BY AREA 3 EVENT/TROUBLE	AREA 3 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE )				ADDRESS 0856-0863			AREA 3 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE )			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	LEFT	ADDR	RIGHT	KEYPAD AUX.	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
	Pulsed Alarm Output	8	4	2	1		0872		8	4	2
Alarm Output	8	4	2	1		0873		8	4	2	1
PGM1 Output	8	4	2	1		0874		8	4	2	1
PGM2 Output	8	4	2	1		0876		8	4	2	1
Report Event Telco 1	8	4	2	1		0877		8	4	2	1
Report Event Telco 3	8	4	2	1		0879		8	4	2	1

[Default = blank (•) blank (•) from address 0872-0879]

SYSTEM RESPONSE ACTIVATED BY AREA 4 EVENT/TROUBLE	AREA 4 SYSTEM EVENT/TROUBLE LEFT DATA VALUES (CIRCLE )				ADDRESS 0864-0871			AREA 4 SYSTEM EVENT/TROUBLE RIGHT DATA VALUES (CIRCLE )			
	Keyfob Low Batt.	FAIL TO CLOSE	FAIL TO OPEN	KEYPAD TAMPER	LEFT	ADDR	RIGHT	KEYPAD AUX.	KEYPAD FIRE	KEYPAD PANIC	AMBUSH
	Pulsed Alarm Output	8	4	2	1		0864		8	4	2
Alarm Output	8	4	2	1		0865		8	4	2	1
PGM1 Output	8	4	2	1		0866		8	4	2	1
PGM2 Output	8	4	2	1		0868		8	4	2	1
Report Event Telco 1	8	4	2	1		0869		8	4	2	1
Report Event Telco 3	8	4	2	1		0871		8	4	2	1

[Default = blank (•) blank (•) from address 0880-0887]

1. Select the desired option by circling  the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press  to save.

SYSTEM OPTIONS (ADDRESS 1420-1424)

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 1420		RIGHT DATA VALUES (CIRCLE)	SYSTEM OPTIONS
RESERVED		LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Opening Report Only after Alarm Report
Enable AutoArm if not closed at end of Window	2			2	Closing Report Only on Conditional Close
Enable Keypad Time/Date Display	4			4	Incl. Sel./Grp. Bypass in Cond. Close /Status
Disable Zone Fault Scrolling	8			8	Status Report
[Default = blank (*) blank (*)]					

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 1421		RIGHT DATA VALUES (CIRCLE)	SYSTEM OPTIONS
Access Control on PGM2 Output	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Auto Bell Test on Arming
Maintained Keyswitch Arming	2			2	Auto Reset after Burglary Output Timeout
Enable Manager's Mode	4			4	Suppress Bypass Reminder when Armed
Disable Keypad Instant Mode	8			8	Enable Local Alarm on First Zone AND Trip
[Default = blank (*) blank (*)]					

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 1422		RIGHT DATA VALUES (CIRCLE)	SYSTEM OPTIONS
Disable Keypad Function Mode Download	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Interior Normally Bypassed
Disable Callback Download	2			2	Enable Global Ambush Code ***
Chirp Output on Keyfob Arm/Disarm	4			4	Reset Day Zone with Arm/Disarm Only
Change Pulse Output to Temporal Output [§]	8			8	Enable Residential Fire
[Default = blank (*) blank (*)]					

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 1423		RIGHT DATA VALUES (CIRCLE)	SYSTEM OPTIONS
Line-Fault Test only when Armed**	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Enable Zone Doubling (Zones 9-12)
Enable Line-Fault Test**	2			2	Wireless Trouble Activates Telco 1
Inhibit System Trouble Audible at Keypad	4			4	Wireless Trouble Activates Telco 3
Select Alarm Output for Keyfob Chirp	8			8	Enable Alarm Output on Telco Fail only when Armed
[Default = blank (*) blank (*)]					

For Address 1423: Default depends on Easy Menu Question "EZ_ZONE DOUBLING? Y/N".
If yes, then [Default = *(blank) 1].
If no, then [Default = *(blank) *(blank)].

SYSTEM OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 1424		RIGHT DATA VALUES (CIRCLE)	SYSTEM OPTIONS
Don't Clear PGM2 Output with Disarm	1	LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)	1	Automatic Interior Bypass/Easy Exit
Disable 2nd Call Ans. Machine Override	2			RESERVED	RESERVED
Enable Loop Supervision	4			RESERVED	RESERVED
Disable Code Required for Bypass (Enable EZ Bypass)	8			8	Resound on Wireless Smoke Low Battery
[Default = (4) blank (*)]					

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8)) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.


***NOTE: Address 1423:** Default depends on Easy Menu Question "EZ_ZONE DOUBLING? Y/N". If yes, then [Default = 1]. If no, then [Default = blank (*)].

****NOTE:** To select "Line-Fault Test only when Armed", you must also select "Enable Line-Fault Test" at address 1423.


*****NOTE:** If "Enable Global Ambush Code" in Address 1422 is selected, then program the 2-digit "Global Ambush Code" in Address 2045. If Address 2045 is left blank (*), then, the 2-digit "Global Ambush Code" will be "99".

[§]This feature must be programmed in Fire Alarm applications.



SYSTEM OPTIONS (ADDRESS 2051-2054)

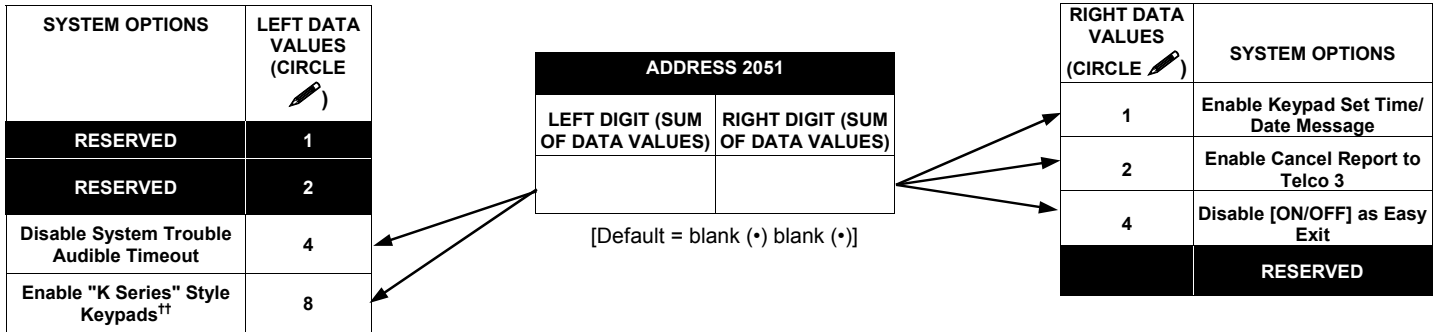

^{††}NOTE: This option is for reference only and cannot be changed.

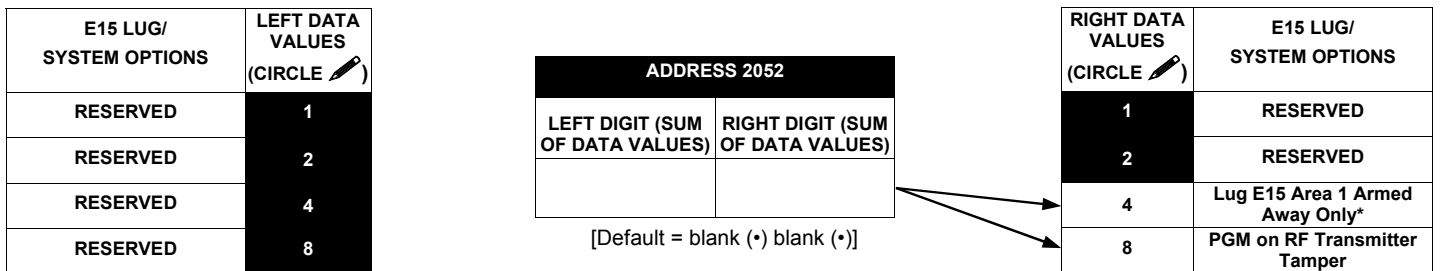

*Note: (Address 2052) If this feature is not selected, the E15 Lug will, by default, activate when the system is armed (all areas).

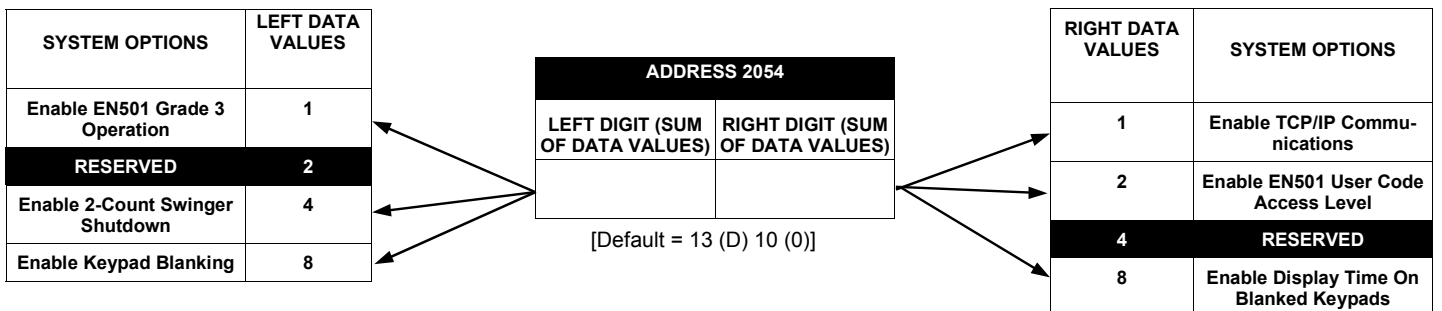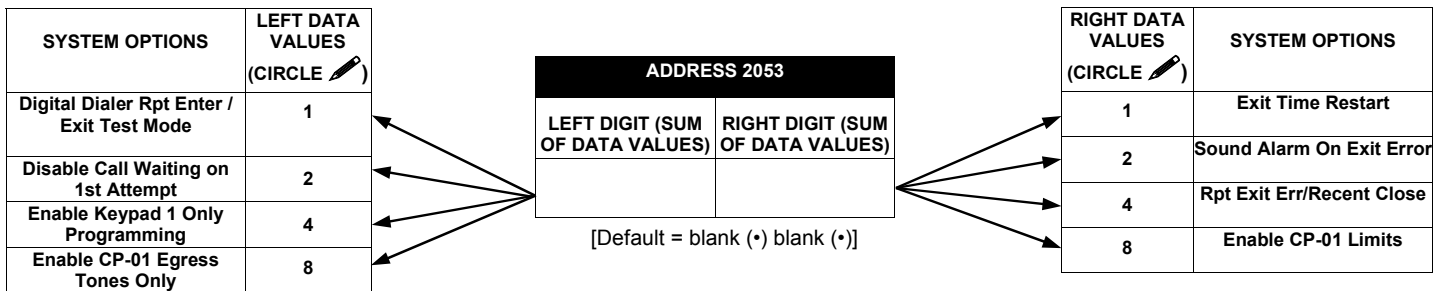

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.

CS RECEIVER OPTIONS (ADDRESS 0460-0525)

CS Receiver 1 Format	ADDRESS 0460		CS Receiver 2 Format	ADDRESS 0482		CS Receiver 3 Format	ADDRESS 0504	
	LEFT	RIGHT		LEFT	RIGHT		LEFT	RIGHT
	blank (*)			blank (*)			blank (*)	

DATA ENTRY	CS RECEIVER 1 FORMAT
blank (*)	Ademco Slow, Silent Knight Slow
2	Radionics Fast
3	Silent Knight Fast
4	Radionics, DCI, Franklin Slow
5	Universal High Speed
B	SIA
C	Ademco Point ID
E	Pager *

Default for CS Receiver 1 Format depends on Easy Menu Question "RCVR FORMAT". [Default = *(blank) * (blank)] for CS Receivers 2 and 3 Formats.

CS RECEIVER FORMATS: Up to 3 CS Formats may be programmed.

1. Select the desired CS Receiver Format from the table shown.
2. Enter in the corresponding right digit address location (left digit is not used) for each CS Receiver. **NOTE:** Dark shaded data value box shows option not available.
3. Press to save.

*See Pager Format Options to program Leading Digits for Pager Format.

CS RECEIVER TELCO 1 OPTIONS	LEFT DATA VALUES (CIRCLE)	ADDRESS 0461	RIGHT DATA VALUES (CIRCLE)	CS RECEIVER TELCO 1 OPTIONS
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)		1
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)		2
RESERVED				4
RESERVED				8
[Default = blank (*) blank (*)]				
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)		1
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)		2
RESERVED				4
RESERVED				8
[Default = blank (*) blank (*)]				
Sum Check	1	LEFT DIGIT (SUM OF DATA VALUES)		1
3/1 with Extended Restores	2	RIGHT DIGIT (SUM OF DATA VALUES)		2
RESERVED				4
RESERVED				8
[Default = blank (*) blank (*)]				

CS RECEIVER OPTIONS: Select options for any of the three CS Receivers.

1. Select the desired option by circling the data values for each digit (left and right).
 2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
 3. Enter in address location (left and right digits).
- NOTE:** Dark shaded data value box shows option not available. Press to save.

NOTE: * If both are selected, 1400Hz has priority over 2300Hz.

CS Receiver 1	ADDRESS 0462-0481 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0462	0463	0464	0465	0466	0467	0468	0469	0470	0471	0472	0473	0474	0475	0476	0477	0478	0479	0480	0481
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
CS Receiver 2	ADDRESS 0484-0503 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0484	0485	0486	0487	0488	0489	0490	0491	0492	0493	0494	0495	0496	0497	0498	0499	0500	0501	0502	0503
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
CS Receiver 3	ADDRESS 0506-0525 (RIGHT DIGITS 1-20)																			
Telephone Number (Digits 1-20)	0506	0507	0508	0509	0510	0511	0512	0513	0514	0515	0516	0517	0518	0519	0520	0521	0522	0523	0524	0525
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

Default for CS Receiver 1 Telephone Number depends on Easy Menu Question "CENTRAL PHONE #".

[Default = blank (*)] across digits 1-20 for CS Receiver Telephone Numbers 2 and 3.

CS RECEIVER TELEPHONE NUMBERS: Enter telephone numbers for any of the three CS Receivers (Telco 1, 2 & 3).

1. Enter in right digit only (left digit is not used).
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (*). For a zero, press .
3. Valid entries are: 1-9, B = , C = , D = 3 sec. pause, E = Wait for dial tone, F = ignore location. Press to save.

CS SUBSCRIBER ID OPTIONS (ADDRESS 0560-0667)

CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 1)	ADDRESS 0560-0563 (RIGHT DIGITS 1-4)			
	0560	0561	0562	0563

CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 2)	ADDRESS 0564-0567 (RIGHT DIGITS 1-4)			
	0564	0565	0566	0567

CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 3)	ADDRESS 0568-0571 (RIGHT DIGITS 1-4)			
	0568	0569	0570	0571

CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 4)	ADDRESS 0572-0575 (RIGHT DIGITS 1-4)			
	0572	0573	0574	0575

CS Telco 1 Sub- scriber Event ID Number (Area 1)	ADDRESS 0576-0579 (RIGHT DIGITS 1-4)			
	0576	0577	0578	0579

CS Telco 1 Sub- scriber Event ID Number (Area 2)	ADDRESS 0580-0583 (RIGHT DIGITS 1-4)			
	0580	0581	0582	0583

CS Telco 1 Sub- scriber Event ID Number (Area 3)	ADDRESS 0584-0587 (RIGHT DIGITS 1-4)			
	0584	0585	0586	0587

CS Telco 1 Sub- scriber Event ID Number (Area 4)	ADDRESS 0588-0591 (RIGHT DIGITS 1-4)			
	0588	0589	0590	0591

CS Telco 1 Sub- scriber Event ID Number (System)	ADDRESS 0592-0595 (RIGHT DIGITS 1-4)			
	0592	0593	0594	0595

CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 1)	ADDRESS 0596-0599 (RIGHT DIGITS 1-4)			
	0596	0597	0598	0599

CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 2)	ADDRESS 0600-0603 (RIGHT DIGITS 1-4)			
	0600	0601	0602	0603

CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 3)	ADDRESS 0604-0607 (RIGHT DIGITS 1-4)			
	0604	0605	0606	0607

CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 4)	ADDRESS 0608-0611 (RIGHT DIGITS 1-4)			
	0608	0609	0610	0611

CS Telco 2 Sub- scriber Event ID Number (Area 1)	ADDRESS 0612-0615 (RIGHT DIGITS 1-4)			
	0612	0613	0614	0615

CS Telco 2 Sub- scriber Event ID Number (Area 2)	ADDRESS 0616-0619 (RIGHT DIGITS 1-4)			
	0616	0617	0618	0619

CS Telco 2 Sub- scriber Event ID Number (Area 3)	ADDRESS 0620-0623 (RIGHT DIGITS 1-4)			
	0620	0621	0622	0623

CS Telco 2 Sub- scriber Event ID Number (Area 4)	ADDRESS 0624-0627 (RIGHT DIGITS 1-4)			
	0624	0625	0626	0627

CS Telco 2 Sub- scriber Event ID Number (System)	ADDRESS 0628-0631 (RIGHT DIGITS 1-4)			
	0628	0629	0630	0631

CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 1)	ADDRESS 0632-0635 (RIGHT DIGITS 1-4)			
	0632	0633	0634	0635

CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 2)	ADDRESS 0636-0639 (RIGHT DIGITS 1-4)			
	0636	0637	0638	0639

CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 3)	ADDRESS 0640-0643 (RIGHT DIGITS 1-4)			
	0640	0641	0642	0643

CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 4)	ADDRESS 0644-0647 (RIGHT DIGITS 1-4)			
	0644	0645	0646	0647

CS Telco 3 Sub- scriber Event ID Number (Area 1)	ADDRESS 0648-0651 (RIGHT DIGITS 1-4)			
	0648	0649	0650	0651

CS Telco 3 Sub- scriber Event ID Number (Area 2)	ADDRESS 0652-0655 (RIGHT DIGITS 1-4)			
	0652	0653	0654	0655

CS Telco 3 Sub- scriber Event ID Number (Area 3)	ADDRESS 0656-0659 (RIGHT DIGITS 1-4)			
	0656	0657	0658	0659

CS Telco 3 Sub- scriber Event ID Number (Area 4)	ADDRESS 0660-0663 (RIGHT DIGITS 1-4)			
	0660	0661	0662	0663

CS Telco 3 Sub- scriber Event ID Number (System)	ADDRESS 0664-0667 (RIGHT DIGITS 1-4)			
	0664	0665	0666	0667

Default for CS Telco 1 Subscriber Event ID Number (Area 1) depends on Easy Menu Question "ACCOUNT #". [Default = blank (*) blank (*) blank (*) blank (*)] for all other ID Numbers.
CS TELCO SUBSCRIBER ID NUMBERS: Enter the Subscriber Opening/Closing and Event ID Numbers for any of the 3 CS Receivers.

1. Enter in corresponding right digit address location (*left digit is not used*).
2. Enter 3 or 4 digits (depending on the CS receiver format) for each subscriber number from left to right. **NOTE:** Leave trailing boxes blank (*) . For a zero, press . Valid entries are: 1-9, 0 and B-F. **NOTE:** A is not permitted. Press to save.

CS SYSTEM REPORTING OPTIONS (ADDRESS 0670-0705)

CS SYSTEM REPORTING CODES	ADDRESS 0670-0682	
	ADDR	
Alarm Restore	blank (*)	0670
Trouble	blank (*)	0671
Trouble Restore	blank (*)	0672
Xmitter Low Battery	blank (*)	0673
Xmitter Supervision	blank (*)	0674
Xmitter Tamper	blank (*)	0675
RESERVED	blank (*)	0676 blank (*)
Opening	blank (*)	0677
Closing	blank (*)	0678
Opening after Alarm	blank (*)	0679
Conditional Close	blank (*)	0680
Cancel	blank (*)	0681
Test Timer		0682

CS SYSTEM REPORTING CODES	ADDRESS 0683-0708	
	ADDR	
Telco Fail	0683	
RF Rec. Trouble	0684	
Memory Fail	0685	
Low Battery	0686	
Panel AC Fail	0687	
RESERVED	blank (*)	0688 blank (*)
Alarm Output Superv.	0689	
Ambush	0698	
Panic	0699	
Fire	0700	
Auxiliary	0701	
Tamper	0702	
Fail to Open	0703	
Fail to Close	0704	
Keyfob Low Battery	0705	

CS SYSTEM REPORTING CODES:

1. Enter in corresponding address location (left and right digits).
NOTE: Left digit is the first digit and right digit is the second digit in a two digit CS receiver format.
2. Valid entries are: 1-9, 0 and B-F.
NOTE: A is not permitted.
3. To disable a code leave boxes blank (*).
NOTE: Dark shaded data value box shows option not available.
4. Press to save.

[Default = blank (*) blank (*) from address 0670-0682]
[Default = blank (*) blank (*) from address 0683-0705]

CS AREA & SYSTEM REPORTING OPTIONS (ADDRESS 0785, 0786 & 0788)

DISABLE OPENING REPORTS	
ADDRESS 0785	
LEFT DIGIT	RIGHT DIGIT (SUM OF DATA VALUES)
blank (*)	

RIGHT DATA VALUES (CIRCLE)	AREA
1	AREA 1
2	AREA 2
4	AREA 3
8	AREA 4

[Default = blank (*) blank (*)]

DISABLE CLOSING REPORTS	
ADDRESS 0786	
LEFT DIGIT	RIGHT DIGIT (SUM OF DATA VALUES)
blank (*)	

RIGHT DATA VALUES (CIRCLE)	AREA
1	AREA 1
2	AREA 2
4	AREA 3
8	AREA 4

[Default = blank (*) blank (*)]

CS SYSTEM REPORT OPTIONS	LEFT DATA VALUES (CIRCLE)
Cancel Next Test Timer on any Report	1
Disable Wait for Silence (Pager Format)	2
Disable Wait for Handshake on Transmit	4
Disable Auto Dial Tone Detect	8

ADDRESS 0788	
LEFT DIGIT (SUM)	RIGHT DIGIT (SUM)

[Default = blank (*) blank (*)]

RIGHT DATA VALUES (CIRCLE)	CS SYSTEM REPORT OPTIONS
1	Backup Report on Telco 1 & 2
2	Touch-tone Dialing Only *
4	Touch-tone Dialing w/Rotary Backup *
8	RESERVED

CS AREA & SYSTEM REPORTING OPTIONS:

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits).

NOTE: Dark shaded data value box shows option not available. Press to save.

* **NOTE:** If neither Touch-tone Dialing nor Touch-tone w/Rotary Backup is selected, then system defaults automatically to Rotary Dialing. Leave blank (*) to select Rotary Dialing.

ZONE ANDING TIME WINDOW (ADDRESS 2061)

Zone ANDing Time Window (seconds)	ADDRESS 2061	
	LEFT	RIGHT

[Default = 3 C]

ZONE ANDING TIME WINDOW: With Zone ANDing enabled, the system will go into alarm only if any two zones in a group are tripped within a specified period of time. With this address, this time window is adjustable between 1 and 255 seconds. The factory default is 60 seconds. **Note:** If the address is programmed to 0, the panel defaults to 60 seconds.

DATA ENTRIES		DELAY/ TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	0 sec.
blank (*)	F	15 sec.
1	E	30 sec.
2	D	45 sec.
3	C	60 sec.
5	0	90 sec.
7	8	120 sec.
↓	↓	↓
F	F	255 min.

1. Select time window (0-255 sec.) from the table shown at left.
2. Enter in corresponding address locations above (left and right digits).
3. For a desired delay/timeout not listed do the following:
 - A. Choose a desired delay/timeout, ex: 20 sec.
 - B. Divide it by 16
4. Press to save.

$$\begin{array}{r}
 \textcircled{1} \text{ Quotient} \longrightarrow \text{Left Digit} \\
 16 \overline{)20} \\
 \underline{-16} \\
 \textcircled{4} \text{ Remainder} \longrightarrow \text{Right Digit}
 \end{array}$$

EXIT/ENTRY DELAYS: Apply only to zones programmed with the following options "Exit/Entry 1, Exit/Entry 2, Exit/Entry Follower". **NOTE:** Sensor Watch Time Options are similar to above table, except in hours. Either use the tables provided or calculate your own timeout using the steps indicated. **WARNING: Timers have uncertainty of +/-1sec, so a "time" of 1 second may actually timeout IMMEDIATELY.**

KEYPAD UNBLANKING TIME WINDOW (ADDRESS 2060)

Keypad Unblanking Time Window (seconds)	ADDRESS 2060	
	LEFT	RIGHT

[Default = 8 blank (*)]

KEYPAD BLANKING TIME WINDOW: If a keypad (RP1, RP2) is Blanked/System event mode, enabling the keypad to normal requires a Set/Unset code + Enter (level2/3/4) to come alive. The keypad will stay alive (Normal) for 128 seconds (default) or for a time in a programmable in an EEPROM location in seconds. This location, 2060, contains a 3 digit decimal and is called Keypad Un-blanking Period. During exit/entry delay all keypads will always come ALIVE (Normal).

See "Zone ANDing Time Window" (above) for programming procedure.

CLOCK ADJUSTMENTS (ADDRESS 2281)

CLOCK ADJUSTMENTS	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

ADDRESS 2281	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)

*[Default = AC Source used]
 **[Default = 60Hz]

RIGHT DATA VALUES (CIRCLE)	CLOCK ADJUSTMENTS
1	Enable Daylight Saving Time
2	Clock Source (Internal Panel)*
4	Line Frequency--Enable 50Hz **
8	RESERVED

CLOCK ADJUSTMENTS:

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits).

NOTE: Dark shaded data value box shows option not available. Press to save.

CS ZONE REPORTING OPTIONS (ADDRESS 0720-0751)

ADDRESS 0720-0727							
CONTROL PANEL ZONES REPORT CODE							
ZONE 1		ZONE 2		ZONE 3		ZONE 4	
0720	0721	0722	0723	0724	0725	0726	0727
L	R	L	R	L	R	L	R

ADDRESS 0728-0731			
ZONES REPORT CODE			
ZONE 9		ZONE 10	
0728	0729	0730	0731
L	R	L	R

ADDRESS 0732-0735			
ZONES REPORT CODE			
ZONE 13		ZONE 14	
0732	0733	0734	0735
L	R	L	R

ADDRESS 0736-0739			
ZONES REPORT CODE			
ZONE 17		ZONE 18	
0736	0737	0738	0739
L	R	L	R

ADDRESS 0740-0743			
ZONES REPORT CODE			
ZONE 21		ZONE 22	
0740	0741	0742	0743
L	R	L	R

ADDRESS 0744-0747			
ZONES REPORT CODE			
ZONE 25		ZONE 26	
0744	0745	0746	0747
L	R	L	R

ADDRESS 0748-0751			
ZONES REPORT CODE			
ZONE 29		ZONE 30	
0748	0749	0750	0751
L	R	L	R

Default for Group Zone Report Codes depends on Easy Menu Question "RCVR. FORMAT".

ZONE REPORT CODE OPTIONS	
DATA ENTRIES	
LEFT	RIGHT

NOTE: If "Zone Doubling" (Address 1423) is not enabled, then Zones 1-4 are included in the control panel and Zones 5-32 are wireless Zones. If "Zone Doubling" is enabled, then Zones 1-4 and 9-12 are included in the control panel; Zones 5 through 32 are available as wireless--however--Zones 9-12 would be ORed with the hardwired zones.

DATA ENTRIES	MODEM CODE
LEFT	
1	Fire
2	Panic
3	Burglary
4	Hold up
7	Gas Alarm
8	Heat Alarm
0	Auxiliary Alarm
B	24 Hour Auxiliary

PULSE EVENT CODE will be the first digit of the 2 digit reporting code. The second digit will be the second digit of the reporting zone. For example, for zone 9 (address 0728), if the right digit is "3", then the reporting code is "39". For example, for zone 15 (address 0734), if the right digit is "4", then the reporting code is "45".

MODEM CODES determine the zone types reported for the following formats: SIA and ADEMCO Point ID.

1. Select the desired Modem Code for each zone from the table shown.
2. Press to save.

CS USER REPORTING OPTIONS (ADDRESS 0800-0817)

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0800		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0801		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0802		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0803		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	24	23	22	21			20	19	18	17	32	31	30	29			28	27	26	25
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUES				ADDRESS 0804		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0805		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	40	39	38	37			36	35	34	33	48	47	46	45			44	43	42	41
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0806		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0807		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	56	55	54	53			52	51	50	49	64	63	62	61			60	59	58	57
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	ADDRESS 0808		RIGHT DATA VALUES			
	LEFT	RIGHT	User	User	User	User
	blank (*)		68	67	66	65
			8			2

User 65 = Auto Arming/Disarming
 User 66 = Quickloader Remote Arming/Disarming
 User 67 = Easy Arming (Opening not applicable)
 User 68 = Keyswitch Arming

NOTE: These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 57-64, respectively.

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0809		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0810		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0811		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0812		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	24	23	22	21			20	19	18	17	32	31	30	29			28	27	26	25
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUES				ADDRESS 0813		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0814		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	40	39	38	37			36	35	34	33	48	47	46	45			44	43	42	41
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	LEFT DATA VALUE				ADDRESS 0815		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0816		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	56	55	54	53			52	51	50	49	64	63	62	61			60	59	58	57
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 1	ADDRESS 0817		RIGHT DATA VALUES			
	LEFT	RIGHT	User	User	User	User
	blank (*)		68	67	66	65
			8			2

User 65 = Auto Arming/Disarming
 User 66 = Quickloader Remote Arming/Disarming
 User 67 = Easy Arming (Opening not applicable)
 User 68 = Keyswitch Arming

NOTE: These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 57-64, respectively.

CS USER REPORTING OPTIONS: [Default = blank (*) blank (*) from address 0800-0817]

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.

CS USER REPORTING OPTIONS (ADDRESS 0818-0835)

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0818		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0819		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0820		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0821		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	24	23	22	21			20	19	18	17	32	31	30	29			28	27	26	25
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUES				ADDRESS 0822		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0823		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	40	39	38	37			36	35	34	33	48	47	46	45			44	43	42	41
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0824		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0825		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	56	55	54	53			52	51	50	49	64	63	62	61			60	59	58	57
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	ADDRESS 0826		RIGHT DATA VALUES			
	LEFT	RIGHT	User	User	User	User
	blank (*)		68	67	66	65
			8		2	

User 65 = Auto Arming/Disarming
 User 66 = Quickloader Remote Arming/Disarming
 User 67 = Easy Arming (Opening not applicable)
 User 68 = Keyswitch Arming

NOTE: These opening events will report as the user number shown. Also, Key-fobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 57-64, respectively.

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0827		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0828		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	8	7	6	5			4	3	2	1	16	15	14	13			12	11	10	9
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0829		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0830		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	24	23	22	21			20	19	18	17	32	31	30	29			28	27	26	25
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUES				ADDRESS 0831		RIGHT DATA VALUES				LEFT DATA VALUE				ADDRESS 0832		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	40	39	38	37			36	35	34	33	48	47	46	45			44	43	42	41
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	LEFT DATA VALUE				ADDRESS 0833		RIGHT DATA VALUES				LEFT DATA VALUES				ADDRESS 0834		RIGHT DATA VALUES			
	User	User	User	User	LEFT	RIGHT	User	User	User	User	User	User	User	User	LEFT	RIGHT	User	User	User	User
	56	55	54	53			52	51	50	49	64	63	62	61			60	59	58	57
	8	4	2	1			8	4	2	1	8	4	2	1			8	4	2	1

User Opening Telco 3	ADDRESS 0835		RIGHT DATA VALUES			
	LEFT	RIGHT	User	User	User	User
	blank (*)		68	67	66	65
			8		2	

User 65 = Auto Arming/Disarming
 User 66 = Quickloader Remote Arming/Disarming
 User 67 = Easy Arming (Opening not applicable)
 User 68 = Keyswitch Arming

NOTE: These opening events will report as the user number shown. Also, Key-fobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 57-64, respectively.

CS USER REPORTING OPTIONS: [Default = blank (*) blank (*) from address 0818-0835]

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in address location (left and right digits). **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.

This page left blank intentionally

AREA BELL CONTROL OPTIONS (ADDRESS 1473-1476)

Burglary Output Turns Off upon Disarm

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

Burglary Output Turns Off upon Disarm	
ADDRESS 1473	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]

RIGHT DATA VALUES (CIRCLE)	Disarming Area 1
1	Area 1 Burg Output Silenced
2	Area 2 Burg Output Silenced
4	Area 3 Burg Output Silenced
8	Area 4 Burg Output Silenced

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

Burglary Output Turns Off upon Disarm	
ADDRESS 1474	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]

RIGHT DATA VALUES (CIRCLE)	Disarming Area 2
1	Area 1 Burg Output Silenced
2	Area 2 Burg Output Silenced
4	Area 3 Burg Output Silenced
8	Area 4 Burg Output Silenced

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

Burglary Output Turns Off upon Disarm	
ADDRESS 1475	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]

RIGHT DATA VALUES (CIRCLE)	Disarming Area 3
1	Area 1 Burg Output Silenced
2	Area 2 Burg Output Silenced
4	Area 3 Burg Output Silenced
8	Area 4 Burg Output Silenced

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

Burglary Output Turns Off upon Disarm	
ADDRESS 1476	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]

RIGHT DATA VALUES (CIRCLE)	Disarming Area 4
1	Area 1 Burg Output Silenced
2	Area 2 Burg Output Silenced
4	Area 3 Burg Output Silenced
8	Area 4 Burg Output Silenced

OUTPUT TURNS OFF UPON DISARM: Select options for any of the 4 Outputs.

1. Select the desired option by circling the data values for right digit only (left is not used).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in right digit address location. **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.

OUTPUT TURNS OFF UPON DISARM:

Select options for any of the 4 Outputs. By default, the ability to turn off an output upon disarm is not allowed. For example, the ability to silence an Area 1 through Area 4 output via an Area 1 keypad is not enabled by default. To enable selected area output control, enter the number (1,2,3,4) accordingly. For example, if you wish to grant an Area 1 keypad the ability to turn off an Area 2 PGM2 output, enter "2" in Address 1485.

- Enter digit in address location. **NOTE:** Dark shaded data value box shows option not available. Press to save.

AREA BELL CONTROL OPTIONS (ADDRESS 1477-1480)

Pulsed Burg Output Turns Off upon Disarm

RESERVED	LEFT DATA VALUES (CIRCLE)		RIGHT DATA VALUES	
RESERVED	1	Pulsed Burg Output Turns Off upon Disarm ADDRESS 1477 LEFT DIGIT (SUM OF DATA VALUES) RIGHT DIGIT (SUM OF DATA VALUES) <div style="display: flex; justify-content: space-around; align-items: center;"> • (1) </div> [Default = blank (•) one (1)]	1	Area 1 Pulsed Burg Output Silenced
RESERVED	2		2	Area 2 Pulsed Burg Output Silenced
RESERVED	4		4	Area 3 Pulsed Burg Output Silenced
RESERVED	8		8	Area 4 Pulsed Burg Output Silenced
RESERVED	8			

RESERVED	LEFT DATA VALUES (CIRCLE)		RIGHT DATA VALUES	
RESERVED	1	Pulsed Burg Output Turns Off upon Disarm ADDRESS 1478 LEFT DIGIT (SUM OF DATA VALUES) RIGHT DIGIT (SUM OF DATA VALUES) <div style="display: flex; justify-content: space-around; align-items: center;"> • (1) </div> [Default = blank (•) one (1)]	1	Area 1 Pulsed Burg Output Silenced
RESERVED	2		2	Area 2 Pulsed Burg Output Silenced
RESERVED	4		4	Area 3 Pulsed Burg Output Silenced
RESERVED	8		8	Area 4 Pulsed Burg Output Silenced
RESERVED	8			

RESERVED	LEFT DATA VALUES (CIRCLE)		RIGHT DATA VALUES	
RESERVED	1	Pulsed Burg Output Turns Off upon Disarm ADDRESS 1479 LEFT DIGIT (SUM OF DATA VALUES) RIGHT DIGIT (SUM OF DATA VALUES) <div style="display: flex; justify-content: space-around; align-items: center;"> • (1) </div> [Default = blank (•) one (1)]	1	Area 1 Pulsed Burg Output Silenced
RESERVED	2		2	Area 2 Pulsed Burg Output Silenced
RESERVED	4		4	Area 3 Pulsed Burg Output Silenced
RESERVED	8		8	Area 4 Pulsed Burg Output Silenced
RESERVED	8			

RESERVED	LEFT DATA VALUES (CIRCLE)		RIGHT DATA VALUES	
RESERVED	1	Pulsed Burg Output Turns Off upon Disarm ADDRESS 1480 LEFT DIGIT (SUM OF DATA VALUES) RIGHT DIGIT (SUM OF DATA VALUES) <div style="display: flex; justify-content: space-around; align-items: center;"> • (1) </div> [Default = blank (•) one (1)]	1	Area 1 Pulsed Burg Output Silenced
RESERVED	2		2	Area 2 Pulsed Burg Output Silenced
RESERVED	4		4	Area 3 Pulsed Burg Output Silenced
RESERVED	8		8	Area 4 Pulsed Burg Output Silenced
RESERVED	8			

OUTPUT TURNS OFF UPON DISARM: Select options for any of the 4 Outputs.

1. Select the desired option by circling the data values for right digit only (left is not used).
2. Add the data values (ex: F=15=(1+2+4+8)) from the selected options. See page 23).
3. Enter in right digit address location. **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.

OUTPUT TURNS OFF UPON DISARM:

Select options for any of the 4 Outputs. By default, the ability to turn off an output upon disarm is not allowed. For example, the ability to silence an Area 1 through Area 4 output via an Area 1 keypad is not enabled by default. To enable selected area output control, enter the number (1,2,3,4) accordingly. For example, if you wish to grant an Area 1 keypad the ability to turn off an Area 2 PGM2 output, enter "2" in Address 1485.

- Enter digit in address location. **NOTE:** Dark shaded data value box shows option not available. Press to save.

AREA BELL CONTROL OPTIONS (ADDRESS 1481-1484)

PGM1 Output Turns Off upon Disarm

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM1 Output Turns Off upon Disarm	
ADDRESS 1481	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

RIGHT DATA VALUES (CIRCLE)	Disarming Area 1
1	Area 1 PGM1 Output Silenced
2	Area 2 PGM1 Output Silenced
4	Area 3 PGM1 Output Silenced
8	Area 4 PGM1 Output Silenced

[Default = blank (•) one (1)]

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM1 Output Turns Off upon Disarm	
ADDRESS 1482	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

RIGHT DATA VALUES (CIRCLE)	Disarming Area 2
1	Area 1 PGM1 Output Silenced
2	Area 2 PGM1 Output Silenced
4	Area 3 PGM1 Output Silenced
8	Area 4 PGM1 Output Silenced

[Default = blank (•) one (1)]

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM1 Output Turns Off upon Disarm	
ADDRESS 1483	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

RIGHT DATA VALUES (CIRCLE)	Disarming Area 3
1	Area 1 PGM1 Output Silenced
2	Area 2 PGM1 Output Silenced
4	Area 3 PGM1 Output Silenced
8	Area 4 PGM1 Output Silenced

[Default = blank (•) one (1)]

RESERVED	LEFT DATA VALUES (CIRCLE)
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM1 Output Turns Off upon Disarm	
ADDRESS 1484	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

RIGHT DATA VALUES (CIRCLE)	Disarming Area 4
1	Area 1 PGM1 Output Silenced
2	Area 2 PGM1 Output Silenced
4	Area 3 PGM1 Output Silenced
8	Area 4 PGM1 Output Silenced

[Default = blank (•) one (1)]

OUTPUT TURNS OFF UPON DISARM: Select options for any of the 4 Outputs.

1. Select the desired option by circling the data values for right digit only (left is not used).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 23).
3. Enter in right digit address location. **NOTE:** Dark shaded data value box shows option not available.
4. Press to save.


OUTPUT TURNS OFF UPON DISARM:

Select options for any of the 4 Outputs. By default, the ability to turn off an output upon disarm is not allowed. For example, the ability to silence an Area 1 through Area 4 output via an Area 1 keypad is not enabled by default. To enable selected area output control, enter the number (1,2,3,4) accordingly. For example, if you wish to grant an Area 1 keypad the ability to turn off an Area 2 PGM2 output, enter "2" in Address 1485.

- Enter digit in address location. **NOTE:** Dark shaded data value box shows option not available. Press to save.

AREA BELL CONTROL OPTIONS (ADDRESS 1485-1488)


PGM2 Output Turns Off upon Disarm

RESERVED	LEFT DATA VALUES (CIRCLE )
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM2 Output Turns Off upon Disarm ADDRESS 1485	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]


RIGHT DATA VALUES	Disarming Area 1
1	Area 1 PGM2 Burg Output Silenced
2	Area 2 PGM2 Burg Output Silenced
4	Area 3 PGM2 Burg Output Silenced
8	Area 4 PGM2 Burg Output Silenced

RESERVED	LEFT DATA VALUES (CIRCLE )
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM2 Output Turns Off upon Disarm ADDRESS 1486	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]


RIGHT DATA VALUES	Disarming Area 2
1	Area 1 PGM2 Burg Output Silenced
2	Area 2 PGM2 Burg Output Silenced
4	Area 3 PGM2 Burg Output Silenced
8	Area 4 PGM2 Burg Output Silenced

RESERVED	LEFT DATA VALUES (CIRCLE )
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM2 Output Turns Off upon Disarm ADDRESS 1487	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]

RIGHT DATA VALUES	Disarming Area 3
1	Area 1 PGM2 Burg Output Silenced
2	Area 2 PGM2 Burg Output Silenced
4	Area 3 PGM2 Burg Output Silenced
8	Area 4 PGM2 Burg Output Silenced







RESERVED	LEFT DATA VALUES (CIRCLE )
RESERVED	1
RESERVED	2
RESERVED	4
RESERVED	8

PGM2 Output Turns Off upon Disarm ADDRESS 1488	
LEFT DIGIT (SUM OF DATA VALUES)	RIGHT DIGIT (SUM OF DATA VALUES)
●	(1)

[Default = blank (•) one (1)]



RIGHT DATA VALUES	Disarming Area 4
1	Area 1 PGM2 Burg Output Silenced
2	Area 2 PGM2 Burg Output Silenced
4	Area 3 PGM2 Burg Output Silenced
8	Area 4 PGM2 Burg Output Silenced

OUTPUT TURNS OFF UPON DISARM: Select options for any of the 4 Outputs.

-  1. Select the desired option by circling  the data values for right digit only (left is not used).
-  2. Add the data values (ex: F=15=(1+2+4+8)) from the selected options. See page 23).
-  3. Enter in right digit address location. **NOTE:** Dark shaded data value box shows option not available.
-  4. Press  to save.

OUTPUT TURNS OFF UPON DISARM:

Select options for any of the 4 Outputs. By default, the ability to turn off an output upon disarm is not allowed. For example, the ability to silence an Area 1 through Area 4 output via an Area 1 keypad is not enabled by default. To enable selected area output control, enter the number (1,2,3,4) accordingly. For example, if you wish to grant an Area 1 keypad the ability to turn off an Area 2 PGM2 output, enter "2" in Address 1485.

-  Enter digit in address location. **NOTE:** Dark shaded data value box shows option not available. Press  to save.

KEYPAD OPTIONS (ADDRESS 1425-1431, 1440-1446)

Keypad 1 Type	ADDRESS 1425	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 2 Type	ADDRESS 1426	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 3 Type	ADDRESS 1427	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 4 Type	ADDRESS 1428	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 5 Type	ADDRESS 1429	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 6 Type	ADDRESS 1430	
	LEFT	RIGHT

[Default = blank (*) blank (*)]

Keypad 7 Type	ADDRESS 1431	
	LEFT	RIGHT


[Default = blank (*) blank (*)]



KEYPAD TYPE	
LEFT	OPTION
blank (*)	Burg Keypad
2	Wizard Keypad

KEYPAD ASSIGNMENT	
RIGHT	OPTION
blank (*)	Disabled
1	Active Keypad

KEYPAD TYPE: Up to 7 keypads may be programmed, if they are connected.

NOTE: See Keypad Configuration Mode.

1. Select keypad type for each keypad from the tables shown.
2. Enter in corresponding right and left digit address locations above.
3. Press  to save.

KEYPAD NO.	KEYPAD OPTIONS				ADDRESS 1440-1446			KEYPAD OPTIONS			
	LEFT DATA VALUES (CIRCLE )				LEFT	ADDR	RIGHT	RIGHT DATA VALUES (CIRCLE )			
	RSRVD	PANEL ACCESS	EASY ARMING	AMBUSH				RSRVD	KEYPAD PANIC	KEYPAD AUX.	KEYPAD FIRE
1	8	4	2	1		1440		8	4	2	1
2	8	4	2	1		1441		8	4	2	1
3	8	4	2	1		1442		8	4	2	1
4	8	4	2	1		1443		8	4	2	1
5	8	4	2	1		1444		8	4	2	1
6	8	4	2	1		1445		8	4	2	1
7	8	4	2	1		1446		8	4	2	1

[Default = blank (*) blank (*) from address 1440-1446]

KEYPAD OPTIONS: Select options for any of the 7 keypads.

1. Select the desired option entering the option number (1-8) for each digit.
2. Enter corresponding option number in address location.

NOTE: Dark shaded data value box shows option not available.

3. Press  to save.

This page left blank intentionally

AREA ARMING OPTIONS (ADDRESS 1469-1472)

Priority Arming Area 1	ADDRESS 1469	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

Priority Arming Area 2	ADDRESS 1470	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

Priority Arming Area 3	ADDRESS 1471	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

Priority Arming Area 4	ADDRESS 1472	
	LEFT	RIGHT
	blank (*)	

[Default = blank (*) blank (*)]

PRIORITY ARMING/AREA 1		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

PRIORITY ARMING/AREA 2		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

PRIORITY ARMING/AREA 1		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

PRIORITY ARMING/AREA 2		
DATA ENTRIES		OPTION
LEFT	RIGHT	
blank (*)	blank (*)	Not Used
blank (*)	1	Enabled

PRIORITY AREA ARMING:

1. Select option from the table shown.
2. Enter in corresponding right digit address location (left digit is not used).

NOTE: Dark shaded data value box shows option not available.

3. Press to save.

ZONE INTEGRATION TIME (ADDRESS 2062)

Zone Integration Time (x 10ms)	ADDRESS 2280	
	LEFT	RIGHT

[Default = 075 x 10ms = 750ms]

Zone Integration Time: The panel Zone Integration (Response) time can be adjusted to a new global value. Address 2062 accepts three decimal digits which are multiplied by 10 milliseconds to get a new value that replaces the default value of 750ms. If the location is set to 000, the system will default to 750ms internally. The maximum value is 255. If a value above 255 is entered the system will display 000 to request a re-entry.

Note: Only the panel zones' integration times are programmable. In addition, zone responses are enabled only when armed.

ZONE INTEGRATION TIME		
DATA ENTRIES		TIMEOUT
LEFT	RIGHT	
blank (*)	blank (*)	(0) 1/100 sec. = 0 will default to 750ms.
blank (*)	2	(2) 1/100 sec. = 20ms.
blank (*)	3	(3) 1/100 sec. = 30ms.
blank (*)	4	(4) 1/100 sec. = 40ms.
blank (*)	5	(5) 1/100 sec. = 50ms.
blank (*)	6	(6) 1/100 sec. = 60ms.
blank (*)	7	(7) 1/100 sec. = 70ms.
blank (*)	8	(8) 1/100 sec. = 80ms.
F	F	(255) 1/100 sec. = 2.55 sec.

1. Select delay/timeout from the table shown at left.
2. Enter in corresponding address locations above (left and right digits).
3. For a desired delay/timeout not listed do the following:
 - A. Choose a desired delay/timeout, ex: 20
 - B. Divide it by 16
4. Press to save.

$$\begin{array}{r}
 \textcircled{1} \text{ Quotient} \longrightarrow \text{Left Digit} \\
 16 \overline{) 20} \\
 \underline{-16} \\
 \textcircled{4} \text{ Remainder} \longrightarrow \text{Right Digit}
 \end{array}$$

ZONE OPTIONS - ZONES 1 TO 16 (ADDRESS 0900-1016)

ZONE OPTIONS	ZONES 13-16 LEFT DATA VALUES <small>(CIRCLE)</small>				ADDRESS			ZONES 9-12 RIGHT DATA VALUES <small>(CIRCLE)</small>				ZONES 5-8 LEFT DATA VALUES <small>(CIRCLE)</small>				ADDRESS			ZONES 1-4 RIGHT DATA VALUES <small>(CIRCLE)</small>			
	ZN16	ZN15	ZN14	ZN13	L	ADDR	R	ZN12	ZN11	ZN10	ZN9	ZN8	ZN7	ZN6	ZN5	L	ADDR	R	ZN4	ZN3	ZN2	ZN1
	§ 50ms Loop Response	8	4	2	1		0964		8	4	2	1	8	4	2	1		0900		8	4	2
† Priority	8	4	2	1		0965		8	4	2	1	8	4	2	1		0901		8	4	2	1
† Priority with Bypass	8	4	2	1		0966		8	4	2	1	8	4	2	1		0902		8	4	2	1
† Auto-Bypass	8	4	2	1		0967		8	4	2	1	8	4	2	1		0903		8	4	2	1
† Selective Bypass	8	4	2	1		0968		8	4	2	1	8	4	2	1		0904		8	4	2	1
† Keyswitch Arming	8	4	2	1		0969		8	4	2	1	8	4	2	1		0905		8	4	2	1
† Auto-Bypass Re-entry	8	4	2	1		0970		8	4	2	1	8	4	2	1		0906		8	4	2	1
† Pre-Alarm Warning	8	4	2	1		0971		8	4	2	1	8	4	2	1		0907		8	4	2	1
† Never Arm	8	4	2	1		0972		8	4	2	1	8	4	2	1		0908		8	4	2	1
† 24-Hour Zone	8	4	2	1		0973		8	4	2	1	8	4	2	1		0909		8	4	2	1
† Alarm Output	8	4	2	1		0974		8	4	2	1	8	4	2	1		0910		8	4	2	1
† Pulsed Alarm Output	8	4	2	1		0975		8	4	2	1	8	4	2	1		0911		8	4	2	1
† PGM1 Output	8	4	2	1		0976		8	4	2	1	8	4	2	1		0912		8	4	2	1
† PGM2 Output	8	4	2	1		0977		8	4	2	1	8	4	2	1		0913		8	4	2	1
† Entry/Exit 1	8	4	2	1		0978		8	4	2	1	8	4	2	1		0914		8	4	2	1
† Entry/Exit 2	8	4	2	1		0979		8	4	2	1	8	4	2	1		0915		8	4	2	1
† Exit/Entry Follower	8	4	2	1		0980		8	4	2	1	8	4	2	1		0916		8	4	2	1
† Auto Reset	8	4	2	1		0981		8	4	2	1	8	4	2	1		0917		8	4	2	1
† Swinger Shutdown	8	4	2	1		0982		8	4	2	1	8	4	2	1		0918		8	4	2	1
† Chime	8	4	2	1		0983		8	4	2	1	8	4	2	1		0919		8	4	2	1
† Abort Delay	8	4	2	1		0984		8	4	2	1	8	4	2	1		0920		8	4	2	1
† Power-up Delay	8	4	2	1		0985		8	4	2	1	8	4	2	1		0921		8	4	2	1
† Day Zone Open	8	4	2	1		0986		8	4	2	1	8	4	2	1		0922		8	4	2	1
† Day Zone Short	8	4	2	1		0987		8	4	2	1	8	4	2	1		0923		8	4	2	1
† Alarm on Day Zone	8	4	2	1		0988		8	4	2	1	8	4	2	1		0924		8	4	2	1
† Alarm Telco 1	8	4	2	1		0989		8	4	2	1	8	4	2	1		0925		8	4	2	1
† Alarm Restore 1	8	4	2	1		0990		8	4	2	1	8	4	2	1		0926		8	4	2	1
† Trouble Telco 1	8	4	2	1		0991		8	4	2	1	8	4	2	1		0927		8	4	2	1
† Trouble Restore 1	8	4	2	1		0992		8	4	2	1	8	4	2	1		0928		8	4	2	1
† Alarm Telco 3	8	4	2	1		0993		8	4	2	1	8	4	2	1		0929		8	4	2	1
† Alarm Restore 3	8	4	2	1		0994		8	4	2	1	8	4	2	1		0930		8	4	2	1
† Trouble Telco 3	8	4	2	1		0995		8	4	2	1	8	4	2	1		0931		8	4	2	1
† Trouble Restore 3	8	4	2	1		0996		8	4	2	1	8	4	2	1		0932		8	4	2	1
† No EOL Resistor	8	4	2	1		0997		8	4	2	1	8	4	2	1		0933		8	4	2	1
† Trouble on Open	8	4	2	1		0998		8	4	2	1	8	4	2	1		0934		8	4	2	1
† Trouble on Short	8	4	2	1		0999		8	4	2	1	8	4	2	1		0935		8	4	2	1
† Zone Area 1	8	4	2	1		1000		8	4	2	1	8	4	2	1		0936		8	4	2	1
† Zone Area 2	8	4	2	1		1001		8	4	2	1	8	4	2	1		0937		8	4	2	1
† Zone Area 3	8	4	2	1		1002		8	4	2	1	8	4	2	1		0938		8	4	2	1
† Zone Area 4	8	4	2	1		1003		8	4	2	1	8	4	2	1		0939		8	4	2	1
† Interior (Stay) Bypass	8	4	2	1		1004		8	4	2	1	8	4	2	1		0940		8	4	2	1
† Keypad Sounder on Alarm	8	4	2	1		1005		8	4	2	1	8	4	2	1		0941		8	4	2	1
† 2-Wire Smoke Detectors	8	4	2	1	(-)	1006	(+)	8	4	2	1	8	4	2	1	0942	(-)	8	4	2	1	
† Fire	8	4	2	1		1007		8	4	2	1	8	4	2	1		0943		8	4	2	1
† Fire Alarm Verification	8	4	2	1		1008		8	4	2	1	8	4	2	1		0944		8	4	2	1
RESERVED	8	4	2	1	(+)	1009	(+)	8	4	2	1	8	4	2	1	(+)	0945	(+)	8	4	2	1
† Zone ANDing Group 1	8	4	2	1		1010		8	4	2	1	8	4	2	1		0946		8	4	2	1
† Zone ANDing Group 2	8	4	2	1		1011		8	4	2	1	8	4	2	1		0947		8	4	2	1
† Zone ANDing Group 3	8	4	2	1		1012		8	4	2	1	8	4	2	1		0948		8	4	2	1
† Zone ANDing Group 4	8	4	2	1		1013		8	4	2	1	8	4	2	1		0949		8	4	2	1
† Sensor Watch	8	4	2	1		1014		8	4	2	1	8	4	2	1		0950		8	4	2	1
RESERVED	8	4	2	1		1015		8	4	2	1	8	4	2	1		0951		8	4	2	1
† Chime 2	8	4	2	1		1016		8	4	2	1	8	4	2	1		0952		8	4	2	1

See steps listed at bottom of page → Step 1 Step 2 Step 4 Step 4 Step 2 Step 2 Step 4 Step 4 Step 2

§ 50ms Loop Response only available for zones 1-4. If Zone Doubling is enabled, Zones 9-12 will follow the loop response programming for Zones 1-4.

† When the Easy Program Menu is used, these features are enabled by default.

† Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).


★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.

NOTE: (Address Location 0942 can only be programmed as "blank (+)", "4 blank (+)", "8 blank (+)" or "C blank (+)").

1. **Select** the desired zone option.

ZONE OPTIONS	
§ 50ms Loop Response	☐
† Priority	☑
† Priority with Bypass	☐
† Auto-Bypass	☐
† Selective Bypass	☑

2. **Enable** desired options for each zone by drawing a circle around its corresponding binary data value. NOTE: No circle = feature disabled.



3. **Search table** below for data entry.

DIGIT VALUE	DATA ENTRY	DIGIT VALUE	DATA ENTRY
8 4 2 1	Blank (+)	8 4 2 1	8
8 4 2 1	1	8 4 2 1	9
8 4 2 1	2	8 4 2 1	0
8 4 2 1	3	8 4 2 1	B
8 4 2 1	4	8 4 2 1	C
8 4 2 1	5	8 4 2 1	D
8 4 2 1	6	8 4 2 1	E
8 4 2 1	7	8 4 2 1	F

4. **Enter data** in address locations (left and right digits). Press [Enter] or [ON/OFF] to save.

ADDRESS LOCATION		
L	ADDR	R
blank (+)	0490	1

NOTE: Dark shaded boxes = option not available. See Direct Address Programming Example page 22.

ZONE OPTIONS - ZONES 17 TO 32 (ADDRESS 1029-1144)

ZONE OPTIONS	ZONES 29-32				ADDRESS			ZONES 25-28				ZONES 21-24				ADDRESS			ZONES 17-20				
	LEFT DATA VALUES				L	ADDR	R	RIGHT DATA VALUES				LEFT DATA VALUES				L	ADDR	R	RIGHT DATA VALUES				
	(CIRCLE)							ZN28	ZN27	ZN26	ZN25	ZN24	ZN23	ZN22	ZN21				(CIRCLE)				
	ZN32	ZN31	ZN30	ZN29														ZN20	ZN19	ZN18	ZN17		
† Priority	8	4	2	1		1093			8	4	2	1	8	4	2	1	1029			8	4	2	1
† Priority with Bypass	8	4	2	1		1094			8	4	2	1	8	4	2	1	1030			8	4	2	1
† Auto-Bypass	8	4	2	1		1095			8	4	2	1	8	4	2	1	1031			8	4	2	1
† Selective Bypass	8	4	2	1		1096			8	4	2	1	8	4	2	1	1032			8	4	2	1
† Keyswitch Arming	8	4	2	1		1097			8	4	2	1	8	4	2	1	1033			8	4	2	1
† Auto-Bypass Re-entry	8	4	2	1		1098			8	4	2	1	8	4	2	1	1034			8	4	2	1
† Pre-Alarm Warning	8	4	2	1		1099			8	4	2	1	8	4	2	1	1035			8	4	2	1
† Never Arm	8	4	2	1		1100			8	4	2	1	8	4	2	1	1036			8	4	2	1
† 24-Hour Zone	8	4	2	1		1101			8	4	2	1	8	4	2	1	1037			8	4	2	1
† Alarm Output	8	4	2	1		1102			8	4	2	1	8	4	2	1	1038			8	4	2	1
† Pulsed Alarm Output	8	4	2	1		1103			8	4	2	1	8	4	2	1	1039			8	4	2	1
† PGM1 Output	8	4	2	1		1104			8	4	2	1	8	4	2	1	1040			8	4	2	1
† PGM2 Output	8	4	2	1		1105			8	4	2	1	8	4	2	1	1041			8	4	2	1
† Entry/Exit 1	8	4	2	1		1106			8	4	2	1	8	4	2	1	1042			8	4	2	1
† Entry/Exit 2	8	4	2	1		1107			8	4	2	1	8	4	2	1	1043			8	4	2	1
† Exit/Entry Follower	8	4	2	1		1108			8	4	2	1	8	4	2	1	1044			8	4	2	1
† Auto Reset	8	4	2	1		1109			8	4	2	1	8	4	2	1	1045			8	4	2	1
† Swinger Shutdown	8	4	2	1		1110			8	4	2	1	8	4	2	1	1046			8	4	2	1
† Chime	8	4	2	1		1111			8	4	2	1	8	4	2	1	1047			8	4	2	1
† Abort Delay	8	4	2	1		1112			8	4	2	1	8	4	2	1	1048			8	4	2	1
† Power-up Delay	8	4	2	1		1113			8	4	2	1	8	4	2	1	1049			8	4	2	1
† Day Zone Open	8	4	2	1		1114			8	4	2	1	8	4	2	1	1050			8	4	2	1
† Day Zone Short	8	4	2	1		1115			8	4	2	1	8	4	2	1	1051			8	4	2	1
† Alarm on Day Zone	8	4	2	1		1116			8	4	2	1	8	4	2	1	1052			8	4	2	1
† Alarm Telco 1	8	4	2	1		1117			8	4	2	1	8	4	2	1	1053			8	4	2	1
† Alarm Restore 1	8	4	2	1		1118			8	4	2	1	8	4	2	1	1054			8	4	2	1
† Trouble Telco 1	8	4	2	1		1119			8	4	2	1	8	4	2	1	1055			8	4	2	1
† Trouble Restore 1	8	4	2	1		1120			8	4	2	1	8	4	2	1	1056			8	4	2	1
† Alarm Telco 3	8	4	2	1		1121			8	4	2	1	8	4	2	1	1057			8	4	2	1
† Alarm Restore 3	8	4	2	1		1122			8	4	2	1	8	4	2	1	1058			8	4	2	1
† Trouble Telco 3	8	4	2	1		1123			8	4	2	1	8	4	2	1	1059			8	4	2	1
† Trouble Restore 3	8	4	2	1		1124			8	4	2	1	8	4	2	1	1060			8	4	2	1
† No EOL Resistor	8	4	2	1		1125			8	4	2	1	8	4	2	1	1061			8	4	2	1
† Trouble on Open	8	4	2	1		1126			8	4	2	1	8	4	2	1	1062			8	4	2	1
† Trouble on Short	8	4	2	1		1127			8	4	2	1	8	4	2	1	1063			8	4	2	1
† Zone Area 1	8	4	2	1		1128			8	4	2	1	8	4	2	1	1064			8	4	2	1
† Zone Area 2	8	4	2	1		1129			8	4	2	1	8	4	2	1	1065			8	4	2	1
† Zone Area 3	8	4	2	1		1130			8	4	2	1	8	4	2	1	1066			8	4	2	1
† Zone Area 4	8	4	2	1		1131			8	4	2	1	8	4	2	1	1067			8	4	2	1
† Interior (Stay) Bypass	8	4	2	1		1132			8	4	2	1	8	4	2	1	1068			8	4	2	1
† Keypad Sounder on Alarm	8	4	2	1		1133			8	4	2	1	8	4	2	1	1069			8	4	2	1
† Fire	8	4	2	1		1135			8	4	2	1	8	4	2	1	1071			8	4	2	1
† Fire Alarm Verification	8	4	2	1		1136			8	4	2	1	8	4	2	1	1072			8	4	2	1
† Zone ANDing Group 1	8	4	2	1		1138			8	4	2	1	8	4	2	1	1074			8	4	2	1
† Zone ANDing Group 2	8	4	2	1		1139			8	4	2	1	8	4	2	1	1075			8	4	2	1
† Zone ANDing Group 3	8	4	2	1		1140			8	4	2	1	8	4	2	1	1076			8	4	2	1
† Zone ANDing Group 4	8	4	2	1		1141			8	4	2	1	8	4	2	1	1077			8	4	2	1
† Sensor Watch	8	4	2	1		1142			8	4	2	1	8	4	2	1	1078			8	4	2	1
RESERVED	8	4	2	1		1143			8	4	2	1	8	4	2	1	1079			8	4	2	1
† Chime 2	8	4	2	1		1144			8	4	2	1	8	4	2	1	1080			8	4	2	1

See Steps listed at bottom of page 44 → Step 1 Step 2 Step 4 Step 4 Step 2 Step 2 Step 4 Step 4 Step 2

- † When the Easy Program Menu is used, these features are enabled by default.
- † Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).
- ★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.

DEFAULTS: The zone options indicated are automatically set after exiting the Easy Menu Driven Mode.

- Priority, Selective Bypass, Alarm Output, Auto Reset, Swinger Shutdown and Zone Area 1 are enabled for the total number of zones entered in "## OF ZONES IN AREA1 ENTER ## ZONES".
- Alarm Telco 1 is enabled for the zone number(s) entered in "REPORT ALL ZONES TO CENTRAL ZONES? Y/N".
- Entry/Exit 1 and Chime are enabled for the zone number(s) entered in "ENTRY/EXIT ZONES ENTER ZONE ##".
- Exit/Entry Follower and Interior Bypass are enabled for the zone number(s) entered in "INTERIOR ZONES ENTER ZONE ##".
- Pulse Alarm Output is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE ##".
- Fire is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE ##".

This page left blank intentionally

This page left blank intentionally

EXTERNAL RELAY CONTROL (ADDRESS 1489-1608)

ADDRESS 1489-1493 (RELAY EVENT 1)									
1489		1490		1491		1492		1493	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1494-1498 (RELAY EVENT 2)									
1494		1495		1496		1497		1498	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1499-1503 (RELAY EVENT 3)									
1499		1500		1501		1502		1503	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1504-1508 (RELAY EVENT 4)									
1504		1505		1506		1507		1508	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1509-1513 (RELAY EVENT 5)									
1509		1510		1511		1512		1513	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1514-1518 (RELAY EVENT 6)									
1514		1515		1516		1517		1518	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1519-1523 (RELAY EVENT 7)									
1519		1520		1521		1522		1523	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1524-1528 (RELAY EVENT 8)									
1524		1525		1526		1527		1528	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1529-1533 (RELAY EVENT 9)									
1529		1530		1531		1532		1533	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1534-1538 (RELAY EVENT 10)									
1534		1535		1536		1537		1538	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1539-1543 (RELAY EVENT 11)									
1539		1540		1541		1542		1543	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1544-1548 (RELAY EVENT 12)									
1544		1545		1546		1547		1548	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1549-1553 (RELAY EVENT 13)									
1549		1550		1551		1552		1553	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1554-1558 (RELAY EVENT 14)									
1554		1555		1556		1557		1558	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1559-1563 (RELAY EVENT 15)									
1559		1560		1561		1562		1563	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1564-1568 (RELAY EVENT 16)									
1564		1565		1566		1567		1568	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1569-1573 (RELAY EVENT 17)									
1569		1570		1571		1572		1573	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1574-1578 (RELAY EVENT 18)									
1574		1575		1576		1577		1578	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1579-1583 (RELAY EVENT 19)									
1579		1580		1581		1582		1583	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1584-1588 (RELAY EVENT 20)									
1584		1585		1586		1587		1588	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1589-1593 (RELAY EVENT 21)									
1589		1590		1591		1592		1593	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1594-1598 (RELAY EVENT 22)									
1594		1595		1596		1597		1598	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1599-1603 (RELAY EVENT 23)									
1599		1600		1601		1602		1603	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1604-1608 (RELAY EVENT 24)									
1604		1605		1606		1607		1608	
RELAY #	AREA	Timeout		Event ID		COND.			
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

[Default = blank (•) blank (•) from address 1489-1608]

**CONTINUED ON
NEXT PAGE**

(CONT'D) EXTERNAL RELAY CONTROL (ADDRESS 1609-1648)

ADDRESS 1609-1613 (RELAY EVENT 25)									
1609		1610		1611		1612		1613	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1614-1618 (RELAY EVENT 26)									
1614		1615		1616		1617		1618	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1619-1623 (RELAY EVENT 27)									
1619		1620		1621		1622		1623	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1624-1628 (RELAY EVENT 28)									
1624		1625		1626		1627		1628	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1629-1633 (RELAY EVENT 29)									
1629		1630		1631		1632		1633	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1634-1638 (RELAY EVENT 30)									
1634		1635		1636		1637		1638	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1639-1643 (RELAY EVENT 31)									
1639		1640		1641		1642		1643	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

ADDRESS 1644-1648 (RELAY EVENT 32)									
1644		1645		1646		1647		1648	
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

[Default = blank (•) blank (•) from address 1609-1648]

To program, follow the 5 steps below:

To program, follow the 5 steps below:
STEP 1: RELAY # OPTIONS: The LIB-P432EX supports 8 external relays from Relay Module RM3008. Multiple events may be "mapped" to each relay, up to a maximum of 16 events.
 Select the relay number from **Table 1** (shown on next page); enter in corresponding right digit address location (left digit is not used).



STEP 2: AREA OPTIONS: Each relay event can be assigned to Area 1, Area 2 or both Area 1 & Area 2.
 Select the area from **Table 2** (shown on next page); enter in corresponding right digit address location (left digit is not used).

STEP 3: TIMEOUTS: Each relay event can be assigned a timeout depending on Alarm Type option.
 If Alarm Type (see next page) is selected for timeout in minutes or seconds, select the timeout from **Table 3** (shown on next page) in minutes or seconds and enter in corresponding address location (left digit and right digits). To choose seconds or minutes, see step 5A below. 254 is maximum entry.

STEP 4: EVENT ID CODES: Each relay event can be assigned any of the available event IDs from the table.
 Select 2-digit Event ID from **Table 4** (see next page); enter in corresponding address locations (left and right digit).

STEP 5: RELAY EVENT CONDITION OPTIONS: Each relay event can be assigned an alarm type; and an activation condition; also, select a timeout type for each.
 5A. Select Alarm Type and Timeout Type from **Table 5A** (shown on next page); enter in corresponding address location (left digit).
 5B. Select Activation from from **Table 5B** (shown on next page); enter in corresponding address location (right digit).

RELAY EVENT OPTIONS									
RELAY #		AREA		Timeout		Event ID		COND.	
L	R	L	R	L	R	L	R	L	R
(•)		(•)							

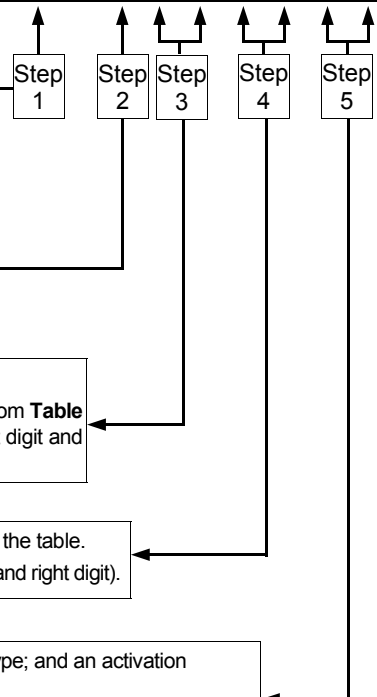

RF RECEIVER & SUPERVISORY TIMER OPTIONS (ADDRESS 2029-2044 & 2056)

Number of RF Receivers	ADDRESS 2056		DATA ENTRIES	RF Receiver(s)
	LEFT	RIGHT	RIGHT	
		blank (*)		blank (*)
			1	1
			2	2

Default for Number of Receivers depends on Easy Menu Question for RF Transmitters.

- RF RECEIVERS:** Up to 2 RF Receivers may be programmed.
1. Select the number of receivers from the table shown.
 2. Enter in corresponding right digit address location shown (left digit is not used).
 3. Press to save.

RF SUPERVISORY TIMER	RF TRANSMITTER	ADDRESS 2029-2036			RF SUPERVISORY TIMER	RF TRANSMITTER	ADDRESS 2037-2044		
		LEFT	ADDR	RIGHT			LEFT	ADDR	RIGHT
Type 0	Window/Door, 2 Pt.	blank (*)	2029		Type 8	Smoke Detector	blank (*)	2037	
Type 1	Window/Door, 2 Pt.	blank (*)	2030		Type 9	RESERVED	blank (*)	2038	
Type 2	Window/Door, 2 Pt.	blank (*)	2031		Type A	Dual Tech.	blank (*)	2039	
Type 3	Window/Door, 2 Pt.	blank (*)	2032		Type B	RESERVED	blank (*)	2040	
Type 4	RESERVED	blank (*)	2033		Type C	Window/Door, 4 Pt.	blank (*)	2041	
Type 5	PIR	blank (*)	2034		Type D	PIR	blank (*)	2042	
Type 6	PIR	blank (*)	2035		Type E	Smoke Detector	blank (*)	2043	
Type 7	Smoke Detector	blank (*)	2036		Type F	Napco Glass Break	blank (*)	2044	

[Default = blank (*) blank (*) from address 2029-2044]

RF SUPERVISORY TIMERS		
DATA ENTRIES		DELAY
LEFT	RIGHT	
blank (*)	3	90 min.
blank (*)	4	120 min.
blank (*)	5	150 min.
blank (*)	6	180 min.
blank (*)	7	210 min.
blank (*)	8	240 min.
blank (*)	9	270 min.
blank (*)	0	300 min.
blank (*)	B	330 min.
blank (*)	C	360 min.
blank (*)	D	390 min.
blank (*)	E	420 min.
blank (*)	F	450 min.

RF SUPERVISORY TIMERS: RF Supervisory Timers may be programmed for each type of transmitter used. A transmitter will send a transmission every time it tripped, when there is NO activity, the transmitter sends a status transmission about once an hour. If the receiver does NOT receive ANY signal (a trip or a status) from a transmitter in the time specified for transmitter type, a system trouble "WIRELESS TROUBLE/EO4-NN SERVICE" will be displayed at the keypad.

1. Select timer delay from the table shown. Timers are programmed in increments of 30 minutes each. Valid entries are [blank (*)3]-[blank (*)F], 90 minutes-450 minutes.
2. Enter in corresponding address locations above right digit only (left digit is not used).
3. Press to save.

NOTE: These timers apply only to Supervised RF Transmitters (see RF Transmitters in Easy Menu Driven Mode Programming).

CLEAR PROGRAM OPTIONS (ADDRESS 2285 & 2286)

2285 XX

GEM-DXRP1 Keypad

Clear Dealer Program (Erases Dealer Program)



This erases the dealer program. Use this feature to start a customized default program. Program Data and System Status Memory is erased where Scheduled Data and Zone Descriptions are maintained.

Access address 2285, then press the button. Data entry is not allowed.

NOTE: Enter Easy Menu Driven Program Mode to program system again.

2285 XX

GEM-DXRP2 Keypad

2286 XX

GEM-DXRP1 Keypad

Cold Start (Erases Entire Program)



This erases the entire program including Dealer Program by erasing Program Data, Zone Description Data and System Status Data (similar to a new panel).

Access address 2286, then press the button. Data entry is not allowed.

NOTE: Some features (schedules) can only be programmed again with the Downloading Software. **NOTE:** Some features (schedules) can only be programmed again with the Downloading Software. If power fails, time and date restarts at 00:00:00 and a date of 01-01-04 (January 1, 2004).

2286 XX

GEM-DXRP2 Keypad

USER PROGRAM MODE

PRELIMINARY INFORMATION

The User Program Mode is covered in detail in the operating instructions for the keypad in use.

The Program Mode cannot be accessed while the communicator is transmitting except during the first three minutes after power-up.

After entering codes or data, press the save button. *Data will not be stored into memory unless this button is pressed.*

If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.

Press RESET () to silence the sounder and exit the User Program Mode.

Use the button to manually scroll the display at the end of each programming line.

ACCESSING USER PROGRAM MODE

1. Press

New Panel (Default User Code = 123) Existing Panel (Any Code with User Program Option Enabled)


2. Press PRIOR ("X" or) until "TURNON PROG Y/N" (GEM-DXRP2 / GEM-DXK2) or "17" (GEM-DXRP3 / GEM-DXK3 or GEM-DXK4RF) appears on the LCD screen.

3. Press YES ("✓" or) to Enter User Program Mode.

4. Press to exit User Program Mode when finished.

USER CODES


GEM-DXK2 Keypad

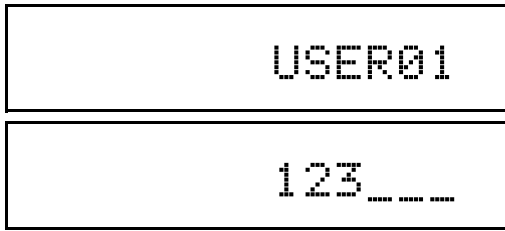

(Direct Entry)

To Program User Codes


1. Enter 2-digit User Number (01-64) directly using number buttons (0-9).
2. Press the button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the button to save each code.

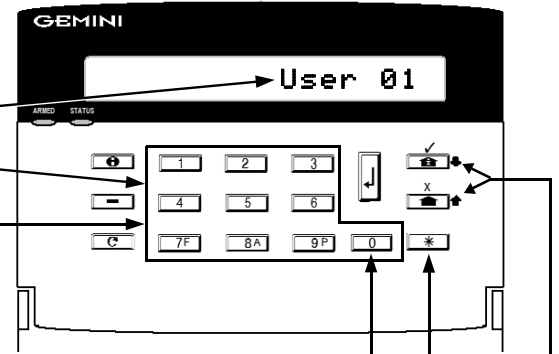


NOTE: Press button to clear character at cursor.
To continue, press the or button.

Programming User Codes with GEM-DXK2 Keypad


GEM-DXK3 Keypad



User Program Mode




User Number



User Code (Direct Entry)

To Program User Codes


1. Enter 2-digit User Number (01-64) directly using number buttons (0-9).
2. Press the button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the button to save each code.

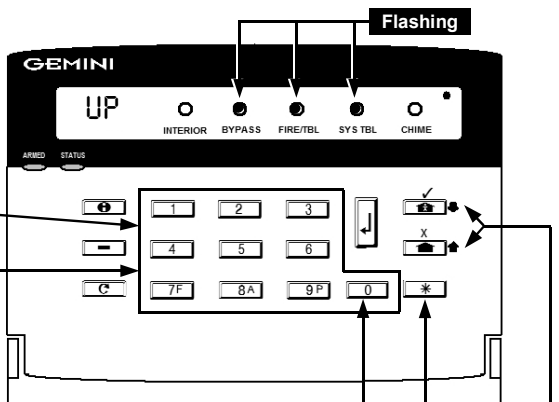


NOTE: Press button to clear character at cursor.
To continue, press the or button.

Programming User Codes with GEM-DXK3 Keypad


GEM-DXK4RF Series Keypad



User Program Mode




User Number



User Code (Direct Entry)

To Program User Codes

1. Enter 2-digit User Number (01-64) directly using number buttons (0-9).
2. Press the button.
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the button to save each code.

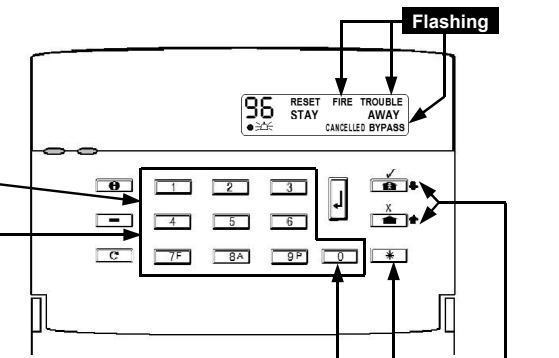

NOTE: Press button to clear character at cursor.
To continue, press the or button.

Programming User Codes with GEM-DXK4RF Series Keypad

KEYPAD CONFIGURATION MODE

This section will focus on configuring the GEM-DXRP2 / GEM-DXK2, GEM-DXRP3 / GEM-DXK3 and GEM-DXK4RF series keypads. For ease of programming, it is recommended that a GEM-DXRP1 or a GEM-DXK1 be selected (see WI1690 for Programming Instructions using the GEM-DXRP1 or GEM-DXK1 keypads).

KEYPAD INSTALLATION

Each keypad must be assigned an address number (1–7) and each requires its own configuration procedure (see CONFIGURING THE KEYPADS, which follows, and DIRECT ADDRESS KEYPAD AREA OPTIONS). At least 1 keypad must be used; only 1 is required for a single-area Commercial Burglary installation.

GEM-DXRP2 / GEM-DXK2 - Are utility LCD keypads combining several preset LCD words with a limited message line. **NOTE:** Due to space constraints, available messages are abbreviated and will scroll automatically.

CONFIGURING THE KEYPADS

Configuring the GEM-DXRP2 / GEM-DXK2, GEM-DXRP3 / GEM-DXK3 and GEM-DXK4RF Keypads

Up to 7 GEM-DXRP2 / GEM-DXK2, GEM-DXRP3 / GEM-DXK3 and/or GEM-DXK4RF keypads may be connected to the panel (Keypads 1–7). Each must be configured for a keypad address. In addition, the keypad may be configured to disable (a) touchpad backlight; (b) LCD backlight; and (c) entry sounder. Keypads are configured by the proper selection of jumpers. Refer to the label on the circuit board insulation paper for jumper locations and a summary of settings.

KEYPAD ADDRESS

If more than one keypad is installed:

- ☞ Each must be assigned a unique address (that is, no two keypads may be numbered alike).
- ☞ Keypads must be addressed consecutively (that is, missing numbers are not permitted).

Assign the keypad address number by selecting Jumpers J1–3 in accordance with the table at right.

KEYPAD NUMBER	KEYPAD ADDRESS SETTING			PARK
	1	2	3	
1	OFF or ON	OFF	OFF	STORE SPARE JUMPER AT THIS POSITION
2	OFF	ON	OFF	
3	ON	ON	OFF	
4	OFF	OFF	OFF	
5	ON	OFF	ON	
6	OFF	ON	ON	
7	ON	ON	ON	

TOUCHPAD BACK LIGHT

Cut Jumper A to disable touch pad backlighting to conserve 11mA standby current.

LCD BACKLIGHT

Cut Jumper B to disable LCD backlighting.

DISABLE SOUNDER

Cut Jumper C to disable the sounder.

ALPHABETICAL INDEX

2

24 HOUR ZONES IN AREA 1: EASY PROGRAM MENU, 7, 14, 15
 24-HOUR ZONE--ZONE OPTION, 45, 46, 47, 48
 2-WIRE FIRE ZONES: EASY PROGRAM MENU, 13
 2-WIRE FIRE ZONES IN AREA 1: EASY PROGRAM MENU, 6
 2-WIRE SMOKE DETECTORS--ZONE OPTION, 45, 47

3

3/1 WITH EXTENDED RESTORES (CS RECEIVER OPTIONS), 30

5

50 MS LOOP RESPONSE ZONES: EASY PROGRAM MENU, 14, 15
 50MS LOOP RESPONSE--ZONE OPTION, 45, 47

A

ABORT DELAY ADDRESS 1417, 24
 ABORT DELAY--ZONE OPTION, 45, 46, 47, 48
 AC FAIL, 26
 AC FAIL REPORT DELAY ADDRESS 1419, 24
 ACCESS CONTROL ON PGM2 OUTPUT ADDRESS 1421, 28
 ACCESSING DEALER PROGRAM MODE, 5
 ADEMCO EXPRESS RECEIVER FORMAT, 16
 ADEMCO POINT ID FORMAT, 30
 ADEMCO POINT ID RECEIVER FORMAT, 16
 ADEMCO SLOW FORMAT, 30
 ADEMCO SLOW RECEIVER FORMAT, 16
 ALARM ON DAY ZONE--ZONE OPTION, 45, 46, 47, 48
 ALARM OUTPUT ADDRESS 0836, 26
 ALARM OUTPUT ADDRESS 0857, 26
 ALARM OUTPUT ADDRESS 0865, 26, 27
 ALARM OUTPUT ADDRESS 0873, 27
 ALARM OUTPUT SUPERV. REPORTING OPTIONS ADDRESS 0689, 32
 ALARM OUTPUT TIMEOUT ADDRESS 1414, 25
 ALARM OUTPUT--ZONE OPTION, 45, 46, 47, 48
 ALARM RESTORE 1--ZONE OPTION, 45, 46, 47, 48
 ALARM RESTORE 3--ZONE OPTION, 45, 46, 47, 48
 ALARM RESTORE REPORTING OPTIONS ADDRESS 0670, 32
 ALARM TELCO 1--ZONE OPTION, 45, 46, 47, 48
 ALARM TELCO 3--ZONE OPTION, 45, 46, 47, 48
 AMBUSH, 26, 27
 AMBUSH (KEYPAD OPTIONS), 42
 AMBUSH CODE, GLOBAL, 26
 AMBUSH REPORTING OPTIONS ADDRESS 0698, 32
 AREA 1 SYSTEM EVENT/TROUBLE, 26
 AREA 2 SYSTEM EVENT/TROUBLE, 26
 AREA 3 SYSTEM EVENT/TROUBLE, 27
 AREA 4 SYSTEM EVENT/TROUBLE, 27
 AREA ARMING OPTIONS (ADDRESS 1469-1472), 44
 AREA BELL CONTROL OPTIONS (ADDRESS 1473-1476), 38
 AREA BELL CONTROL OPTIONS (ADDRESS 1477-1480), 39
 AREA BELL CONTROL OPTIONS (ADDRESS 1481-1484), 40
 AREA BELL CONTROL OPTIONS (ADDRESS 1485-1488), 41
 AREA OPTIONS: EASY PROGRAM MENU, 10
 AUTO BELL TEST ON ARMING ADDRESS 1421, 28
 AUTO BYPASS RE-ENTRY ZONES: EASY PROGRAM MENU,

8, 14, 15
 AUTO RESET AFTER BURGLARY OUTPUT TIMEOUT ADDRESS 1421, 28
 AUTO RESET--ZONE OPTION, 45, 46, 47, 48
 AUTO-BYPASS RE-ENTRY--ZONE OPTION, 45, 46, 47, 48
 AUTO-BYPASS--ZONE OPTION, 45, 46, 47, 48
 AUTOMATIC INTERIOR BYPASS/EASY EXIT ADDRESS 1424, 28
 AUX 1/AUX 2 OPTIONS: EASY PROGRAM MENU, 11
 AUX OUTPUT ACTIVATED ON ALARM ZONES: EASY PROGRAM MENU, 14
 AUX OUTPUT ACTIVATED ON ALARM ZONES: EASY PROGRAM MENU, 7
 AUXILIARY REPORTING OPTIONS ADDRESS 0701, 32

B

BACKLIGHTING, 55
 BACKUP REPORT ON TELCO 1 & 2 ADDRESS 0788, 32
 BELL SUPERVISION, 26
 BURGLARY OUTPUT TURNS OFF UPON DISARM, 38

C

CALLBACK METHOD, 4
 CALLBACK TELEPHONE NUMBER ADDRESS 0526-0545, 25
 CANCEL NEXT TEST TIMER ON ANY REPORT ADDRESS 0788, 32
 CANCEL REPORTING OPTIONS ADDRESS 0681, 32
 CENTRAL STATION RECEIVER 1 ACCOUNT NUMBER: EASY PROGRAM MENU, 9, 16
 CENTRAL STATION RECEIVER 1 FORMAT: EASY PROGRAM MENU, 9, 16
 CENTRAL STATION RECEIVER 1 TELEPHONE NUMBER: EASY PROGRAM MENU, 8, 16
 CHANGE PULSE OUTPUT TO TEMPORAL OUTPUT ADDRESS 1422, 28
 CHANGING OR CANCELING A CODE, 10, 17
 CHIME 2 ZONES IN AREA 1: EASY PROGRAM MENU, 7, 14, 15
 CHIME 2--ZONE OPTION, 45, 46, 47, 48
 CHIME TIME ADDRESS 1418, 24
 CHIME ZONES IN AREA 1: EASY PROGRAM MENU, 7, 14, 15
 CHIME--ZONE OPTION, 45, 46, 47, 48
 CHIRP OUTPUT ON KEYFOB ARM/DISARM ADDRESS 1422, 28
 CLEAR DEALER PROGRAM (ERASES DEALER PROGRAM), 53
 CLEAR PROGRAM, 19
 CLEAR PROGRAM ADDRESS 2285, 12
 CLEAR PROGRAM OPTIONS (ADDRESS 2285 & 2286), 53
 CLOCK ADJUSTMENTS (ADDRESS 2281), 33
 CLOCK SOURCE (INTERNAL PANEL) ADDRESS 2281, 33
 CLOSING REPORT ONLY ON CONDITIONAL CLOSE ADDRESS 1420, 28
 CLOSING REPORTING OPTIONS ADDRESS 0678, 32
 COLD START ADDRESS 2286, 12, 18
 COLD START (ERASES ENTIRE PROGRAM), 53
 CONDITIONAL CLOSE REPORTING OPTIONS ADDRESS 0680, 32
 CONFIGURING THE KEYPADS, 55
 CONTROL PANEL PROGRAMMING: INTRODUCTION, 4
 CONTROL PANEL ZONES REPORT CODE, 34
 CONVENTIONS USED IN THIS MANUAL, 23
 CS AREA & SYSTEM REPORTING OPTIONS (ADDRESS 0785, 0786 & 0788), 32

ALPHABETICAL INDEX (CONT'D)

CS RECEIVER 1 FORMAT: EASY PROGRAM MENU, 16
 CS RECEIVER 1 FORMAT ADDRESS 0460, 30
 CS RECEIVER 1 TELEPHONE NUMBER ADDRESS 0462-0481, 30
 CS RECEIVER 2 FORMAT ADDRESS 0482, 30
 CS RECEIVER 2 TELEPHONE NUMBER ADDRESS 0484-0503, 30
 CS RECEIVER 3 FORMAT ADDRESS 0504, 30
 CS RECEIVER 3 TELEPHONE NUMBER ADDRESS 0506-0525, 30
 CS RECEIVER OPTIONS (ADDRESS 0460-0525), 30
 CS RECEIVER TELCO 1 OPTIONS ADDRESS 0461, 30
 CS RECEIVER TELCO 2 OPTIONS ADDRESS 0483, 30
 CS RECEIVER TELCO 3 OPTIONS ADDRESS 0505, 30
 CS SUBSCRIBER ID OPTIONS (ADDRESS 0560-0667), 31
 CS SYSTEM REPORT OPTIONS, 32
 CS SYSTEM REPORTING OPTIONS (ADDRESS 0670-0705), 32
 CS USER REPORTING OPTIONS (ADDRESS 0800-0817), 35
 CS USER REPORTING OPTIONS (ADDRESS 0818-0835), 36
 CS ZONE REPORTING OPTIONS (ADDRESS 0720-0751), 34
 CUSTOMIZING A DEFAULT PROGRAM, 5

D

DAY ZONE OPEN--ZONE OPTION, 45, 46, 47, 48
 DAY ZONE SHORT--ZONE OPTION, 45, 46, 47, 48
 DCI FORMAT, 30
 DCI RECEIVER FORMAT, 16
 DEALER CODE, 18, 19; DEFAULT, 5; EASY PROGRAM MENU, 11
 DEALER PROGRAM: PRELIMINARY INFORMATION, 5
 DEALER PROGRAM CODE, 6
 DEALER PROGRAM MODE, 4
 DEFAULT DEALER CODE, 5
 DEFAULT DEALER PROGRAM CODE, 13
 DEFAULT PROGRAM: CUSTOMIZING, 5
 DIGITAL DIALER RPT ENTER /EXIT TEST MODE ADDRESS 2053, 29
 DIRECT ADDRESS PROGRAM MODE, 4
 DIRECT ADDRESS PROGRAM MODE, 21; ACCESSING, 20
 DISABLE [ON/OFF] AS EASY EXIT ADDRESS 2051, 29
 DISABLE 2ND CALL ANS. MACHINE OVERRIDE ADDRESS 1424, 28
 DISABLE AUTO DIAL TONE DETECT ADDRESS 0788, 32
 DISABLE CALL WAITING ON 1ST ATTEMPT ADDRESS 2053, 29
 DISABLE CALLBACK DOWNLOAD ADDRESS 1422, 28
 DISABLE CLOSING REPORTS ADDRESS 0786, 32
 DISABLE CODE REQUIRED FOR EZ BYPASS ADDRESS 1424, 28
 DISABLE KEYPAD FUNCTION MODE DOWNLOAD ADDRESS 1422, 28
 DISABLE KEYPAD INSTANT MODE ADDRESS 1421, 28
 DISABLE OPENING REPORTS ADDRESS 0785, 32
 DISABLE SOUNDER, 55
 DISABLE SYSTEM TROUBLE AUDIBLE TIMEOUT ADDRESS 2051, 29
 DISABLE WAIT FOR HANDSHAKE ON TRANSMIT ADDRESS 0788, 32
 DISABLE WAIT FOR SILENCE (PAGER FORMAT) ADDRESS 0788, 32
 DISABLE ZONE FAULT SCROLLING ADDRESS 1420, 28
 DON'T CLEAR PGM2 OUTPUT WITH DISARM ADDRESS 1424, 28
 DOWNLOAD/CALLBACK OPTIONS (ADDRESS 2059 & 0526-

0545), 25
 DOWNLOADING FROM A COMPUTER, 4

E

EASY ARMING (KEYPAD OPTIONS), 42
 EASY MENU DRIVEN PROGRAM MODE, 5
 EASY MENU-DRIVEN PROGRAM MODE, 4
 EASY PROGRAM MENU: 13
 ENABLE "K SERIES" STYLE KEYPADS ADDRESS 2051, 29
 ENABLE 2-COUNT SWINGER SHUTDOWN ADDRESS 2054, 29
 ENABLE ALARM OUTPUT ON TELCO FAIL ONLY WHEN ARMED ADDRESS 1423, 28
 ENABLE AUTOARM IF NOT CLOSED AT END OF WINDOW ADDRESS 1420, 28
 ENABLE BURG OUTPUT CHIRP ON KEYFOB?: EASY PROGRAM MENU, 8, 14, 15
 ENABLE CANCEL REPORT TO TELCO 3 ADDRESS 2051, 29
 ENABLE CP-01 EGRESS TONES ONLY ADDRESS 2053, 29
 ENABLE CP-01 LIMITS ADDRESS 2053, 29
 ENABLE DAYLIGHT SAVING TIME ADDRESS 2281, 33
 ENABLE DISPLAY TIME ON BLANKED KEYPADS ADDRESS 2054, 29
 ENABLE EN501 GRADE 3 OPERATION ADDRESS 2054, 29
 ENABLE EN501 USER CODE ACCESS LEVEL ADDRESS 2054, 29
 ENABLE GLOBAL AMBUSH CODE ADDRESS 1422, 28
 ENABLE KEYPAD 1 ONLY PROGRAMMING ADDRESS 2053, 29
 ENABLE KEYPAD BLANKING ADDRESS 2054, 29
 ENABLE KEYPAD SET TIME/DATE MESSAGE ADDRESS 2051, 29
 ENABLE KEYPAD TIME/DATE DISPLAY ADDRESS 1420, 28
 ENABLE LINE-FAULT TEST ADDRESS 1423, 28
 ENABLE LOCAL ALARM ON FIRST ZONE AND TRIP ADDRESS 1421, 28
 ENABLE LOOP SUPERVISION ADDRESS 1424, 28
 ENABLE MANAGER'S MODE ADDRESS 1421, 28
 ENABLE NO EOLR ZONES: EASY PROGRAM MENU, 8, 14, 15
 ENABLE RESIDENTIAL FIRE ADDRESS 1422, 28
 ENABLE SIA CP-01?: EASY PROGRAM MENU, 8, 14, 15
 ENABLE TCP/IP COMMUNICATIONS ADDRESS 2054, 29
 ENABLE TELCO LINE FAULT TEST?: EASY PROGRAM MENU, 8, 14, 15
 ENABLE ZONE DOUBLING (ZONES 9-16) ADDRESS 1423, 28
 ENABLE ZONE NUMBER ON PULSE ALARM (CS RECEIVER OPTIONS), 30
 ENTER USER CODES: EASY PROGRAM MENU, 9, 16
 ENTRY DELAY 1 ADDRESS 0001, 24
 ENTRY DELAY 2 ADDRESS 0002, 24
 ENTRY/EXIT 1--ZONE OPTION, 45, 46, 47, 48
 ENTRY/EXIT 2--ZONE OPTION, 45, 46, 47, 48
 ERASE DEALER PROGRAM, 12, 18
 ERASE ENTIRE PROGRAM, 12, 18
 EXIT DEALER PROGRAM MODE, 12, 19
 EXIT DELAY ADDRESS 0000, 24
 EXIT TIME RESTART ADDRESS 2053, 29
 EXIT/ENTRY FOLLOWER--ZONE OPTION, 45, 46, 47, 48
 EXIT/ENTRY ZONES: EASY PROGRAM MENU, 13
 EXIT/ENTRY ZONES IN AREA 1: EASY PROGRAM MENU, 6
 EXIT/ENTRY2 ZONES IN AREA 1: EASY PROGRAM MENU, 7, 14, 15
 EXTERNAL RELAY CONTROL (ADDRESS 1489-1608), 49
 EXTERNAL RELAY CONTROL (ADDRESS 1609-1648), 50

ALPHABETICAL INDEX (CONT'D)

F

FAIL TO CLOSE, 26, 27
 FAIL TO CLOSE REPORTING OPTIONS ADDRESS 0704, 32
 FAIL TO OPEN, 26, 27
 FAIL TO OPEN REPORTING OPTIONS ADDRESS 0703, 32
 FBI 4/3/1 RECEIVER FORMAT, 16
 FIRE ALARM VERIFICATION--ZONE OPTION, 45, 46, 47, 48
 FIRE REPORTING OPTIONS ADDRESS 0700, 32
 FIRE ZONES: EASY PROGRAM MENU, 13
 FIRE ZONES IN AREA 1: EASY PROGRAM MENU, 6
 FIRE--ZONE OPTION, 45, 46, 47, 48
 FRANKLIN FAST RECEIVER FORMAT, 16
 FRANKLIN SLOW FORMAT, 30
 FRANKLIN SLOW RECEIVER FORMAT, 16
 FUNCTION MODE, 4

G

LIB-P432EX WIRING DIAGRAM, 64
 GENERAL PROGRAMMING STEPS, 23
 GLOBAL AMBUSH CODE ADDRESS 2045, 26
 GLOBAL SYSTEM EVENT/TROUBLE, 26

H

HANDSHAKE/KISSOFF 1400HZ (CS RECEIVER OPTIONS), 30
 HANDSHAKE/KISSOFF 2300HZ (CS RECEIVER OPTIONS), 30

I

INCL. SEL./GRP. BYPASS IN COND. CLOSE /STATUS
 ADDRESS 1420, 28
 INHIBIT SYSTEM TROUBLE AUDIBLE AT KEYPAD ADDRESS
 1423, 28
 INTERIOR (STAY) BYPASS ZONES IN AREA 1: EASY PROGRAM
 MENU, 7
 INTERIOR (STAY) BYPASS--ZONE OPTION, 45, 46, 47, 48
 INTERIOR NORMALLY BYPASSED ADDRESS 1422, 28
 INTERIOR ZONES: EASY PROGRAM MENU, 14, 15

K

K SERIES KEYPADS, 2
 KEY FOB TRANSMITTERS, 18, 19
 KEY FOB TRANSMITTERS AS ARM/DISARM & CONTROL
 DEVICES: EASY PROGRAM MENU, 11
 KEY FOB TRANSMITTERS AS ZONE INPUT DEVICES, 18, 19;
 EASY PROGRAM MENU, 11
 KEY FOB ZONE ASSIGNMENT, 18; EASY PROGRAM MENU,
 11
 KEYFOB LOW BATTERY, 26, 27
 KEYFOB LOW BATTERY REPORTING OPTIONS ADDRESS
 0705, 32
 KEYPAD ADDRESS, 55
 KEYPAD ADDRESS PROGRAM MODE DISPLAY, 21
 KEYPAD AUX., 26, 27
 KEYPAD AUX. (KEYPAD OPTIONS), 42
 KEYPAD CONFIGURATION MODE, 55
 KEYPAD FIRE, 26, 27
 KEYPAD FIRE (KEYPAD OPTIONS), 42
 KEYPAD INSTALLATION, 55
 KEYPAD OPTIONS (ADDRESS 1425-1431, 1440-1446), 42
 KEYPAD PANIC, 26, 27
 KEYPAD PANIC (KEYPAD OPTIONS), 42

KEYPAD PROGRAMMING OVERVIEW, 20
 KEYPAD SOUNDER ON ALARM ZONES: EASY PROGRAM
 MENU, 7, 14
 KEYPAD SOUNDER ON ALARM--ZONE OPTION, 45, 46, 47, 48
 KEYPAD TAMPER, 26, 27
 KEYPAD TYPE, 42
 KEYPAD UNBLANKING TIME WINDOW ADDRESS 2060, 33
 KEYSWITCH ARMING--ZONE OPTION, 45, 46, 47, 48

L

LCD BACKLIGHT, 55
 LEADING DIGITS FOR PAGER FORMAT (1ST DIGIT)
 ADDRESS 0546, 25
 LEADING DIGITS FOR PAGER FORMAT (2ND DIGIT)
 ADDRESS 0547, 25
 LINE FREQUENCY--ENABLE 50HZ ADDRESS 2281, 33
 LINE-FAULT TEST ONLY WHEN ARMED ADDRESS 1423, 28
 LOCAL DOWNLOADING, 4
 LOCAL OR CENTRAL STATION REPORTING SYSTEM: EASY
 PROGRAM MENU, 6
 LOCAL SYSTEM OR C.S. REPORTING SYSTEM: EASY
 PROGRAM MENU, 13
 LOW BATTERY, 26
 LOW BATTERY REPORTING OPTIONS ADDRESS 0686, 32
 LUG E15 AREA 1 ARMED AWAY ONLY ADDRESS 2052, 29

M

MAINTAINED KEYSWITCH ARMING ADDRESS 1421, 28
 MEMORY FAIL REPORTING OPTIONS ADDRESS 0685, 32
 MEMORY FAILURE, 26
 MODEM CODES, 34

N

NEVER ARM--ZONE OPTION, 45, 46, 47, 48
 NO EOL RESISTOR--ZONE OPTION, 45, 46, 47, 48
 NO. RINGS BEFORE PICKUP ADDRESS 2059, 25
 NUMBER OF KEYPADS: EASY PROGRAM MENU, 16
 NUMBER OF KEYPADS IN AREA 1: EASY PROGRAM MENU, 8
 NUMBER OF RF RECEIVERS ADDRESS 2056, 52
 NUMBER OF RINGS BEFORE PICKUP, 25
 NUMBER OF RINGS BEFORE PICKUP ADDRESS 2059, 25

O

OPENING AFTER ALARM REPORTING OPTIONS ADDRESS
 0679, 32
 OPENING REPORT ONLY AFTER ALARM REPORT ADDRESS
 1420, 28
 OPENING REPORTING OPTIONS ADDRESS 0677, 32
 OUTPUT TIMEOUTS, 25
 OUTPUT TURNS OFF UPON DISARM, 38, 39

P

PAGER FORMAT, 30
 PAGER FORMAT OPTIONS (ADDRESS 0546 & 0547), 25
 PAGER RECEIVER FORMAT, 16
 PANEL AC FAIL REPORTING OPTIONS ADDRESS 0687, 32
 PANEL ACCESS (KEYPAD OPTIONS), 42
 PANEL ZONE DOUBLING: EASY PROGRAM MENU, 6, 13
 PANEL ZONES REPORT CODE, 34
 PANIC REPORTING OPTIONS ADDRESS 0699, 32

ALPHABETICAL INDEX (CONT'D)

PCI-MINI COMPUTER INTERFACE, 4
 PGM ON RF TRANSMITTER TAMPER ADDRESS 2052, 29
 PGM1 OUTPUT ADDRESS 0838, 26
 PGM1 OUTPUT ADDRESS 0858, 26
 PGM1 OUTPUT ADDRESS 0866, 26, 27
 PGM1 OUTPUT ADDRESS 0874, 27
 PGM1 OUTPUT TIMEOUT ADDRESS 1416, 25
 PGM1 OUTPUT TURNS OFF UPON DISARM, 40
 PGM1 OUTPUT--ZONE OPTION, 45, 46, 47, 48
 PGM2 OUTPUT ADDRESS 0839, 26
 PGM2 OUTPUT ADDRESS 0860, 26
 PGM2 OUTPUT ADDRESS 0868, 26, 27
 PGM2 OUTPUT ADDRESS 0876, 27
 PGM2 OUTPUT ACCESS CNTRL TIMEOUT ADDRESS 1413,
 24
 PGM2 OUTPUT TIMEOUT ADDRESS 1412, 25
 PGM2 OUTPUT TURNS OFF UPON DISARM, 41
 PGM2 OUTPUT--ZONE OPTION, 45, 46, 47, 48
 POWER-UP DELAY--ZONE OPTION, 45, 46, 47, 48
 PRE-ALARM WARNING--ZONE OPTION, 45, 46, 47, 48
 PRIORITY AREA ARMING, 44
 PRIORITY ARMING AREA 1 ADDRESS 1469, 44
 PRIORITY ARMING AREA 2 ADDRESS 1470, 44
 PRIORITY ARMING AREA 3 ADDRESS 1471, 44
 PRIORITY ARMING AREA 4 ADDRESS 1472, 44
 PRIORITY WITH BYPASS--ZONE OPTION, 45, 46, 47, 48
 PRIORITY--ZONE OPTION, 45, 46, 47, 48
 PROGRAMMING DATA ENTRIES, 22
 PROGRAMMING TIMEOUTS, 24
 PROGRAMMING USER CODES, 54
 PULSE ALARM OUTPUT TIMEOUT ADDRESS 1415, 25
 PULSE EVENT CODE, 34
 PULSED ALARM OUTPUT ADDRESS 0837, 26
 PULSED ALARM OUTPUT ADDRESS 0856, 26
 PULSED ALARM OUTPUT ADDRESS 0864, 26, 27
 PULSED ALARM OUTPUT ADDRESS 0872, 27
 PULSED ALARM OUTPUT--ZONE OPTION, 45, 46, 47, 48
 PULSED BURG OUTPUT TURNS OFF UPON DISARM
 ADDRESS 1477-1480, 39

Q

QUICK ENROLL METHOD, 17; EASY PROGRAM MENU, 10

R

RADIONICS FAST FORMAT, 30
 RADIONICS FAST RECEIVER FORMAT, 16
 RADIONICS FORMAT, 30
 RADIONICS MODEM 2 RECEIVER FORMAT, 16
 RADIONICS RECEIVER FORMAT, 16
 RELAY EVENT OPTIONS ADDRESS 1489-1608, 49
 RELAY EVENT OPTIONS ADDRESS 1609-1648, 50
 REMOTE DOWNLOADING, 4
 REPORT CANCEL WINDOW ADDRESS 2055, 24
 REPORT EVENT TELCO 1 ADDRESS 0840, 26
 REPORT EVENT TELCO 1 ADDRESS 0861, 26
 REPORT EVENT TELCO 1 ADDRESS 0869, 26, 27
 REPORT EVENT TELCO 1 ADDRESS 0877, 27
 REPORT EVENT TELCO 3 ADDRESS 0842, 26
 REPORT EVENT TELCO 3 ADDRESS 0863, 26
 REPORT EVENT TELCO 3 ADDRESS 0871, 26, 27
 REPORT OPTIONS: CS SYSTEM, 32
 REPORT RESTORE TELCO 1 ADDRESS 0841, 26

REPORT RESTORE TELCO 3 ADDRESS 0843, 26
 RESET DAY ZONE WITH ARM/DISARM ONLY ADDRESS
 1422, 28
 RESOUND ON WIRELESS SMOKE LOW BATTERY ADDRESS
 1424, 28
 RF RCVR. TROUBLE, 26
 RF REC. TROUBLE REPORTING OPTIONS ADDRESS 0684,
 32
 RF RECEIVER & SUPERVISORY TIMER OPTIONS (ADDRESS
 2029-2044 & 2056), 52
 RF SUPERVISORY TIMERS, 52
 RF TRANSMITTER, 52
 RF TRANSMITTER POINTS, 17; EASY PROGRAM MENU, 10
 RPT EXIT ERR/RECENT CLOSE ADDRESS 2053, 29

S

SELECT ALARM OUTPUT FOR KEYFOB CHIRP ADDRESS
 1423, 28
 SELECTIVE BYPASS--ZONE OPTION, 45, 46, 47, 48
 SENSOR WATCH TIME ADDRESS 2050, 24
 SENSOR WATCH ZONES: EASY PROGRAM MENU, 7, 14, 15
 SENSOR WATCH--ZONE OPTION, 45, 46, 47, 48
 SESCOA RECEIVER FORMAT, 16
 SIA FORMAT, 30
 SIA RECEIVER FORMAT, 16
 SILENT KNIGHT FAST FORMAT, 30
 SILENT KNIGHT FAST RECEIVER FORMAT, 16
 SILENT KNIGHT SLOW FORMAT, 30
 SILENT KNIGHT SLOW RECEIVER FORMAT, 16
 SINGLE DIGIT ONLY (CS RECEIVER OPTIONS), 30
 SOUND ALARM ON EXIT ERROR ADDRESS 2053, 29
 SOUNDER: DISABLE, 55
 STATUS REPORT ADDRESS 1420, 28
 SUM CHECK (CS RECEIVER OPTIONS), 30
 SUPPRESS BYPASS REMINDER WHEN ARMED ADDRESS
 1421, 28
 SWINGER SHUTDOWN--ZONE OPTION, 45, 46, 47, 48
 SYSTEM DELAYS & TIMEOUTS (ADDRESS 0000-0002, 1413,
 1417, 2050 & 2055), 24
 SYSTEM DELAYS & TIMEOUTS (ADDRESS 1418 & 1419), 24
 SYSTEM OPTIONS (ADDRESS 0836-0871 & 2045), 26
 SYSTEM OPTIONS (ADDRESS 1420-1424), 28
 SYSTEM OUTPUT TIMEOUTS (ADDRESS 1412 & 1414-1416),
 25
 SYSTEM PROGRAMMING OPTIONS, 4
 SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/
 TROUBLE, 26
 SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/
 TROUBLE, 26
 SYSTEM RESPONSE ACTIVATED BY AREA 3 EVENT/
 TROUBLE, 27
 SYSTEM RESPONSE ACTIVATED BY AREA 4 EVENT/
 TROUBLE, 27
 SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/
 TROUBLE, 26

T

TAMPER REPORTING OPTIONS ADDRESS 0702, 32
 TELCO FAIL REPORTING OPTIONS ADDRESS 0683, 32
 TELCO FAILURE, 26
 TEST TIMER, 26
 TEST TIMER REPORTING OPTIONS ADDRESS 0682, 32

ALPHABETICAL INDEX (CONT'D)

TOTAL NUMBER OF ZONES: EASY PROGRAM MENU, 13
 TOTAL NUMBER OF ZONES IN AREA 1: EASY PROGRAM
 MENU, 6

TOUCHPAD BACK LIGHT, 55

TOUCH-TONE DIALING ONLY ADDRESS 0788, 32

TOUCH-TONE DIALING W/ROTARY BACKUP ADDRESS 0788,
 32

TROUBLE ON OPEN--ZONE OPTION, 45, 46, 47, 48

TROUBLE ON SHORT--ZONE OPTION, 45, 46, 47, 48

TROUBLE REPORTING OPTIONS ADDRESS 0671, 32

TROUBLE RESTORE 1--ZONE OPTION, 45, 46, 47, 48

TROUBLE RESTORE 3--ZONE OPTION, 45, 46, 47, 48

TROUBLE RESTORE REPORTING OPTIONS ADDRESS 0672,
 32

TROUBLE TELCO 1--ZONE OPTION, 45, 46, 47, 48

TROUBLE TELCO 3--ZONE OPTION, 45, 46, 47, 48

U

UNIVERSAL HIGH SPEED FORMAT, 30

UNIVERSAL HIGH SPEED RECEIVER FORMAT, 16

USER CODES: PROGRAMMING, 54

USER OPTIONS, 17

USER PROGRAM MODE, 4

USER PROGRAM MODE, 53

V

VERTEX RECEIVER FORMAT, 16

W

WIRELESS TROUBLE ACTIVATES TELCO 1 ADDRESS 1423,
 28

WIRELESS TROUBLE ACTIVATES TELCO 3 ADDRESS 1423,
 28

WIRING DIAGRAM, 64

X

XMITTER LOW BATTERY REPORTING OPTIONS ADDRESS
 0673, 32

XMITTER SUPERVISION REPORTING OPTIONS ADDRESS
 0674, 32

XMITTER TAMPER REPORTING OPTIONS ADDRESS 0675,
 32

Z

ZONE ANDING GROUP 1--ZONE OPTION, 45, 46, 47, 48

ZONE ANDING GROUP 2--ZONE OPTION, 45, 46, 47, 48

ZONE ANDING GROUP 3--ZONE OPTION, 45, 46, 47, 48

ZONE ANDING GROUP 4--ZONE OPTION, 45, 46, 47, 48

ZONE ANDING TIME WINDOW ADDRESS 2061, 33

ZONE AREA 1--ZONE OPTION, 45, 46, 47, 48

ZONE AREA 2--ZONE OPTION, 45, 46, 47, 48

ZONE AREA 3--ZONE OPTION, 45, 46, 47, 48

ZONE AREA 4--ZONE OPTION, 45, 46, 47, 48

ZONE DESCRIPTIONS, 19; EASY PROGRAM MENU, 11

ZONE INTEGRATION TIME ADDRESS 2062, 44

ZONE OPTIONS - ZONES 1 TO 16 (ADDRESS 0900-1016), 45

ZONE OPTIONS - ZONES 17 TO 32 (ADDRESS 1029-1144), 46

ZONE RESPONSE TIME ADDRESS 2062, 44

ZONES REPORT CODE, 34

ADDRESS NUMBER LOCATION INDEX

ADDRESS NUMBER	DESCRIPTION	PAGE
ADDRESS 0000	EXIT DELAY	24
ADDRESS 0001	ENTRY DELAY 1	24
ADDRESS 0002	ENTRY DELAY 2	24
ADDRESS 0460	CS RECEIVER 1 FORMAT	30
ADDRESS 0461	CS RECEIVER TELCO 1 OPTIONS	30
ADDRESS 0462-0481	CS RECEIVER 1 TELEPHONE NUMBER	30
ADDRESS 0482	CS RECEIVER 2 FORMAT	30
ADDRESS 0483	CS RECEIVER TELCO 2 OPTIONS	30
ADDRESS 0484-0503	CS RECEIVER 2 TELEPHONE NUMBER	30
ADDRESS 0504	CS RECEIVER 3 FORMAT	30
ADDRESS 0505	CS RECEIVER TELCO 3 OPTIONS	30
ADDRESS 0506-0525	CS RECEIVER 3 TELEPHONE NUMBER	30
ADDRESS 0526-0545	CALLBACK TELEPHONE NUMBER	25
ADDRESS 0546	LEADING DIGITS FOR PAGER FORMAT (1ST DIGIT)	25
ADDRESS 0547	LEADING DIGITS FOR PAGER FORMAT (2ND DIGIT)	25
ADDRESS 0670	ALARM RESTORE REPORTING OPTIONS	32
ADDRESS 0671	TROUBLE REPORTING OPTIONS	32
ADDRESS 0672	TROUBLE RESTORE REPORTING OPTIONS	32
ADDRESS 0673	XMITTER LOW BATTERY REPORTING OPTIONS	32
ADDRESS 0674	XMITTER SUPERVISION REPORTING OPTIONS	32
ADDRESS 0675	XMITTER TAMPER REPORTING OPTIONS	32
ADDRESS 0677	OPENING REPORTING OPTIONS	32
ADDRESS 0678	CLOSING REPORTING OPTIONS	32
ADDRESS 0679	OPENING AFTER ALARM REPORTING OPTIONS	32
ADDRESS 0680	CONDITIONAL CLOSE REPORTING OPTIONS	32
ADDRESS 0681	CANCEL REPORTING OPTIONS	32
ADDRESS 0682	TEST TIMER REPORTING OPTIONS	32
ADDRESS 0683	TELCO FAIL REPORTING OPTIONS	32
ADDRESS 0684	RF REC. TROUBLE REPORTING OPTIONS	32
ADDRESS 0685	MEMORY FAIL REPORTING OPTIONS	32
ADDRESS 0686	LOW BATTERY REPORTING OPTIONS	32
ADDRESS 0687	PANEL AC FAIL REPORTING OPTIONS	32
ADDRESS 0689	ALARM OUTPUT SUPERV. REPORTING OPTIONS	32
ADDRESS 0698	AMBUSH REPORTING OPTIONS	32
ADDRESS 0699	PANIC REPORTING OPTIONS	32
ADDRESS 0700	FIRE REPORTING OPTIONS	32
ADDRESS 0701	AUXILIARY REPORTING OPTIONS	32
ADDRESS 0702	TAMPER REPORTING OPTIONS	32
ADDRESS 0703	FAIL TO OPEN REPORTING OPTIONS	32
ADDRESS 0704	FAIL TO CLOSE REPORTING OPTIONS	32
ADDRESS 0705	KEYFOB LOW BATTERY REPORTING OPTIONS	32
ADDRESS 0785	DISABLE OPENING REPORTS	32
ADDRESS 0786	DISABLE CLOSING REPORTS	32
ADDRESS 0788	BACKUP REPORT ON TELCO 1 & 2	32
ADDRESS 0788	CANCEL NEXT TEST TIMER ON ANY REPORT	32
ADDRESS 0788	DISABLE AUTO DIAL TONE DETECT	32
ADDRESS 0788	DISABLE WAIT FOR HANDSHAKE ON TRANSMIT	32
ADDRESS 0788	DISABLE WAIT FOR SILENCE (PAGER FORMAT)	32
ADDRESS 0788	TOUCH-TONE DIALING ONLY	32
ADDRESS 0788	TOUCH-TONE DIALING W/ROTARY BACKUP	32
ADDRESS 0836	ALARM OUTPUT	26
ADDRESS 0837	PULSED ALARM OUTPUT	26
ADDRESS 0838	PGM1 OUTPUT	26
ADDRESS 0839	PGM2 OUTPUT	26
ADDRESS 0840	REPORT EVENT TELCO 1	26


ADDRESS NUMBER LOCATION INDEX (CONT'D)

ADDRESS NUMBER	DESCRIPTION	PAGE
ADDRESS 0841	REPORT RESTORE TELCO 1	26
ADDRESS 0842	REPORT EVENT TELCO 3	26
ADDRESS 0843	REPORT RESTORE TELCO 3	26
ADDRESS 0856	PULSED ALARM OUTPUT	26
ADDRESS 0857	ALARM OUTPUT	26
ADDRESS 0858	PGM1 OUTPUT	26
ADDRESS 0860	PGM2 OUTPUT	26
ADDRESS 0861	REPORT EVENT TELCO 1	26
ADDRESS 0863	REPORT EVENT TELCO 3	26
ADDRESS 0864	PULSED ALARM OUTPUT	26, 27
ADDRESS 0865	ALARM OUTPUT	26, 27
ADDRESS 0866	PGM1 OUTPUT	26, 27
ADDRESS 0868	PGM2 OUTPUT	26, 27
ADDRESS 0869	REPORT EVENT TELCO 1	26, 27
ADDRESS 0871	REPORT EVENT TELCO 3	26, 27
ADDRESS 0872	PULSED ALARM OUTPUT	27
ADDRESS 0873	ALARM OUTPUT	27
ADDRESS 0874	PGM1 OUTPUT	27
ADDRESS 0876	PGM2 OUTPUT	27
ADDRESS 0877	REPORT EVENT TELCO 1	27
ADDRESS 1412	PGM2 OUTPUT TIMEOUT	25
ADDRESS 1413	PGM2 OUTPUT ACCESS CNTRL TIMEOUT	24
ADDRESS 1414	ALARM OUTPUT TIMEOUT	25
ADDRESS 1415	PULSE ALARM OUTPUT TIMEOUT	25
ADDRESS 1416	PGM1 OUTPUT TIMEOUT	25
ADDRESS 1417	ABORT DELAY	24
ADDRESS 1418	CHIME TIME	24
ADDRESS 1419	AC FAIL REPORT DELAY	24
ADDRESS 1420	CLOSING REPORT ONLY ON CONDITIONAL CLOSE	28
ADDRESS 1420	DISABLE ZONE FAULT SCROLLING	28
ADDRESS 1420	ENABLE AUTOARM IF NOT CLOSED AT END OF WINDOW	28
ADDRESS 1420	ENABLE KEYPAD TIME/DATE DISPLAY	28
ADDRESS 1420	INCL. SEL./GRP. BYPASS IN COND. CLOSE /STATUS	28
ADDRESS 1420	OPENING REPORT ONLY AFTER ALARM REPORT	28
ADDRESS 1420	STATUS REPORT	28
ADDRESS 1421	ACCESS CONTROL ON PGM2 OUTPUT	28
ADDRESS 1421	AUTO BELL TEST ON ARMING	28
ADDRESS 1421	AUTO RESET AFTER BURGLARY OUTPUT TIMEOUT	28
ADDRESS 1421	DISABLE KEYPAD INSTANT MODE	28
ADDRESS 1421	ENABLE LOCAL ALARM ON FIRST ZONE AND TRIP	28
ADDRESS 1421	ENABLE MANAGER'S MODE	28
ADDRESS 1421	MAINTAINED KEYSWITCH ARMING	28
ADDRESS 1421	SUPPRESS BYPASS REMINDER WHEN ARMED	28
ADDRESS 1422	CHANGE PULSE OUTPUT TO TEMPORAL OUTPUT	28
ADDRESS 1422	CHIRP OUTPUT ON KEYFOB ARM/DISARM	28
ADDRESS 1422	DISABLE CALLBACK DOWNLOAD	28
ADDRESS 1422	DISABLE KEYPAD FUNCTION MODE DOWNLOAD	28
ADDRESS 1422	ENABLE GLOBAL AMBUSH CODE	28
ADDRESS 1422	ENABLE RESIDENTIAL FIRE	28
ADDRESS 1422	INTERIOR NORMALLY BYPASSED	28
ADDRESS 1422	RESET DAY ZONE WITH ARM/DISARM ONLY	28
ADDRESS 1423	ENABLE ALARM OUTPUT ON TELCO FAIL ONLY WHEN ARMED	28
ADDRESS 1423	ENABLE LINE-FAULT TEST	28
ADDRESS 1423	ENABLE ZONE DOUBLING (ZONES 9-16)	28
ADDRESS 1423	INHIBIT SYSTEM TROUBLE AUDIBLE AT KEYPAD	28
ADDRESS 1423	LINE-FAULT TEST ONLY WHEN ARMED	28
ADDRESS 1423	SELECT ALARM OUTPUT FOR KEYFOB CHIRP	28
ADDRESS 1423	WIRELESS TROUBLE ACTIVATES TELCO 1	28
ADDRESS 1423	WIRELESS TROUBLE ACTIVATES TELCO 3	28
ADDRESS 1424	AUTOMATIC INTERIOR BYPASS/EASY EXIT	28
ADDRESS 1424	DISABLE 2ND CALL ANS. MACHINE OVERRIDE	28
ADDRESS 1424	DISABLE CODE REQUIRED FOR EZ BYPASS	28
ADDRESS 1424	DON'T CLEAR PGM2 OUTPUT WITH DISARM	28
ADDRESS 1424	ENABLE LOOP SUPERVISION	28
ADDRESS 1424	RESOUND ON WIRELESS SMOKE LOW BATTERY	28

ADDRESS NUMBER LOCATION INDEX (CONT'D)

ADDRESS NUMBER	DESCRIPTION	PAGE
ADDRESS 1469	PRIORITY ARMING AREA 1	44
ADDRESS 1470	PRIORITY ARMING AREA 2	44
ADDRESS 1471	PRIORITY ARMING AREA 3	44
ADDRESS 1472	PRIORITY ARMING AREA 4	44
ADDRESS 1477-1480	PULSED BURG OUTPUT TURNS OFF UPON DISARM	39
ADDRESS 1489-1608	RELAY EVENT OPTIONS	49
ADDRESS 1609-1648	RELAY EVENT OPTIONS	50
ADDRESS 2045	GLOBAL AMBUSH CODE	26
ADDRESS 2050	SENSOR WATCH TIME	24
ADDRESS 2051	DISABLE [ON/OFF] AS EASY EXIT	29
ADDRESS 2051	DISABLE SYSTEM TROUBLE AUDIBLE TIMEOUT	29
ADDRESS 2051	ENABLE "K SERIES" STYLE KEYPADS	29
ADDRESS 2051	ENABLE CANCEL REPORT TO TELCO 3	29
ADDRESS 2051	ENABLE KEYPAD SET TIME/DATE MESSAGE	29
ADDRESS 2052	LUG E15 AREA 1 ARMED AWAY ONLY	29
ADDRESS 2052	PGM ON RF TRANSMITTER TAMPER	29
ADDRESS 2053	DIGITAL DIALER RPT ENTER /EXIT TEST MODE	29
ADDRESS 2053	DISABLE CALL WAITING ON 1ST ATTEMPT	29
ADDRESS 2053	ENABLE CP-01 EGRESS TONES ONLY	29
ADDRESS 2053	ENABLE CP-01 LIMITS	29
ADDRESS 2053	ENABLE KEYPAD 1 ONLY PROGRAMMING	29
ADDRESS 2053	EXIT TIME RESTART	29
ADDRESS 2053	RPT EXIT ERR/RECENT CLOSE	29
ADDRESS 2053	SOUND ALARM ON EXIT ERROR	29
ADDRESS 2054	ENABLE 2-COUNT SWINGER SHUTDOWN	29
ADDRESS 2054	ENABLE DISPLAY TIME ON BLANKED KEYPADS	29
ADDRESS 2054	ENABLE EN501 GRADE 3 OPERATION	29
ADDRESS 2054	ENABLE EN501 USER CODE ACCESS LEVEL	29
ADDRESS 2054	ENABLE KEYPAD BLANKING	29
ADDRESS 2054	ENABLE TCP/IP COMMUNICATIONS	29
ADDRESS 2055	REPORT CANCEL WINDOW	24
ADDRESS 2056	NUMBER OF RF RECEIVERS	52
ADDRESS 2059	NO. RINGS BEFORE PICKUP	25
ADDRESS 2059	NUMBER OF RINGS BEFORE PICKUP	25
ADDRESS 2060	KEYPAD UNBLANKING TIME WINDOW	33
ADDRESS 2061	ZONE ANDING TIME WINDOW	33
ADDRESS 2062	ZONE INTEGRATION TIME	44
ADDRESS 2062	ZONE RESPONSE TIME	44
ADDRESS 2281	CLOCK ADJUSTMENTS	33
ADDRESS 2281	CLOCK SOURCE (INTERNAL PANEL)	33
ADDRESS 2281	ENABLE DAYLIGHT SAVING TIME	33
ADDRESS 2281	LINE FREQUENCY--ENABLE 50HZ	33
ADDRESS 2285	CLEAR PROGRAM	12
ADDRESS 2286	COLD START	12, 18

LIB-P432EX WIRING DIAGRAM

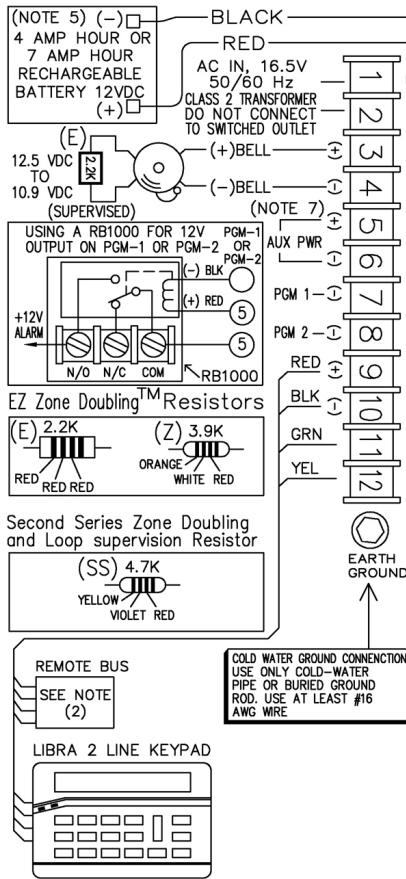

LIB-P432EX WIRING DIAGRAM

(REFER TO OPERATION AND INSTALLATION INSTRUCTIONS W1691)



REFER TO INSTALLATION INSTRUCTIONS.

RESIDENTIAL AND COMMERCIAL BURGLARY







16.5V TRANSFORMER	STANDBY BATTERY	COMBINED STANDBY CURRENT	ALARM CURRENT	STANDBY TIME
40VA/50VA	7AH	650mA	2.0A	4 HOURS
20VA	4AH	500mA	2.0A	4 HOURS
20VA	7AH	500mA	2.0A	6 HOURS

RESIDENTIAL FIRE

16.5V TRANSFORMER	STANDBY BATTERY	COMBINED STANDBY CURRENT	ALARM CURRENT	STANDBY TIME
40VA/50VA	7AH	120mA	520mA(1)	24 HOURS
40VA/50VA	2-7AH	360mA	280mA(1)	24 HOURS
20VA	7AH	120mA	360mA(1)	24 HOURS
20VA	2-7AH	360mA	120mA(1)	24 HOURS

(1) ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.

Warning: This equipment must be installed in accordance with local regulations.

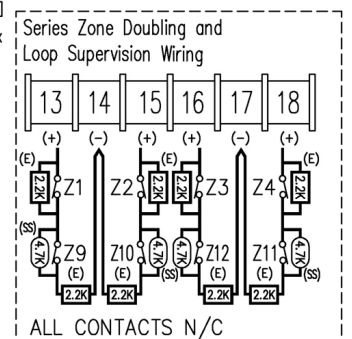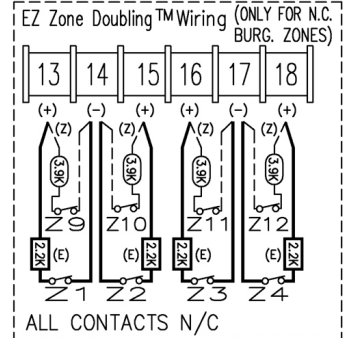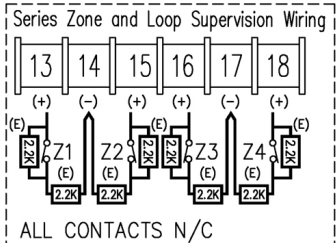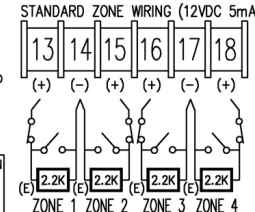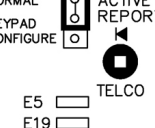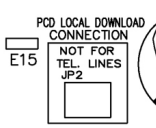

NOTES:

- ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.
- THE FOLLOWING DEVICES MAY BE PLACED ON THE REMOTE BUS:

GEM-RP1CAE2, GEM-RP2ASE, GEM-RP3DGT, GEM-RP2ASE2	GEM-RECV96	DX1, DX2, DX3
GEM-K1CA, GEM-K2AS, GEM-K3DGT, GEM-K4, GEM-K4RF	GEM-DXK432RF	DXK4RF-433, DXK4RF-319
GEM-DXRP1, GEM-DXRP2, GEM-DXRP3	GEM-DK1CA	LIB-DXK432RF
GEM-DXK1, GEM-DXK2, GEM-DXK3		LIBRA-RECV SERIES RECEIVERS
GEM-X10		RM3008
- COMBINED STANDBY CURRENT = KEYPAD CURRENT + AUX CURRENT + PGM1 AND PGM2 CURRENT.
- UNIT INTENDED TO BE MOUNTED VERTICAL ON WALL.
- RECOMMENDED BATTERIES YUASA NP4-12 OR NP7-12. BATTERY SHOULD BE REPLACED EVERY 5 YEARS.
- THIS PANEL SHALL BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY 3 YEARS.
- AUX. POWER VOLTAGE RATING: 12.5 VDC TO 11.7 VDC. THE PANEL WILL DISREGARD INPUTS FROM ALL SENSORS WHEN VOLTAGE DROPS BELOW 8.5V
- A.C MUST BE DISCONNECTED WHEN PERFORMING WEEKLY TESTS.
- FOR PROGRAM OF FIRE DETECTION DEVICES REFER TO W1691.
- INTRUDER & HOLD UP ALARM SYSTEM SUITABLE FOR EN50131-1 INSTALLATIONS.
 ENVIRONMENTAL CLASS: 3
 GRADE: 3




LA2744A

LIB-P432EXT WIRING DIAGRAM



REFER TO INSTALLATION INSTRUCTIONS.

! This equipment must be installed in accordance with local regulations.

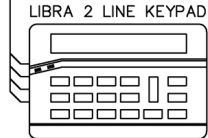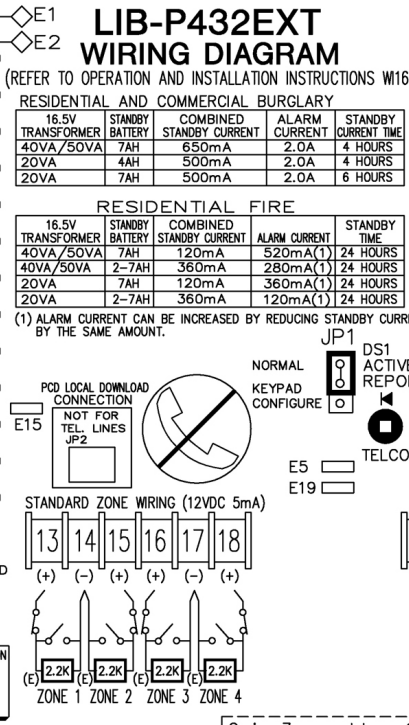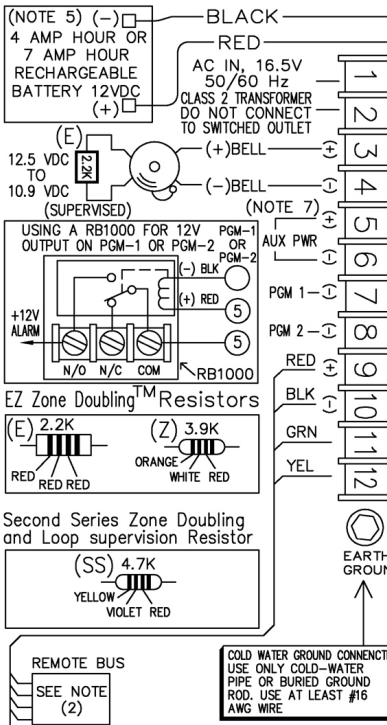


- NOTES:**
- ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.
 - THE FOLLOWING DEVICES MAY BE PLACED ON THE REMOTE BUS:

GEM-RP1CAE2, GEM-RP2ASE, GEM-RP3DGT, GEM-RP2ASE2	GEM-RECV96	DX1, DX2, DX3
GEM-K1CA, GEM-K2AS, GEM-K3DGT, GEM-K4, GEM-K4RF	GEM-DXK432RF	DXK4RF-433, DXK4RF-319
GEM-DXRP1, GEM-DXRP2, GEM-DXRP3	GEM-DK1CA	LIB-DXK432RF
GEM-DXK1, GEM-DXK2, GEM-DXK3		LIBRA-RECV SERIES RECEIVERS
GEM-X10		RM3008
 - COMBINED STANDBY CURRENT = KEYPAD CURRENT + AUX CURRENT + PGM1 AND PGM2 CURRENT.
 - UNIT INTENDED TO BE MOUNTED VERTICAL ON WALL.
 - RECOMMENDED BATTERIES YUASA NP4-12 OR NP7-12. BATTERY SHOULD BE REPLACED EVERY 5 YEARS.
 - THIS PANEL SHALL BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY 3 YEARS.
 - AUX. POWER VOLTAGE RATING: 12.5 VDC TO 11.7 VDC. THE PANEL WILL DISREGARD INPUTS FROM ALL SENSORS WHEN VOLTAGE DROPS BELOW 8.5V
 - A.C MUST BE DISCONNECTED WHEN PERFORMING WEEKLY TESTS.
 - FOR PROGRAM OF FIRE DETECTION DEVICES REFER TO W11691.
 - INTRUDER & HOLD UP ALARM SYSTEM SUITABLE FOR EN50131-1 INSTALLATIONS.
ENVIRONMENTAL CLASS: 3
GRADE: 3

LA2827A

LIB-P432EXT-230 WIRING DIAGRAM

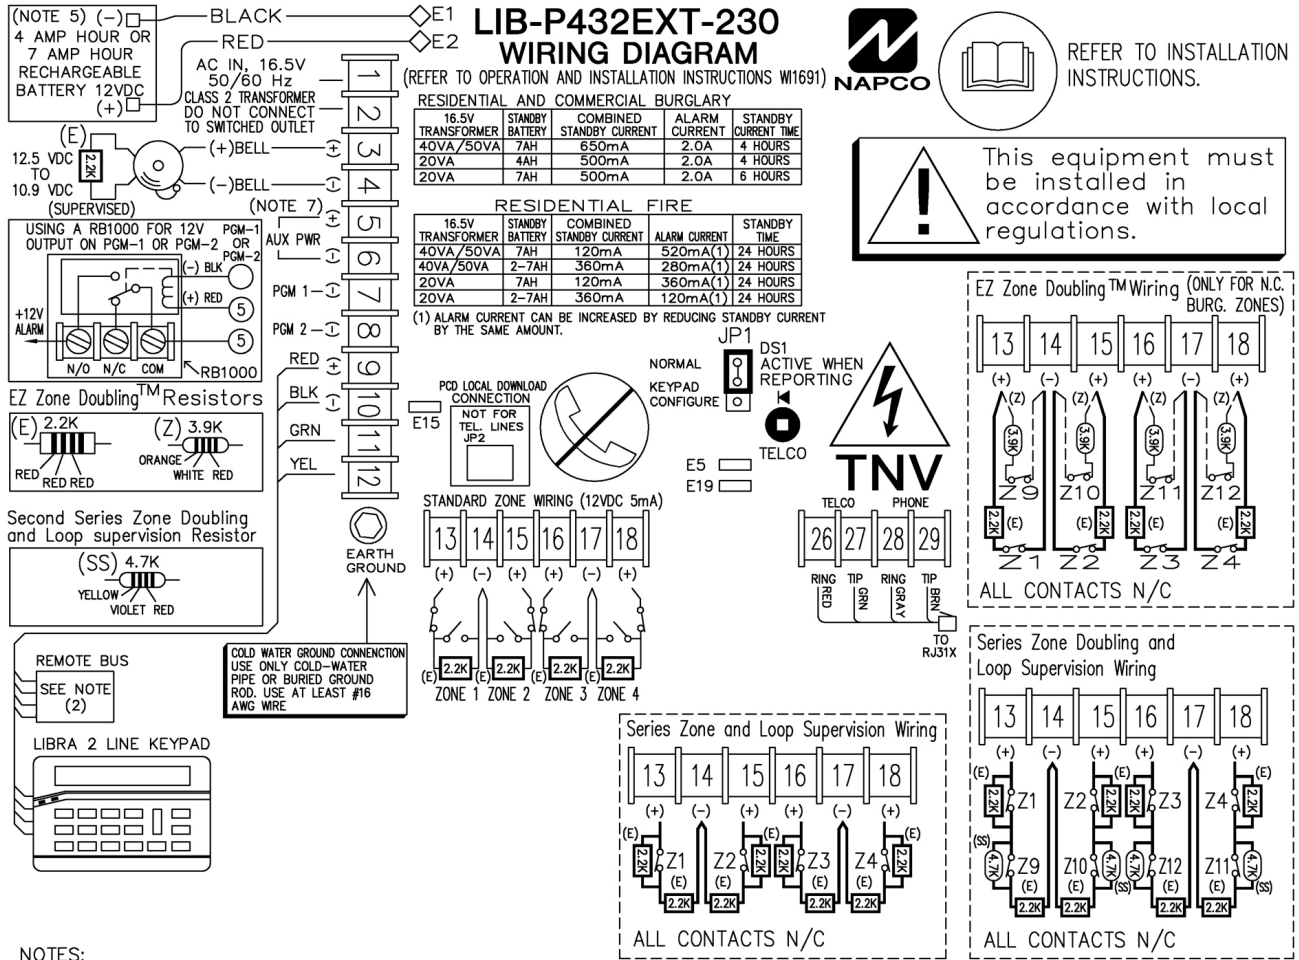

NOTES:

- ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.
- THE FOLLOWING DEVICES MAY BE PLACED ON THE REMOTE BUS:

GEM-RP1CAE2, GEM-RP2ASE, GEM-RP3DGT, GEM-RP2ASE2	GEM-RECV96	DX1, DX2, DX3
GEM-K1CA, GEM-K2AS, GEM-K3DGT, GEM-K4, GEM-K4RF	GEM-DXK432RF	DXK4RF-433, DXK4RF-319
GEM-DXRP1, GEM-DXRP2, GEM-DXRP3	GEM-DK1CA	LIB-DXK432RF
GEM-DXK1, GEM-DXK2, GEM-DXK3		LIBRA-RECV SERIES RECEIVERS
GEM-X10		RM3008
- COMBINED STANDBY CURRENT = KEYPAD CURRENT + AUX CURRENT + PGM1 AND PGM2 CURRENT.
- UNIT INTENDED TO BE MOUNTED VERTICAL ON WALL.
- RECOMMENDED BATTERIES YUASA NP4-12 OR NP7-12. BATTERY SHOULD BE REPLACED EVERY 5 YEARS.
- THIS PANEL SHALL BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY 3 YEARS.
- AUX. POWER VOLTAGE RATING: 12.5 VDC TO 11.7 VDC. THE PANEL WILL DISREGARD INPUTS FROM ALL SENSORS WHEN VOLTAGE DROPS BELOW 8.5V
- A.C MUST BE DISCONNECTED WHEN PERFORMING WEEKLY TESTS.
- FOR PROGRAM OF FIRE DETECTION DEVICES REFER TO W1691.
- INTRUDER & HOLD UP ALARM SYSTEM SUITABLE FOR EN50131-1 INSTALLATIONS.
 ENVIRONMENTAL CLASS: 3
 GRADE: 3

LA2828A

NOTES



Publicly traded on NASDAQ Symbol: NSSC

NAPCO Security Group, Inc.
333 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs, call toll free: (800) 645-9445
For direct line to Technical Service, call toll free: (800) 645-9440
Internet: <http://www.napcosecurity.com>

© NAPCO 2008